



HSRP Commands

This chapter describes the Cisco IOS XR software commands used to configure and monitor the Hot Standby Router Protocol (HSRP).

For detailed information about HSRP concepts, configuration tasks, and examples, refer to the *IP Addresses and Services Configuration Guide for Cisco NCS 6000 Series Routers*.

- [address \(hsrp\), on page 2](#)
- [address global \(HSRP\), on page 4](#)
- [address global subordinate \(HSRP\), on page 5](#)
- [address linklocal \(HSRP\), on page 6](#)
- [address secondary \(hsrp\), on page 8](#)
- [authentication \(hsrp\), on page 10](#)
- [bfd fast-detect \(hsrp\), on page 12](#)
- [clear hsrp statistics, on page 14](#)
- [hsrp bfd minimum-interval, on page 15](#)
- [hsrp bfd multiplier, on page 16](#)
- [hsrp delay, on page 17](#)
- [hsrp ipv4, on page 18](#)
- [hsrp redirects, on page 20](#)
- [hsrp use-bia, on page 21](#)
- [interface \(HSRP\), on page 22](#)
- [preempt \(hsrp\), on page 23](#)
- [priority \(hsrp\), on page 25](#)
- [router hsrp, on page 27](#)
- [session name, on page 28](#)
- [show hsrp, on page 29](#)
- [show hsrp bfd, on page 32](#)
- [show hsrp mgo, on page 34](#)
- [show hsrp statistics, on page 36](#)
- [show hsrp summary, on page 38](#)
- [hsrp slave follow, on page 39](#)
- [subordinate primary virtual IPv4 address, on page 40](#)
- [subordinate secondary virtual IPv4 address, on page 41](#)
- [subordinate virtual mac address, on page 42](#)
- [timers \(hsrp\), on page 43](#)

address (hsrp)

To enable hot standby protocol for IP, use the **address (hsrp)** command in the HSRP group submode. To disable hot standby protocol for IP, use the **no** form of this command.

address {*learnaddress*}
no address {*learnaddress*}

Syntax Description	<table> <tr> <td>learn</td><td>Learns virtual IP address from peer.</td></tr> <tr> <td>address</td><td>Hot standby IP address.</td></tr> </table>	learn	Learns virtual IP address from peer.	address	Hot standby IP address.
learn	Learns virtual IP address from peer.				
address	Hot standby IP address.				
Command Default	None				
Command Modes	HSRP Group Submode				
Command History	<table> <tr> <th>Release</th><th>Modification</th></tr> <tr> <td>Release 5.0.0</td><td>This command was introduced.</td></tr> </table>	Release	Modification	Release 5.0.0	This command was introduced.
Release	Modification				
Release 5.0.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table> <tr> <th>Task ID</th><th>Operation</th></tr> <tr> <td>hsrp</td><td>read, write</td></tr> </table>	Task ID	Operation	hsrp	read, write
Task ID	Operation				
hsrp	read, write				

Example

This example shows how to enable a group to learn the primary virtual IPv4 address from received HSRP control packets:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# router hsrp
RP/0/RP0/CPU0:router(config-hsrp)# interface HundredGigE 0/4/0/4
RP/0/RP0/CPU0:router(config-hsrp-if)# address-family ipv4
RP/0/RP0/CPU0:router(config-hsrp-ipv4)# hsrp 1 version 2
RP/0/RP0/CPU0:router(config-hsrp-gp)# address learn
RP/0/RP0/CPU0:router(config-hsrp-gp)#
```



Note

- The **version** keyword is available only if IPv4 address-family is selected. By default, version is set to 2 for IPv6 address families.
- HSRP version 2 provides an extended group range of 0-4095.

Related Commands

Command	Description
address secondary (hsrp), on page 8	Configures the secondary virtual IPv4 address for a virtual router.

address global (HSRP)

To configure the global virtual IPv6 address for the HSRP group, use the **address global** command in the virtual router submode. To deconfigure the global virtual IPv6 address for the HSRP group, use the **no** form of this command.

address global *ipv6-address*

no address global *ipv6-address*

Syntax Description	<i>ipv6-address</i> Global HSRP IPv6 address.				
Command Default	None				
Command Modes	HSRP Group Submode, under the IPv6 address-family				
Command History	<table> <tr> <th>Release</th><th>Modification</th></tr> <tr> <td>Release 5.0.0</td><td>This command was introduced.</td></tr> </table>	Release	Modification	Release 5.0.0	This command was introduced.
Release	Modification				
Release 5.0.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table> <tr> <th>Task ID</th><th>Operation</th></tr> <tr> <td>hsrp</td><td>read,write</td></tr> </table>	Task ID	Operation	hsrp	read,write
Task ID	Operation				
hsrp	read,write				

Example

This example shows how to add a global virtual IPv6 address for the HSRP group:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# router hsrp
RP/0/RP0/CPU0:router(config-hsrp)# interface tenGigE 0/4/0/4
RP/0/RP0/CPU0:router(config-hsrp-if)# address-family ipv6
RP/0/RP0/CPU0:router(config-hsrp-address-family)# hsrp 3
RP/0/RP0/CPU0:router(config-hsrp-virtual-router)# address global 4000::1000
RP/0/RP0/CPU0:router(config-hsrp-virtual-router)#
```



Note

- The **version** keyword is available only if IPv4 address-family is selected. By default, version is set to 2 for IPv6 address families.
- HSRP version 2 provides an extended group range of 0-4095.

address global subordinate (HSRP)

To configure the global virtual IPv6 address for the subordinate group, use the **address global** command in the HSRP slave submode. To deconfigure the global virtual IPv6 address for the subordinate group, use the **no** form of this command.

address global *ipv6-address*

no address global *ipv6-address*

Syntax Description	<i>ipv6-address</i> Global VRRP IPv6 address.				
Command Default	None				
Command Modes	HSRP Slave Submode, under the IPv6 address-family				
Command History	<table> <tr> <th>Release</th><th>Modification</th></tr> <tr> <td>Release 5.0.0</td><td>This command was introduced.</td></tr> </table>	Release	Modification	Release 5.0.0	This command was introduced.
Release	Modification				
Release 5.0.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table> <tr> <th>Task ID</th><th>Operation</th></tr> <tr> <td>hsrp</td><td>read,write</td></tr> </table>	Task ID	Operation	hsrp	read,write
Task ID	Operation				
hsrp	read,write				

Example

This example shows how to add a global virtual IPv6 address for the subordinate group:

```
Router# configure
Router(config)# router hsrp
Router(config-hsrp)# interface tenGigE 0/4/0/4
Router(config-hsrp-if)# address-family ipv6
Router(config-hsrp-address-family)# hsrp 3 slave
Router(config-hsrp-virtual-router)# address global 4000::1000
Router(config-hsrp-virtual-router)#
```



Note

- The **version** keyword is available only if IPv4 address-family is selected. By default, version is set to 2 for IPv6 address families.
- HSRP version 2 provides an extended group range of 0-4095.

address linklocal (HSRP)

To either configure the virtual link-local IPv6 address for the subordinate group or to specify that the virtual link-local IPv6 address should be enabled and calculated automatically from the virtual router virtual Media Access Control (MAC) address, use the **address linklocal** command in the virtual router submode. To deconfigure the virtual link-local IPv6 address for the subordinate group, use the **no** form of this command.

address linklocal

ipv6-address | **autoconfig**

no address linklocal

ipv6-address | **autoconfig**

Syntax Description	<i>ipv6-address</i> HSRP IPv6 link-local address.
	autoconfig Autoconfigures the HSRP IPv6 link-local address.
Command Default	None
Command Modes	HSRP Slave Submode, under the IPv6 address-family
Command History	Release Modification
	Release 5.0.0 This command was introduced.
Usage Guidelines	When you configure HSRP for IPv6, you must also configure the linklocal IPv6 address using either the <i>ipv6-address</i> argument or the autoconfig keyword. If you configure only the global IPv6 address and commit the changes using the commit keyword, the router does not accept the configuration and displays an error message.
Task ID	Task ID Operation
	hsrp read, write

Example

This example shows how to autoconfigure the HSRP IPv6 link-local address:

```
Router#configure
Router(config)#router hsrp
Router(config-hsrp)#interface tenGigE 0/4/0/4
Router(config-hsrp-if)#address-family ipv6
Router(config-hsrp-address-family)#hsrp 3 slave
Router(config-hsrp-virtual-router)#address linklocal autoconfig
Router(config-hsrp-virtual-router)#
```

This example shows how to configure the virtual link-local IPv6 address for the subordinate group:

```
Router#configure
Router(config)#router hsrp
Router(config-hsrp)#interface tenGigE 0/4/0/4
Router(config-hsrp-if)#address-family ipv6
Router(config-hsrp-address-family)#hsrp 3 slave
Router(config-hsrp-virtual-router)#address linklocal FE80::260:3EFF:FE11:6770
Router(config-hsrp-virtual-router)#
```



Note

- The **version** keyword is available only if IPv4 address-family is selected. By default, version is set to 2 for IPv6 address families.
 - HSRP version 2 provides an extended group range of 0-4095.
-

address secondary (hsrp)

To configure the secondary virtual IPv4 address for a virtual router, use the **address secondary** command in the Hot Standby Router Protocol (HSRP) virtual router submode. To deconfigure the secondary virtual IPv4 address for a virtual router, use the **no** form of this command.

address *address* **secondary**
no address *address* **secondary**

Syntax Description	secondary	Sets the secondary HSRP IP address.
	<i>address</i>	HSRP IPv4 address.
Command Default	None	
Command Modes	HSRP virtual router	
Command History	Release	Modification
	Release 5.0.0	This command was introduced.
Usage Guidelines	No specific guidelines impact the use of this command.	
Task ID	Task ID	Operation
	hsrp	read, write

Example

This example shows how to set the secondary virtual IPv4 address for the virtual router:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# router hsrp
RP/0/RP0/CPU0:router(config-hsrp)# interface tenGigE 0/4/0/4
RP/0/RP0/CPU0:router(config-hsrp-if)# address-family ipv4
RP/0/RP0/CPU0:router(config-hsrp-ipv4)# hsrp 3 version 2
RP/0/RP0/CPU0:router(config-hsrp-gp)# address 10.20.30.1 secondary
RP/0/RP0/CPU0:router(config-hsrp-gp)#
```



Note

- The **version** keyword is available only if IPv4 address-family is selected. By default, version is set to 2 for IPv6 address families.
- HSRP version 2 provides an extended group range of 0-4095.

Related Commands

Command	Description
address (hsrp), on page 2	Enables hot standby protocol for IP.

authentication (hsrp)

To configure an authentication string for the Hot Standby Router Protocol (HSRP), use the **hsrp authentication** command in HSRP group submode. To delete an authentication string, use the **no** form of this command.

authentication *string*
no authentication [*string*]

Syntax Description	<i>string</i> Authentication string. It can be up to eight characters long. The default is 'cisco'.
---------------------------	---

Command Default	The default authentication string is cisco.
------------------------	---

Command Modes	HSRP Group Submode
----------------------	--------------------

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

Usage Guidelines	The authentication string is sent unencrypted in all HSRP messages. The same authentication string must be configured on all routers and access servers on a LAN to ensure interoperability. Authentication mismatch prevents a device from learning the designated Hot Standby IP address and the Hot Standby timer values from other routers configured with HSRP.
-------------------------	--

The **hsrp authentication** command is available for version 1 groups only

Task ID	Task ID	Operations
	hsrp	read, write

Examples	This example shows how to configure “company1” as the authentication string required to allow Hot Standby routers in group 1 on HundredGigE interface 0/4/0/4 to interoperate:
-----------------	--

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# router hsrp
RP/0/RP0/CPU0:router(config-hsrp)# interface HundredGigE 0/4/0/4
RP/0/RP0/CPU0:router(config-hsrp-if)# address-family ipv4
RP/0/RP0/CPU0:router(config-hsrp-if)# hsrp 1 version 1
RP/0/RP0/CPU0:router(config-hsrp-if)# authentication company1
RP/0/RP0/CPU0:router(config-hsrp-if)#
```



Note	The version keyword is available only if IPv4 address-family is selected. By default, version is set to 2 for IPv6 address families.
-------------	---

Related Commands

Command	Description
show hsrp, on page 29	Displays HSRP information.

bfd fast-detect (hsrp)

To enable bidirectional forwarding (BFD) fast-detection on a HSRP interface, use the **hsrp bfd fast-detect** command in HSRP group submode. This creates a BFD session between the HSRP router and its peer, and if the session goes down while HSRP is in backup state, this will initiate a HSRP failover. To disable BFD fast-detection, use the **no** form of this command.

bfd fast-detect [**peer ipv4** *ipv4-address* [*interface-type interface-path-id*]]

Syntax Description	peer ipv4 <i>ipv4-address</i>	(Optional) BFD peer interface IPv4 address.
	<i>interface-type interface-path-id</i>	(Optional) Physical interface or virtual interface.
	Note	Use the show interfaces command to see a list of all interfaces currently configured on the router.
		For more information about the syntax for the router, use the question mark (?) online help function.

Command Default BFD is disabled.

Command Modes HSRP Group Submode

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	hsrp	read, write

Examples This example shows how to enable bfd fast-detect:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# router hsrp
RP/0/RP0/CPU0:router(config-hsrp)# interface HundredGigE 0/4/0/4
RP/0/RP0/CPU0:router(config-hsrp-if)# address-family ipv4
RP/0/RP0/CPU0:router(config-hsrp-ipv4)# hsrp 1 version 2
RP/0/RP0/CPU0:router(config-hsrp-gp)# bfd fast-detect
RP/0/RP0/CPU0:router(config-hsrp-gp)#
```

**Note**

- The **version** keyword is available only if IPv4 address-family is selected. By default, version is set to 2 for IPv6 address families.
- HSRP version 2 provides an extended group range of 0-4095.

Related Commands

Command	Description
hsrp bfd multiplier, on page 16	Configures the multiplier value for BFD.
hsrp bfd minimum-interval, on page 15	Configures the BFD minimum interval to be used for all HSRP BFD sessions on a given interface

clear hsrp statistics

To reset the Hot Standby Routing Protocol Statistics (HSRP) statistics to zero, use the **clear hsrp statistics** command in XR EXEC mode.

clear hsrp statistics [**interface** *interface-type interface-path-id* [*group*]]

Syntax Description

interface *interface-path-id* Physical interface or virtual interface.

Note Use the show interfaces command to see a list of all interfaces currently configured on the router.

For more information about the syntax for the router, use the question mark (?) online help function.

group (Optional) Group number.

Command Default

None

Command Modes

XR EXEC mode

Command History

Release	Modification
Release 5.0.0	This command was introduced.

Usage Guidelines

No specific guidelines impact the use of this command.

Task ID

Task ID	Operation
hsrp	read, write

Example

This sample output is from the **clear hsrp statistics** command:

```
RP/0/RP0/CPU0:router# clear hsrp statistics
```

Related Commands

Command	Description
show hsrp, on page 29	Displays HSRP information.

hsrp bfd minimum-interval

To configure the BFD minimum interval to be used for all HSRP BFD sessions on a given interface, use the **hsrp bfd minimum-interval** command in the interface configuration mode. To remove the configured minimum-interval period and set the minimum-interval period to the default period, use the **no** form of this command.

```
hsrp bfd minimum-interval interval
no hsrp bfd minimum-interval interval
```

Syntax Description	interval Specify the minimum-interval in milliseconds. Range is 15 to 30000.
---------------------------	---

Command Default	Default minimum interval is 15 ms.
------------------------	------------------------------------

Command Modes	HSRP interface configuration
----------------------	------------------------------

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

Usage Guidelines	Minimum interval determines the frequency of sending BFD packets to BFD peers. It is the time between successive BFD packets sent for the session. Minimum interval is defined in milliseconds. The configured minimum interval applies to all BFD sessions on the interface.
-------------------------	---

Task ID	Task ID	Operations
	hsrp	read, write

Examples	The following example shows how to configure a minimum interval of 100 milliseconds:
-----------------	--

```
RP/0/RP0/CPU0:router(config)# router hsrp
RP/0/RP0/CPU0:router(config-hsrp)# interface gig 0/1/1/0
RP/0/RP0/CPU0:router(config-hsrp-if)# hsrp bfd minimum-interval 100
```

Related Commands	Command	Description
	hsrp bfd fast-detect	Enables BFD fast-detection on a HSRP interface.
	hsrp bfd multiplier, on page 16	Configures the multiplier value for BFD.

hsrp bfd multiplier

To set the BFD multiplier value, use the **hsrp bfd multiplier** command in the interface configuration mode. To remove the configured multiplier value and set the multiplier to the default value, use the **no** form of this command.

hsrp bfd multiplier *multiplier*
no hsrp bfd multiplier *multiplier*

Syntax Description	multiplier Specifies the BFD multiplier value. Range is 2 to 50.
---------------------------	---

Command Default	Default value is 3.
------------------------	---------------------

Command Modes	HSRP interface configuration
----------------------	------------------------------

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

Usage Guidelines	The multiplier value specifies the number of consecutive BFD packets that, if not received as expected, cause a BFD session to go down. The BFD multiplier applies to all configured BFD sessions on the interface.
-------------------------	---

Task ID	Task ID	Operations
	hsrp	read, write

Examples	The following example shows how to configure a BFD multiplier with multiplier value of 10:
-----------------	--

```
RP/0/RP0/CPU0:router(config)# router hsrp
RP/0/RP0/CPU0:router(config-hsrp)# interface gig 0/1/1/0
RP/0/RP0/CPU0:router(config-hsrp-if)# hsrp bfd multiplier 10
```

Related Commands	Command	Description
	hsrp bfd fast-detect	Enables BFD fast-detection on a HSRP interface.

hsrp delay

To configure the activation delay for the Hot Standby Router Protocol (HSRP), use the **hsrp delay** command in HSRP interface configuration mode. To delete the activation delay, use the **no** form of this command.

hsrp delay minimum *value* **reload** *value*
no hsrp delay

Syntax Description	minimum <i>value</i>	Sets the minimum delay in seconds for every interface up event. Range is 0 to 10000.
	reload <i>value</i>	Sets the reload delay in seconds for first interface up event. Range is 0 to 10000.

Command Default	minimum <i>value</i> : 1
	reload <i>value</i> : 5

Command Modes	HSRP interface configuration
----------------------	------------------------------

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

Usage Guidelines	The hsrp delay command delays the start of the HSRP finite state machine (FSM) on an interface up event to ensure that the interface is ready to pass traffic. This ensures that there are no mistaken state changes due to loss of hello packets. The minimum delay is applied on all interface up events and the reload delay is applied on the first interface event.
-------------------------	---

The values of zero must be explicitly configured to turn this feature off.

Task ID	Task ID	Operations
	hsrp	read, write

Examples	The following example shows how to configure a minimum delay of 10 seconds with a reload delay of 100 seconds:
-----------------	--

```
RP/0/RP0/CPU0:router(config)# router hsrp
RP/0/RP0/CPU0:router(config-hsrp)# interface 0/RP0/CPU0/0
RP/0/RP0/CPU0:router(config-hsrp-if)# hsrp delay minimum 10 reload 100
```

Related Commands	Command	Description
	show hsrp, on page 29	Displays HSRP information.

hsrp ipv4

To activate the Hot Standby Router Protocol (HSRP), use the **hsrp ipv4** command in HSRP interface configuration mode. To disable HSRP, use the **no** form of this command.

hsrp ipv4 [*ip-address* [**secondary**]]
no hsrp ipv4 [*ip-address* [**secondary**]]

Syntax Description

group-number	(Optional) Group number on the interface for which HSRP is being activated. Range is 0 to 255. Default is 0.
ip-address	(Optional) IP address of the Hot Standby router interface.
secondary	(Optional) Indicates that the IP address is a secondary Hot Standby router interface. Useful on interfaces with primary and secondary addresses; you can configure primary and secondary HSRP addresses.

Command Default

group-number : 0
 HSRP is disabled by default.

Command Modes

HSRP interface configuration

Usage Guidelines

The **hsrp ipv4** command activates HSRP on the configured interface. If an IP address is specified, that address is used as the designated address for the Hot Standby group. If no IP address is specified, the virtual address is learned from the active router. For HSRP to elect a designated router, at least one router in the Hot Standby group must have been configured with, or must have learned, the designated address. Configuring the designated address on the active router always overrides a designated address that is currently in use.

When the **hsrp ipv4** command is enabled on an interface, the handling of proxy Address Resolution Protocol (ARP) requests is changed (unless proxy ARP was disabled). If the Hot Standby state group has been configured with or has learned the designated address, the proxy ARP requests are answered using the MAC address of the Hot Standby group. Otherwise, proxy ARP responses are suppressed.

Configuring secondary Hot Standby router IP addresses is necessary when the interface has secondary IP addresses configured and redundancy must be provided for the networks of these addresses also.

A primary address must be configured before a secondary address. Likewise, a secondary address must be unconfigured before unconfiguring a primary address. All IP addresses can be unconfigured using the **no hsrp ipv4** command.

Task ID

Task ID	Operations
hsrp	read, write

Examples

The following example shows how to activate HSRP for group 1 on HundredGigE interface 0/2/0/1. The IP address used by the Hot Standby group is learned using HSRP.

```
RP/0/RP0/CPU0:router(config)# router hsrp  
RP/0/RP0/CPU0:router(config-hsrp)# interface HundredGigE 0/2/0/1  
RP/0/RP0/CPU0:router(config-hsrp-if)# hsrp 1 ipv4
```

Related Commands

Command	Description
hsrp redirects, on page 20	Configures ICMP redirect messages to be sent when the HSRP is configured on an interface.
show hsrp, on page 29	Displays HSRP information.

hsrp redirects

To configure Internet Control Message Protocol (ICMP) redirect messages to be sent when the Hot Standby Router Protocol (HSRP) is configured on an interface, use the **hsrp redirects** command in HSRP interface configuration mode. To revert to the default, which is that ICMP messages are enabled, use the **no** form of this command.

hsrp redirects disable
no hsrp redirects disable

Syntax Description	disable Disables the filtering of ICMP redirect messages on interfaces configured with HSRP.
---------------------------	---

Command Default	HSRP ICMP redirects are enabled by default.
------------------------	---

Command Modes	HSRP interface configuration
----------------------	------------------------------

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

Usage Guidelines	The hsrp redirects command can be configured on a per-interface basis. When HSRP is first configured on an interface, the setting for that interface inherits the global value. With the hsrp redirects command is enabled, ICMP redirects messages are filtered by replacing the real IP address in the next-hop address of the redirect packet with a virtual IP address if it is known to HSRP.
-------------------------	--

Task ID	Task ID	Operations
	hsrp	read, write

Examples	The following example shows how to allow HSRP to filter redirect messages on HundredGigE interface 0/2/0/1:
-----------------	---

```
RP/0/RP0/CPU0:router(config)# router hsrp
RP/0/RP0/CPU0:router(config-hsrp)# interface HundredGigE 0/2/0/1

RP/0/RP0/CPU0:router(config-hsrp-if)# hsrp redirects disable
```

Related Commands	Command	Description
	show hsrp, on page 29	Displays HSRP information.

hsrp use-bia

To configure the Hot Standby Router Protocol (HSRP) to use the burned-in address of the interface as its virtual MAC address, instead of the preassigned MAC address or the functional address, use the **hsrp use-bia** command in HSRP interface configuration mode. To restore the default virtual MAC address, use the **no** form of this command.

hsrp use-bia
no hsrp use-bia

Command Default HSRP uses the preassigned MAC address on Ethernet.

Command Modes HSRP interface configuration

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

Usage Guidelines It is desirable to configure the **hsrp use-bia** command on an interface if there are devices that reject Address Resolution Protocol (ARP) replies with source hardware addresses set to a functional address.

Task ID	Task ID	Operations
	hsrp	read, write

Examples

In the following example, the burned-in address of HundredGigE interface 0/2/0/1 will be the virtual MAC address mapped to the virtual IP address for all Hot Standby groups configured on HundredGigE interface 0/1/0/1:

```
RP/0/RP0/CPU0:router(config)# router hsrp
RP/0/RP0/CPU0:router(config-hsrp)# interface HundredGigE 0/2/0/1
RP/0/RP0/CPU0:router(config-hsrp-if)# hsrp use-bia
```

Related Commands	Command	Description
	hsrp mac-address	Specifies a virtual MAC address for HSRP.
	show hsrp, on page 29	Displays HSRP information.

interface (HSRP)

To enable Hot Standby Router Protocol (HSRP) interface configuration command mode, use the **interface** command in router configuration mode. To terminate interface mode, use the **no** form of this command.

interface *type interface-path-id*
no interface *type interface-path-id*

Syntax Description

type	Interface type. For more information, use the question mark (?) online help function.
interface-path-id	Physical interface or virtual interface.
Note	Use the show interfaces command to see a list of all interfaces currently configured on the router.
	For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

HSRP is disabled.

Command Modes

Router HSRP configuration

Command History

Release	Modification
Release 5.0.0	This command was introduced.

Usage Guidelines

All the commands used to configure HSRP are used in HSRP interface configuration mode.

Task ID

Task ID	Operations
hsrp	read, write

Examples

The following example show how to enable HSRP interface configuration mode on HundredGigE 0/2/0/1:

```
RP/0/RP0/CPU0:router(config)# router hsrp
RP/0/RP0/CPU0:router(config-hsrp)# interface HundredGigE 0/2/0/1
RP/0/RP0/CPU0:router(config-hsrp-if)#
```

Related Commands

Command	Description
router hsrp, on page 27	Enables HSRP.

preempt (hsrp)

To configure Hot Standby Router Protocol (HSRP) preemption and preemption delay, use the **hsrp preempt** command in HSRP group submode. To restore the default values, use the **no** form of this command.

preempt [*delay seconds*]
no preempt [*delay seconds*]

Syntax Description	delay seconds (Optional) Time in seconds. The <i>seconds</i> argument causes the local router to postpone the taking over the active role for the specified preempt delay <i>seconds</i> value. Range is from 0 to 3600 (1 hour). Default is 0 (no delay).	
Command Default	The default delay is 0.	
Command Modes	HSRP Group Submode	
Command History	Release	Modification
	Release 5.0.0	This command was introduced.
Usage Guidelines	When the hsrp preempt command is configured, the local router should attempt to assume control as the active router, if it has a hot standby priority higher than the current active router. If the hsrp preempt command is not configured, the local router assumes control as the active router only if no other router is currently in the active state.	
	When a router first comes up, it does not have a complete routing table. If HSRP is configured to preempt, the local HSRP group may become the active router, yet it is unable to provide adequate routing services. This problem can be solved by configuring a delay before the preempting router actually preempts the currently active router.	
	The preempt delay <i>seconds</i> value does not apply if there is no router currently in the active state. In this case, the local router becomes active after the appropriate timeouts (see the hsrp timers command), regardless of the preempt <i>delay seconds</i> value.	
Task ID	Task ID	Operations
	hsrp	read, write
Examples	This example, the router waits for 300 seconds (5 minutes) after having determined that it should preempt before attempting to preempt the active router. The router might become the active router in a shorter span of time despite the configured delay, if no active router is present. Only preempting the active router is delayed.	
	<pre>RP/0/RP0/CPU0:router# configure RP/0/RP0/CPU0:router(config)# router hsrp</pre>	

```
RP/0/RP0/CPU0:router(config-hsrp)# interface HundredGigE 0/4/0/4
RP/0/RP0/CPU0:router(config-hsrp-if)# address-family ipv4
RP/0/RP0/CPU0:router(config-hsrp-ipv4)# hsrp 1 version 2
RP/0/RP0/CPU0:router(config-hsrp-gp)# preempt delay 300
RP/0/RP0/CPU0:router(config-hsrp-gp)#
```

**Note**

- The **version** keyword is available only if IPv4 address-family is selected. By default, version is set to 2 for IPv6 address families.
- HSRP version 2 provides an extended group range of 0-4095.

Related Commands

Command	Description
hsrp priority	Configures HSRP priority.
hsrp track	Configures an interface so that the Hot Standby priority changes based on the availability of other interfaces.
show hsrp, on page 29	Displays HSRP information.

priority (hsrp)

To configure Hot Standby Router Protocol (HSRP) priority, use the **priority** command in HSRP group submode. To restore the default values, use the **no** form of this command.

priority *priority*
no priority *priority*

Syntax Description	<i>priority</i> Priority value that prioritizes a potential Hot Standby router. Range is from 1 to 255. Default is 100.				
Command Default	The default priority is 100.				
Command Modes	HSRP group submode				
Command History	<table> <tr> <th>Release</th><th>Modification</th></tr> <tr> <td>Release 5.0.0</td><td>This command was introduced.</td></tr> </table>	Release	Modification	Release 5.0.0	This command was introduced.
Release	Modification				
Release 5.0.0	This command was introduced.				
Usage Guidelines	<p>The assigned priority is used to help select the active and standby routers. Assuming that preemption is enabled, the router with the highest priority becomes the designated active router. In case of ties, the interface IP addresses are compared, and the interface with the higher IP address has priority.</p> <p>The priority of the device can change dynamically if an interface is configured with the hsrp track command and another interface on the device goes down.</p> <p>If preemption is not enabled, the router may not become active even though it might have a higher priority than other HSRP routers.</p>				
Task ID	<table> <tr> <th>Task ID</th><th>Operations</th></tr> <tr> <td>hsrp</td><td>read, write</td></tr> </table>	Task ID	Operations	hsrp	read, write
Task ID	Operations				
hsrp	read, write				
Examples	<p>In this example, the router has a priority of 120:</p> <pre>RP/0/RP0/CPU0:router# configure RP/0/RP0/CPU0:router(config)# router hsrp RP/0/RP0/CPU0:router(config-hsrp)# interface HundredGigE 0/4/0/4 RP/0/RP0/CPU0:router(config-hsrp-if)# address-family ipv4 RP/0/RP0/CPU0:router(config-hsrp-ipv4)# hsrp 1 version 2 RP/0/RP0/CPU0:router(config-hsrp-gp)# priority 120 RP/0/RP0/CPU0:router(config-hsrp-gp)#</pre>				

**Note**

- The **version** keyword is available only if IPv4 address-family is selected. By default, version is set to 2 for IPv6 address families.
- HSRP version 2 provides an extended group range of 0-4095.

Related Commands

Command	Description
hsrp preempt	Configures HSRP preemption and preemption delay.
hsrp track	Configures an interface so that the Hot Standby priority changes based on the availability of other interfaces.
show hsrp, on page 29	Displays HSRP information.

router hsrp

To enable the Hot Standby Router Protocol (HSRP), use the **router hsrp** command in XR Config mode. To disable HSRP, use the **no** form of this command.

router hsrp
no router hsrp

Syntax Description This command has no keywords or arguments.

Command Default HSRP is disabled.

Command Modes XR Config mode

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

Usage Guidelines HSRP configuration commands must be configured in the HSRP interface configuration mode.

Task ID	Task ID	Operations
	hsrp	read, write

Examples The following example shows how to configure an HSRP redundancy process that contains a virtual router group 1 on HundredGigE 0/2/0/1:

```
RP/0/RP0/CPU0:router(config)# router hsrp
RP/0/RP0/CPU0:router(config-hsrp)# interface HundredGigE 0/2/0/1
RP/0/RP0/CPU0:router(config-hsrp-if)# hsrp 1 priority 254
```

session name

To configure an HSRP session name, use the **session name** command in the HSRP group submode. To deconfigure an HSRP session name, use the **no** form of this command.

name *name*

Syntax Description

name MGO session name

Command Default

None

Command Modes

HSRP Group Submode

Command History

Release	Modification
Release 5.0.0	This command was introduced.

Usage Guidelines

No specific guidelines impact the use of this command.

Task ID

Task ID	Operation
hsrp	read

Example

This example shows how to configure an HSRP session name.

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# router hsrp
RP/0/RP0/CPU0:router(config-hsrp)# interface tenGigE 0/4/0/4
RP/0/RP0/CPU0:router(config-hsrp-if)# address-family ipv4
RP/0/RP0/CPU0:router(config-hsrp-ipv4)# hsrp 1 version 2
RP/0/RP0/CPU0:router(config-hsrp-gp)# name s1
RP/0/RP0/CPU0:router(config-hsrp-gp)#
```



Note

- The **version** keyword is available only if IPv4 address-family is selected. By default, version is set to 2 for IPv6 address families.
- HSRP version 2 provides an extended group range of 0-4095.

Related Commands

Command	Description
hsrp mac-address	Configures a virtual MAC address for the Hot Standby Router Protocol (HSRP).

show hsrp

To display Hot Standby Router Protocol (HSRP) information, use the **show hsrp** command in XR EXEC mode.

```
show hsrp [interface-type interface-path-id] [group-number] [{brief | detail}]
```

Syntax Description	
<i>interface-type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface.
	<p>Note Use the show interfaces command to see a list of all interfaces currently configured on the router.</p> <p>For more information about the syntax for the router, use the question mark (?) online help function.</p>
<i>group-number</i>	(Optional) Group number on the interface for which output is displayed.
brief	(Optional) A single line of output summarizes each standby group. The brief keyword is the default if detail is not specified.
detail	(Optional) This keyword has the same effect as not specifying brief ; more output is provided.
	<p>(Optional) After this vertical bar (), specify one of these output modifiers and a keyword from the output:</p> <ul style="list-style-type: none"> • begin —Begins the output from the word that you specify. • exclude —Excludes lines that match the word that you specify. • include —Includes lines that match the word that you specify.

Command Default	By default, a single line of output summarizing each standby group is displayed.
-----------------	--

Command Modes	XR EXEC mode
---------------	--------------

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

Usage Guidelines	<p>Use the show hsrp command to display HSRP information.</p> <p>If you want to specify a value for the <i>group-number</i> argument, you must also specify an interface <i>type</i> and <i>number</i>.</p>
------------------	--

Task ID	Task ID	Operations
	hsrp	read

Examples

This is sample output from the **show hsrp detail** command:

```
RP/0/RP0/CPU0:router# show hsrp detail

HundredGigE 0/4/0/0 - Group 1
  Local state is Active, priority 100
  Hellotime 3 sec holdtime 10 sec
  Next hello sent in 0.539
  Minimum delay 1 sec, reload delay 5 sec
BFD enabled: state none, interval 15 ms multiplier 3
  Hot standby IP address is 4.0.0.100 configured
  Active router is local
  Standby router is unknown expired
  Standby virtual mac address is 0000.0c07.ac01
  2 state changes, last state change 00:05:20
```

This table describes the significant fields shown in the display.

Table 1: show hsrp Command Field Descriptions

Field	Description
HundredGigE0/2/0/4	Interface type and number and Hot Standby group number for the interface.
Local state is	State of local networking device; can be one of the following: <ul style="list-style-type: none"> • Active—Current Hot Standby router. • Standby—Router next in line to be the Hot Standby router. • Speak—Router is sending packets to claim the active or standby role. • Listen—Router is neither active nor standby, but if no messages are received from the active or standby router, it will start to “speak.” • Learn—Router is neither active nor standby, nor does it have enough information to attempt to claim the active or standby roles. • Init—Router is not yet ready to participate in HSRP, possibly because the associated interface is not up.
Hellotime	Current time (in seconds) between sending of hello packets, learned dynamically from the hello packets received from the active Hot Standby router.
holdtime	Current time (in seconds) before other routers declare the active or standby router to be down, learned dynamically from the hello packets received from the active Hot Standby router.
Next hello sent in	Time in which the software will send the next hello packet (in hours:minutes:seconds).
BFD enabled	Displays BFD related information (with multiplier and minimum interval details)

Field	Description
Hot standby IP address is configured	IP address of the current Hot Standby router. The word “configured” indicates that this address is known through the hsrp ip command. Otherwise, the address was learned dynamically through HSRP hello packets from other routers that do have the HSRP IP address configured.
Active router is	Value can be “local” or an IP address. Address of the current active Hot Standby router.
Standby router is	Value can be “local” or an IP address of the standby router (the router that is next in line to be the Hot Standby router).
Standby virtual mac address is	MAC address associated with the standby group address.
state changes	Number of times the router changed the standby state.
last state change	Time (in hours:minutes:seconds) expired since the last state change.
Tracking interface states for	List of interfaces that are being tracked and their corresponding states. Based on the hsrp track command.
Priority decrement	Value by which the standby priority is decremented or incremented when the tracked interface goes down or up, respectively. Default is 10.

Related Commands

Command	Description
hsrp authentication	Configures an authentication string for HSRP.
hsrp ipv4	Activates the HSRP.
hsrp mac-address	Specifies a virtual MAC address for HSRP.
hsrp preempt	Configures HSRP preemption and preemption delay.
hsrp priority	Configures HSRP priority.
hsrp timers	Configures the time between hello packets and the time before other routers declare the active Hot Standby or standby router to be down.
hsrp track	Configures an interface so that the Hot Standby priority changes based on the availability of other interfaces.
hsrp use-bia, on page 21	Configures HSRP to use the burned-in address of the interface as its virtual MAC address, instead of the preassigned MAC address.

show hsrp bfd

To display Hot Standby Router Protocol (HSRP) bfd information across all interfaces, use the **show hsrp bfd** command in XR EXEC mode.

show hsrp bfd [*interface-type interface-path-id* [*ip-address*]]

Syntax Description	<i>interface-type</i>	(Optional) Physical interface or virtual interface.
	<i>interface-path-id</i>	Note Use the show interfaces command to see a list of all interfaces currently configured on the router.
		For more information about the syntax for the router, use the question mark (?) online help function.
	<i>ip-address</i>	(Optional) Destination IP address for BFD session.
Command Default	None	
Command Modes	XR EXEC mode	
Command History	Release	Modification
	Release 5.0.0	This command was introduced.
Usage Guidelines	No specific guidelines impact the use of this command.	
Task ID	Task ID	Operation
	hsrp	read

Example

This example shows Hot Standby Router Protocol (HSRP) bfd information across all interfaces.

```
RP/0/RP0/CPU0:router# show hsrp bfd
```

BFD Interface	Destination IP	State	Intv	Mult	HSRP Interface	Grp
Gi0/3/0/2	10.0.0.2	up	100	3	Gi0/3/0/2	1
					Gi0/3/0/2	2
Gi0/3/0/2	10.0.0.3	inactive	100	3	Gi0/3/0/2	3
					Gi0/3/0/2	6
Gi0/3/0/3.1	10.0.1.2	down	15	3	Gi0/3/0/2	4

This example shows Hot Standby Router Protocol (HSRP) bfd information for the HundredGigE 0/3/0/2 interface.

RP/0/RP0/CPU0:router# **show hsrp bfd HundredGigE 0/3/0/2 10.0.0.2**

BFD Interface	Destination IP	State	Intv	Mult	HSRP Interface	Grp
-----	-----	-----	-----	-----	-----	---
Gi0/3/0/2	10.0.0.2	up	100	3	Gi0/3/0/2	1
					Gi0/3/0/2	2

Related Commands

Command	Description
show hsrp, on page 29	Displays HSRP information.

show hsrp mgo

To display Hot Standby Router Protocol (HSRP) mgo information across all interfaces, use the **show hsrp mgo** command in XR EXEC mode.

show hsrp mgo [{**brief** *session-name*}]

Syntax Description	brief	(Optional) Displays information in a brief format.
	<i>session-name</i>	(Optional) Display information for a single MGO Session.
Command Default	None	
Command Modes	XR EXEC mode	
Command History	Release	Modification
	Release 5.0.0	This command was introduced.
Usage Guidelines	No specific guidelines impact the use of this command.	
Task ID	Task ID	Operation
	hsrp	read

Example

This example shows Hot Standby Router Protocol (HSRP) mgo information for interface HSRP3.

```
RP/0/RP0/CPU0:router# show hsrp mgo HSRP3

HSRP3
  Primary group Bundle-Ether1.1 IPv4 group 1
  State is Active
  Slave groups:
    Interface          Grp
    Bundle-Ether1.2    2
    Bundle-Ether1.3    3
    Bundle-Ether1.4    4
    Bundle-Ether1.5    5
```

This example shows Hot Standby Router Protocol (HSRP) mgo information across all interfaces in a brief format.

```
RP/0/RP0/CPU0:router# show hsrp mgo brief

Name          Interface    AF    Grp    State Slaves
```

HSRP1	Gi0/0/0/1	IPv4	1	Active	100
HSRP2	Te0/1/0/0.1	IPv4	2	Standby	50
HSRP3	BE1	IPv4	1	Active	4
HSRP4	BE1	IPv6	10	Active	11

Related Commands

Command	Description
show hsrp, on page 29	Displays HSRP information.

show hsrp statistics

To display Hot Standby Router Protocol (HSRP) statistics information across all interfaces, use the **show hsrp statistics** command in XR EXEC mode.

show hsrp [{*interface-type* *interface-path-id*}] **statistics**

Syntax Description	<i>interface-type</i>	Physical interface or virtual interface.
	<i>interface-path-id</i>	Note Use the show interfaces command to see a list of all interfaces currently configured on the router.
		For more information about the syntax for the router, use the question mark (?) online help function.
Command Modes	XR EXEC mode	
Command History	Release	Modification
	Release 5.0.0	This command was introduced.
Usage Guidelines	No specific guidelines impact the use of this command.	
Task ID	Task ID	Operation
	hsrp	read

Example

This sample output is from the **show hsrp statistics** command:

```
RP/0/RP0/CPU0:router# show hsrp statistics
Protocol:
  Transitions to Active           2
  Transitions to Standby         2
  Transitions to Speak           0
  Transitions to Listen          2
  Transitions to Learn           0
  Transitions to Init            0

Packets Sent:                   12
  Hello:                         7
  Resign:                        0
  Coup:                          2
  Adver:                         3

Valid Packets Received:         13
  Hello:                         8
  Resign:                        2
  Coup:                          0
```

```
Adver: 3
Invalid packets received: 0
  Too long: 0
  Too short: 0
Mismatching/unsupported versions: 0
Invalid opcode: 0
Unknown group: 0
Inoperational group: 0
Conflicting Source IP: 0
Failed Authentication: 2
Invalid Hello Time: 0
Mismatching Virtual IP: 0
```

Related Commands

Command	Description
show hsrp, on page 29	Displays HSRP information.

show hsrp summary

To display Hot Standby Router Protocol (HSRP) summary information across all interfaces, use the **show hsrp summary** command in XR EXEC mode.

show hsrp summary

Syntax Description	This command has no keywords or arguments.				
Command Default	None				
Command Modes	XR EXEC mode				
Command History	<table> <tr> <th>Release</th><th>Modification</th></tr> <tr> <td>Release 5.0.0</td><td>This command was introduced.</td></tr> </table>	Release	Modification	Release 5.0.0	This command was introduced.
Release	Modification				
Release 5.0.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table> <tr> <th>Task ID</th><th>Operation</th></tr> <tr> <td>hsrp</td><td>read</td></tr> </table>	Task ID	Operation	hsrp	read
Task ID	Operation				
hsrp	read				

Example

This sample output is from the **show hsrp summary** command:

```
RP/0/RP0/CPU0:router# show hsrp summary
              Groups                      VIPs
State  Sessions Slaves Total      Up   Down   Total
-----
ALL              60    900   960      860  2020   2880

ACTIVE          10    190   200      200   300   500
STANDBY         15    235   250      250   600   850
SPEAK           10    190   200      200   400   600
LISTEN          10    190   200      200   400   600
LEARN            5      5    10       10    20    30
INIT            10     90   100       0    300   300

48  HSRP IPv4 interfaces      (43  up, 5  down)
5   Tracked IPv4 interfaces  (4   up, 1  down)
5   BFD sessions              (3   up, 2  down)
```

Related Commands	Command	Description
	show hsrp, on page 29	Displays HSRP information.

hsrp slave follow

To instruct the subordinate group to inherit its state from a specified group, use the **hsrp slave follow** command in HSRP slave submode.

follow *mgo-session-name*

Syntax Description	<i>mgo-session-name</i> Name of the MGO session from which the subordinate group will inherit the state.				
Command Default	None				
Command Modes	HSRP Slave Submode				
Command History	<table> <tr> <th>Release</th><th>Modification</th></tr> <tr> <td>Release 5.0.0</td><td>This command was introduced.</td></tr> </table>	Release	Modification	Release 5.0.0	This command was introduced.
Release	Modification				
Release 5.0.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table> <tr> <th>Task ID</th><th>Operation</th></tr> <tr> <td>hsrp</td><td>read, write</td></tr> </table>	Task ID	Operation	hsrp	read, write
Task ID	Operation				
hsrp	read, write				

Example

This example shows how to instruct the subordinate group to inherit its state from a specified group.

```
Router# configure
Router(config)# router hsrp
Router(config-hsrp)# interface HundredGigE 0/4/0/4
Router(config-hsrp-if)# address-family ipv4
Router(config-hsrp-ipv4)# hsrp slave
Router(config-hsrp-slave)# follow m1
```

Related Commands	<table> <tr> <th>Command</th><th>Description</th></tr> <tr> <td>subordinate virtual mac address, on page 42</td><td>Configures the virtual MAC address for the subordinate group.</td></tr> </table>	Command	Description	subordinate virtual mac address, on page 42	Configures the virtual MAC address for the subordinate group.
Command	Description				
subordinate virtual mac address, on page 42	Configures the virtual MAC address for the subordinate group.				

subordinate primary virtual IPv4 address

To configure the primary virtual IPv4 address for the subordinate group, use the **subordinate primary virtual IPv4 address** command in the HSRP slave submode.

address *ip-address*

Syntax Description	<i>ip-address</i> IP address of the Hot Standby router interface.
---------------------------	---

Command Default	None
------------------------	------

Command Modes	HSRP Slave Submode
----------------------	--------------------

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

Usage Guidelines	No specific guidelines impact the use of this command.
-------------------------	--

Task ID	Task ID	Operation
	hsrp	read, write

Example

This example shows how to configure the primary virtual IPv4 address for the subordinate group.

```
Router# configure
Router(config)# router hsrp
Router(config-hsrp)# interface tenGigE 0/4/0/4
Router(config-hsrp-if)# address-family ipv4
Router(config-hsrp-ipv4)# hsrp slave
Router(config-hsrp-slave)# address 10.2.1.4
```

Related Commands	Command	Description
	hsrp slave follow, on page 39	Instructs the subordinate group to inherit its state from a specified group.
	subordinate virtual mac address, on page 42	Configures the virtual MAC address for the subordinate group.

subordinate secondary virtual IPv4 address

To configure the secondary virtual IPv4 address for the subordinate group, use the **subordinate secondary virtual IPv4 address** command in the HSRP slave submode.

address *ip-address* **secondary**

Syntax Description	<i>ip-address</i>	IP address of the Hot Standby router interface.
	secondary	Sets the secondary hot standby IP address.

Command Default None

Command Modes HSRP Slave Submode

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID	Operation
	hsrp	read, write

Example

This example shows how to configure the secondary virtual IPv4 address for the subordinate group.

```
Router# configure
Router(config)# router hsrp
Router(config-hsrp)# interface HundredGigE 0/4/0/4
Router(config-hsrp-if)# address-family ipv4
Router(config-hsrp-ipv4)# hsrp slave
Router(config-hsrp-slave)# address 10.2.1.4 secondary
```

Related Commands	Command	Description
	hsrp slave follow, on page 39	Instructs the subordinate group to inherit its state from a specified group.
	subordinate virtual mac address, on page 42	Configures the virtual MAC address for the subordinate group.

subordinate virtual mac address

To configure the virtual MAC address for the subordinate group, use the **subordinate virtual mac address** command in the HSRP slave submode.

mac-address *address*

Syntax Description	<i>address</i> 48-bit hardware address of ARP entry.				
Command Default	None				
Command Modes	HSRP Slave Submode				
Command History	<table> <tr> <th>Release</th><th>Modification</th></tr> <tr> <td>Release 5.0.0</td><td>This command was introduced.</td></tr> </table>	Release	Modification	Release 5.0.0	This command was introduced.
Release	Modification				
Release 5.0.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table> <tr> <th>Task ID</th><th>Operation</th></tr> <tr> <td>hsrp</td><td>read, write</td></tr> </table>	Task ID	Operation	hsrp	read, write
Task ID	Operation				
hsrp	read, write				

Example

This example shows how to configure the virtual MAC address for the subordinate group.

```
Router# configure
Router(config)# router hsrp
Router(config-hsrp)# interface tenGigE 0/4/0/4
Router(config-hsrp-if)# address-family ipv4
Router(config-hsrp-ipv4)# hsrp slave
Router(config-hsrp-slave)# mac-address 10.2.4
```

Related Commands	<table> <tr> <th>Command</th><th>Description</th></tr> <tr> <td>hsrp slave follow, on page 39</td><td>Instructs the subordinate group to inherit its state from a specified group.</td></tr> </table>	Command	Description	hsrp slave follow, on page 39	Instructs the subordinate group to inherit its state from a specified group.
Command	Description				
hsrp slave follow, on page 39	Instructs the subordinate group to inherit its state from a specified group.				

timers (hsrp)

To configure the time between hello packets and the time before other routers declare the active Hot Standby or standby router to be down, use the **hsrp timers** command in HSRP group submode. To restore the timers to their default values, use the **no** form of this command.

timers {*hello-seconds* | **msec** *hello-milliseconds*} {*hold-seconds* | **msec** *hold-milliseconds*}
no timers

Syntax Description	hello-seconds	Hello interval in seconds. Range is from 1 to 255. Default is 3.
	msec <i>hello-milliseconds</i>	Hello interval in milliseconds. Range is from 100 to 3000.
	hold-seconds	Time in seconds before the active or standby router is declared to be down. Range is from 1 to 255. Default is 10.
	msec <i>hold-milliseconds</i>	Time in milliseconds before the active or standby router is declared to be down. Range is from 100 to 3000.
Command Default	The default hello-seconds is 3. (If the msec keyword is specified, there is no default value.)	
	The default hold-seconds is 10. (If the msec keyword is specified, there is no default value.)	
Command Modes	HSRP Group Submode	
Command History	Release	Modification
	Release 5.0.0	This command was introduced.
Usage Guidelines	Nonactive routers learn timer values from the active router, unless millisecond timer values are being used. If millisecond timer values are being used, all routers must be configured with the millisecond timer values. This rule applies if either the hello time or the hold time is specified in milliseconds.	
	The timers configured on the active router always override any other timer settings. All routers in a Hot Standby group should use the same timer values. Normally, the hold time is greater than or equal to three times the hello time ($\text{holdtime} > 3 * \text{hellotime}$).	
	You must specify either the <i>hello-seconds</i> argument or the msec keyword and <i>hello-milliseconds</i> argument, depending on whether you want the hello time in seconds or milliseconds. You must also specify either the <i>hold-seconds</i> argument or msec keyword and <i>hold-milliseconds</i> argument, depending on whether you want the hold time in seconds or milliseconds.	
Task ID	Task ID	Operations
	hsrp	read, write

Examples

This example shows how to set, for group number 1 on HundredGigE interface 0/2/0/1, the time between hello packets to 5 seconds and the time after which a router is considered to be down to 15 seconds. The configured timer values are used only if the router is active (or before they have been learned).

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# router hsrp
RP/0/RP0/CPU0:router(config-hsrp)# interface HundredGigE 0/4/0/4
RP/0/RP0/CPU0:router(config-hsrp-if)# address-family ipv4
RP/0/RP0/CPU0:router(config-hsrp-ipv4)# hsrp 1
RP/0/RP0/CPU0:router(config-hsrp-gp)# timers 5 15
RP/0/RP0/CPU0:router(config-hsrp-gp)#
```

This example shows how to set, for group number 1 on HundredGigE interface 0/2/0/1, the time between hello packets to 200 milliseconds and the time after which a router is considered to be down to 1000 milliseconds. The configured timer values are always used because milliseconds have been specified.

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# router hsrp
RP/0/RP0/CPU0:router(config-hsrp)# interface HundredGigE 0/4/0/4
RP/0/RP0/CPU0:router(config-hsrp-if)# address-family ipv4
RP/0/RP0/CPU0:router(config-hsrp-ipv4)# hsrp 1 version 2
RP/0/RP0/CPU0:router(config-hsrp-gp)# timers msec 200 msec 1000
RP/0/RP0/CPU0:router(config-hsrp-gp)#
```



Note

- The **version** keyword is available only if IPv4 address-family is selected. By default, version is set to 2 for IPv6 address families.
- HSRP version 2 provides an extended group range of 0-4095.

Related Commands

Command	Description
show hsrp, on page 29	Displays HSRP information.