



## Preface

---

The *Interface and Hardware Component Configuration Guide for Cisco NCS 6000 Series Routers* provides information and procedures related to router interface and hardware configuration.

The preface contains the following sections:

- [Changes to This Document](#)
- [Obtaining Documentation and Submitting a Service Request](#)

## Changes to This Document

[Table 1](#) lists the technical changes made to this document since it was first printed.

**Table 1**     *Changes to This Document*

Date	Change Summary
August 2016	Initial release of this document.

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.

