



RADIUS Commands

- [radius-server host, on page 2](#)
- [show running-config radius-server, on page 3](#)

radius-server host

To configure a RADIUS server host, use the **radius-server host** command in global configuration mode. To delete the specified RADIUS server host, use the **no** form of the command.

```
radius-server host {ip-address | hostname} admin-priv admin-priv-number key key-number
oper-priv oper-priv-number shared-secret shared-secret-string
no radius-server host {ip-address | hostname}
```

Syntax Description						
<i>ip-address</i>		Specifies the RADIUS server host IP address. The IP address can be an IPv4 or IPv6 address.				
<i>hostname</i>		Specifies the RADIUS server host name. The host name can either be an IPv4 or IPv6 address or a DNS domain name.				
admin-priv <i>admin-priv-number</i>		Specifies the minimum privilege level for administrator. Valid range is from 1 to 15.				
key <i>key-number</i>		Specifies a preshared key for RADIUS communication between the device and the RADIUS server.				
oper-priv <i>oper-priv-number</i>		Specifies the minimum privilege level for operator. Valid range is from 1 to 15.				
shared-secret <i>shared-secret-string</i>		Specifies the preshared secret to authenticate communication between the device and the RADIUS server.				
Command Default	The default value for the admin-priv parameter is 15. The default value for the oper-priv parameter is 11.					
Command Modes	Switch configuration (config-switch)					
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>3.5.1</td> <td>This command was introduced.</td> </tr> </tbody> </table>		Release	Modification	3.5.1	This command was introduced.
Release	Modification					
3.5.1	This command was introduced.					

Example

The following example specifies a RADIUS server host.

```
nfvis(config-switch)# radius-server host 172.29.39.46 admin-priv 13 key 0 oper-priv 9
shared-secret myRaDIUSpassword
nfvis(config-switch)# commit
nfvis(config-switch)# end
```

show running-config radius-server

To display the running RADIUS server configuration information, use the **show running-config radius-server** command in privileged EXEC mode.

show running-config radius-server

Syntax Description	This command has no arguments or keywords.				
Command Default	None				
Command Modes	Privileged EXEC (#)				
Command History	<table><thead><tr><th>Release</th><th>Modification</th></tr></thead><tbody><tr><td>3.5.1</td><td>This command was introduced.</td></tr></tbody></table>	Release	Modification	3.5.1	This command was introduced.
Release	Modification				
3.5.1	This command was introduced.				

Example

```
nfvis# show running-config radius-server
radius-server host 198.51.100.10
key 0
shared-secret sec123
admin-priv 2
oper-priv 1
```

```
show running-config radius-server
```