



Secondary IP and Source Interface Commands

- [system settings wan secondary](#), on page 2
- [system settings source-interface](#) , on page 3

system settings wan secondary

To configure secondary IP on the WAN interface, use the **system settings wan secondary** command in global configuration mode.

system settings wan secondary *ip address*

Syntax Description	<i>ip address</i> Specifies the IP address.				
Command Default	None				
Command Modes	Global configuration mode				
Command History	<table><tr><th>Release</th><th>Modification</th></tr><tr><td>3.5.1</td><td>This command was introduced.</td></tr></table>	Release	Modification	3.5.1	This command was introduced.
Release	Modification				
3.5.1	This command was introduced.				

Example

The following example configures the secondary WAN.

```
nfvis(config)# system settings wan secondary ip address 1.1.2.3 255.255.255.0
```

system settings source-interface

To configure source interface, use the **system settings source-interface** command in global configuration mode.

system settings source-interface *ip address*

Syntax Description	<i>ip address</i> Specifies the IP address.				
Command Default	None				
Command Modes	Global configuration mode				
Command History	<table> <tr> <th>Release</th><th>Modification</th></tr> <tr> <td>3.5.1</td><td>This command was introduced.</td></tr> </table>	Release	Modification	3.5.1	This command was introduced.
Release	Modification				
3.5.1	This command was introduced.				

Example

The following example configures the source interface.

```
nfvis(config)# system settings source-interface 1.1.2.3
```

system settings source-interface