



# Syslog Commands

---

- [system settings logging host](#) , on page 2
- [system settings logging facility](#) , on page 3
- [system settings logging severity](#) , on page 4
- [show running-config system settings logging](#), on page 5

# system settings logging host

To configure remote host to which syslogs are sent, use the **system settings logging host** command in global configuration mode.

**system settings logging host** *ip address* *port* *transport*

**no system settings logging host**

| Syntax Description | <div> <div><i>ip address</i></div> <div>Specifies the remote host address that can be IPv4/IPv6/hostname.</div> </div> <div> <div><i>transport</i></div> <div>Specifies the transport protocol: UDP or TCP.</div> <div>The default transport protocol is UDP, with default port 514.</div> <div>For transport protocol of TCP, the default port is 601.</div> </div> |         |              |       |                              |
|--------------------|--|---------|--------------|-------|------------------------------|
| Command Default    | None   |         |              |       |                              |
| Command Modes      | Global configuration (config)  |         |              |       |                              |
| Command History    | <table> <tr> <th>Release</th><th>Modification</th></tr> <tr> <td>3.6.1</td><td>This command was introduced.</td></tr> </table>   | Release | Modification | 3.6.1 | This command was introduced. |
| Release            | Modification   |         |              |       |                              |
| 3.6.1              | This command was introduced.   |         |              |       |                              |

## Example

The following example shows how to configure remote host.

```

nfvis(config)# system settings logging host 172.19.162.117 port 1635 transport tcp

nfvis(config)# system settings logging host 172.19.162.111 port 163 transport udp

nfvis(config)# system settings logging host 172.19.162.112 port 1523

nfvis(config)# system settings logging host 172.19.162.114 transport tcp

```

# system settings logging facility

To configure facility of the syslogs, use the **system settings logging facility** command in global configuration mode.

**system settings logging facility** *local*

**no system settings logging facility**

| Syntax Description | <i>local</i> Specifies the facility number. You can configure any facility from local0 to local7.                              |         |              |       |                              |
|--------------------|--|---------|--------------|-------|------------------------------|
| Command Default    | The default facility is local7.  |         |              |       |                              |
| Command Modes      | Global configuration (config)  |         |              |       |                              |
| Command History    | <table> <tr> <th>Release</th><th>Modification</th></tr> <tr> <td>3.6.1</td><td>This command was introduced.</td></tr> </table> | Release | Modification | 3.6.1 | This command was introduced. |
| Release            | Modification   |         |              |       |                              |
| 3.6.1              | This command was introduced.   |         |              |       |                              |

## Example

The following example shows how to configure facility.

```

nfvis(config)# nfvis(config)# system settings logging facility local
Possible completions:
local0 local1 local2 local3 local4 local5 local6 local7
nfvis(config)# nfvis(config)# system settings logging facility local3

```

# system settings logging severity

To configure severity of the syslogs, use the **system settings logging severity** command in global configuration mode.

**system settings logging severity** {**alert** | **critical** | **debug** | **emergency** | **error** | **informational** | **notice** | **warning**}

**no system settings logging severity**

| Syntax Description | <b>alert</b>   | Logs at alert severity level and higher severity levels are sent.         |
|--------------------|--|---|
|                    | <b>critical</b>                                      | Logs at critical severity level and higher severity levels are sent.      |
|                    | <b>debug</b>   | Logs at debug severity level and higher severity levels are sent.         |
|                    | <b>emergency</b>                                     | Logs at emergency severity level and higher severity levels are sent.     |
|                    | <b>error</b>   | Logs at error severity level and higher severity levels are sent.         |
|                    | <b>informational</b>                                 | Logs at informational severity level and higher severity levels are sent. |
|                    | <b>notice</b>  | Logs at notice severity level and higher severity levels are sent.        |
|                    | <b>warning</b>                                       | Logs at warning severity level and higher severity levels are sent.       |
| Command Default    | The default severity level is <b>informational</b> . |   |
| Command Modes      | Global configuration (config)                        |   |
| Command History    | Release  | Modification  |
|                    | 3.6.1  | This command was introduced.  |

## Example

The following example shows how to configure the severity of syslogs.

```

nfvis(config) # system settings logging severity error
nfvis(config) # commit
nfvis(config) # end

```

# show running-config system settings logging

To view the current syslog configuration, use the **show running-config system settings logging** command in global configuration mode.

**show running-config system settings logging** [**host** *hostname* | **facility** | **severity**]

|                    |                     |  |
|--------------------|---------------------|--|
| Syntax Description | <b>host</b>         | Displays the current syslog host configuration             |
|                    | <i>hostname</i>     | Displays the current configuration for the specified host. |
|                    | <b>facility</b>     | Displays the current syslog facility configuration.        |
|                    | <b>severity</b>     | Displays the current syslog severity configuration.        |
| Command Default    | None                |  |
| Command Modes      | Privileged EXEC (#) |  |
| Command History    | <b>Release</b>      | <b>Modification</b>  |
|                    | 3.6.1               | This command was introduced.                               |

## Example

```
nfvis# show running-config system settings logging
system settings logging host 192.0.2.3
  transport tcp
  port 1635
!
system settings logging host 192.0.2.34
  transport udp
  port 163
!
system settings logging host 192.0.2.40
  port 1523
!

nfvis# show running-config system settings logging severity
system settings logging severity error

nfvis# show running-config system settings logging facility
system settings logging facility local3
```

```
show running-config system settings logging
```