



## System Portal Commands

---

- [system portal access, on page 2](#)
- [show system portal status, on page 3](#)
- [show running-config system portal access, on page 4](#)

# system portal access

To enable or disable the Cisco Enterprise NFVIS portal access, use the **system portal access** command in global configuration mode.

```
system portal access {enable | disable}
```

---

<b>Syntax Description</b>	<b>enable</b> Enables the portal access.
---------------------------	--

---

	<b>disable</b> Disables the portal access.
--	--

---

---

<b>Command Default</b>	Portal access is enabled by default.
------------------------	--------------------------------------

---

<b>Command Modes</b>	Global configuration (config)
----------------------	-------------------------------

---

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	3.5.1	This command was introduced.

---

## Example

The following example shows how to disable the portal access:

```
nfvis(config)# system portal access disable
nfvis(config)# commit
nfvis(config)# end
```

# show system portal status

To verify the Cisco Enterprise NFVIS portal access status, use the **show system portal status** command in privileged EXEC mode.

**show system portal status**

<b>Syntax Description</b>	This command has no arguments or keywords.				
<b>Command Default</b>	None				
<b>Command Modes</b>	Privileged EXEC (#)				
<b>Command History</b>	<table><thead><tr><th>Release</th><th>Modification</th></tr></thead><tbody><tr><td>3.5.1</td><td>This command was introduced.</td></tr></tbody></table>	Release	Modification	3.5.1	This command was introduced.
Release	Modification				
3.5.1	This command was introduced.				

## Example

The following is a sample output of the **show system portal status** command:

```
nfvis# show system portal status
system portal status "access disabled"
```

# show running-config system portal access

To display the running configuration for the Cisco Enterprise NFVIS portal access, use the **show running-config system portal access** command in privileged EXEC mode.

```
show running-config system portal access
```

---

<b>Syntax Description</b>	This command has no arguments or keywords.
---------------------------	--

---

---

<b>Command Default</b>	None
------------------------	------

---

---

<b>Command Modes</b>	Privileged EXEC (#)
----------------------	---------------------

---

---

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	3.5.1	This command was introduced.

---

## Example

```
nfvis# show running-config system portal access
system portal access enabled
```