



Configuring System Shell-Access

To debug issues in the NFVIS system, you must get into linux shell through a procedure of challenge-response between the device and the Cisco server (cid.cisco.com). Only an admin user can start this procedure.

To configure system shell-access:

1. Open cid.cisco.com in your web browser.
2. Login with Cisco username and password assigned to you.
3. Copy and paste the challenge string from the NFVIS system generated from **system shell-access** command.
4. Enter the OTP.
A response string is generated by the system.
5. Enter the response string onto the NFVIS command page.
6. Enter the admin password. You get shell-access if password is validated
7. 8. To exit shell-access enter **Exit**.

