



Cisco NFVIS Kubernetes Support

Table 1: Feature History

| Feature Name | Release Information | Description |
|--------------------------------|---------------------------|--|
| Cisco NFVIS Kubernetes support | Cisco NFVIS Release 4.9.1 | This feature adds support to deploy and operate Kubernetes as a VM using Cisco NFVIS. Download the NFVIS Kubernetes tar.gz file, upload it to the Cisco NFVIS and deploy the Kubernetes VM to leverage Kubernetes related technologies within Cisco NFVIS. |

- [Information About Cisco NFVIS Kubernetes Support, on page 1](#)
- [Prerequisites for Cisco NFVIS Kubernetes Support, on page 2](#)
- [Restrictions For Cisco NFVIS Kubernetes Support, on page 2](#)
- [Deploy Kubernetes on Cisco NFVIS, on page 2](#)
- [Verify Cisco NFVIS Kubernetes Deployment, on page 4](#)
- [Verify Kubernetes Deployment using CLI, on page 5](#)
- [Access Kubernetes Cluster, on page 6](#)
- [Troubleshoot Cisco NFVIS Kubernetes VM Support, on page 7](#)

Information About Cisco NFVIS Kubernetes Support

Information About Cisco NFVIS Kubernetes Support

Starting from Cisco NFVIS Release 4.9.1, Cisco NFVIS leverages Kubernetes capabilities to enable cloud native deployments. The Cisco NFVIS Kubernetes support enables deploying edge compute applications on the branch and edge devices. Cisco NFVIS can handle the Life Cycle Management of Kubernetes and enable service chaining with other VNFs. Cisco NFVIS contains built-in support for creating Kubernetes topology with Cisco Catalyst 8000V.

Information About Kubernetes as a VM

Kubernetes is packaged as a Virtual Machine (VM) that is deployed on Cisco NFVIS.

Prerequisites for Cisco NFVIS Kubernetes Support

Ensure that the minimum software version for Cisco NFVIS devices is Cisco NFVIS Release 4.9.1.

Restrictions For Cisco NFVIS Kubernetes Support

- Cisco NFVIS supports only single node topology. A single node contains both the control and data planes.
- Only one Kubernetes node can be deployed at a time on Cisco NFVIS.

Deploy Kubernetes on Cisco NFVIS

Kubernetes VM can be deployed using Cisco NFVIS. Cisco NFVIS supports deploying of Kubernetes VM using the Cisco NFVIS Portal, API, and CLI.

Download the latest Kubernetes tar.gz image file from the Cisco Software download page on to your local storage for version mapping with Cisco NFVIS Release 4.9.1.

Upload the Kubernetes tar.gz image file to the Cisco NFVIS and register the image. For more information on uploading and registering the image files see, [Uploading VM Images to an NFVIS Server](#) and [Registering a VM image](#).

Deploy Cisco Kubernetes Using Cisco NFVIS

Deploy Cisco NFVIS Kubernetes VM

Use the following steps to deploy Kubernetes VM:

1. In Cisco NFVIS, click **Configuration** > **Deploy**.
2. In the **Select VM** menu, click **KUBERNETES** and the Kubernetes node is displayed inside the topology.



Note A **kubernetes-net** network is auto-created in the topology when you click **KUBERNETES**.

We recommend that you establish a connection between the Kubernetes and WAN-Net that can access the APISERVER_EXTERNAL_IP to complete the Kubernetes deployment with your existing network using the topology.

3. Connect the Kubernetes to a preferred network interface using the topology.



Note Kubernetes VM can be connected to a maximum of two network interfaces. The vNIC ID of the first interface (management-interface) is zero and the vNIC ID of the second interface (data-path) is one.

In the **vNIC Details** panel, the **VM Name** and **Network Name** are auto-populated.

4. Click **Kubernetes** inside the topology to expand the **Kubernetes deployment** panel.
5. Configure the following fields:

| Field | Description |
|---------------------------------|--|
| VM Name | Enter a VM name. |
| Image | Choose an image from the drop-down or click + button to add a new image. |
| Profile | Choose the profile for the VM from the drop-down or click the + button to add a new profile. Note Cisco NFVIS supports only small and medium profiles for Kubernetes deployment. |
| Group Name (optional) | Choose a group name from the drop-down list. |
| VNC Password | Enter the VNC password. |
| MODE | Choose control-plane-node from the drop-down. |
| GATEWAY | Enter the Cisco NFVIS gateway IP address. |
| NODE_IP_ADDRESS | Enter the node IP address. This IP address is assigned to the interface on vNIC ID one. |
| HOSTNAME | Enter a host name. |
| APISERVER_EXTERNAL_IP | Enter the API server IP address of an external node. |
| NTP_SERVER_IP | Enter the NTP server IP address to configure an NTP server to the Kubernetes VM. |
| Deployment Disk | Choose a deployment disk from the drop-down. Note Do not choose NFS Store as a deployment disk from the drop-down. |
| Management IP (optional) | Enter the IP address of the management interface on vNIC ID zero. If left blank, NFVIS auto-populates this field. |

6. Click **Deploy**.

Deploy Kubernetes As a Service Chain using Cisco NFVIS

Deploy Kubernetes in service chains using the Kubernetes Topology method which creates a new topology with an established kubernetes-net network. Use the following steps to deploy Kubernetes as a service chain:



- Note**
- Ensure that a Cisco Catalyst 8000V gateway is uploaded to NFVIS in the image repository.
 - You can deploy Kubernetes as a service chain only using Cisco NFVIS.
 - The Kubernetes topology deployment deploys both Kubernetes and Cisco Catalyst 8000V VMs.

1. Perform the steps 1 to 5 mentioned in the Deploy Kubernetes as a standalone VM topic.



- Note** Enter the Cisco Catalyst 8000V gateway IP address in the **GATEWAY** field, enter the **NODE_IP_ADDRESS** and **APISERVER_External_IP** of Cisco Catalyst 8000V.

2. Ensure to check the **Kubernetes Topology** checkbox.
3. Configure the following fields:

| Field | Description |
|-------------------------|--|
| Image Name | Choose an image from the drop-down. |
| Profile Name | Choose the profile name from the drop-down. |
| VNC password | Enter the VNC password. |
| C8KV_WAN_IP | Enter the WAN IP address of Cisco Catalyst 8000V. |
| C8KV_WAN_GATEWAY | Enter the WAN gateway of Cisco Catalyst 8000V. |
| Tech Package | Choose the appropriate package from the drop-down. |
| SSH_USERNAME | Enter the SSH username. |
| SSH_PASSWORD | Enter the SSH password. |

4. Click **Deploy**.

Verify Cisco NFVIS Kubernetes Deployment

To verify the status of the Kubernetes deployment using the Cisco Enterprise NFVIS, use the following steps:

1. In the Cisco Enterprise NFVIS dashboard, click **Configuration > Virtual Machine > Manage**.
2. In the **Manage VM** page, the deployed Kubernetes VM is listed.

Verify Kubernetes Deployment using CLI

Verify Kubernetes Status

Once the Kubernetes deployment is complete, verify the status of the Kubernetes cluster. The following is a sample output from the **kubernetes status** command:

```
nfvis# kubernetes status
nfvis# kubernetes status
NAME          STATUS    ROLES                    AGE   VERSION
hostname     Ready    control-plane,master    55s   v1.22.4
```

In this output, **Ready** indicates that the cluster is active.

Generate Configuration to access the Kubernetes Cluster

To get the configuration and credentials to access a Kubernetes cluster using Cisco NFVIS use the following command:

```
nfvis# kubernetes getConfig
kubernetes-config apiVersion: v1
clusters:
- cluster:
  certificate-authority-data: xyxyajsuus
  server: https://209.165.201.1:0001
  name: kubernetes
contexts:
- context:
  cluster: kubernetes
  namespace: nfvis-kubernetes
  user: nfvis-kubernetes-admin
  name: nfvis-kubernetes-admin
current-context: nfvis-kubernetes-admin
kind: Config
users:
- name: nfvis-kubernetes-admin
  user:
    token: xxxyyzha
```

In this output, you can get the configuration details such as the token number, name of the cluster, user name and certification details.

Regenerate Updated Kubernetes Configuration

To get the updated service token details and Kubernetes configuration from the cluster, use the following command:

```
nfvis# kubernetes regenerateConfig
kubernetes-config apiVersion: v1
clusters:
- cluster:
  certificate-authority-data: XXYZZZUS
  server: https://209.165.201.1:0001
  name: kubernetes
contexts:
- context:
  cluster: kubernetes
  namespace: nfvis-kubernetes
  user: nfvis-kubernetes-admin
  name: nfvis-kubernetes-admin
```

```
current-context: nfvis-kubernetes-admin
kind: Config
users:
- name: nfvis-kubernetes-admin
  user:
    token: Yl4RMEg
```

In this output, you can get the latest configuration details such as the token number, name of the cluster, user name and certification details.

Access Kubernetes Cluster

Information about Kubernetes Dashboard

- The Kubernetes Dashboard is hosted on the Kubernetes cluster and provides a GUI to access the cluster.
- The Kubernetes cluster can only be accessed via the Kubernetes Dashboard or API.



Note A Kubernetes node needs to be deployed in Cisco NFVIS and should be in the **VM_ALIVE** state.

- The dashboard is connected to Kubernetes over port 32045. For example, `https://API_SERVER_EXTERNAL_IP:32045`

Access Kubernetes Cluster using Cisco NFVIS

There are two options to access a Kubernetes cluster using Cisco NFVIS. The following sections brief about accessing the Kubernetes dashboard using **Kubernetes Config** and **Kubernetes Token** options.

Access Kubernetes Dashboard using Kubernetes Config Option

Use the following steps to access the Kubernetes dashboard:

1. In the Cisco Enterprise NFVIS dashboard, click **Configuration > Virtual Machine > Manage**.
2. In the **Manage VM** page, the deployed Kubernetes VMs are listed.
3. Click **Kubernetes Config** icon next to the respective Kubernetes VM.
4. Kubernetes Config page is displayed. Make a note of the server IP address displayed in the configuration.
5. Click **Copy to clipboard** to copy the configuration to your clipboard in case of using the **Kubernetes Config** option.



Note You can get the **Kubernetes Config** using the CLI as well. Refer to the verify [Verify Kubernetes Deployment using CLI](#) topic for more information.

6. Open a new tab in your preferred browser and enter the API server IP address followed by the port number. For example, `https://198.51.100.253:32045`.

7. The Kubernetes gateway login page is displayed. Paste the entire copied configuration.
8. Kubernetes dashboard is displayed. In the dashboard, navigate to the **Namespace** called **nfvis-kubernetes**.
9. You can start using Kubernetes related technologies using the Kubernetes dashboard.

Access Kubernetes Dashboard using Kubernetes Token Option

Use the following steps to access the Kubernetes dashboard:

1. In the Cisco Enterprise NFVIS dashboard, click **Configuration > Virtual Machine > Manage**.
2. In the **Manage VM** page, the deployed Kubernetes VMs are listed.
3. Click **Kubernetes Config** icon next to the respective Kubernetes VM.
4. Kubernetes Config page is displayed. Make a note of the API server IP address displayed in the configuration.
5. Select the token details and copy it to your clipboard in case of using the **Token** option to access the dashboard.
6. Open a new tab in your preferred browser and enter the API server IP address followed by the port number. For example, `https://198.51.100.253:32045`.
7. The Kubernetes gateway login page is displayed. Paste the copied token details in the **Using Token** option.



Note

| Cisco NFVIS Kubernetes- Parameters | Value |
|------------------------------------|------------------------|
| Namespace | nfvis-kubernetes |
| Username | nfvis-kubernetes-admin |
| Dashboard Port | 32045 |
| Ingress Controller Port | 32050 |

8. Kubernetes dashboard is displayed. In the dashboard, navigate to the **Namespace** called **nfvis-kubernetes** by searching for it.
9. You can start using Kubernetes related technologies using the Kubernetes dashboard.

Troubleshoot Cisco NFVIS Kubernetes VM Support

Log Files

The following commands are used to get the logs for troubleshooting:

| Command | Description |
|---|---|
| <code>show log kubernetes</code> | Displays a list of available logs specific to the Kubernetes VM. |
| <code>show log kubernetes boot.log</code> | Displays logs containing Kubernetes VM boot details. |
| <code>show log kubernetes journal</code> | Displays logs containing Kubernetes VM journal binary. |
| <code>show log kubernetes cloud-init.log</code> | Displays logs containing Kubernetes VM cloud init logs. |
| <code>show log kubernetes cloud-init-output.log</code> | Displays logs containing Kubernetes VM cloud init output. |
| <code>show log kubernetes KubeHelper.log</code> | Displays logs containing Kubernetes VM helper service output. |
| <code>show log kubernetes KubeHelperExceptions.log</code> | Displays logs containing Kubernetes VM helper service exceptions. |
| <code>show log kubermetes messages</code> | Displays logs containing Kubernetes VM system service output. |