



## Per-Tunnel QoS

*Table 1: Feature History*

Feature Name	Release Information	Description
Per-Tunnel QoS	Cisco IOS XE Catalyst SD-WAN Release 17.2.1r	This feature lets you apply a Quality of Service (QoS) policy on individual tunnels, ensuring that branch offices with smaller throughput are not overwhelmed by larger aggregation sites.  This feature is only supported for hub-to-spoke network topologies.
Increase Per Tunnel QoS Session Scale	Cisco IOS XE Catalyst SD-WAN Release 17.13.1a	Cisco Catalyst SD-WAN Manager can manage 10,000 sessions of per-tunnel QoS.

- [Information about Per-Tunnel QoS, on page 1](#)
- [How Per-Tunnel QoS Works in Hub-to-Spoke Topologies, on page 3](#)
- [Configure Per Tunnel QoS Using Cisco SD-WAN Manager, on page 4](#)
- [Configure Per Tunnel QoS Using a CLI Template, on page 6](#)
- [Verify Per-Tunnel QoS Configuration, on page 8](#)
- [Monitor Per-Tunnel QoS, on page 9](#)

## Information about Per-Tunnel QoS

### Overview of Per-Tunnel QoS

Use the Per-tunnel QoS feature to apply a quality of service (QoS) policy on a Cisco IOS XE Catalyst SD-WAN device hub on a per-tunnel or per-spoke instance in the egress direction.

Per-tunnel QoS can only be applied on hub-to-spoke network topologies. Per-tunnel QoS on a hub lets you shape tunnel traffic to individual spokes. It also differentiates individual data flows going through the tunnel or the spoke for policing.

### Benefits of Per-Tunnel QoS

Before the introduction of Per-tunnel QoS feature on Cisco Catalyst SD-WAN, QoS on a hub could be configured to measure only the aggregate outbound traffic for all spokes. Per-tunnel QoS for Cisco Catalyst SD-WAN provides the following benefits.

- A QoS policy is configurable on the basis of session groups, thus providing the capability of regulating traffic from hub to spokes at a per-spoke level.
- The hub cannot send excessive traffic to a small spoke and overrun it.
- The maximum outbound bandwidth and QoS queue are set up automatically when each spoke registers with an Overlay Management Protocol (OMP) message.
- The amount of outbound hub bandwidth that a “greedy” spoke can consume can be limited; therefore, the traffic can’t monopolize a hub’s resources and starve other spokes.
- Multiple policies (MPoL) are supported. This enables underlay and TLOC extension traffic to coexist with the overlay tunnel traffic.

## Supported Platforms

### Per-Tunnel QoS for Hub

The following series of platforms can be configured as hubs for the per-tunnel QoS in Cisco Catalyst SD-WAN.

- Cisco 1000 Series Aggregation Services Routers
- Cisco 1000 Series Integrated Services Routers
- Cisco ISR 1100 and ISR 1100X Series Integrated Services Routers
- Cisco 4000 Series Integrated Services Routers
- Cisco Cloud Services Router 1000V Series
- Cisco Catalyst 8000 Edge Platforms Family

### Per-Tunnel QoS for Spokes

The following series of Cisco IOS XE Catalyst SD-WAN devices can be configured as spokes for per-tunnel QoS in Cisco Catalyst SD-WAN.

- Cisco 1000 Series Aggregation Services Routers
- Cisco 1000 Series Integrated Services Routers
- Cisco ISR 1100 and ISR 1100X Series Integrated Services Routers
- Cisco 4000 Series Integrated Services Routers
- Cisco Cloud Services Router 1000V Series
- Cisco Catalyst 8000 Edge Platforms Family
- Cisco 1000 Series Integrated Services Routers (ISRs)

- ISR1100-4G
- ISR1100-6G
- ISR1100-4GLTENA and ISR1100-4GLTEGB

## Restrictions for Per-Tunnel QoS

- Only hub-to-spoke network topology is supported for configuring per-tunnel QoS. Spoke-to-spoke network topology isn't supported.
- Only Cisco IOS XE Catalyst SD-WAN devices are supported as hubs for per-tunnel QoS. However, both Cisco IOS XE Catalyst SD-WAN devices and Cisco vEdge devices are supported as spokes in the hub-to-spoke topology supported for per-tunnel QoS.
- In Cisco IOS XE Catalyst SD-WAN Release 17.2.1r, per-tunnel QoS can only be configured using the Cisco VPN Interface Ethernet template in Cisco vManage 20.1.1.
- Per-tunnel QoS with loopback WAN for non-binding mode isn't supported on the hub.
- For per-tunnel QoS to work with 3-level hierarchical policies, you must use the reserved class-map name, "SDWAN\_underlay" for middle level policy.
- Per-tunnel QoS hub role is not supported on cellular interface.
- Maximum number of sessions:
  - (Minimum supported release: Cisco IOS XE Catalyst SD-WAN Release 17.11.1a)  
You can configure a maximum number of sessions to which the QoS policy is applied. When the number of Cisco Catalyst SD-WAN user sessions with QoS policy reaches its limit, the QoS policy is not applied for any other sessions. The number of sessions that you can configure is from 100 to 6,000. The default QoS maximum session for all platforms is 2,000.
  - (Minimum supported release: Cisco IOS XE Catalyst SD-WAN Release 17.13.1a)  
The number of sessions that you can configure is from 100 to 10,000.  
The default QoS maximum session depends on policy reuse and platform.

## How Per-Tunnel QoS Works in Hub-to-Spoke Topologies

In Cisco IOS XE Release 17.2, the Per-Tunnel QoS feature is supported on hub-to-spoke network topologies only. Per-tunnel QoS is not supported for spoke-to-spoke topology.

- Per-tunnel QoS is applied to routers with the hub role on a per-session basis.
- Routers that are assigned the spoke role publish the downstream-bandwidth information per TLOC route through OMP.
- Overlay and underlay tunnels share the same QoS policy and the bandwidth remaining is configurable for both underlay and overlay tunnels.

- The bandwidth remaining ratio is automatically calculated on each session based on the remote downstream bandwidth.

## Configure Per Tunnel QoS Using Cisco SD-WAN Manager

To configure per-tunnel QoS, perform the following tasks in the order specified.

### Step 1: Configure QoS Map

A QoS map can be added to a localized data policy. For more details on the various QoS parameters, see [QoS parameters](#) section in the Policies Guide. To configure QoS map:

1. From the Cisco SD-WAN Manager menu, choose **Configuration > Policies**.
2. Click **Localized Policy** and then click **Add Policy**.
3. From the list type shown in the left pane, choose **Class Map**. The list displays existing class maps. Choose a class map from the list and click **Next**.

OR

Create a new class map:

- a. Click **Add New Class Map**.
  - b. Enter a name for the class map.
  - c. From the **Queue** drop-down list, choose a number (from 0-7).
  - d. Click **Save** and then click **Next**.
4. Click the **Add QoS Map** and choose **Create New**.
  5. Enter a name and description for the map.
  6. Click **Add Queue**, enter the requested details, and click **Save Queue**.
  7. Click **Save Policy**.

### Step 2: Choose the QoS Map to be Added to the Feature Template

Per-tunnel QoS can only be configured through the Cisco VPN Interface Ethernet template. To enable per-tunnel QoS on other WAN interface types, use the global CLI add-on template.

1. From the Cisco SD-WAN Manager menu, choose **Configuration > Templates**.
2. Click **Feature Templates** and then click **Add Template**.




---

**Note** In Cisco vManage Release 20.7.x and earlier releases, **Feature Templates** is called **Feature**.

---

3. Choose a device from the list on the left. Feature templates applicable to the device are shown in the right pane.

4. Choose the **Cisco VPN Interface Ethernet** template.
5. Enter a name and description for the feature template.
6. Choose the **ACL/QoS** option.
7. Enter the requested details.
  - **Shaping Rate:** Choose Global from the drop-down list and enter a shaping rate in kbps.
  - **QoS Map:** Choose Global from the drop-down list and enter the name of the QoS map that you want to include in the feature template.
8. Click **Save**.

### Step 3: Attach the Localized QoS Policy and the Feature Template to the Device Template

1. Attach the localized policy created in Step 1 to the device template.
2. Attach the feature template created in Step 2 to the device template. See [Create Device Templates from Feature Templates](#) for more details.




---

**Note** Ensure that you attach the localized policy and the feature template to the same device template.

---

### Step 4 Configure Hub Role for Per-Tunnel QoS

1. From the Cisco SD-WAN Manager menu, choose **Configuration > Templates**.
2. Click **Feature Templates**. All the features templates are listed.




---

**Note** In Cisco vManage Release 20.7.x and earlier releases, **Feature Templates** is called **Feature**.

---

3. For the Cisco VPN Interface template that you want to add per-tunnel QoS policy to, click ... and choose **Edit**.

Alternatively, you can create a new **Cisco VPN Interface Ethernet** template following the instructions in the previous sections and then proceed with the steps below.

4. When the template opens, click the **Tunnel** option at the top of the page.
5. From the **Tunnel Interface** drop-down list, choose **Global** and choose **On**.

A new set of fields display below the **Tunnel Interface** option. These new fields are specific to per-tunnel QoS and display only when you choose the **On** option.

6. From the **Per-tunnel Qos** drop-down list, choose **Global** and then choose **On**.

The **Per-tunnel QoS Aggregator** field appears after you set **Per-tunnel Qos** to **On**. If this field is set to **Off**, which is the default behavior, it means that the device selected in the template is assigned the spoke role. If the field is set to **On**, it means that the device is assigned the hub role.

7. Choose **Global** from the **Per-tunnel QoS Aggregator** drop-down menu, and choose **On**. The device has now been assigned the role of a hub.

When you choose the On option, the **Tunnel Bandwidth Percent** field displays.

8. You can either leave the Tunnel Bandwidth Percent value at default (50) or choose **Global** from the drop-down menu to enter a value based on your network requirement.

The remaining fields under the Tunnel section are not specific to per-tunnel QoS. You can either leave the values at default or enter values specific to your network.

9. Click **Update**. The feature template updates with per-tunnel QoS configuration.

### Step 5: Configure Spoke Role for Per-Tunnel QoS

1. From the Cisco SD-WAN Manager menu, choose **Configuration > Templates**.
2. Click **Feature Templates**. All the features templates are listed.




---

**Note** In Cisco vManage Release 20.7.x and earlier releases, **Feature Templates** is called **Feature**.

---

3. For the Cisco VPN Interface Template that you want to add the per-tunnel QoS policy to, click ... and choose **Edit**.

OR

Create a new **Cisco VPN Interface Ethernet** template following the instructions in the previous sections and then proceed with the steps below.

4. When the template opens, click **Tunnel**.
5. From the **Tunnel Interface** drop-down list, choose **Global** and choose the **On** option.  
A new set of fields display below the Tunnel Interface option. These new fields are specific to per-tunnel QoS and display only when you choose the **On** option.
6. From the **Per-tunnel Qos** drop-down menu, choose **Global** and choose the **On** option.  
The **Per-tunnel QoS Aggregator** field displays after you set **Per-tunnel Qos** to **On**. This field is set to off by default. If this field is set to **Off**, it means that the device selected in the template is assigned the spoke role.
7. The downstream bandwidth needs to be configured for the device to effectively take the spoke role. To configure the downstream bandwidth, click **Basic Configuration** at the top of the page.
8. Scroll down to the **Bandwidth Downstream** Field and choose **Global** from the drop-down menu.
9. Enter a value for the downstream bandwidth and click **Update** at the bottom of the page.

## Configure Per Tunnel QoS Using a CLI Template

This topic shows the task flow for configuring per-tunnel QoS using CLI templates with the help of examples.

**Example: Create QoS MaP**

```

class-map match-any SDWAN_underlay
  match any
!
class-map match-all Queue0
  match qos-group 0
!
class-map match-all Queue1
  match qos-group 1
!
class-map match-all Queue3
  match qos-group 3
!
policy-map qos_policy_4class_cedge
class Queue0
  priority level 1
  police rate percent 25
class Queue1
  bandwidth remaining ratio 20
class Queue3
  bandwidth remaining ratio 15
class class-default
  bandwidth remaining ratio 40
!

```

**Example: Apply a QoS Map to an Ethernet Interface**

```

policy-map per_tunnel_qos_policy_GigabitEthernet0/0/1
class SDWAN_underlay
  bandwidth remaining percent 50
  service-policy qos_policy_4class_cedge
!
policy-map shape_GigabitEthernet0/0/1
class class-default
  shape average 10000000
  service-policy qos_policy_4class_cedge_GigabitEthernet0/0/1
!
interface GigabitEthernet0/0/1
  service-policy output shape_GigabitEthernet0/0/1
!

```

**Example: Configure a Device as a Hub**

```

sdwan
interface GigabitEthernet0/0/1
  tunnel-interface
  encapsulation ipsec
  color public-internet restrict
  tunnel-qos hub
exit

```

**Example: Configure a Device as a Spoke**

```

sdwan
interface GigabitEthernet0/0/2
  tunnel-interface
  encapsulation ipsec
  color public-internet restrict
  tunnel-qos spoke
exit
bandwidth-downstream 50000
exit

```

**Example: Configure Number of Sessions**

```

platform qos sdwan max-session 5000
sdwan
interface GigabitEthernet0/0/2
tunnel-interface
  encapsulation ipsec
  color public-internet restrict
  tunnel-qos spoke
exit
bandwidth-downstream 50000
top
interface Tunnel0
ip unnumbered GigabitEthernet0/0/2
tunnel source GigabitEthernet0/0/2
tunnel mode sdwan

```

## Verify Per-Tunnel QoS Configuration

Run the **show sdwan running-config** command to verify the per-tunnel QoS configuration on a Cisco IOS XE Catalyst SD-WAN device configured as a hub.

```

Device# show sdwan running-config
class-map match-any Queue0
  match qos-group 0
!
class-map match-any Queue1
  match qos-group 1
!
class-map match-any Queue3
  match qos-group 3
!
class-map match-any SDWAN_underlay
  match any
!
policy-map per_tunnel_qos_policy_GigabitEthernet0/0/1
  class SDWAN_underlay
    bandwidth remaining percent 50
    service-policy qos_policy_4class_cedge
  !
!
policy-map qos_policy_4class_cedge
  class Queue0
    priority level 1
    police rate percent 25
  !
  !
  class Queue1
    bandwidth remaining ratio 20
  !
  class class-default
    bandwidth remaining ratio 40
  !
  class Queue3
    bandwidth remaining ratio 15
  !
!
policy-map shape_GigabitEthernet0/0/1
  class class-default
    service-policy per_tunnel_qos_policy_GigabitEthernet0/0/1
    shape average 100000000

```

```

!
!
interface GigabitEthernet0/0/1
  description INET Transports
  service-policy output shape_GigabitEthernet0/0/1
!
sdwan
  interface GigabitEthernet0/0/1
    tunnel-interface
    encapsulation ipsec weight 1
    no border
    color public-internet restrict
    tunnel-qos hub
  exit
exit
!

```

Run the **show sdwan running-config sdwan** command to verify the per-tunnel QoS configuration on a Cisco IOS XE Catalyst SD-WAN device configured as a spoke.

```

Device# show sdwan running-config sdwan
sdwan
  interface GigabitEthernet0/0/1
    tunnel-interface
    encapsulation ipsec weight 1
    color public-internet restrict
    tunnel-qos spoke
  exit
  bandwidth-downstream 50000
exit

```

Run the **show running-config** command to verify the per-tunnel QoS configuration on a Cisco vEdge device configured as a spoke.

```

Device# show running-config
vpn 0
interface ge0/0
  tunnel-interface
  tunnel-qos spoke
!
bandwidth-downstream 50000
!

```

## Monitor Per-Tunnel QoS

Use the following monitoring commands to monitor the performance of per-tunnel QoS.

- **show platform software sdwan qos template** : Displays the child templates used for per-tunnel QoS.
- **show platform software sdwan qos policy** : Displays per-tunnel QoS policy instance parameters like policy template, bandwidth, and bandwidth remaining-ratio.
- **show platform software sdwan qos target** : Displays per-tunnel QoS policy target database per sdwan session and tunnel interface.
- **show policy-map interface GigabitEthernet 0/0/1** : Displays the statistics status and the configured policy maps on the specified interface.
- **show policy-map multipoint Tunnel 10 10.10.10.20** : Displays the per-tunnel QoS statistics on the tunnel ID specified.

- **show platform software sdwan qos summary** : Confirms the count of sessions, policies, WAN interfaces, and adaptive QoS sessions.