



## Default Configuration at Startup

---

To achieve simplification and consistency, the Cisco SD-WAN solution has been rebranded as Cisco Catalyst SD-WAN. In addition, from Cisco IOS XE SD-WAN Release 17.12.1a and Cisco Catalyst SD-WAN Release 20.12.1, the following component changes are applicable: **Cisco vManage to Cisco Catalyst SD-WAN Manager**, **Cisco vAnalytics to Cisco Catalyst SD-WAN Analytics**, **Cisco vBond to Cisco Catalyst SD-WAN Validator**, **Cisco vSmart to Cisco Catalyst SD-WAN Controller**, and **Cisco Controllers to Cisco Catalyst SD-WAN Control Components**. See the latest Release Notes for a comprehensive list of all the component brand name changes. While we transition to the new names, some inconsistencies might be present in the documentation set because of a phased approach to the user interface updates of the software product.

Cisco ships each Cisco ISR 1100 and ISR 1100X Series router from the factory with a default configuration, either for Cisco vEdge operating system or Cisco IOS XE. The default configuration file sets the default CLI prompt, configures OMP, and enables logging of syslog messages to a file.

### Smart Licensing

The default configurations include a command that relates to Cisco Smart Licensing. For information about Cisco Smart Licensing, see the [Cisco Smart Licensing Guide](#).

- [Cisco ISR1100-4G and Cisco ISR1100-6G Routers, Cisco vEdge Operating System, on page 1](#)
- [Cisco ISR1100-4GLTE Routers, Cisco vEdge Operating System, on page 3](#)
- [Cisco ISR1100-4G Routers, Cisco IOS XE, on page 5](#)
- [Cisco ISR1100-6G Routers, Cisco IOS XE, on page 6](#)
- [Cisco ISR1100-4GLTE Routers, Cisco IOS XE, on page 8](#)

## Cisco ISR1100-4G and Cisco ISR1100-6G Routers, Cisco vEdge Operating System

The following is the default configuration at start up for the following router models when ordered with Cisco vEdge operating system.

- Cisco ISR1100-4G
- Cisco ISR1100X-4G
- Cisco ISR1100-6G
- Cisco ISR1100X-6G



**Note** This information is provided for convenience. Default configurations are subject to change.

```
device# show running-config

system

host-name vedge

admin-tech-on-failure

no route-consistency-check

vbond ztp.viptela.com

aaa

auth-order local radius tacacs

usergroup basic

task system read write

task interface read write

!

usergroup netadmin

!

usergroup operator

task system read

task interface read

task policy read

task routing read

task security read

!

usergroup tenantadmin

!

user admin
    password
$6$tebXK3g64oMdWjSp$klbJ/qShDI4/eLQ0M8NLyCK7rlmsZAlnwGFqCVZc7rN1IE6f8O1Q6IuP4pHJinc8pSTNGAEYtoCAwDuAiGPF9/
!

logging
disk
enable
!
!
omp
```

```
no shutdown
graceful-restart
advertise connected
advertise static
!
security
ipsec
    authentication-type ah-sha1-hmac sha1-hmac
!
!
vpn 0
interface ge0/0
    ip dhcp-client
    ipv6 dhcp-client
    tunnel-interface
        encapsulation ipsec
    no allow-service bgp
    allow-service dhcp
    allow-service dns
    allow-service icmp
    no allow-service sshd
    no allow-service netconf
    no allow-service ntp
    no allow-service ospf
    no allow-service stun
    allow-service https
!
no shutdown
!
!
vpn 512
!
```

## Cisco ISR1100-4GLTE Routers, Cisco vEdge Operating System

The following is the default configuration at start up for the following router models when ordered with Cisco vEdge operating system.

- Cisco ISR1100-4GLTENA
- Cisco ISR1100-4GLTEGB



**Note** This information is provided for convenience. Default configurations are subject to change.

```
Device# show running-config
system
host-name          vedge
admin-tech-on-failure
no route-consistency-check
vbond ztp.viptela.com
aaa
auth-order local radius tacacs
usergroup basic
task system read write
task interface read write
!
usergroup netadmin
!
```

```

usergroup operator
  task system read
  task interface read
  task policy read
  task routing read
  task security read
!
usergroup tenantadmin
!
user admin
  password
$6$tebXK3g64oMdWjSp$klbJ/qShDI4/eLQ0M8NLyCK7rlmsZAlnwGFqCVZc7rN1IE6f8O1Q6IuP4pHJinc8pSTNGAEYtoCAwDuAiGPF9/
!
!
logging
  disk
    enable
!
!
!
omp
  no shutdown
  graceful-restart
  advertise connected
  advertise static
!
security
  ipsec
    authentication-type ah-sha1-hmac sha1-hmac
  !
  !
vpn 0
  interface cellular0
    ip dhcp-client
    tunnel-interface
      encapsulation ipsec
      color lte
      no allow-service bgp
      allow-service dhcp
      allow-service dns
      allow-service icmp
      no allow-service sshd
      no allow-service netconf
      no allow-service ntp
      no allow-service ospf
      no allow-service stun
      allow-service https
  !
  mtu      1428
  profile   0
  technology auto
  no shutdown
!
interface ge0/0
  ip dhcp-client
  ipv6 dhcp-client
  tunnel-interface
    encapsulation ipsec
    no allow-service bgp
    allow-service dhcp
    allow-service dns
    allow-service icmp
    no allow-service sshd

```

```
no allow-service netconf
no allow-service ntp
no allow-service ospf
no allow-service stun
allow-service https
!
no shutdown
!
!
vpn 512
!
```

## Cisco ISR1100-4G Routers, Cisco IOS XE

The following is the default configuration at start up for the following router models when ordered with Cisco IOS XE.

- Cisco ISR1100-4G
- Cisco ISR1100X-4G



**Note** This information is provided for convenience. Default configurations are subject to change.

```
device# show sdwan running-config
system
  admin-tech-on-failure
!
memory free low-watermark processor 68184
call-home
  contact-email-addr sch-smart-licensing@cisco.com
  profile CiscotAC-1
    active
    destination transport-method http
  !
  !
no service tcp-small-servers
no service udp-small-servers
platform qfp utilization monitor load 80
hostname Router
username admin privilege 15 secret 0 admin
no ip finger
no ip rcmd rcp-enable
no ip rcmd rsh-enable
no ip dhcp use class
ip ssh version 2
no ip http server
ip http secure-server
ip nat settings central-policy
ip nat settings gatekeeper-size 1024
interface GigabitEthernet0/0/0
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/1
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/2
```

```

no shutdown
negotiation auto
exit
interface GigabitEthernet0/0/3
no shutdown
negotiation auto
exit
aaa authentication enable default enable
aaa authentication login default local
aaa authorization console
aaa authorization exec default local
login on-success log
line aux 0
!
line con 0
login authentication default
speed 115200
stopbits 1
!
line vty 0 4
login authentication default
!
line vty 5 80
login authentication default
!
sdwan
appqoe
no tcpopt enable
no dreopt enable
!
omp
no shutdown
graceful-restart
no as-dot-notation
address-family ipv4
advertise connected
advertise static
!
address-family ipv6
advertise connected
advertise static
!
!
!
security
ipsec
authentication-type ah-sha1-hmac sha1-hmac
!
!
```

## Cisco ISR1100-6G Routers, Cisco IOS XE

The following is the default configuration at start up for the following router models when ordered with Cisco IOS XE.

- Cisco ISR1100-6G
- Cisco ISR1100X-6G



**Note** This information is provided for convenience. Default configurations are subject to change.

```
device# show sdwan running-config
system
  admin-tech-on-failure
!
memory free low-watermark processor 68184
call-home
  contact-email-addr sch-smart-licensing@cisco.com
  profile CiscoTAC-1
    active
    destination transport-method http
!
!
no service tcp-small-servers
no service udp-small-servers
platform qfp utilization monitor load 80
hostname Router
username admin privilege 15 secret 0 admin
no ip finger
no ip rcmd rcp-enable
no ip rcmd rsh-enable
no ip dhcp use class
ip ssh version 2
no ip http server
ip http secure-server
ip nat settings central-policy
ip nat settings gatekeeper-size 1024
interface GigabitEthernet0/0/0
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/1
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/2
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/3
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/4
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/5
  no shutdown
  negotiation auto
exit
aaa authentication enable default enable
aaa authentication login default local
aaa authorization console
aaa authorization exec default local
login on-success log
line aux 0
!
line con 0
  login authentication default
```

```

speed      115200
stopbits 1
!
line vty 0 4
  login authentication default
!
line vty 5 80
  login authentication default
!
sdwan
appqoe
  no tcpopt enable
  no dreqopt enable
!
omp
  no shutdown
  graceful-restart
  no as-dot-notation
  address-family ipv4
    advertise connected
    advertise static
  !
  address-family ipv6
    advertise connected
    advertise static
  !
!
!
security
ipsec
  authentication-type ah-sha1-hmac sha1-hmac
!
!
```

## Cisco ISR1100-4GLTE Routers, Cisco IOS XE

The following is the default configuration at start up for the following router models when ordered with Cisco IOS XE.

- Cisco ISR1100-4GLTENA
- Cisco ISR1100-4GLTEGB




---

**Note** This information is provided for convenience. Default configurations are subject to change.

---

```

device# show sdwan running-config
system
  admin-tech-on-failure
!
memory free low-watermark processor 68304
call-home
  contact-email-addr sch-smart-licensing@cisco.com
  profile CiscoTAC-1
    active
    destination transport-method http
  !
no service tcp-small-servers
```

```
no service udp-small-servers
platform qfp utilization monitor load 80
hostname Router
username admin privilege 15 secret 0 admin
controller Cellular 0/1/0
!
no ip finger
no ip rcmd rcp-enable
no ip rcmd rsh-enable
no ip dhcp use class
no ip http server
ip http secure-server
ip nat settings central-policy
ip nat settings gatekeeper-size 1024
interface GigabitEthernet0/0/0
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/1
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/2
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/3
  no shutdown
  negotiation auto
exit
interface Cellular0/1/0
  no shutdown
  ip address negotiated
  ipv6 enable
exit
interface Cellular0/1/1
  shutdown
  ip address negotiated
exit
aaa authentication enable default enable
aaa authentication login default local
aaa authorization console
aaa authorization exec default local
login on-success log
line aux 0
!
line con 0
  login authentication default
  stopbits 1
!
line vty 0 4
  login authentication default
!
line vty 5 80
  login authentication default
!
sdwan
  appqoe
    no tcpopt enable
  !
omp
  no shutdown
  graceful-restart
  no as-dot-notation
```

```
address-family ipv4
  advertise connected
  advertise static
!
address-family ipv6
  advertise connected
  advertise static
!
!
!
security
  ipsec
    authentication-type ah-sha1-hmac sha1-hmac
!
!
```