



INDEX

AR	Cisco IOS XR Advanced System Command Reference
HR	Cisco IOS XR Interface and Hardware Component Command Reference
IR	Cisco IOS XR IP Addresses and Services Command Reference
MCR	Cisco IOS XR Multicast Command Reference
MNR	Cisco IOS XR System Monitoring Command Reference
MPR	Cisco IOS XR MPLS Command Reference
QR	Cisco IOS XR Modular Quality of Service Command Reference
RR	Cisco IOS XR Routing Command Reference
SMR	Cisco IOS XR System Management Command Reference
SR	Cisco IOS XR System Security Command Reference
VPR	Cisco IOS XR L2VPN and Ethernet Services Command Reference

B

bandwidth (QoS) command	QR-2
bandwidth remaining command	QR-6

C

child-conform-aware command	QR-8
class (policy map) command	QR-10
class-map command	QR-12
clear qos counters interface command	QR-15
conform-action command	QR-17

E

end-class-map command	QR-20
end-policy-map command	QR-22
exceed-action command	QR-23

H

hw-module qos account layer2 encapsulation command	QR-26
hw-module qos acl-deny enable command	QR-28
hw-module qos multicast command	QR-29
hw-module qos multicast priorityq disable command	QR-31
hw-module qos pol-gran location command	QR-33
hw-module qos queue-auto-defrag disable location command	QR-35
hw-module queue-defrag location command	QR-37

M

match access-group command	QR-39
match atm	QR-41
match cos command	QR-43
match discard-class command	QR-45
match dscp command	QR-45
match frame-relay dlci command	QR-50
match fr-de command	QR-48
match mpls experimental topmost command	QR-52
match precedence command	QR-54
match qos-group command	QR-57
match vlan command	QR-59
match vpls	QR-61

P

police rate command	QR-63
policy-map command	QR-67
priority (QoS) command	QR-69

Q

queue-limit command [QR-71](#)

R

random-detect command [QR-75](#)

random-detect discard-class command [QR-78](#)

random-detect dscp command [QR-80](#)

random-detect exp command [QR-82](#)

random-detect precedence command [QR-84](#)

S

service-policy (interface) command [QR-86](#)

service-policy (policy map class) command [QR-88](#)

set atm-clp command [QR-90](#)

set cos command [QR-92](#)

set discard-class command [QR-94](#)

set dscp command [QR-96](#)

set fr-de [QR-98](#)

set mpls experimental command [QR-100](#)

set precedence command [QR-102](#)

set qos-group command [QR-104](#)

shape average command [QR-106](#)

show controllers egressq enaq location command [QR-108](#)

show hw-module multicast qos command [QR-111](#)

show policy-map interface command [QR-113](#)

show qos acl-deny enable command [QR-117](#)

show qos interface command [QR-118](#)

show qos pol-gran location command [QR-123](#)

switch-fabric service-policy command [QR-125](#)

V

violate-action command [QR-126](#)