

## **Preface**

This guide describes the Cisco IOS XR Netflow configurations. For complete command reference of NetFlow, see the *NetFlow Commands* chapter in the *Cisco IOS XR Netflow Command Reference for the Cisco XR 12000 Series Router*.

The preface contains the following sections:

- Changes to This Document, page i
- Obtaining Documentation and Submitting a Service Request, page i

## **Changes to This Document**

This table lists the changes made to this document since it was first printed.

Table 1: Changes to This Document

Revision	Date	Change Summary
OL-28395-03	September 2013	Republished for Cisco IOS XR Release 4.3.2.
OL-28395-02	May 2013	Republished for Cisco IOS XR Release 4.3.1.
OL-28395-01	December 2012	Initial release of this document.

## **Obtaining Documentation and Submitting a Service Request**

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see What's New in Cisco Product Documentation.

To receive new and revised Cisco technical content directly to your desktop, you can subscribe to the What's New in Cisco Product Documentation RSS feed. RSS feeds are a free service.

**Obtaining Documentation and Submitting a Service Request**