



CHAPTER 6

Configuring Multiple Context Mode

This chapter describes how to configure multiple security contexts on the ASA and includes the following sections:

- [Information About Security Contexts, page 6-1](#)
- [Licensing Requirements for Multiple Context Mode, page 6-12](#)
- [Guidelines and Limitations, page 6-13](#)
- [Default Settings, page 6-14](#)
- [Configuring Multiple Contexts, page 6-14](#)
- [Changing Between Contexts and the System Execution Space, page 6-23](#)
- [Managing Security Contexts, page 6-23](#)
- [Monitoring Security Contexts, page 6-27](#)
- [Configuration Examples for Multiple Context Mode, page 6-38](#)
- [Feature History for Multiple Context Mode, page 6-39](#)

Information About Security Contexts

You can partition a single ASA into multiple virtual devices, known as security contexts. Each context is an independent device, with its own security policy, interfaces, and administrators. Multiple contexts are similar to having multiple standalone devices. Many features are supported in multiple context mode, including routing tables, firewall features, IPS, and management. Some features are not supported, including VPN and dynamic routing protocols.



Note

When the ASA is configured for security contexts (for example, for Active/Active Stateful Failover), IPsec or SSL VPN cannot be enabled. Therefore, these features are unavailable.

This section provides an overview of security contexts and includes the following topics:

- [Common Uses for Security Contexts, page 6-2](#)
- [Context Configuration Files, page 6-2](#)
- [How the ASA Classifies Packets, page 6-3](#)
- [Cascading Security Contexts, page 6-6](#)
- [Management Access to Security Contexts, page 6-7](#)

- [Information About Resource Management, page 6-8](#)
- [Information About MAC Addresses, page 6-11](#)

Common Uses for Security Contexts

You might want to use multiple security contexts in the following situations:

- You are a service provider and want to sell security services to many customers. By enabling multiple security contexts on the ASA, you can implement a cost-effective, space-saving solution that keeps all customer traffic separate and secure, and also eases configuration.
- You are a large enterprise or a college campus and want to keep departments completely separate.
- You are an enterprise that wants to provide distinct security policies to different departments.
- You have any network that requires more than one ASA.

Context Configuration Files

This section describes how the ASA implements multiple context mode configurations and includes the following sections:

- [Context Configurations, page 6-2](#)
- [System Configuration, page 6-2](#)
- [Admin Context Configuration, page 6-2](#)

Context Configurations

The ASA includes a configuration for each context that identifies the security policy, interfaces, and almost all the options you can configure on a standalone device. You can store context configurations on the internal flash memory or the external flash memory card, or you can download them from a TFTP, FTP, or HTTP(S) server.

System Configuration

The system administrator adds and manages contexts by configuring each context configuration location, allocated interfaces, and other context operating parameters in the system configuration, which, like a single mode configuration, is the startup configuration. The system configuration identifies basic settings for the ASA. The system configuration does not include any network interfaces or network settings for itself; rather, when the system needs to access network resources (such as downloading the contexts from the server), it uses one of the contexts that is designated as the *admin context*. The system configuration does include a specialized failover interface for failover traffic only.

Admin Context Configuration

The admin context is just like any other context, except that when a user logs in to the admin context, then that user has system administrator rights and can access the system and all other contexts. The admin context is not restricted in any way, and can be used as a regular context. However, because

logging into the admin context grants you administrator privileges over all contexts, you might need to restrict access to the admin context to appropriate users. The admin context must reside on flash memory, and not remotely.

If your system is already in multiple context mode, or if you convert from single mode, the admin context is created automatically as a file on the internal flash memory called `admin.cfg`. This context is named “admin.” If you do not want to use `admin.cfg` as the admin context, you can change the admin context.

How the ASA Classifies Packets

Each packet that enters the ASA must be classified, so that the ASA can determine to which context to send a packet. This section includes the following topics:

- [Valid Classifier Criteria, page 6-3](#)
- [Classification Examples, page 6-4](#)



Note

If the destination MAC address is a multicast or broadcast MAC address, the packet is duplicated and delivered to each context.

Valid Classifier Criteria

This section describes the criteria used by the classifier and includes the following topics:

- [Unique Interfaces, page 6-3](#)
- [Unique MAC Addresses, page 6-3](#)
- [NAT Configuration, page 6-4](#)



Note

For management traffic destined for an interface, the interface IP address is used for classification.

The routing table is not used for packet classification.

Unique Interfaces

If only one context is associated with the ingress interface, the ASA classifies the packet into that context. In transparent firewall mode, unique interfaces for contexts are required, so this method is used to classify packets at all times.

Unique MAC Addresses

If multiple contexts share an interface, then the classifier uses the interface MAC address. The ASA lets you assign a different MAC address in each context to the same shared interface. By default, shared interfaces do not have unique MAC addresses; the interface uses the burned-in MAC address in every context. An upstream router cannot route directly to a context without unique MAC addresses. You can set the MAC addresses manually when you configure each interface (see the [“Configuring the MAC Address and MTU”](#) section on page 8-9), or you can automatically generate MAC addresses (see the [“Automatically Assigning MAC Addresses to Context Interfaces”](#) section on page 6-22).


NAT Configuration

If you do not use unique MAC addresses, then the mapped addresses in your NAT configuration are used to classify packets. We recommend using MAC addresses instead of NAT, so that traffic classification can occur regardless of the completeness of the NAT configuration.

Classification Examples

Figure 6-1 shows multiple contexts sharing an outside interface. The classifier assigns the packet to Context B because Context B includes the MAC address to which the router sends the packet.


Figure 6-1 Packet Classification with a Shared Interface using MAC Addresses

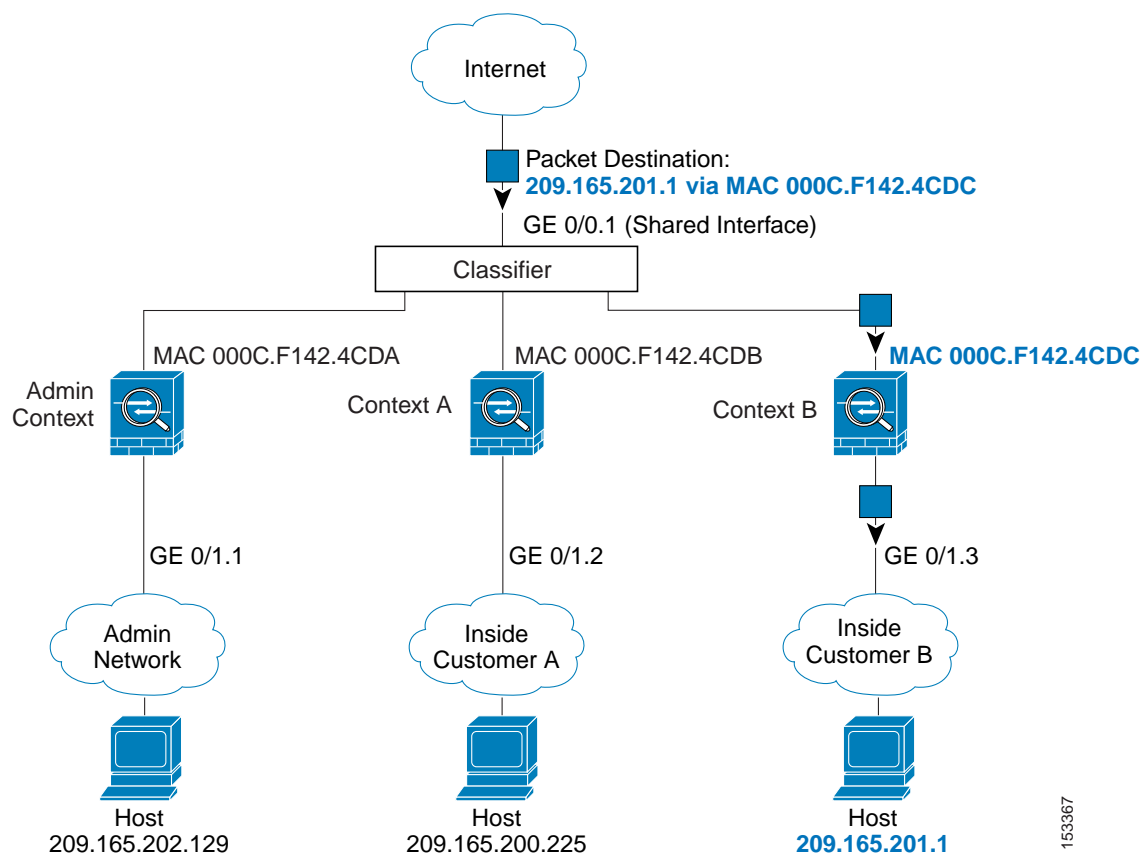

153367


Note that all new incoming traffic must be classified, even from inside networks. [Figure 6-2](#) shows a host on the Context B inside network accessing the Internet. The classifier assigns the packet to Context B because the ingress interface is Gigabit Ethernet 0/1.3, which is assigned to Context B.

Figure 6-2 Incoming Traffic from Inside Networks

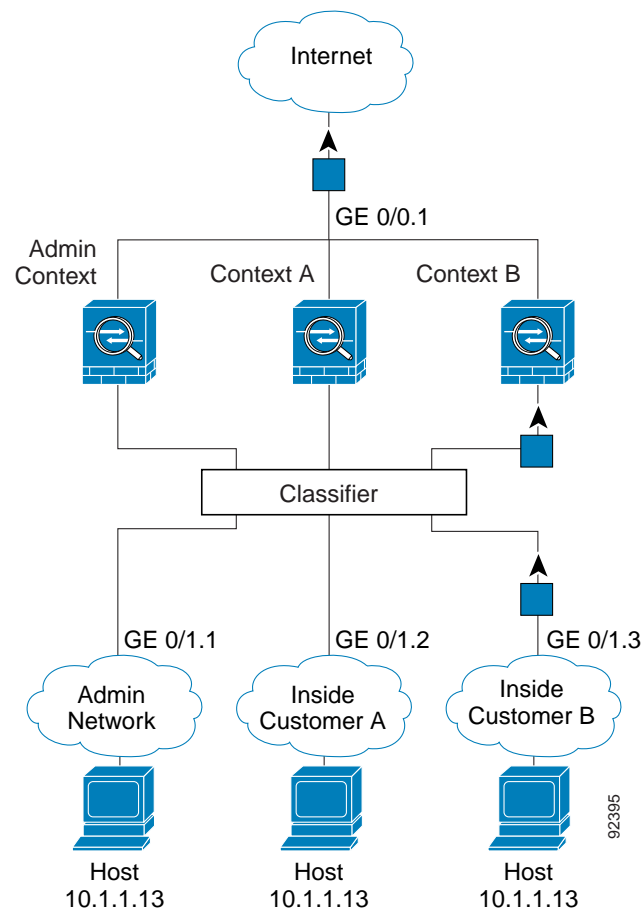

For transparent firewalls, you must use unique interfaces. [Figure 6-3](#) shows a host on the Context B inside network accessing the Internet. The classifier assigns the packet to Context B because the ingress interface is Gigabit Ethernet 1/0.3, which is assigned to Context B.

Figure 6-3 Transparent Firewall Contexts

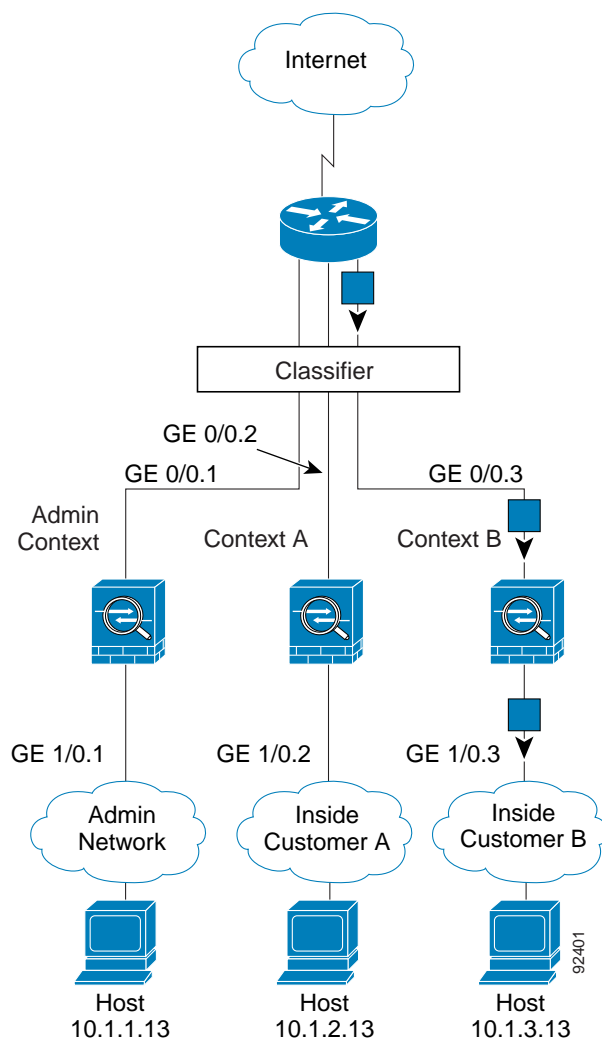

Cascading Security Contexts

Placing a context directly in front of another context is called cascading contexts; the outside interface of one context is the same interface as the inside interface of another context. You might want to cascade contexts if you want to simplify the configuration of some contexts by configuring shared parameters in the top context.




Note

Cascading contexts requires that you configure unique MAC addresses for each context interface. Because of the limitations of classifying packets on shared interfaces without MAC addresses, we do not recommend using cascading contexts without unique MAC addresses.

Figure 6-4 shows a gateway context with two contexts behind the gateway.

Figure 6-4 Cascading Contexts

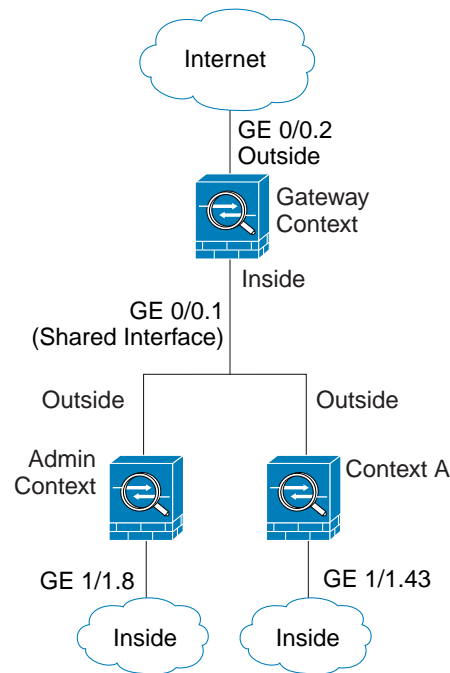

Management Access to Security Contexts

The ASA provides system administrator access in multiple context mode as well as access for individual context administrators. The following sections describe logging in as a system administrator or as a context administrator:

- [System Administrator Access, page 6-7](#)
- [Context Administrator Access, page 6-8](#)

System Administrator Access

You can access the ASA as a system administrator in two ways:

- Access the ASA console.
From the console, you access the *system execution space*, which means that any commands you enter affect only the system configuration or the running of the system (for run-time commands).
- Access the admin context using Telnet, SSH, or ASDM.

See [Chapter 37, “Configuring Management Access,”](#) to enable Telnet, SSH, and SDM access.

As the system administrator, you can access all contexts.

When you change to a context from admin or the system, your username changes to the default “enable_15” username. If you configured command authorization in that context, you need to either configure authorization privileges for the “enable_15” user, or you can log in as a different name for which you provide sufficient privileges in the command authorization configuration for the context. To

log in with a username, enter the **login** command. For example, you log in to the admin context with the username “admin.” The admin context does not have any command authorization configuration, but all other contexts include command authorization. For convenience, each context configuration includes a user “admin” with maximum privileges. When you change from the admin context to context A, your username is altered, so you must log in again as “admin” by entering the **login** command. When you change to context B, you must again enter the **login** command to log in as “admin.”

The system execution space does not support any AAA commands, but you can configure its own enable password, as well as usernames in the local database to provide individual logins.

Context Administrator Access

You can access a context using Telnet, SSH, or ASDM. If you log in to a non-admin context, you can only access the configuration for that context. You can provide individual logins to the context. See [Chapter 37, “Configuring Management Access,”](#) to enable Telnet, SSH, and SDM access and to configure management authentication.

Information About Resource Management

By default, all security contexts have unlimited access to the resources of the ASA, except where maximum limits per context are enforced. However, if you find that one or more contexts use too many resources, and they cause other contexts to be denied connections, for example, then you can configure resource management to limit the use of resources per context.

The ASA manages resources by assigning contexts to resource classes. Each context uses the resource limits set by the class.

This section includes the following topics:


- [Resource Limits, page 6-8](#)
- [Default Class, page 6-9](#)
- [Class Members, page 6-10](#)

Resource Limits

When you create a class, the ASA does not set aside a portion of the resources for each context assigned to the class; rather, the ASA sets the maximum limit for a context. If you oversubscribe resources, or allow some resources to be unlimited, a few contexts can “use up” those resources, potentially affecting service to other contexts.


You can set the limit for individual resources, as a percentage (if there is a hard system limit) or as an absolute value.

You can oversubscribe the ASA by assigning more than 100 percent of a resource across all contexts. For example, you can set the Bronze class to limit connections to 20 percent per context, and then assign 10 contexts to the class for a total of 200 percent. If contexts concurrently use more than the system limit, then each context gets less than the 20 percent you intended. (See [Figure 6-5.](#))

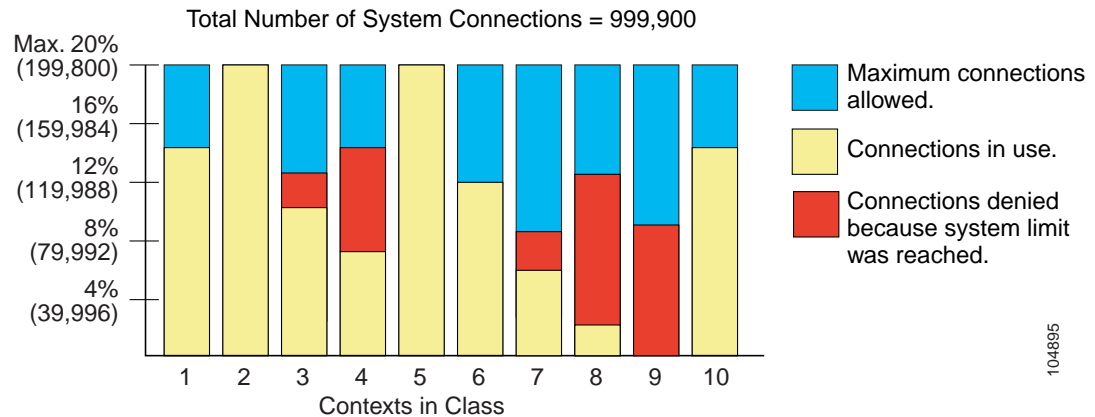Figure 6-5 *Resource Oversubscription*

If you assign an absolute value to a resource across all contexts that exceeds the practical limit of the ASA, then the performance of the ASA might be impaired.

The ASA lets you assign unlimited access to one or more resources in a class, instead of a percentage or absolute number. When a resource is unlimited, contexts can use as much of the resource as the system has available or that is practically available. For example, Context A, B, and C are in the Silver Class, which limits each class member to 1 percent of the connections, for a total of 3 percent; but the three contexts are currently only using 2 percent combined. Gold Class has unlimited access to connections. The contexts in the Gold Class can use more than the 97 percent of “unassigned” connections; they can also use the 1 percent of connections not currently in use by Context A, B, and C, even if that means that Context A, B, and C are unable to reach their 3 percent combined limit. (See [Figure 6-6](#).) Setting unlimited access is similar to oversubscribing the ASA, except that you have less control over how much you oversubscribe the system.

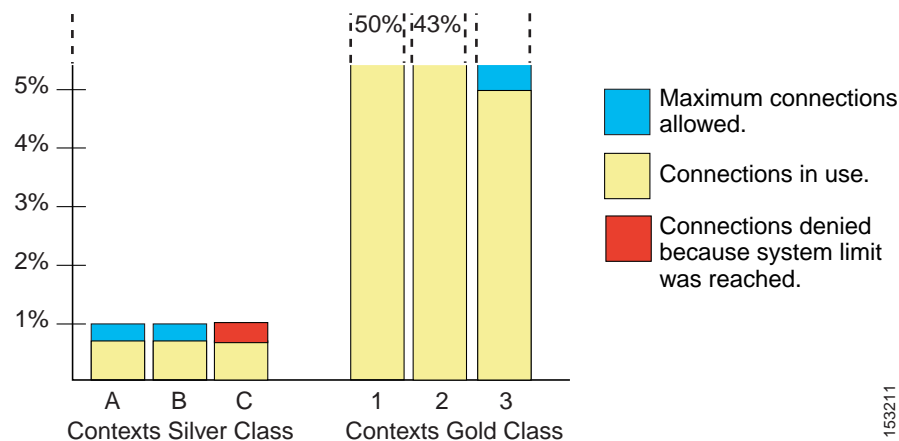Figure 6-6 *Unlimited Resources*

Default Class

All contexts belong to the default class if they are not assigned to another class; you do not have to actively assign a context to the default class.


If a context belongs to a class other than the default class, those class settings always override the default class settings. However, if the other class has any settings that are not defined, then the member context uses the default class for those limits. For example, if you create a class with a 2 percent limit for all concurrent connections, but no other limits, then all other limits are inherited from the default class. Conversely, if you create a class with a limit for all resources, the class uses no settings from the default class.

By default, the default class provides unlimited access to resources for all contexts, except for the following limits, which are by default set to the maximum allowed per context:

- Telnet sessions—5 sessions.
- SSH sessions—5 sessions.
- IPsec sessions—5 sessions.
- MAC addresses—65,535 entries.

Figure 6-7 shows the relationship between the default class and other classes. Contexts A and C belong to classes with some limits set; other limits are inherited from the default class. Context B inherits no limits from default because all limits are set in its class, the Gold class. Context D was not assigned to a class, and is by default a member of the default class.

Figure 6-7 Resource Classes

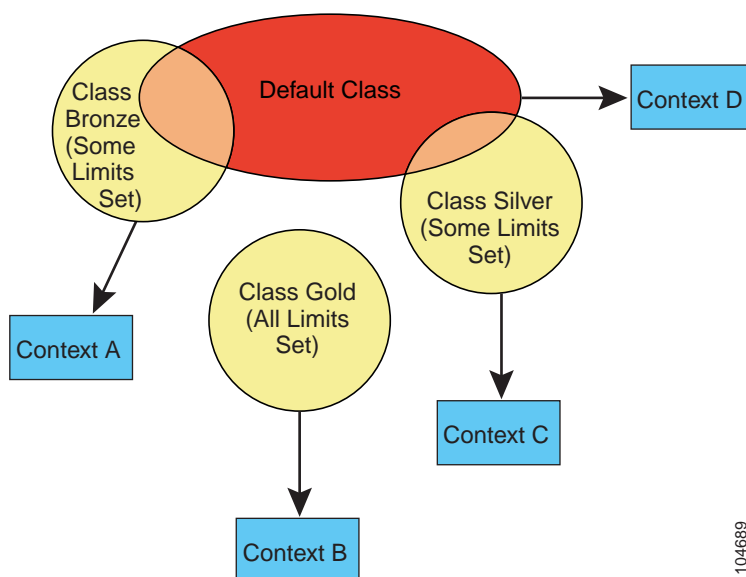

104689

Class Members

To use the settings of a class, assign the context to the class when you define the context. All contexts belong to the default class if they are not assigned to another class; you do not have to actively assign a context to default. You can only assign a context to one resource class. The exception to this rule is that limits that are undefined in the member class are inherited from the default class; so in effect, a context could be a member of default plus another class.

Information About MAC Addresses

To allow contexts to share interfaces, you should assign unique MAC addresses to each shared context interface.

The MAC address is used to classify packets within a context. If you share an interface, but do not have unique MAC addresses for the interface in each context, then other classification methods are attempted that might not provide full coverage. See the [“How the ASA Classifies Packets” section on page 6-3](#) for information about classifying packets.

In the rare circumstance that the generated MAC address conflicts with another private MAC address in your network, you can manually set the MAC address for the interface within the context. See the [“Configuring the MAC Address and MTU” section on page 8-9](#) to manually set the MAC address.

This section includes the following topics:

- [Default MAC Address, page 6-11](#)
- [Interaction with Manual MAC Addresses, page 6-11](#)
- [Failover MAC Addresses, page 6-12](#)
- [MAC Address Format, page 6-12](#)

Default MAC Address

If you disable MAC address generation, the physical interface uses the burned-in MAC address, and all subinterfaces of a physical interface use the same burned-in MAC address.

See the following sections for your release for additional information about automatic MAC address generation. See also the [“MAC Address Format” section on page 6-12](#).

8.6(1) and Later

Automatic MAC address generation is enabled—Uses an autogenerated prefix. The ASA autogenerates the prefix based on the last two bytes of the interface MAC address. You cannot use the legacy auto-generation method (without a prefix).



Note

To maintain hitless upgrade for failover pairs, the ASA does not convert an existing auto-generation configuration upon a reload if failover is enabled. However, we strongly recommend that you manually change to the prefix method of generation when using failover. After upgrading, to use the prefix method of MAC address generation, reenable MAC address autogeneration to use a prefix.

Earlier Releases

Automatic MAC address generation is disabled.

Interaction with Manual MAC Addresses

If you manually assign a MAC address and also enable auto-generation, then the manually assigned MAC address is used. If you later remove the manual MAC address, the auto-generated address is used.

Because auto-generated addresses (when using a prefix) start with A2, you cannot start manual MAC addresses with A2 if you also want to use auto-generation.

Failover MAC Addresses

For use with failover, the ASA generates both an active and standby MAC address for each interface. If the active unit fails over and the standby unit becomes active, the new active unit starts using the active MAC addresses to minimize network disruption. See the “[MAC Address Format](#)” section for more information.

MAC Address Format

The MAC address format without a prefix is a legacy version not supported on newer ASA versions.

MAC Address Format Using a Prefix

The ASA generates the MAC address using the following format:

`A2xx.yyzz.zzzz`

Where `xx.yy` is a user-defined prefix or an autogenerated prefix based on the last two bytes of the interface MAC address, and `zz.zzzz` is an internal counter generated by the ASA. For the standby MAC address, the address is identical except that the internal counter is increased by 1.

For an example of how the prefix is used, if you set a prefix of 77, then the ASA converts 77 into the hexadecimal value 004D (yyxx). When used in the MAC address, the prefix is reversed (xxyy) to match the ASA native form:

`A24D.00zz.zzzz`

For a prefix of 1009 (03F1), the MAC address is:

`A2F1.03zz.zzzz`

MAC Address Format Without a Prefix (Legacy Method; Not Available in 8.6(1) and Later)

Without a prefix, the MAC address is generated using the following format:

- Active unit MAC address: `12_slot.port_subid.contextid`.
- Standby unit MAC address: `02_slot.port_subid.contextid`.

For platforms with no interface slots, the slot is always 0. The *port* is the interface port. The *subid* is an internal ID for the subinterface, which is not viewable. The *contextid* is an internal ID for the context, viewable with the **show context detail** command. For example, the interface GigabitEthernet 0/1.200 in the context with the ID 1 has the following generated MAC addresses, where the internal ID for subinterface 200 is 31:

- Active: 1200.0131.0001
- Standby: 0200.0131.0001

This MAC address generation method does not allow for persistent MAC addresses across reloads, does not allow for multiple ASAs on the same network segment (because unique MAC addresses are not guaranteed), and does not prevent overlapping MAC addresses with manually assigned MAC addresses. We recommend using a prefix with the MAC address generation to avoid these issues.

Licensing Requirements for Multiple Context Mode

Model	License Requirement
ASA 5505	No support.
ASA 5510	<ul style="list-style-type: none"> Base License: No support. Security Plus License: 2 contexts. <i>Optional license: 5 contexts.</i>
ASA 5520	Base License: 2 contexts. <i>Optional licenses: 5, 10, or 20 contexts.</i>
ASA 5540	Base License: 2 contexts. <i>Optional licenses: 5, 10, 20, or 50 contexts.</i>
ASA 5550	Base License: 2 contexts. <i>Optional licenses: 5, 10, 20, 50, or 100 contexts.</i>
ASA 5580	Base License: 2 contexts. <i>Optional licenses: 5, 10, 20, 50, 100, or 250 contexts.</i>
ASA 5512-X	<ul style="list-style-type: none"> Base License: No support. Security Plus License: 2 contexts. <i>Optional license: 5 contexts.</i>
ASA 5515-X	Base License: 2 contexts. <i>Optional license: 5 contexts.</i>
ASA 5525-X	Base License: 2 contexts. <i>Optional licenses: 5, 10, or 20 contexts.</i>
ASA 5545-X	Base License: 2 contexts. <i>Optional licenses: 5, 10, 20, or 50 contexts.</i>
ASA 5555-X	Base License: 2 contexts. <i>Optional licenses: 5, 10, 20, 50, or 100 contexts.</i>
ASA 5585-X with SSP-10	Base License: 2 contexts. <i>Optional licenses: 5, 10, 20, 50, or 100 contexts.</i>
ASA 5585-X with SSP-20, -40, and -60	Base License: 2 contexts. <i>Optional licenses: 5, 10, 20, 50, 100, or 250 contexts.</i>

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

Failover Guidelines

Active/Active mode failover is only supported in multiple context mode.

IPv6 Guidelines

Supports IPv6.

**Note**

Cross context IPv6 routing is not supported.

Model Guidelines

Does not support the ASA 5505.

Unsupported Features

Multiple context mode does not support the following features:

- Dynamic routing protocols
Security contexts support only static routes. You cannot enable OSPF, RIP, or EIGRP in multiple context mode.
- VPN
- Multicast routing
- Threat Detection
- Phone Proxy
- QoS
- Unified Communications

Additional Guidelines

- The context mode (single or multiple) is not stored in the configuration file, even though it does endure reboots. If you need to copy your configuration to another device, set the mode on the new device to match.
- If you store context configurations in the root directory of flash memory, on some models you might run out of room in that directory, even though there is available memory. In this case, create a subdirectory for your configuration files. Background: some models, such as the ASA 5585-X, use the FAT 16 file system for internal flash memory, and if you do not use 8.3-compliant short names, or use uppercase characters, then fewer than 512 files and folders can be stored because the file system uses up slots to store long file names (see <http://support.microsoft.com/kb/120138/en-us>).

Default Settings

By default, the ASA is in single context mode.

Configuring Multiple Contexts

This section describes how to configure multiple context mode, and includes the following topics:

- [Task Flow for Configuring Multiple Context Mode, page 6-15](#)

- [Enabling or Disabling Multiple Context Mode, page 6-15](#)
- [Configuring a Class for Resource Management, page 6-16](#)
- [Configuring a Security Context, page 6-18](#)
- [Automatically Assigning MAC Addresses to Context Interfaces, page 6-22](#)

Task Flow for Configuring Multiple Context Mode

To configure multiple context mode, perform the following steps:

-
- | | |
|---------------|--|
| Step 1 | Enable multiple context mode. See the “ Enabling or Disabling Multiple Context Mode ” section on page 6-15 . |
| Step 2 | (Optional) Configure classes for resource management. See the “ Configuring a Class for Resource Management ” section on page 6-16 . |
| Step 3 | Configure interfaces in the system execution space. See Chapter 12, “Starting Interface Configuration (ASA 5510 and Higher).” |
| Step 4 | Configure security contexts. See the “ Configuring a Security Context ” section on page 6-18 . |
| Step 5 | (Optional) Automatically assign MAC addresses to context interfaces. See the “ Automatically Assigning MAC Addresses to Context Interfaces ” section on page 6-22 . |
| Step 6 | Complete interface configuration in the context. See Chapter 8, “Completing Interface Configuration (Routed Mode),” or Chapter 9, “Completing Interface Configuration (Transparent Mode).” |
-

Enabling or Disabling Multiple Context Mode

Your ASA might already be configured for multiple security contexts depending on how you ordered it from Cisco. If you are upgrading, however, you might need to convert from single mode to multiple mode by following the procedures in this section.

This section includes the following topics:

- [Enabling Multiple Context Mode, page 6-15](#)
- [Restoring Single Context Mode, page 6-16](#)

Enabling Multiple Context Mode

When you convert from single mode to multiple mode, the ASA converts the running configuration into two files: a new startup configuration that comprises the system configuration, and `admin.cfg` that comprises the admin context (in the root directory of the internal flash memory). The original running configuration is saved as `old_running.cfg` (in the root directory of the internal flash memory). The original startup configuration is not saved. The ASA automatically adds an entry for the admin context to the system configuration with the name “admin.”

Prerequisites

- When you convert from single mode to multiple mode, the ASA converts the running configuration into two files. The original startup configuration is not saved, so if it differs from the running configuration, you should back it up before proceeding.
- The context mode (single or multiple) is not stored in the configuration file, even though it does endure reboots. If you need to copy your configuration to another device, set the mode on the new device to match.

Detailed Steps

Command	Purpose
<code>mode multiple</code>	Changes to multiple context mode. You are prompted to reboot the ASA.
Example: <code>hostname(config)# mode multiple</code>	

Restoring Single Context Mode

To copy the old running configuration to the startup configuration and to change the mode to single mode, perform the following steps.

Prerequisites

Perform this procedure in the system execution space.

Detailed Steps

	Command	Purpose
Step 1	<code>copy flash:old_running.cfg startup-config</code>	Copies the backup version of your original running configuration to the current startup configuration.
	Example: <code>hostname(config)# copy flash:old_running.cfg startup-config</code>	
Step 2	<code>mode single</code>	Sets the mode to single mode. You are prompted to reboot the ASA.
	Example: <code>hostname(config)# mode single</code>	

Configuring a Class for Resource Management

To configure a class in the system configuration, perform the following steps. You can change the value of a particular resource limit by reentering the command with a new value.

Prerequisites

Perform this procedure in the system execution space.

Guidelines

Table 6-1 lists the resource types and the limits. See also the **show resource types** command.

Table 6-1 Resource Names and Limits

Resource Name	Rate or Concurrent	Minimum and Maximum Number per Context	System Limit ¹	Description
mac-addresses	Concurrent	N/A	65,535	For transparent firewall mode, the number of MAC addresses allowed in the MAC address table.
conns	Concurrent or Rate	N/A	Concurrent connections: See the “ Supported Feature Licenses Per Model ” section on page 4-1 for the connection limit for your platform. Rate: N/A	TCP or UDP connections between any two hosts, including connections between one host and multiple other hosts.
inspects	Rate	N/A	N/A	Application inspections.
hosts	Concurrent	N/A	N/A	Hosts that can connect through the ASA.
asdm	Concurrent	1 minimum 5 maximum	200	ASDM management sessions. Note ASDM sessions use two HTTPS connections: one for monitoring that is always present, and one for making configuration changes that is present only when you make changes. For example, the system limit of 32 ASDM sessions represents a limit of 64 HTTPS sessions.
ssh	Concurrent	1 minimum 5 maximum	100	SSH sessions.
syslogs	Rate	N/A	N/A	Syslog messages.
telnet	Concurrent	1 minimum 5 maximum	100	Telnet sessions.
xlates	Concurrent	N/A	N/A	Address translations.

1. If this column value is N/A, then you cannot set a percentage of the resource because there is no hard system limit for the resource.

Detailed Steps

	Command	Purpose
Step 1	class <i>name</i> Example: <pre>hostname(config)# threat-detection scanning-threat shun except ip-address 10.1.1.0 255.255.255.0</pre>	Specifies the class name and enters the class configuration mode. The <i>name</i> is a string up to 20 characters long. To set the limits for the default class, enter default for the name.
Step 2	Do one or more of the following: limit-resource all 0 Example: <pre>hostname(config)# limit-resource all 0</pre> limit-resource [rate] <i>resource_name</i> <i>number</i> [%] Example: <pre>hostname(config)# limit-resource rate inspects 10</pre>	Sets all resource limits (shown in Table 6-1) to be unlimited. For example, you might want to create a class that includes the admin context that has no limitations. The default class has all resources set to unlimited by default. Sets a particular resource limit. For this particular resource, the limit overrides the limit set for all . Enter the rate argument to set the rate per second for certain resources. For resources that do not have a system limit, you cannot set the percentage (%) between 1 and 100; you can only set an absolute value. See Table 6-1 for resources for which you can set the rate per second and which do not have a system limit.

Examples

For example, to set the default class limit for conns to 10 percent instead of unlimited, enter the following commands:

```
hostname(config)# class default
hostname(config-class)# limit-resource conns 10%
```

All other resources remain at unlimited.

To add a class called gold, enter the following commands:

```
hostname(config)# class gold
hostname(config-class)# limit-resource mac-addresses 10000
hostname(config-class)# limit-resource conns 15%
hostname(config-class)# limit-resource rate conns 1000
hostname(config-class)# limit-resource rate inspects 500
hostname(config-class)# limit-resource hosts 9000
hostname(config-class)# limit-resource asdm 5
hostname(config-class)# limit-resource ssh 5
hostname(config-class)# limit-resource rate syslogs 5000
hostname(config-class)# limit-resource telnet 5
hostname(config-class)# limit-resource xlates 36000
```

Configuring a Security Context

The security context definition in the system configuration identifies the context name, configuration file URL, and interfaces that a context can use.

Prerequisites

- Perform this procedure in the system execution space.
- For ASA 5500 series appliances, configure physical interface parameters, VLAN subinterfaces, and redundant interfaces according to the [Chapter 12, “Starting Interface Configuration \(ASA 5510 and Higher\).”](#)
- If you do not have an admin context (for example, if you clear the configuration) then you must first specify the admin context name by entering the following command:

```
hostname(config)# admin-context name
```

Although this context name does not exist yet in your configuration, you can subsequently enter the **context name** command to match the specified name to continue the admin context configuration.

Detailed Steps

	Command	Purpose
Step 1	context <i>name</i> Example: hostname(config)# context administrator	Adds or modifies a context. The <i>name</i> is a string up to 32 characters long. This name is case sensitive, so you can have two contexts named “customerA” and “CustomerA,” for example. You can use letters, digits, or hyphens, but you cannot start or end the name with a hyphen. “System” or “Null” (in upper or lower case letters) are reserved names, and cannot be used.
Step 2	(Optional) description <i>text</i> Example: hostname(config)# description Administrator Context	Adds a description for this context.

Command	Purpose
<p>Step 3 To allocate a physical interface:</p> <pre>allocate-interface physical_interface [mapped_name] [visible invisible]</pre> <p>To allocate one or more subinterfaces:</p> <pre>allocate-interface physical_interface.subinterface[-physical_ interface.subinterface] [mapped_name[-mapped_name]] [visible invisible]</pre> <p>Example:</p> <pre>hostname(config-ctx)# allocate-interface gigabitethernet0/1.100 int1 hostname(config-ctx)# allocate-interface gigabitethernet0/1.200 int2 hostname(config-ctx)# allocate-interface gigabitethernet0/2.300-gigabitethernet0/2. 305 int3-int8</pre>	<p>Specifies the interfaces you can use in the context. Do not include a space between the interface type and the port number.</p> <p>Enter these commands multiple times to specify different ranges. If you remove an allocation with the no form of this command, then any context commands that include this interface are removed from the running configuration.</p> <p>Transparent firewall mode allows a limited number of interfaces to pass through traffic; however, you can use a dedicated management interface, Management <i>slot/port</i>, (physical, subinterface, redundant, or EtherChannel) as an additional interface for management traffic. The management interface for transparent mode does not flood a packet out the interface when that packet is not in the MAC address table.</p> <p>You can assign the same interfaces to multiple contexts in routed mode, if desired.</p> <p>The <i>mapped_name</i> is an alphanumeric alias for the interface that can be used within the context instead of the interface ID. If you do not specify a mapped name, the interface ID is used within the context. For security purposes, you might not want the context administrator to know which interfaces are being used by the context. A mapped name must start with a letter, end with a letter or digit, and have as interior characters only letters, digits, or an underscore. For example, you can use the following names:</p> <pre>int0, inta, int_0</pre> <p>If you specify a range of subinterfaces, you can specify a matching range of mapped names. Follow these guidelines for ranges:</p> <ul style="list-style-type: none"> The mapped name must consist of an alphabetic portion followed by a numeric portion. The alphabetic portion of the mapped name must match for both ends of the range. For example, enter the following range: <pre>int0-int10</pre> <p>If you enter <code>gig0/1.1-gig0/1.5 happy1-sad5</code>, for example, the command fails.</p> The numeric portion of the mapped name must include the same quantity of numbers as the subinterface range. For example, both ranges include 100 interfaces: <pre>gigabitethernet0/0.100-gigabitethernet0/0.199 int1-int100</pre> <p>If you enter <code>gig0/0.100-gig0/0.199 int1-int15</code>, for example, the command fails.</p> <p>Specify visible to see the real interface ID in the show interface command if you set a mapped name. The default invisible keyword shows only the mapped name.</p>

	Command	Purpose
Step 4	config-url <i>url</i> Example: <pre>hostname(config-ctx)# config-url ftp://user1:passw0rd@10.1.1.1/configlets/t est.cfg</pre>	<p>Identifies the URL from which the system downloads the context configuration. When you add a context URL, the system immediately loads the context so that it is running, if the configuration is available.</p> <p>Note Enter the allocate-interface command(s) before you enter the config-url command. If you enter the config-url command first, the ASA loads the context configuration immediately. If the context contains any commands that refer to (not yet configured) interfaces, those commands fail.</p> <p>The filename does not require a file extension, although we recommend using “.cfg”. The server must be accessible from the admin context. If the configuration file is not available, you see the following message:</p> <pre>WARNING: Could not fetch the URL disk:/url INFO: Creating context with default config</pre> <p>For non-HTTP(S) URL locations, after you specify the URL, you can then change to the context, configure it at the CLI, and enter the write memory command to write the file to the URL location. (HTTP(S) is read only).</p> <p>Note The admin context file must be stored on the internal flash memory.</p> <p>Available URL types include: disknumber (for flash memory), ftp, http, https, or tftp.</p> <p>To change the URL, reenter the config-url command with a new URL. See the “Changing the Security Context URL” section on page 6-25 for more information about changing the URL.</p>
Step 5	(Optional) member <i>class_name</i> Example: <pre>hostname(config-ctx)# member gold</pre>	<p>Assigns the context to a resource class. If you do not specify a class, the context belongs to the default class. You can only assign a context to one resource class.</p>
Step 6	(Optional) join-failover-group {1 2} Example: <pre>hostname(config-ctx)# join-failover-group 2</pre>	<p>Assigns a context to a failover group in Active/Active failover. By default, contexts are in group 1. The admin context must always be in group 1.</p> <p>See the “Configuring the Primary Failover Unit” section on page 51-8 for detailed information about failover groups.</p>
Step 7	(Optional) allocate-ips <i>sensor_name</i> [<i>mapped_name</i>] [default] Example: <pre>hostname(config-ctx)# allocate-ips sensor1 highsec</pre>	<p>Assigns an IPS virtual sensor to this context if you have the AIP SSM installed.</p> <p>See the “Assigning Virtual Sensors to a Security Context (ASA 5510 and Higher)” section on page 62-15 for detailed information about virtual sensors.</p>

Examples

The following example sets the admin context to be “administrator,” creates a context called “administrator” on the internal flash memory, and then adds two contexts from an FTP server:

```
hostname(config)# admin-context administrator
hostname(config)# context administrator
hostname(config-ctx)# allocate-interface gigabitethernet0/0.1
hostname(config-ctx)# allocate-interface gigabitethernet0/1.1
hostname(config-ctx)# config-url flash:/admin.cfg

hostname(config-ctx)# context test
hostname(config-ctx)# allocate-interface gigabitethernet0/0.100 int1
hostname(config-ctx)# allocate-interface gigabitethernet0/0.102 int2
hostname(config-ctx)# allocate-interface gigabitethernet0/0.110-gigabitethernet0/0.115
int3-int8
hostname(config-ctx)# config-url ftp://user1:passwd@10.1.1.1/configlets/test.cfg
hostname(config-ctx)# member gold

hostname(config-ctx)# context sample
hostname(config-ctx)# allocate-interface gigabitethernet0/1.200 int1
hostname(config-ctx)# allocate-interface gigabitethernet0/1.212 int2
hostname(config-ctx)# allocate-interface gigabitethernet0/1.230-gigabitethernet0/1.235
int3-int8
hostname(config-ctx)# config-url ftp://user1:passwd@10.1.1.1/configlets/sample.cfg
hostname(config-ctx)# member silver
```

Automatically Assigning MAC Addresses to Context Interfaces

This section describes how to configure auto-generation of MAC addresses.

The MAC address is used to classify packets within a context. See the [“Information About MAC Addresses” section on page 6-11](#) for more information, especially if you are upgrading from an earlier ASA version. See also the [“Viewing Assigned MAC Addresses” section on page 6-35](#).

Guidelines

- When you configure a **nameif** command for the interface in a context, the new MAC address is generated immediately. If you enable this feature after you configure context interfaces, then MAC addresses are generated for all interfaces immediately after you enable it. If you disable this feature, the MAC address for each interface reverts to the default MAC address. For example, subinterfaces of GigabitEthernet 0/1 revert to using the MAC address of GigabitEthernet 0/1.
- In the rare circumstance that the generated MAC address conflicts with another private MAC address in your network, you can manually set the MAC address for the interface within the context. See the [“Configuring the MAC Address and MTU” section on page 8-9](#) to manually set the MAC address.

Detailed Steps

Command	Purpose
<code>mac-address auto [prefix prefix]</code>	Automatically assign private MAC addresses to each context interface.
Example: <code>hostname(config)# mac-address auto prefix 19</code>	The <i>prefix</i> is a decimal value between 0 and 65535. This prefix is converted to a 4-digit hexadecimal number, and used as part of the MAC address. The prefix ensures that each ASA uses unique MAC addresses, so you can have multiple ASAs on a network segment, for example. See the “ MAC Address Format ” section for more information about how the prefix is used.

Changing Between Contexts and the System Execution Space

If you log in to the system execution space (or the admin context using Telnet or SSH), you can change between contexts and perform configuration and monitoring tasks within each context. The running configuration that you edit in a configuration mode, or that is used in the **copy** or **write** commands, depends on your location. When you are in the system execution space, the running configuration consists only of the system configuration; when you are in a context, the running configuration consists only of that context. For example, you cannot view all running configurations (system plus all contexts) by entering the **show running-config** command. Only the current configuration displays.

To change between the system execution space and a context, or between contexts, see the following commands:

Command	Purpose
<code>changeto context name</code>	Changes to a context. The prompt changes to the following: <code>hostname/name#</code>
<code>changeto system</code>	Changes to the system execution space. The prompt changes to the following: <code>hostname#</code>

Managing Security Contexts

This section describes how to manage security contexts and includes the following topics:

- [Removing a Security Context, page 6-24](#)
- [Changing the Admin Context, page 6-24](#)
- [Changing the Security Context URL, page 6-25](#)
- [Reloading a Security Context, page 6-26](#)

Removing a Security Context

You can only remove a context by editing the system configuration. You cannot remove the current admin context, unless you remove all contexts using the **clear context** command.

**Note**

If you use failover, there is a delay between when you remove the context on the active unit and when the context is removed on the standby unit. You might see an error message indicating that the number of interfaces on the active and standby units are not consistent; this error is temporary and can be ignored.

Prerequisites

Perform this procedure in the system execution space.

Detailed Steps

Command	Purpose
<code>no context name</code>	Removes a single context. All context commands are also removed.
<code>clear context</code>	Removes all contexts (including the admin context).

Changing the Admin Context

The system configuration does not include any network interfaces or network settings for itself; rather, when the system needs to access network resources (such as downloading the contexts from the server), it uses one of the contexts that is designated as the admin context.

The admin context is just like any other context, except that when a user logs in to the admin context, then that user has system administrator rights and can access the system and all other contexts. The admin context is not restricted in any way, and can be used as a regular context. However, because logging into the admin context grants you administrator privileges over all contexts, you might need to restrict access to the admin context to appropriate users.

Guidelines

You can set any context to be the admin context, as long as the configuration file is stored in the internal flash memory.

Prerequisites

Perform this procedure in the system execution space.

Detailed Steps

Command	Purpose
<code>admin-context context_name</code>	Sets the admin context. Any remote management sessions, such as Telnet, SSH, or HTTPS, that are connected to the admin context are terminated. You must reconnect to the new admin context.
Example: <code>hostname(config)# admin-context administrator</code>	Note A few system commands, including ntp server , identify an interface name that belongs to the admin context. If you change the admin context, and that interface name does not exist in the new admin context, be sure to update any system commands that refer to the interface.

Changing the Security Context URL

This section describes how to change the context URL.

Guidelines

- You cannot change the security context URL without reloading the configuration from the new URL. The ASA merges the new configuration with the current running configuration.
- Reentering the same URL also merges the saved configuration with the running configuration.

A merge adds any new commands from the new configuration to the running configuration.

- If the configurations are the same, no changes occur.
- If commands conflict or if commands affect the running of the context, then the effect of the merge depends on the command. You might get errors, or you might have unexpected results. If the running configuration is blank (for example, if the server was unavailable and the configuration was never downloaded), then the new configuration is used.

If you do not want to merge the configurations, you can clear the running configuration, which disrupts any communications through the context, and then reload the configuration from the new URL.

Prerequisites

Perform this procedure in the system execution space.

Detailed Steps

	Command	Purpose
Step 1	(Optional, if you do not want to perform a merge) <code>changeto context name</code> <code>clear configure all</code> Example: <code>hostname(config)# changeto context ctx1</code> <code>hostname/ctx1(config)# clear configure all</code>	Changes to the context and clears its configuration. If you want to perform a merge, skip to Step 2.
Step 2	<code>changeto system</code> Example: <code>hostname/ctx1(config)# changeto system</code> <code>hostname(config)#</code>	Changes to the system execution space.
Step 3	<code>context name</code> Example: <code>hostname(config)# context ctx1</code>	Enters the context configuration mode for the context you want to change.
Step 4	<code>config-url new_url</code> Example: <code>hostname(config)# config-url</code> <code>ftp://user1:passw0rd@10.1.1.1/configlets/c</code> <code>tx1.cfg</code>	Enters the new URL. The system immediately loads the context so that it is running.

Reloading a Security Context

You can reload the context in two ways:

- Clear the running configuration and then import the startup configuration.
This action clears most attributes associated with the context, such as connections and NAT tables.
- Remove the context from the system configuration.
This action clears additional attributes, such as memory allocation, which might be useful for troubleshooting. However, to add the context back to the system requires you to respecify the URL and interfaces.

This section includes the following topics:

- [Reloading by Clearing the Configuration, page 6-26](#)
- [Reloading by Removing and Re-adding the Context, page 6-27](#)

Reloading by Clearing the Configuration

To reload the context by clearing the context configuration, and reloading the configuration from the URL, perform the following steps.

Detailed Steps

	Command	Purpose
Step 1	changeto context <i>name</i> Example: hostname(config)# changeto context ctx1 hostname/ctx1(config)#	Changes to the context that you want to reload.
Step 2	clear configure all Example: hostname/ctx1(config)# clear configure all	Clears the running configuration. This command clears all connections.
Step 3	copy startup-config running-config Example: hostname/ctx1(config)# copy startup-config running-config	Reloads the configuration. The ASA copies the configuration from the URL specified in the system configuration. You cannot change the URL from within a context.

Reloading by Removing and Re-adding the Context

To reload the context by removing the context and then re-adding it, perform the steps in the following sections:

1. [“Removing a Security Context” section on page 6-24](#)
2. [“Configuring a Security Context” section on page 6-18](#)

Monitoring Security Contexts

This section describes how to view and monitor context information and includes the following topics:

- [Viewing Context Information, page 6-27](#)
- [Viewing Context Information, page 6-27](#)
- [Viewing Resource Allocation, page 6-29](#)
- [Viewing Resource Usage, page 6-32](#)
- [Monitoring SYN Attacks in Contexts, page 6-33](#)
- [Viewing Assigned MAC Addresses, page 6-35](#)

Viewing Context Information

From the system execution space, you can view a list of contexts including the name, allocated interfaces, and configuration file URL.

From the system execution space, view all contexts by entering the following command:

Command	Purpose
<code>show context [name detail count]</code>	Shows all contexts. The detail option shows additional information. See the following sample outputs below for more information. If you want to show information for a particular context, specify the <i>name</i> . The count option shows the total number of contexts.

The following is sample output from the **show context** command. The following sample output shows three contexts:

```
hostname# show context

Context Name      Interfaces                                URL
*admin            GigabitEthernet0/1.100                  disk0:/admin.cfg
                  GigabitEthernet0/1.101
contexta          GigabitEthernet0/1.200                  disk0:/contexta.cfg
                  GigabitEthernet0/1.201
contextb          GigabitEthernet0/1.300                  disk0:/contextb.cfg
                  GigabitEthernet0/1.301
Total active Security Contexts: 3
```

Table 6-2 shows each field description.

Table 6-2 *show context Fields*

Field	Description
Context Name	Lists all context names. The context name with the asterisk (*) is the admin context.
Interfaces	The interfaces assigned to the context.
URL	The URL from which the ASA loads the context configuration.

The following is sample output from the **show context detail** command:

```
hostname# show context detail

Context "admin", has been created, but initial ACL rules not complete
  Config URL: disk0:/admin.cfg
  Real Interfaces: Management0/0
  Mapped Interfaces: Management0/0
  Flags: 0x00000013, ID: 1

Context "ctx", has been created, but initial ACL rules not complete
  Config URL: ctx.cfg
  Real Interfaces: GigabitEthernet0/0.10, GigabitEthernet0/1.20,
                  GigabitEthernet0/2.30
  Mapped Interfaces: int1, int2, int3
  Flags: 0x00000011, ID: 2

Context "system", is a system resource
  Config URL: startup-config
  Real Interfaces:
  Mapped Interfaces: Control0/0, GigabitEthernet0/0,
                  GigabitEthernet0/0.10, GigabitEthernet0/1, GigabitEthernet0/1.10,
```

```
GigabitEthernet0/1.20, GigabitEthernet0/2, GigabitEthernet0/2.30,
GigabitEthernet0/3, Management0/0, Management0/0.1
Flags: 0x00000019, ID: 257
```

```
Context "null", is a system resource
Config URL: ... null ...
Real Interfaces:
Mapped Interfaces:
Flags: 0x00000009, ID: 258
```

See the command reference for more information about the **detail** output.

The following is sample output from the **show context count** command:

```
hostname# show context count
Total active contexts: 2
```

Viewing Resource Allocation

From the system execution space, you can view the allocation for each resource across all classes and class members.

To view the resource allocation, enter the following command:

Command	Purpose
<code>show resource allocation [detail]</code>	Shows the resource allocation. This command shows the resource allocation, but does not show the actual resources being used. See the “Viewing Resource Usage” section on page 6-32 for more information about actual resource usage. The detail argument shows additional information. See the following sample outputs for more information.

The following sample output shows the total allocation of each resource as an absolute value and as a percentage of the available system resources:

```
hostname# show resource allocation
Resource              Total          % of Avail
Conns [rate]          35000          N/A
Inspects [rate]       35000          N/A
Syslogs [rate]        10500          N/A
Conns                  305000         30.50%
Hosts                  78842          N/A
SSH                    35             35.00%
Telnet                 35             35.00%
Xlates                 91749          N/A
All                    unlimited
```

Table 6-3 shows each field description.

Table 6-3 *show resource allocation Fields*

Field	Description
Resource	The name of the resource that you can limit.
Total	The total amount of the resource that is allocated across all contexts. The amount is an absolute number of concurrent instances or instances per second. If you specified a percentage in the class definition, the ASA converts the percentage to an absolute number for this display.
% of Avail	The percentage of the total system resources that is allocated across all contexts, if the resource has a hard system limit. If a resource does not have a system limit, this column shows N/A.

The following is sample output from the **show resource allocation detail** command:

```
hostname# show resource allocation detail
Resource Origin:
  A   Value was derived from the resource 'all'
  C   Value set in the definition of this class
  D   Value set in default class
Resource      Class      Mmbrs  Origin      Limit      Total      Total %
Conns [rate]  default    all    CA   unlimited
              gold      1      C     34000      34000      N/A
              silver    1      CA    17000      17000      N/A
              bronze    0      CA     8500
              All Contexts: 3
              51000      N/A

Inspects [rate] default    all    CA   unlimited
              gold      1      DA   unlimited
              silver    1      CA    10000      10000      N/A
              bronze    0      CA     5000
              All Contexts: 3
              10000      N/A

Syslogs [rate] default    all    CA   unlimited
              gold      1      C     6000        6000      N/A
              silver    1      CA     3000        3000      N/A
              bronze    0      CA     1500
              All Contexts: 3
              9000      N/A

Conns         default    all    CA   unlimited
              gold      1      C    200000      200000      20.00%
              silver    1      CA    100000      100000      10.00%
              bronze    0      CA     50000
              All Contexts: 3
              300000      30.00%

Hosts         default    all    CA   unlimited
              gold      1      DA   unlimited
              silver    1      CA    26214      26214      N/A
              bronze    0      CA    13107
              All Contexts: 3
              26214      N/A

SSH          default    all    C     5
              gold      1      D     5           5           5.00%
              silver    1      CA    10          10          10.00%
              bronze    0      CA     5
              All Contexts: 3
              20           20.00%

Telnet       default    all    C     5
```

	gold	1	D	5	5	5.00%
	silver	1	CA	10	10	10.00%
	bronze	0	CA	5		
	All Contexts:	3			20	20.00%
Xlates	default	all	CA	unlimited		
	gold	1	DA	unlimited		
	silver	1	CA	23040	23040	N/A
	bronze	0	CA	11520		
	All Contexts:	3			23040	N/A
mac-addresses	default	all	C	65535		
	gold	1	D	65535	65535	100.00%
	silver	1	CA	6553	6553	9.99%
	bronze	0	CA	3276		
	All Contexts:	3			137623	209.99%

Table 6-4 shows each field description.

Table 6-4 *show resource allocation detail Fields*

Field	Description
Resource	The name of the resource that you can limit.
Class	The name of each class, including the default class. The All contexts field shows the total values across all classes.
Mmbrs	The number of contexts assigned to each class.
Origin	The origin of the resource limit, as follows: <ul style="list-style-type: none"> A—You set this limit with the all option, instead of as an individual resource. C—This limit is derived from the member class. D—This limit was not defined in the member class, but was derived from the default class. For a context assigned to the default class, the value will be “C” instead of “D.” The ASA can combine “A” with “C” or “D.”
Limit	The limit of the resource per context, as an absolute number. If you specified a percentage in the class definition, the ASA converts the percentage to an absolute number for this display.
Total	The total amount of the resource that is allocated across all contexts in the class. The amount is an absolute number of concurrent instances or instances per second. If the resource is unlimited, this display is blank.
% of Avail	The percentage of the total system resources that is allocated across all contexts in the class. If the resource is unlimited, this display is blank. If the resource does not have a system limit, then this column shows N/A.

Viewing Resource Usage

From the system execution space, you can view the resource usage for each context and display the system resource usage.

From the system execution space, view the resource usage for each context by entering the following command:

Command	Purpose
<pre>show resource usage [context context_name top n all summary system] [resource {resource_name all} detail] [counter counter_name [count_threshold]]</pre>	<p>By default, all context usage is displayed; each context is listed separately.</p> <p>Enter the top n keyword to show the contexts that are the top <i>n</i> users of the specified resource. You must specify a single resource type, and not resource all, with this option.</p> <p>The summary option shows all context usage combined.</p> <p>The system option shows all context usage combined, but shows the system limits for resources instead of the combined context limits.</p> <p>For the resource resource_name, see Table 6-1 for available resource names. See also the show resource type command. Specify all (the default) for all types.</p> <p>The detail option shows the resource usage of all resources, including those you cannot manage. For example, you can view the number of TCP intercepts.</p> <p>The counter counter_name is one of the following keywords:</p> <ul style="list-style-type: none"> • current—Shows the active concurrent instances or the current rate of the resource. • denied—Shows the number of instances that were denied because they exceeded the resource limit shown in the Limit column. • peak—Shows the peak concurrent instances, or the peak rate of the resource since the statistics were last cleared, either using the clear resource usage command or because the device rebooted. • all—(Default) Shows all statistics. <p>The <i>count_threshold</i> sets the number above which resources are shown. The default is 1. If the usage of the resource is below the number you set, then the resource is not shown. If you specify all for the counter name, then the <i>count_threshold</i> applies to the current usage.</p> <p>Note To show all resources, set the <i>count_threshold</i> to 0.</p>

The following is sample output from the **show resource usage context** command, which shows the resource usage for the admin context:

```
hostname# show resource usage context admin
```

Resource	Current	Peak	Limit	Denied	Context
Telnet	1	1	5	0	admin
Conns	44	55	N/A	0	admin
Hosts	45	56	N/A	0	admin

The following is sample output from the **show resource usage summary** command, which shows the resource usage for all contexts and all resources. This sample shows the limits for 6 contexts.

```
hostname# show resource usage summary
```

Resource	Current	Peak	Limit	Denied	Context
Syslogs [rate]	1743	2132	N/A	0	Summary
Conns	584	763	280000 (S)	0	Summary
Xlates	8526	8966	N/A	0	Summary
Hosts	254	254	N/A	0	Summary
Conns [rate]	270	535	N/A	1704	Summary
Inspects [rate]	270	535	N/A	0	Summary

S = System: Combined context limits exceed the system limit; the system limit is shown.

The following is sample output from the **show resource usage summary** command, which shows the limits for 25 contexts. Because the context limit for Telnet and SSH connections is 5 per context, then the combined limit is 125. The system limit is only 100, so the system limit is shown.

```
hostname# show resource usage summary
```

Resource	Current	Peak	Limit	Denied	Context
Telnet	1	1	100 [S]	0	Summary
SSH	2	2	100 [S]	0	Summary
Conns	56	90	130000	0	Summary
Hosts	89	102	N/A	0	Summary

S = System: Combined context limits exceed the system limit; the system limit is shown.

The following is sample output from the **show resource usage system** command, which shows the resource usage for all contexts, but it shows the system limit instead of the combined context limits. The **counter all 0** option is used to show resources that are not currently in use. The Denied statistics indicate how many times the resource was denied due to the system limit, if available.

```
hostname# show resource usage system counter all 0
```

Resource	Current	Peak	Limit	Denied	Context
Telnet	0	0	100	0	System
SSH	0	0	100	0	System
ASDM	0	0	32	0	System
Syslogs [rate]	1	18	N/A	0	System
Conns	0	1	280000	0	System
Xlates	0	0	N/A	0	System
Hosts	0	2	N/A	0	System
Conns [rate]	1	1	N/A	0	System
Inspects [rate]	0	0	N/A	0	System

Monitoring SYN Attacks in Contexts

The ASA prevents SYN attacks using TCP Intercept. TCP Intercept uses the SYN cookies algorithm to prevent TCP SYN-flooding attacks. A SYN-flooding attack consists of a series of SYN packets usually originating from spoofed IP addresses. The constant flood of SYN packets keeps the server SYN queue full, which prevents it from servicing connection requests. When the embryonic connection threshold of a connection is crossed, the ASA acts as a proxy for the server and generates a SYN-ACK response to the client SYN request. When the ASA receives an ACK back from the client, it can then authenticate the client and allow the connection to the server.

Monitor SYN attacks using the following commands:

Command	Purpose
show perfmon	Monitors the rate of attacks for individual contexts.
show resource usage detail	Monitors the amount of resources being used by TCP intercept for individual contexts.
show resource usage summary detail	Monitors the resources being used by TCP intercept for the entire system.

The following is sample output from the **show perfmon** command that shows the rate of TCP intercepts for a context called admin.

```
hostname/admin# show perfmon

Context:admin
PERFMON STATS:   Current      Average
Xlates           0/s          0/s
Connections      0/s          0/s
TCP Conns        0/s          0/s
UDP Conns        0/s          0/s
URL Access       0/s          0/s
URL Server Req   0/s          0/s
WebSns Req       0/s          0/s
TCP Fixup        0/s          0/s
HTTP Fixup       0/s          0/s
FTP Fixup        0/s          0/s
AAA Authen       0/s          0/s
AAA Author       0/s          0/s
AAA Account      0/s          0/s
TCP Intercept    322779/s     322779/s
```

The following is sample output from the **show resource usage detail** command that shows the amount of resources being used by TCP Intercept for individual contexts. (Sample text in *italics* shows the TCP intercept information.)

```
hostname(config)# show resource usage detail

Resource          Current      Peak      Limit      Denied Context
memory            843732     847288   unlimited   0 admin
chunk:channels    14         15       unlimited   0 admin
chunk:fixup       15         15       unlimited   0 admin
chunk:hole        1          1         unlimited   0 admin
chunk:ip-users    10         10       unlimited   0 admin
chunk:list-elem   21         21       unlimited   0 admin
chunk:list-hdr    3          4         unlimited   0 admin
chunk:route       2          2         unlimited   0 admin
chunk:static      1          1         unlimited   0 admin
tcp-intercepts    328787     803610   unlimited   0 admin
np-statics        3          3         unlimited   0 admin
statics           1          1         unlimited   0 admin
ace-rules         1          1         unlimited   0 admin
console-access-rul 2          2         unlimited   0 admin
fixup-rules       14         15       unlimited   0 admin
memory            959872     960000   unlimited   0 c1
chunk:channels    15         16       unlimited   0 c1
chunk:dbgtrace    1          1         unlimited   0 c1
chunk:fixup       15         15       unlimited   0 c1
chunk:global      1          1         unlimited   0 c1
chunk:hole        2          2         unlimited   0 c1
chunk:ip-users    10         10       unlimited   0 c1
chunk:udp-ctrl-blk 1          1         unlimited   0 c1
chunk:list-elem   24         24       unlimited   0 c1
chunk:list-hdr    5          6         unlimited   0 c1
```

```

chunk:nat                1          1 unlimited      0 c1
chunk:route              2          2 unlimited      0 c1
chunk:static             1          1 unlimited      0 c1
tcp-intercept-rate      16056      16254 unlimited      0 c1
globals                 1          1 unlimited      0 c1
np-statics              3          3 unlimited      0 c1
statics                 1          1 unlimited      0 c1
nats                    1          1 unlimited      0 c1
ace-rules               2          2 unlimited      0 c1
console-access-rul      2          2 unlimited      0 c1
fixup-rules             14         15 unlimited      0 c1
memory                  232695716 232020648 unlimited      0 system
chunk:channels          17         20 unlimited      0 system
chunk:dbgtrace          3          3 unlimited      0 system
chunk:fixup             15         15 unlimited      0 system
chunk:ip-users           4          4 unlimited      0 system
chunk:list-elem         1014       1014 unlimited      0 system
chunk:list-hdr           1          1 unlimited      0 system
chunk:route              1          1 unlimited      0 system
block:16384             510        885 unlimited      0 system
block:2048              32         34 unlimited      0 system

```

The following sample output shows the resources being used by TCP intercept for the entire system. (Sample text in *italics* shows the TCP intercept information.)

```

hostname(config)# show resource usage summary detail
Resource          Current      Peak      Limit      Denied Context
memory            238421312 238434336 unlimited      0 Summary
chunk:channels    46         48 unlimited      0 Summary
chunk:dbgtrace    4          4 unlimited      0 Summary
chunk:fixup       45         45 unlimited      0 Summary
chunk:global      1          1 unlimited      0 Summary
chunk:hole        3          3 unlimited      0 Summary
chunk:ip-users    24         24 unlimited      0 Summary
chunk:udp-ctrl-blk 1          1 unlimited      0 Summary
chunk:list-elem   1059       1059 unlimited      0 Summary
chunk:list-hdr    10         11 unlimited      0 Summary
chunk:nat         1          1 unlimited      0 Summary
chunk:route       5          5 unlimited      0 Summary
chunk:static      2          2 unlimited      0 Summary
block:16384       510        885 unlimited      0 Summary
block:2048        32         35 unlimited      0 Summary
tcp-intercept-rate 341306     811579 unlimited      0 Summary
globals           1          1 unlimited      0 Summary
np-statics        6          6 unlimited      0 Summary
statics           2          2          N/A      0 Summary
nats              1          1          N/A      0 Summary
ace-rules         3          3          N/A      0 Summary
console-access-rul 4          4          N/A      0 Summary
fixup-rules       43         44          N/A      0 Summary

```

Viewing Assigned MAC Addresses

You can view auto-generated MAC addresses within the system configuration or within the context. This section includes the following topics:

- [Viewing MAC Addresses in the System Configuration, page 6-36](#)
- [Viewing MAC Addresses Within a Context, page 6-37](#)

Viewing MAC Addresses in the System Configuration

This section describes how to view MAC addresses in the system configuration.

Guidelines

If you manually assign a MAC address to an interface, but also have auto-generation enabled, the auto-generated address continues to show in the configuration even though the manual MAC address is the one that is in use. If you later remove the manual MAC address, the auto-generated one shown will be used.

Detailed Steps

Command	Purpose
<code>show running-config all context [name]</code>	Shows the assigned MAC addresses from the system execution space. The all option is required to view the assigned MAC addresses. Although this command is user-configurable in global configuration mode only, the mac-address auto command appears as a read-only entry in the configuration for each context along with the assigned MAC address. Only allocated interfaces that are configured with a nameif command within the context have a MAC address assigned.

Examples

The following output from the **show running-config all context admin** command shows the primary and standby MAC address assigned to the Management0/0 interface:

```
hostname# show running-config all context admin

context admin
  allocate-interface Management0/0
  mac-address auto Management0/0 a24d.0000.1440 a24d.0000.1441
  config-url disk0:/admin.cfg
```

The following output from the **show running-config all context** command shows all the MAC addresses (primary and standby) for all context interfaces. Note that because the GigabitEthernet0/0 and GigabitEthernet0/1 main interfaces are not configured with a **nameif** command inside the contexts, no MAC addresses have been generated for them.

```
hostname# show running-config all context

admin-context admin
context admin
  allocate-interface Management0/0
  mac-address auto Management0/0 a2d2.0400.125a a2d2.0400.125b
  config-url disk0:/admin.cfg
!

context CTX1
  allocate-interface GigabitEthernet0/0
  allocate-interface GigabitEthernet0/0.1-GigabitEthernet0/0.5
  mac-address auto GigabitEthernet0/0.1 a2d2.0400.11bc a2d2.0400.11bd
  mac-address auto GigabitEthernet0/0.2 a2d2.0400.11c0 a2d2.0400.11c1
  mac-address auto GigabitEthernet0/0.3 a2d2.0400.11c4 a2d2.0400.11c5
  mac-address auto GigabitEthernet0/0.4 a2d2.0400.11c8 a2d2.0400.11c9
```

```

mac-address auto GigabitEthernet0/0.5 a2d2.0400.11cc a2d2.0400.11cd
allocate-interface GigabitEthernet0/1
allocate-interface GigabitEthernet0/1.1-GigabitEthernet0/1.3
mac-address auto GigabitEthernet0/1.1 a2d2.0400.120c a2d2.0400.120d
mac-address auto GigabitEthernet0/1.2 a2d2.0400.1210 a2d2.0400.1211
mac-address auto GigabitEthernet0/1.3 a2d2.0400.1214 a2d2.0400.1215
config-url disk0:/CTX1.cfg
!

context CTX2
allocate-interface GigabitEthernet0/0
allocate-interface GigabitEthernet0/0.1-GigabitEthernet0/0.5
mac-address auto GigabitEthernet0/0.1 a2d2.0400.11ba a2d2.0400.11bb
mac-address auto GigabitEthernet0/0.2 a2d2.0400.11be a2d2.0400.11bf
mac-address auto GigabitEthernet0/0.3 a2d2.0400.11c2 a2d2.0400.11c3
mac-address auto GigabitEthernet0/0.4 a2d2.0400.11c6 a2d2.0400.11c7
mac-address auto GigabitEthernet0/0.5 a2d2.0400.11ca a2d2.0400.11cb
allocate-interface GigabitEthernet0/1
allocate-interface GigabitEthernet0/1.1-GigabitEthernet0/1.3
mac-address auto GigabitEthernet0/1.1 a2d2.0400.120a a2d2.0400.120b
mac-address auto GigabitEthernet0/1.2 a2d2.0400.120e a2d2.0400.120f
mac-address auto GigabitEthernet0/1.3 a2d2.0400.1212 a2d2.0400.1213
config-url disk0:/CTX2.cfg
!

```

Viewing MAC Addresses Within a Context

This section describes how to view MAC addresses within a context.

Detailed Steps

Command	Purpose
<code>show interface include (Interface) (MAC)</code>	Shows the MAC address in use by each interface within the context.

Examples

For example:

```

hostname/context# show interface | include (Interface) | (MAC)

Interface GigabitEthernet1/1.1 "g1/1.1", is down, line protocol is down
      MAC address a201.0101.0600, MTU 1500
Interface GigabitEthernet1/1.2 "g1/1.2", is down, line protocol is down
      MAC address a201.0102.0600, MTU 1500
Interface GigabitEthernet1/1.3 "g1/1.3", is down, line protocol is down
      MAC address a201.0103.0600, MTU 1500
...

```



Note

The **show interface** command shows the MAC address in use; if you manually assign a MAC address and also have auto-generation enabled, then you can only view the unused auto-generated address from within the system configuration.

Configuration Examples for Multiple Context Mode

The following example:

- Automatically sets the MAC addresses in contexts.
- Sets the default class limit for conns to 10 percent instead of unlimited.
- Creates a gold resource class.
- Sets the admin context to be “administrator.”
- Creates a context called “administrator” on the internal flash memory to be part of the default resource class.
- Adds two contexts from an FTP server as part of the gold resource class.

```
hostname(config)# mac-address auto prefix 19
```

```
hostname(config)# class default
```

```
hostname(config-class)# limit-resource conns 10%
```

```
hostname(config)# class gold
```

```
hostname(config-class)# limit-resource mac-addresses 10000
```

```
hostname(config-class)# limit-resource conns 15%
```

```
hostname(config-class)# limit-resource rate conns 1000
```

```
hostname(config-class)# limit-resource rate inspects 500
```

```
hostname(config-class)# limit-resource hosts 9000
```

```
hostname(config-class)# limit-resource asdm 5
```

```
hostname(config-class)# limit-resource ssh 5
```

```
hostname(config-class)# limit-resource rate syslogs 5000
```

```
hostname(config-class)# limit-resource telnet 5
```

```
hostname(config-class)# limit-resource xlates 36000
```

```
hostname(config)# admin-context administrator
```

```
hostname(config)# context administrator
```

```
hostname(config-ctx)# allocate-interface gigabitethernet0/0.1
```

```
hostname(config-ctx)# allocate-interface gigabitethernet0/1.1
```

```
hostname(config-ctx)# config-url flash:/admin.cfg
```

```
hostname(config-ctx)# context test
```

```
hostname(config-ctx)# allocate-interface gigabitethernet0/0.100 int1
```

```
hostname(config-ctx)# allocate-interface gigabitethernet0/0.102 int2
```

```
hostname(config-ctx)# allocate-interface gigabitethernet0/0.110-gigabitethernet0/0.115  
int3-int8
```

```
hostname(config-ctx)# config-url ftp://user1:passwd@10.1.1.1/configlets/test.cfg
```

```
hostname(config-ctx)# member gold
```

```
hostname(config-ctx)# context sample
```

```
hostname(config-ctx)# allocate-interface gigabitethernet0/1.200 int1
```

```
hostname(config-ctx)# allocate-interface gigabitethernet0/1.212 int2
```

```
hostname(config-ctx)# allocate-interface gigabitethernet0/1.230-gigabitethernet0/1.235  
int3-int8
```

```
hostname(config-ctx)# config-url ftp://user1:passwd@10.1.1.1/configlets/sample.cfg
```

```
hostname(config-ctx)# member gold
```

Feature History for Multiple Context Mode

Table 6-5 lists each feature change and the platform release in which it was implemented.

Table 6-5 *Feature History for Multiple Context Mode*

Feature Name	Platform Releases	Feature Information
Multiple security contexts	7.0(1)	Multiple context mode was introduced. We introduced the following commands: context , mode , and class .
Automatic MAC address assignment	7.2(1)	Automatic assignment of MAC address to context interfaces was introduced. We introduced the following command: mac-address auto .
Resource management	7.2(1)	Resource management was introduced. We introduced the following commands: class , limit-resource , and member .
Virtual sensors for IPS	8.0(2)	The AIP SSM running IPS software Version 6.0 and above can run multiple virtual sensors, which means you can configure multiple security policies on the AIP SSM. You can assign each context or single mode ASA to one or more virtual sensors, or you can assign multiple security contexts to the same virtual sensor. We introduced the following command: allocate-ips .
Automatic MAC address assignment enhancements	8.0(5)/8.2(2)	The MAC address format was changed to use a prefix, to use a fixed starting value (A2), and to use a different scheme for the primary and secondary unit MAC addresses in a failover pair. The MAC addresses are also now persistent across reloads. The command parser now checks if auto-generation is enabled; if you want to also manually assign a MAC address, you cannot start the manual MAC address with A2. We modified the following command: mac-address auto prefix .

Table 6-5 Feature History for Multiple Context Mode (continued)

Feature Name	Platform Releases	Feature Information
Maximum contexts increased for the ASA 5550 and 5580	8.4(1)	The maximum security contexts for the ASA 5550 was increased from 50 to 100. The maximum for the ASA 5580 was increased from 50 to 250.
Automatic generation of a MAC address prefix for the mac-address auto command	8.6(1)	<p>In multiple context mode, the ASA now converts the automatic MAC address generation configuration to use a default prefix. The ASA auto-generates the prefix based on the last two bytes of the interface MAC address. This conversion happens automatically when you reload, or if you reenables MAC address generation. The prefix method of generation provides many benefits, including a better guarantee of unique MAC addresses on a segment. You can view the auto-generated prefix by entering the show running-config mac-address command. If you want to change the prefix, you can reconfigure the feature with a custom prefix. The legacy method of MAC address generation is no longer available.</p> <p>Note To maintain hitless upgrade for failover pairs, the ASA does <i>not</i> convert the MAC address method in an existing configuration upon a reload if failover is enabled. However, we strongly recommend that you manually change to the prefix method of generation when using failover. After upgrading, to use the prefix method of MAC address generation, reenables MAC address generation to use the default prefix.</p> <p>We modified the following command: mac-address auto.</p>