



ASA Cluster for the ASA Virtual in a Public Cloud

Clustering lets you group multiple ASA Virtuals together as a single logical device. A cluster provides all the convenience of a single device (management, integration into a network) while achieving the increased throughput and redundancy of multiple devices. You can deploy ASA Virtual clusters in a public cloud using the following:

- Amazon Web Services (AWS)
- Microsoft Azure

Currently, only routed firewall mode is supported.



Note Some features are not supported when using clustering. See [Unsupported Features with Clustering, on page 89](#).

- [About ASA Virtual Clustering in the Public Cloud, on page 1](#)
- [Licenses for ASA Virtual Clustering, on page 6](#)
- [Requirements and Prerequisites for ASA Virtual Clustering, on page 6](#)
- [Guidelines for ASA Virtual Clustering, on page 7](#)
- [Deploy the Cluster in AWS, on page 8](#)
- [Deploy the Cluster in Azure, on page 28](#)
- [ASA Virtual Clustering Autoscale Solution on Azure, on page 40](#)
- [ASA Virtual Clustering with Autoscale Solution in GCP, on page 59](#)
- [Customize the Clustering Operation, on page 69](#)
- [Manage Cluster Nodes, on page 74](#)
- [Monitoring the Cluster, on page 78](#)
- [Reference for Clustering, on page 89](#)
- [History for ASA Virtual Clustering in the Public Cloud, on page 103](#)

About ASA Virtual Clustering in the Public Cloud

This section describes the clustering architecture and how it works.

How the Cluster Fits into Your Network

The cluster consists of multiple firewalls acting as a single device. To act as a cluster, the firewalls need the following infrastructure:

- Isolated network for intra-cluster communication, known as the *cluster control link*, using VXLAN interfaces. VXLANs, which act as Layer 2 virtual networks over Layer 3 physical networks, let the ASA Virtual send broadcast/multicast messages over the cluster control link.
- Load Balancer(s)—For external load balancing, you have the following options:

- AWS Gateway Load Balancer

The AWS Gateway Load Balancer combines a transparent network gateway and a load balancer that distributes traffic and scales virtual appliances on demand. The ASA Virtual supports the Gateway Load Balancer centralized control plane with a distributed data plane (Gateway Load Balancer endpoint) using a Geneve interface single-arm proxy.

- Equal-Cost Multi-Path Routing (ECMP) using inside and outside routers such as Cisco Cloud Services Router

ECMP routing can forward packets over multiple “best paths” that tie for top place in the routing metric. Like EtherChannel, a hash of source and destination IP addresses and/or source and destination ports can be used to send a packet to one of the next hops. If you use static routes for ECMP routing, then the ASA Virtual failure can cause problems; the route continues to be used, and traffic to the failed ASA Virtual will be lost. If you use static routes, be sure to use a static route monitoring feature such as Object Tracking. We recommend using dynamic routing protocols to add and remove routes, in which case, you must configure each ASA Virtual to participate in dynamic routing.



Note Layer 2 Spanned EtherChannels are not supported for load balancing.

Cluster Nodes

Cluster nodes work together to accomplish the sharing of the security policy and traffic flows. This section describes the nature of each node role.

Bootstrap Configuration

On each device, you configure a minimal bootstrap configuration including the cluster name, cluster control link interface, and other cluster settings. The first node on which you enable clustering typically becomes the *control* node. When you enable clustering on subsequent nodes, they join the cluster as *data* nodes.

Control and Data Node Roles

One member of the cluster is the control node. If multiple cluster nodes come online at the same time, the control node is determined by the priority setting in the bootstrap configuration; the priority is set between 1 and 100, where 1 is the highest priority. All other members are data nodes. Typically, when you first create a cluster, the first node you add becomes the control node simply because it is the only node in the cluster so far.

You must perform all configuration (aside from the bootstrap configuration) on the control node only; the configuration is then replicated to the data nodes. In the case of physical assets, such as interfaces, the configuration of the control node is mirrored on all data nodes. For example, if you configure Ethernet 1/2 as the inside interface and Ethernet 1/1 as the outside interface, then these interfaces are also used on the data nodes as inside and outside interfaces.

Some features do not scale in a cluster, and the control node handles all traffic for those features.

Individual Interfaces

You can configure cluster interfaces as *Individual interfaces*.

Individual interfaces are normal routed interfaces, each with their own local IP address. Interface configuration must be configured only on the control node, and each interface uses DHCP.



Note Layer 2 Spanned EtherChannels are not supported.

Cluster Control Link

Each node must dedicate one interface as a VXLAN (VTEP) interface for the cluster control link. For more information about VXLAN, see [VXLAN Interfaces](#).

VXLAN Tunnel Endpoint

VXLAN tunnel endpoint (VTEP) devices perform VXLAN encapsulation and decapsulation. Each VTEP has two interface types: one or more virtual interfaces called VXLAN Network Identifier (VNI) interfaces, and a regular interface called the VTEP source interface that tunnels the VNI interfaces between VTEPs. The VTEP source interface is attached to the transport IP network for VTEP-to-VTEP communication.

VTEP Source Interface

The VTEP source interface is a regular ASA Virtual interface with which you plan to associate the VNI interface. You can configure one VTEP source interface to act as the cluster control link. The source interface is reserved for cluster control link use only. Each VTEP source interface has an IP address on the same subnet. This subnet should be isolated from all other traffic, and should include only the cluster control link interfaces.

VNI Interface

A VNI interface is similar to a VLAN interface: it is a virtual interface that keeps network traffic separated on a given physical interface by using tagging. You can only configure one VNI interface. Each VNI interface has an IP address on the same subnet.

Peer VTEPs

Unlike regular VXLAN for data interfaces, which allows a single VTEP peer, The ASA Virtual clustering allows you to configure multiple peers.

Cluster Control Link Traffic Overview

Cluster control link traffic includes both control and data traffic.

Control traffic includes:

- Control node election.
- Configuration replication.
- Health monitoring.

Data traffic includes:

- State replication.
- Connection ownership queries and data packet forwarding.

Cluster Control Link Failure

If the cluster control link line protocol goes down for a unit, then clustering is disabled; data interfaces are shut down. After you fix the cluster control link, you must manually rejoin the cluster by re-enabling clustering.



Note When the ASA Virtual becomes inactive, all data interfaces are shut down; only the management-only interface can send and receive traffic. The management interface remains up using the IP address the unit received from DHCP or the cluster IP pool. If you use a cluster IP pool, if you reload and the unit is still inactive in the cluster, then the management interface is not accessible (because it then uses the Main IP address, which is the same as the control node). You must use the console port (if available) for any further configuration.

Configuration Replication

All nodes in the cluster share a single configuration. You can only make configuration changes on the control node (with the exception of the bootstrap configuration), and changes are automatically synced to all other nodes in the cluster.

ASA Virtual Cluster Management

One of the benefits of using ASA Virtual clustering is the ease of management. This section describes how to manage the cluster.

Management Network

We recommend connecting all nodes to a single management network. This network is separate from the cluster control link.

Management Interface

Use the Management 0/0 interface for management.



Note You cannot enable dynamic routing for the management interface. You must use a static route.

You can use either static addressing or DHCP for the management IP address.

If you use static addressing, you can use a Main cluster IP address that is a fixed address for the cluster that always belongs to the current control node. For each interface, you also configure a range of addresses so that each node, including the current control node, can use a Local address from the range. The Main cluster IP address provides consistent management access to an address; when a control node changes, the Main cluster IP address moves to the new control node, so management of the cluster continues seamlessly. The Local IP address is used for routing, and is also useful for troubleshooting. For example, you can manage the cluster by connecting to the Main cluster IP address, which is always attached to the current control node. To manage an individual member, you can connect to the Local IP address. For outbound management traffic such as TFTP or syslog, each node, including the control node, uses the Local IP address to connect to the server.

If you use DHCP, you do not use a pool of Local addresses or have a Main cluster IP address.



Note To-the-box traffic needs to be directed to the node's management IP address; to-the-box traffic is not forwarded over the cluster control link to any other node.

Control Node Management Vs. Data Node Management

All management and monitoring can take place on the control node. From the control node, you can check runtime statistics, resource usage, or other monitoring information of all nodes. You can also issue a command to all nodes in the cluster, and replicate the console messages from data nodes to the control node.

You can monitor data nodes directly if desired. Although also available from the control node, you can perform file management on data nodes (including backing up the configuration and updating images). The following functions are not available from the control node:

- Monitoring per-node cluster-specific statistics.
- Syslog monitoring per node (except for syslogs sent to the console when console replication is enabled).
- SNMP
- NetFlow

Crypto Key Replication

When you create a crypto key on the control node, the key is replicated to all data nodes. If you have an SSH session to the Main cluster IP address, you will be disconnected if the control node fails. The new control node uses the same key for SSH connections, so that you do not need to update the cached SSH host key when you reconnect to the new control node.

ASDM Connection Certificate IP Address Mismatch

By default, a self-signed certificate is used for the ASDM connection based on the Local IP address. If you connect to the Main cluster IP address using ASDM, then a warning message about a mismatched IP address might appear because the certificate uses the Local IP address, and not the Main cluster IP address. You can ignore the message and establish the ASDM connection. However, to avoid this type of warning, you can enroll a certificate that contains the Main cluster IP address and all the Local IP addresses from the IP address pool. You can then use this certificate for each cluster member. See <https://www.cisco.com/c/en/us/td/docs/security/asdm/identity-cert/cert-install.html> for more information.

Licenses for ASA Virtual Clustering

Each cluster node requires the same model license. We recommend using the same number of CPUs and memory for all nodes, or else performance will be limited on all nodes to match the least capable member. The throughput level will be replicated from the control node to each data node so they match.



Note If you deregister the ASA Virtual so that it is unlicensed, then it will revert to a severely rate-limited state if you reload the ASA Virtual. An unlicensed, low performing cluster node will impact the performance of the entire cluster negatively. Be sure to keep all cluster nodes licensed, or remove any unlicensed nodes.

Requirements and Prerequisites for ASA Virtual Clustering

Model Requirements

- ASAv30, ASAv50, ASAv100
- The following public cloud services:
 - Amazon Web Services (AWS)
 - Microsoft Azure
- Maximum 16 nodes

See also the general requirements for the ASA virtual in the [ASA Virtual Getting Started Guide](#).

Hardware and Software Requirements

All nodes in a cluster:

- Must be the same performance tier. We recommend using the same number of CPUs and memory for all nodes, or else performance will be limited on all nodes to match the least capable node.
- Must run the identical software except at the time of an image upgrade. Hitless upgrade is supported. Mismatched software versions can lead to poor performance, so be sure to upgrade all nodes in the same maintenance window.
- Single Availability Zone deployment supported.
- Cluster control link interfaces must be in the same subnet, so the cluster should be deployed in the same subnet.

MTU

Make sure the ports connected to the cluster control link have the correct (higher) MTU configured. If there is an MTU mismatch, the cluster formation will fail. When a node joins the cluster, it checks MTU compatibility by sending a ping to the control node with a packet size matching the cluster control link MTU. If the initial ping fails, the node tries a ping using a smaller packet size (the MTU divided by 2, then by 4, then by 8) until

a ping succeeds. A notification is generated so you can fix the MTU mismatch on connecting switches and try again.

The cluster control link MTU should be 154 bytes higher than the data interfaces. Because the cluster control link traffic includes data packet forwarding, the cluster control link needs to accommodate the entire size of a data packet plus cluster traffic overhead (100 bytes) plus VXLAN overhead (54 bytes).

For AWS with GWLB, the data interface uses Geneve encapsulation. In this case, the entire Ethernet datagram is being encapsulated, so the new packet is larger and requires a larger MTU. You should set the source interface MTU to be the network MTU + 306 bytes. So for the standard 1500 MTU network path, the source interface MTU should be 1806, and the cluster control link MTU should be +154, 1960.

For Azure with GWLB, the data interface uses VXLAN encapsulation. In this case, the entire Ethernet datagram is being encapsulated, so the new packet is larger and requires a larger MTU. You should set the source interface MTU to be the network MTU + 54 bytes.

The following table shows the suggested cluster control link MTU and data interface MTU.



Note We do not recommend setting the cluster control link MTU between 2561 and 8362; due to block pool handling, this MTU size is not optimal for system operation.

Table 1: Suggested MTU

Public Cloud	Cluster Control Link MTU	Data Interface MTU
AWS with GWLB	1960	1806
AWS	1654	1500
Azure with GWLB	1554	1454
Azure	1554	1400

Guidelines for ASA Virtual Clustering

High Availability

High Availability is not supported with clustering.

IPv6

The cluster control link is only supported using IPv4.

Additional Guidelines

- When significant topology changes occur (such as adding or removing an EtherChannel interface, enabling or disabling an interface on the ASA virtual or the switch, adding an additional switch to form a redundant switch system) you should disable the health check feature and also disable interface monitoring for the disabled interfaces. When the topology change is complete, and the configuration change is synced to all units, you can re-enable the interface health check feature.

- When adding a node to an existing cluster, or when reloading a node, there will be a temporary, limited packet/connection drop; this is expected behavior. In some cases, the dropped packets can hang your connection; for example, dropping a FIN/ACK packet for an FTP connection will make the FTP client hang. In this case, you need to reestablish the FTP connection.
- For decrypted TLS/SSL connections, the decryption states are not synchronized, and if the connection owner fails, then decrypted connections will be reset. New connections will need to be established to a new node. Connections that are not decrypted (they match a do-not-decrypt rule) are not affected and are replicated correctly.
- Dynamic scaling is not supported.
- Perform a global deployment after the completion of each maintenance window.
- Ensure that you do not remove more than one device at a time from the auto scale group (AWS) or scale set (Azure). We also recommend that you run the **cluster disable** command on the device before removing the device from the auto scale group (AWS) or scale set (Azure).
- If you want to disable data nodes and the control node in a cluster, we recommend that you disable the data nodes before disabling the control node. If a control node is disabled while there are other data nodes in the cluster, one of the data nodes has to be promoted to be the control node. Note that the role change could disturb the cluster.
- In the day 0 configuration scripts given in this guide, you can change the IP addresses as per your requirement, provide custom interface names, and change the sequence of the CCL-Link interface.

Defaults for Clustering

- The cLACP system ID is auto-generated, and the system priority is 1 by default.
- The cluster health check feature is enabled by default with the holdtime of 3 seconds. Interface health monitoring is enabled on all interfaces by default.
- The cluster auto-rejoin feature for a failed cluster control link is unlimited attempts every 5 minutes.
- The cluster auto-rejoin feature for a failed data interface is 3 attempts every 5 minutes, with the increasing interval set to 2.
- Connection replication delay of 5 seconds is enabled by default for HTTP traffic.

Deploy the Cluster in AWS

To deploy a cluster in AWS, you can either manually deploy or use CloudFormation templates to deploy a stack. You can use the cluster with AWS Gateway Load Balancer, or with a non-native load-balancer such as the Cisco Cloud Services Router.


AWS Gateway Load Balancer and Geneve Single-Arm Proxy



Note This use case is the only currently supported use case for Geneve interfaces.

The AWS Gateway Load Balancer combines a transparent network gateway and a load balancer that distributes traffic and scales virtual appliances on demand. The ASA Virtual supports the Gateway Load Balancer centralized control plane with a distributed data plane (Gateway Load Balancer endpoint). The following figure shows traffic forwarded to the Gateway Load Balancer from the Gateway Load Balancer endpoint. The Gateway Load Balancer balances traffic among multiple ASA Virtuals, which inspect the traffic before either dropping it or sending it back to the Gateway Load Balancer (U-turn traffic). The Gateway Load Balancer then sends the traffic back to the Gateway Load Balancer endpoint and to the destination.

Figure 1: Geneve Single-Arm Proxy

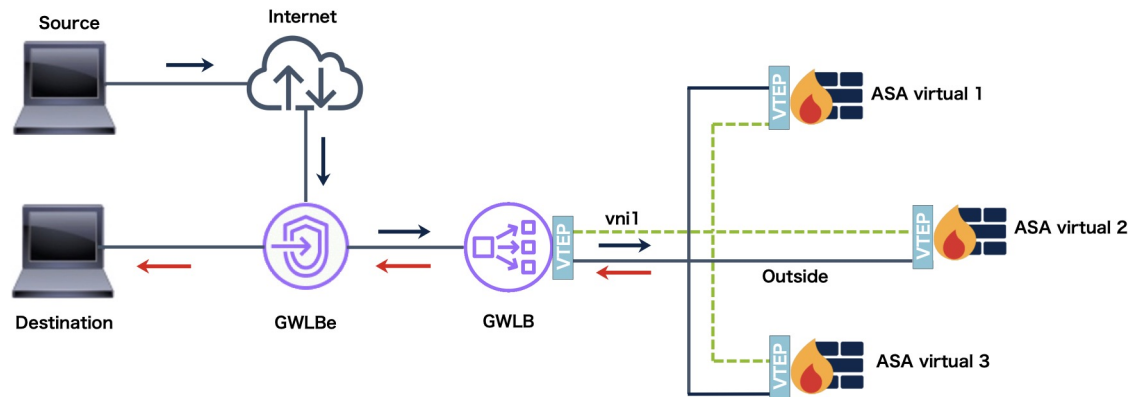

Sample Topologies

ASA Virtual Clustering with Autoscale in Single and Multiple Availability Zones of an AWS Region


An availability zone is a standalone data center or a set of independent data centers within an AWS region that operate independently. Each zone has its own networking infrastructure, connectivity, and power source ensuring a failure in one zone does not affect others. To improve redundancy and reliability, companies use multiple availability zones in their disaster recovery plans.

Deploying ASA Virtual across multiple availability zones and configuring clustering with dynamic scaling can significantly enhance the availability and scalability of your infrastructure. In addition, utilizing multiple availability zones in the same region can offer extra redundancy and guarantee high availability in the event of a failure.

You can modify the IP allocation mechanism of Cluster Control Link (CCL) to support both single and multiavailability zone deployments of ASA Virtual clusters on AWS. The topologies given below depict both inbound and outbound traffic flow in a single and multiple availability zones with autoscaling ability.

ASA Virtual Clustering with Autoscale in Single Availability Zone

There are two ASA Virtual instances in the cluster that are connected to a GWLB.

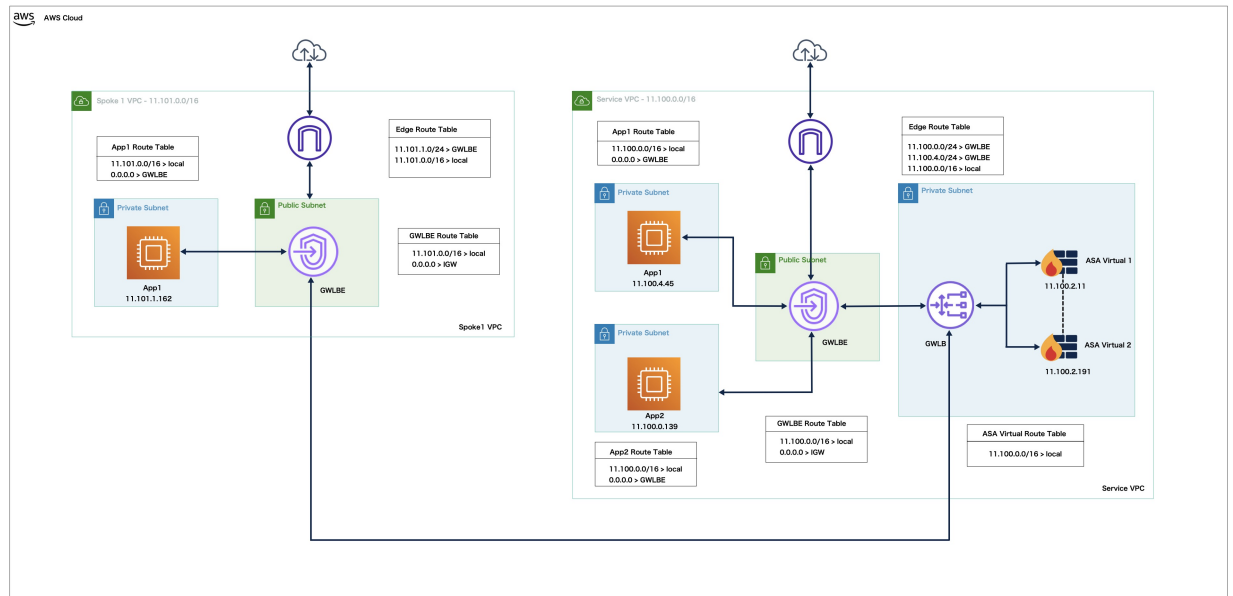


Inbound traffic from the internet goes to the GWLB endpoint, which is then transmits the traffic to the GWLB. Traffic is then forwarded to the ASA Virtual cluster. After the traffic is inspected by an ASA Virtual instance in the cluster, it is forwarded to the application VM, App1.

Outbound traffic from App1 is transmitted to the GWLB endpoint > GWLB > ASA v > GWLB > GWLB Endpoint, which then sends it out to the internet.

ASA Virtual Clustering with Autoscale in Multiple Availability Zones with Autoscale Solution

There are two ASA Virtual instances in the cluster in different availability zones that are connected to a GWLB.

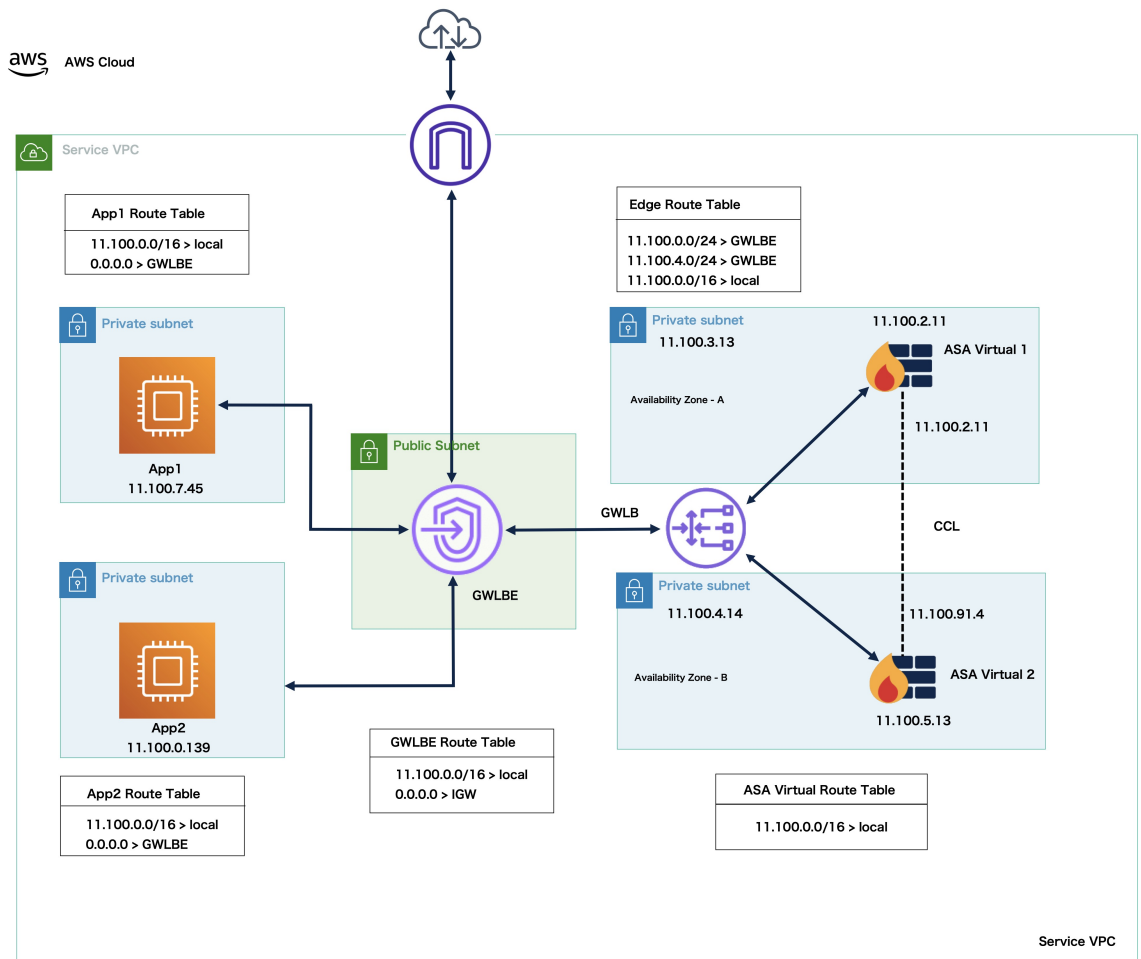


Inbound traffic from the internet goes to the GWLB endpoint, which then transmits the traffic to the GWLB. Based on the availability zone, the traffic is then routed to the ASA Virtual cluster. After the traffic is inspected by an ASA Virtual instance in the cluster, it is forwarded to the application VM, App1.

End-to-End Process for Deploying ASA Virtual Cluster on AWS

Template-based Deployment

The following flowchart illustrates the workflow for template-based deployment of the ASA Virtual cluster on AWS.


End-to-End Process for Deploying ASA Virtual Cluster on AWS

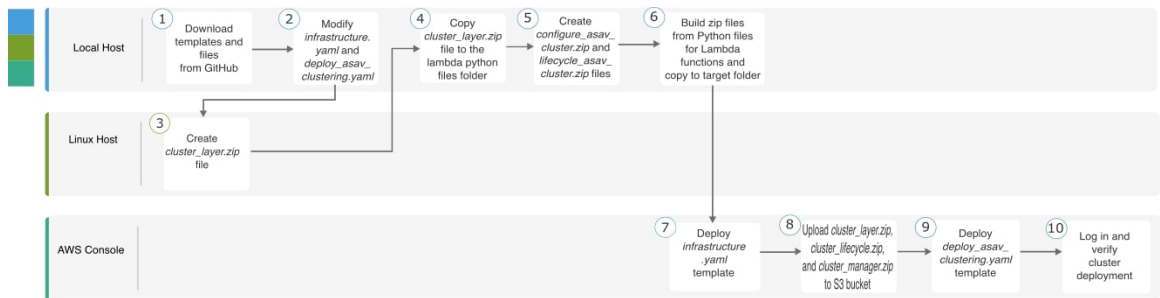

	Workspace	Steps
①	Local Host	Download templates and files from GitHub.
②	Local Host	Modify <i>infrastructure.yaml</i> and <i>deploying_asav_clustering.yaml</i> templates.
③	Linux Host	Create <i>cluster_layer.zip</i> file.
④	Local Host	Copy <i>cluster_layer.zip</i> file to the Lambda python files folder.
⑤	Local Host	Create <i>configure_asav_cluster.zip</i> and <i>lifecycle_asav_cluster.zip</i> files.
⑥	Local Host	Build zip files from Python files for Lambda functions and copy to target folder.
⑦	AWS Console	Deploy <i>infrastructure.yaml</i> template.
⑧	AWS Console	Upload <i>cluster_layer.zip</i> , <i>cluster_lifecycle.zip</i> , and <i>cluster_manager.zip</i> , to the S3 bucket.
⑨	AWS Console	Deploy <i>deploy_asav_clustering.yaml</i> template.
⑩	AWS Console	Log in and verify cluster deployment.

Manual Deployment

The following flowchart illustrates the workflow for manual deployment of the ASA Virtual cluster on AWS.

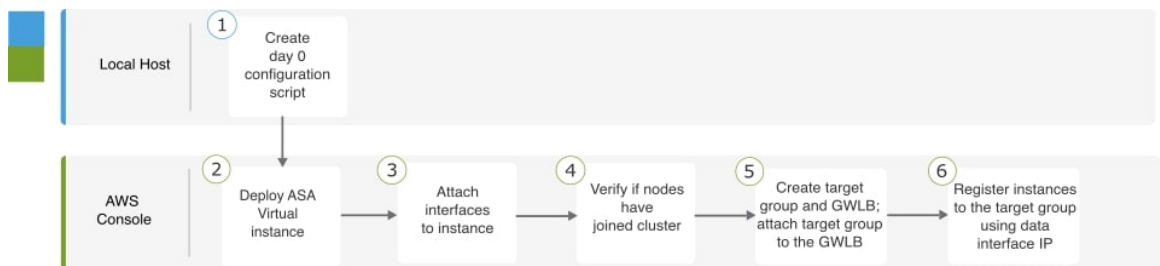

	Workspace	Steps
1	Local Host	Create day 0 configuration script.
2	AWS Console	Deploy ASA Virtual instance.
3	AWS Console	Attach interfaces to instance.
4	AWS Console	Verify if nodes have joined cluster.
5	AWS Console	Create target group and GWLB; attach target group to the GWLB.
6	AWS Console	Register instances with the target group using data interface IP.

Templates

The templates given below are available in GitHub. The parameter values are self-explanatory with the parameter names, default values, allowed values, and description, given in the template.

- [infrastructure.yaml](#) – Template for infrastructure deployment.
- [deploy_asav_clustering.yaml](#) – Template for cluster deployment.


Note

Ensure that you check the list of supported AWS instance types before deploying cluster nodes. This list is found in the *deploy_asav_clustering.yaml* template, under allowed values for the parameter InstanceType.

Configure Target Failover for ASA Virtual Clustering with GWLB in AWS

ASA virtual clustering in AWS utilizes the Gateway Load Balancer (GWLB) to balance and forward network packets for inspection to a designated ASA virtual node. The GWLB is designed to continue sending network packets to the target node in the event of a failover or deregistration of that node.

The Target Failover feature in AWS enables GWLB to redirect network packets to a healthy target node in the event of node deregistration during planned maintenance or a target node failure. It takes advantage of the cluster's stateful failover.


Note

If a target node fails while the GWLB routes traffic using SSH, SCP, CURL, or other protocols, then there may be a delay in redirecting traffic to a healthy target. This delay is caused due to rebalancing and rerouting of traffic flow.

In AWS, you can configure Target Failover through the AWS ELB API or AWS console.

- AWS API - In the AWS Elastic Load Balancing (ELB) API - *modify-target-group-attributes* you can define the flow handling behavior by modifying the following two new parameters.
 - `target_failover.on_unhealthy` - It defines how the GWLB handles the network flow when the target becomes unhealthy.
 - `target_failover.on_deregistration` - It defines how the GWLB handles the network flow when the target is deregistered.

The following command shows the sample API parameter configuration of defining these two parameters.

```
aws elbv2 modify-target-group-attributes \
--target-group-arn arn:aws:elasticloadbalancing:.../my-targets/73e2d6bc24d8a067 \
--attributes \
Key=target_failover.on_unhealthy, Value=rebalance[no_rebalance] \
Key=target_failover.on_deregistration, Value=rebalance[no_rebalance]
```

For more information, refer [TargetGroupAttribute](#) in AWS documentation.

- AWS Console – In the EC2 console, you can enable the Target Failover option on the Target Group page by configuring the following options.
 - Edit Target Groups Attributes
 - Enable Target Failover
 - Verify Rebalance Flows

For more information about how to enable Target Failover, see [Enable Target Failover Feature](#).

Deploy Stack in AWS Using a CloudFormation Template

Deploy the stack in AWS using the customized CloudFormation template.

Before you begin

- You need a Linux computer with Python 3.

Procedure

Step 1 Prepare the template.

- Clone the github repository to your local folder. See <https://github.com/CiscoDevNet/cisco-asav/tree/master/cluster/aws>.
- Modify **infrastructure.yaml** and **deploy_asav_clustering.yaml** with the required parameters.
- Create a file named **cluster_layer.zip** to provide essential Python libraries to the Lambda functions.

We recommend to use the Amazon Linux with Python 3.9 installed to create the **cluster_layer.zip** file.

Note

If you need an Amazon Linux environment, you can create an EC2 instance using Amazon Linux 2023 AMI or use AWS Cloudshell, which runs the latest version of Amazon Linux.

For creating the `cluster-layer.zip` file, you need to first create **requirements.txt** file that consists of the python library package details and then run the shell script.

1. Create the **requirements.txt** file by specifying the python package details.

The following is the sample package details that you provide in the **requirements.txt** file:

```
$ cat requirements.txt
pycryptodome
paramiko
requests
scp
jsonschema
cffi
zipp
importlib-metadata
```

2. Run the following shell script to create **cluster_layer.zip** file.

```
$ pip3 install --platform manylinux2014_x86_64
--target=./python/lib/python3.9/site-packages
--implementation cp --python-version 3.9 --only-binary=:all:
--upgrade -r requirements.txt
$ zip -r cluster_layer.zip ./python
```

Note

If you encounter a dependency conflict error during installation, such as `urllib3` or `cryptography`, it is recommended that you include the conflicting packages along with their recommended versions in the **requirements.txt** file. After that, you can run the installation again to resolve the conflict.

- d) Copy the resulting **cluster_layer.zip** file to the lambda python files folder.
- e) Create the **configure_asav_cluster.zip** and **lifecycle_asav_cluster.zip** files

A `make.py` file can be found in the cloned repository top directory. This will zip the python files into a Zip file and copy to a target folder.

python3 make.py build

Note

Before cluster deployment, ensure that you have customized the AWS CFT template files - **infrastructure.yaml** and **deploy_asav_clustering.yaml** for your infrastructure requirement like VPC, Subnets, S3 buckets required for the ASAv clustering autoscale deployment.

Step 2

Deploy **infrastructure.yaml** and note the output values for the cluster deployment. Before deploying the infrastructure stack, it is important to identify the AWS region and the availability zones that will be used. Each AWS region has a different set of availability zones and VPC infrastructure, therefore it is essential to select the correct region and availability zones for your deployment.

- a) On the AWS console, go to **CloudFormation** and click **Create stack**; select **With new resources(standard)**.
- b) Select **Upload a template file**, click **Choose file**, and select **infrastructure.yaml** from the target folder.
- c) Click **Next** and provide the required information.

Parameter	Allowed Values/Type	Description
ClusterName	String	Enter unique Cluster name.
ClusterNumber	Number	Enter unique Cluster number.

Parameter	Allowed Values/Type	Description
VpcCidr	String	Enter the CIDR block for a new VPC.
NoOfAZs	Number	Total Number of Availability Zones into which subnet will be created (Minimum 1 and Maximum 3 depending on Region). Please select NoOfAZs = 2 or 3 only for releases 9.22 and above. For lower releases, select 1. Management, Inside, and CCL subnets will span across AZs based on below parameter.
ListOfAZs	List	Select Availability Zones (Count should match with Number of Availability Zones)
MgmtSubnetNames	CommaDelimitedList	Enter Management subnets name (With Internet GW as Route)
MgmtSubnetCidrs	CommaDelimitedList	Enter Management subnets Cidr
InsideSubnetNames	CommaDelimitedList	Enter Inside subnets name (With Private Route)
InsideSubnetCidrs	CommaDelimitedList	Enter Inside subnets Cidr list
CCLSubnetNames	CommaDelimitedList	Enter CCL subnet name
CCLSubnetCidrs	CommaDelimitedList	Enter CCL subnet CIDR
LambdaAZs	List	Select 2 Availability Zones for Lambda
LambdaSubnetNames	CommaDelimitedList	Enter Lambda Subnets name (With NAT GW as Route), for Lambda Functions
LambdaSubnetCidrs	CommaDelimitedList	Enter Lambda Subnet CIDRs

- d) Enter a unique **Cluster Name** and **Cluster Number** for the cluster.
- e) Select the availability zone from the **Availability Zone** list. This field lists only availability zones based on the AWS region that you select for deploying the infrastructure stack using the ClusterFormation template.
- f) Enter the predefined subnet CIDR values separated by a comma in the **Inside subnet CIDR** field.
- g) Choose the availability zones required for Lambda to communicate across availability zones from the **List of Lambda AZs**.
- h) Click **Next**, and then **Create stack**.

The CREATE_COMPLETE message indicating the infrastructure stack deployment status is displayed.

- i) After the deployment is complete, go to **Outputs** and note the S3 **BucketName**.

Figure 2: Output of infrastructure.yaml

Outputs (13)				
<input type="text" value="Search outputs"/>				
Key	Value	Description	Export name	
AZ	sa-east-1a	Availability zone	-	
BucketName	ran-cla-infra-s3bucketcluster-kckr7518u00l	Name of the Amazon S3 bucket	-	
BucketUrl	http://ran-cla-infra-s3bucketcluster-kckr7518u00l.s3-website-sa-east-1.amazonaws.com	URL of S3 Bucket Static Website	-	
CCLSubnetId	subnet-050feb347e57eba99	CCL subnet ID	-	
EIPforNATgw	52.67.246.95	EIP reserved for NAT GW	-	
InInterfaceSGId	sg-0333e92f36b2aa0bf	Security Group ID for Instances Inside Interface	-	
InsideSubnetIds	subnet-047c0a2beffb5a70f	Inside subnet ID	-	
InstanceSGId	sg-0c0c6bfb5ba5f1c10	Security Group ID for Instances Management Interface	-	
LambdaSecurityGroupId	sg-01771b0d3012a40c5	Security Group ID for Lambda Functions	-	
LambdaSubnetIds	subnet-0fb24785c687d50e4,subnet-0f1996a02ffaa2e62	List of lambda subnet IDs (comma seperated)	-	
MgmtSubnetIds	subnet-02d4a757b95a9a5b9	Mangement subnet ID	-	
UseGWLB	Yes	Use Gateway Load Balancer	-	
VpcName	vpc-003b592ad2518d03d	Name of the VPC created	-	

Step 3 Upload **cluster_layer.zip**, **configure_asav_cluster.zip**, and **lifecycle_asav_cluster.zip** to the S3 bucket created by **infrastructure.yaml**.

Step 4 Deploy **deploy_asav_clustering.yaml**:

- Go to **CloudFormation**, click **Create stack**, and select **With new resources(standard)**.
- Click **Upload a template file**, and **Choose file**, and select **deploy_asav_clustering.yaml** from the target folder.
- Click **Next** and provide the required information.
- Provide the following cluster and infrastructure configuration information.

Parameter	Allowed Values/Type	Description
Cluster Configuration		
ClusterGrpNamePrefix	String	This is the cluster name Prefix. The cluster number will be added as a suffix.
ClusterNumber	String	This will be suffixed to Cluster Group Name (ASAv-Cluster), if this value is 1 then, group name will be ASAv-Cluster-1. It should be at least one numerical digit but not more than three digits.

Parameter	Allowed Values/Type	Description
ClusterSize	Numbers	Total Number of ASA Virtual Nodes in the Cluster. Minimum: 1 Maximum: 16
Infrastructure Details		
NoOfAZs	String	This is the total number of availability zones into which ASA Virtual is deployed. (The number of availability zones varies from a Minimum 1 to Maximum 3 depending on a region). The subnet will be created in these availability zones. The availability zones available in this list is based on the region selected for deploying the cluster. Note Management, Inside, and Cluster Control Link (CCL) subnets are created across three availability zones based on this parameters.
AZ	String	The availability zone list is based on the region you plan to deploy. In Availability Zone list, select the valid availability zone (1 availability zone or 2 availability zones or 3 availability zones). Count should match with the value of Number of Availability Zones parameter.
NotifyEmailID	String	Email address to which cluster events email will be sent. You must accept a subscription email request to receive this email notification. Example: admin@company.com
VpcId	String	The VPC ID for the cluster group. Type: AWS::EC2::VPC::Id
S3BktName	String	The S3 Bucket that contains the uploaded Lambda zip files. You must specify correct bucket name.
MgmtSubnetIds	List	Enter only <i>one</i> subnet per availability zone. If you select multiple subnets from a same availability zone, then selecting an incorrect subnet may cause issues while deploying the ASA Virtual instances. Type: List<AWS::EC2::Subnet::Id>
InsideSubnetIds	List	Enter at least <i>one</i> subnet per availability zone.

Parameter	Allowed Values/Type	Description
		If multiple subnets from the same Availability Zone are selected, then selecting an incorrect subnet may cause issues while deploying the ASA Virtual instances. Type: List<AWS::EC2::Subnet::Id>
LambdaSubnets	List	Enter at least <i>two</i> subnet for the Lambda functions. The <i>two</i> subnets you enter must have a NAT gateway to enable the Lambda functions to communicate with AWS services, which are public DNS. Type: List<AWS::EC2::Subnet::Id>
CCLSubnetIds	String	Select subnets from multiple AZs as required.
CCLSubnetRanges	String	Enter IP addresses range of CCL subnets for different availability zones. Exclude first 4 reserved IP addresses. IP address pool for Cluster Control Link (CCL). IP address is allocated to the CCL interfaces of ASA virtual from CCL IP Pool.
MgmtInterfaceSG	List	Select security group ID for the ASA Virtual instances. Type: List<AWS::EC2::SecurityGroup::Id>
InsideInterfaceSG	List	Select security group ID for NGFWv instances inside interface. Make sure of adding Security Group for all AZs provided. Type: List<AWS::EC2::SecurityGroup::Id>
LambdaSG	List	Select a security group for the Lambda functions. Ensure outbound connections is set to ANYWHERE . Type: List<AWS::EC2::SecurityGroup::Id>
CCLInterfaceSG	List	Select a security group ID for CCL interface of the ASA Virtual instances.
GWLB Configuration		
DeployGWLBE	String	Click Yes to deploy the GWLB endpoint. By default, the value is set to No .
VpcIdLBE	String	Enter VPC to deploy Gateway Load Balancer Endpoint. Note Do not enter any value in this field if you are not deploying the GWLB endpoint.

Parameter	Allowed Values/Type	Description
GWLBESubnetId	String	<p>Enter only one subnet ID.</p> <p>Note Do not enter any value in this field if you are not deploying the GWLB endpoint.</p> <p>Ensure that the subnet belongs to the correct VPC, and the availability zones that you have specified.</p>
TargetFailover	String	<p>Enable Target Failover support when a target fails or deregisters. (By default, the value of this parameter is set to rebalance).</p> <ul style="list-style-type: none"> • no_rebalance: Directs existing flows to failed targets and new flows to healthy targets, ensuring backward compatibility. • rebalance: Redistributes existing flows while ensuring that new flows go to healthy targets.
TgHealthPort	String	<p>Enter Health Check Port for GWLB.</p> <p>Note By default, this port must not be used for traffic.</p> <p>Ensure the value you provide is a valid TCP port. Default: 8080</p>
Cisco NGFWv Instance Configuration		
InstanceType	String	<p>Cisco ASA Virtual EC2 instance type.</p> <p>Ensure that the AWS Region supports Instance Type you select.</p> <p>By default, c5.xlarge is selected.</p>
LicenseType	String	<p>Choose Cisco ASA Virtual EC2 instance license type.</p> <p>Ensure that the AMI ID that you enter in AMI-ID parameter is of the same licensing type.</p> <p>By default, BYOL is selected.</p>
AssignPublicIP	String	<p>Set the value as true to assign a public IP address for ASA Virtual from the AWS IP address pool.</p>
AmiID	String	<p>Choose the correct AMI ID as per the region, version, and license type (BYOL or PAYG).</p> <p>Type: AWS::EC2::Image::Id</p>

Parameter	Allowed Values/Type	Description
KmsArn	String	<p>Enter ARN of an existing KMS (AWS KMS key to encrypt at rest).</p> <p>If you specify a value in this field, then the ASA Virtual instance's <i>admin</i> password must be an encrypted password.</p> <p>Example of generating an encrypted password: <code>"aws kms encrypt --key-id <KMS ARN> --plaintext <password> "</code></p> <p>The password encryption must be done using only the specified ARN.</p>
Scaling Configuration		
CpuThresholds	CommaDelimitedList	<p>(Optional) Specifying non-zero lower and upper thresholds will create scale policies. If (0,0) is selected, no CPU scaling alarm or policies will be created. Evaluation points and data points are at default or recommended values.</p> <p>By default, Autoscale is enabled in this template. Autoscale can be disabled after deployment.</p>

- e) Click **Next**.
- f) Click to acknowledge all the AWS CloudFormation options.
- g) Click **Submit** to deploy the cluster.
- h) Click **Next**, and then **Create Stack**.

Figure 3: Deployed Resources

Resources (21)					
<input type="text" value="Search resources"/>					
Logical ID	Physical ID	Type	Status	Status reason	
ASAvGroup	ran-cl5-1	AWS::AutoScaling::AutoScalingGroup	CREATE_COMPLETE		
ASAvLaunchTemplate	lt-056fd20764270c893	AWS::EC2::LaunchTemplate	CREATE_COMPLETE		
CLSmanagerTopic	arn:aws:sns:sa-east-1:797661843114:ran-cl5-1-cluster-manager-topic	AWS::SNS::Topic	CREATE_COMPLETE		
ClusterManager	ran-cl5-1-manager-lambda	AWS::Lambda::Function	CREATE_COMPLETE		
ClusterManagerLogGrp	/aws/lambda/ran-cl5-1-manager-lambda	AWS::Logs::LogGroup	CREATE_COMPLETE		
ClusterManagerSNS1	arn:aws:sns:sa-east-1:797661843114:ran-cl5-1-cluster-manager-topic:e13bfcb0-d698-4215-88a5-278474e22c32	AWS::SNS::Subscription	CREATE_COMPLETE		
ClusterManagerSNS1Permission	ran-cl5-ClusterManagerSNS1Permission-S6BQAE05OG6U	AWS::Lambda::Permission	CREATE_COMPLETE		
InstanceEvent	ran-cl5-1-notify-instance-event	AWS::Events::Rule	CREATE_COMPLETE		
InstanceEventInvokeLambdaPermission	ran-cl5-InstanceEventInvokeLambdaPermission-1XP521Q4G2DY6	AWS::Lambda::Permission	CREATE_COMPLETE		

The status changes from CREATE_IN_PROGRESS to CREATE COMPLETE indicating successful deployment.

Step 5 Verify the cluster deployment by logging in to any one of the nodes and entering the **show cluster info** command:

show cluster info

```

Cluster oneclicktest-cluster: On
Interface mode: individual
Cluster Member Limit : 16
This is "200" in state CONTROL_NODE
ID : 0
Version : 9.19.1
Serial No.: 9AU42EN5D1E
CCL IP : 1.1.1.200
CCL MAC : 4201.0a0a.0fc7
Module : ASAv
Resource : 4 cores / 8192 MB RAM
Last join : 15:26:22 UTC Jul 17 2022
Last leave: N/A
Other members in the cluster:
Unit "204" in state DATA_NODE
ID : 1
Version : 9.19.1
Serial No.: 9AJ9N46947R
CCL IP : 1.1.1.204
CCL MAC : 4201.0a0a.0fcb
Module : ASAv
Resource : 4 cores / 8192 MB RAM

```

Last join : 16:57:42 UTC Jul 17 2022
Last leave: 16:03:25 UTC Jul 17 2022

Autoscale Parameter Configuration

After the deployment is completed, you must specify **Minimum**, **Maximum**, and **Desired** capacity of the ASAv Autoscale group. You must verify the Autoscale functionality.

Procedure

- Step 1** From the AWS console, choose **Services > EC2 > Auto Scaling groups > Created ClusterAutoscale group**.

[EC2](#) > [Auto Scaling groups](#) > [ASAvMZ-cluster-1](#)

Edit ASAvMZ-cluster-1 [Info](#)

Group size [Info](#)

Specify the size of the Auto Scaling group by changing the desired capacity. You can also specify minimum and maximum scaling limits.

Desired capacity type

Choose the unit of measurement for the desired capacity value. vCPUs and Memory(GiB) are only supported for mixed instances groups configured with a set of instance attributes.

Units (number of instances) ▼

Desired capacity

Specify your group size.

7

Scaling limits

Set limits on how much your desired capacity can be increased or decreased.

Min desired capacity

1

Equal or less than
desired capacity

Max desired capacity

16

Equal or greater than
desired capacity

- Step 2** Configure **Desired capacity**, and then set the **Scaling limits** capacity.

- Step 3** Check if the CPU metric data is available and whether scaling is occurring as expected in AWS Cloudwatch alarms.

Instances (1/13) [Info](#)

Find instance by attribute or tag (case-sensitive)

ASAvMZ running Clear filters

Name	Instance ID	Instance state	Instance type	Status check	Alarm status	Availability Zone	Public IP
ASAvMZ-cluster-1-i-00cd9230817c747a4	i-00cd9230817c747a4	Running	c5.xlarge	2/2 checks passed	No alarms	ap-south-2b	ec2-18-6
ASAvMZ-cluster-1-i-03606293835beaa1	i-03606293835beaa1	Terminated	c5.xlarge	-	No alarms	ap-south-2b	-
ASAvMZ-cluster-1-i-038692319c2fe0ead	i-038692319c2fe0ead	Running	c5.xlarge	2/2 checks passed	No alarms	ap-south-2c	ec2-18-6
ASAvMZ-cluster-1-i-042fb42a59c6cf506	i-042fb42a59c6cf506	Running	c5.xlarge	2/2 checks passed	No alarms	ap-south-2a	ec2-18-6
ASAvMZ-cluster-1-i-055e4def0c4b46267	i-055e4def0c4b46267	Running	c5.xlarge	2/2 checks passed	No alarms	ap-south-2a	ec2-18-6
ASAvMZ-cluster-1-i-06dcd45ed055bcc91	i-06dcd45ed055bcc91	Running	c5.xlarge	2/2 checks passed	No alarms	ap-south-2c	ec2-18-6
ASAvMZ-cluster-1-i-091fa0fea9cfc4d14	i-091fa0fea9cfc4d14	Terminated	c5.xlarge	-	No alarms	ap-south-2c	-
ASAvMZ-cluster-1-i-0bc51188bcae0b9db	i-0bc51188bcae0b9db	Running	c5.xlarge	2/2 checks passed	No alarms	ap-south-2c	ec2-18-6

Instance: i-038692319c2fe0ead (ASAvMZ-cluster-1-i-038692319c2fe0ead)

Details Security Networking Storage Status checks Monitoring Tags

▼ Instance summary [Info](#)

Instance ID i-038692319c2fe0ead (ASAvMZ-cluster-1-i-038692319c2fe0ead)	Public IPv4 address 18.61.28.175 Open address	Private IPv4 addresses 10.3.92.13 10.3.102.7 10.3.252.24
IPv6 address -	Instance state Running	Public IPv4 DNS ec2-18-61-28-175.ap-south-2.compute.amazonaws.com Open address

Configure IMDSv2 Required Mode in ASA Virtual Clustering by Updating Stack

You can configure the IMDSv2 Required mode for the ASA Virtual Auto Scale group instances that are already deployed on the AWS.

Before you begin

The IMDSv2 Required mode is only supported in ASA Virtual Version 9.20.3 and later. Ensure that your existing instances' version is compatible (upgraded to Version 9.20.3 and later) with IMDSv2 APIs before configuring the IMDSv2 Required mode for your deployment.

Procedure

- Step 1** From the AWS console, go to **CloudFormation** and click **Stacks**.
- Step 2** Select the stack of the initially deployed clustering instances.
- Step 3** Click **Update**.
- Step 4** In the **Update stack** page, click **Replace existing template**.
- Step 5** Under **Specify template** section, click **Upload a template file**.
- Step 6** Choose and upload the template that supports IMDSv2.
- Step 7** Provide values for the input parameters in the template.
- Step 8** Update the stack.

Deploy the Cluster in AWS Manually

To deploy the cluster manually, prepare the Day-0 configuration, and deploy each node.

Create Day-0 Configuration for AWS

Provide the bootstrap configuration for each cluster node using the following commands:

Gateway Load Balancer Example

The following running configuration example creates a configuration for a Gateway Load Balancer with one Geneve interface for U-turn traffic and one VXLAN interface for the cluster control link.

```
cluster interface-mode individual force
policy-map global_policy
class inspection_default
no inspect h323 h225
no inspect h323 ras
no inspect rtsp
no inspect skinny

int m0/0
management-only
nameif management
security-level 100
ip address dhcp setroute
no shut

interface TenGigabitEthernet0/0
nameif geneve-vtep-ifc
security-level 0
ip address dhcp
no shutdown

interface TenGigabitEthernet0/1
nve-only cluster
nameif ccl_link
security-level 0
ip address dhcp
no shutdown

interface vni1
description Clustering Interface
segment-id 1
vtep-nve 1

interface vni2
proxy single-arm
nameif ge
security-level 0
vtep-nve 2

object network ccl_link
range 10.1.90.4 10.1.90.254 //Mandatory user input, use same range on all nodes
object-group network cluster_group
network-object object ccl_link
nve 2
encapsulation geneve
source-interface geneve-vtep-ifc
nve 1
encapsulation vxlan
source-interface ccl_link
peer-group cluster_group

cluster group asav-cluster // Mandatory user input, use same cluster name on all nodes
local-unit 1 //Value in bold here must be unique to each node
```

```

cluster-interface vni1 ip 1.1.1.1 255.255.255.0 //Value in bold here must be unique to each
node
priority 1
enable noconfirm

mtu geneve-vtep-ifc 1806
mtu ccl_link 1960
aaa authentication listener http geneve-vtep-ifc port 7575 //Use same port number on all
nodes
jumbo-frame reservation
wr mem

```



Note For the AWS health check settings, be sure to specify the **aaa authentication listener http** port you set here.

Non-Native Load Balancer Example

The following example creates a configuration for use with non-native load balancers with management, inside, and outside interfaces, and a VXLAN interface for the cluster control link.

```

cluster interface-mode individual force
interface Management0/0
management-only
nameif management
ip address dhcp

interface GigabitEthernet0/0
no shutdown
nameif outside
ip address dhcp

interface GigabitEthernet0/1
no shutdown
nameif inside
ip address dhcp

interface GigabitEthernet0/2
nve-only cluster
nameif ccl_link
ip address dhcp
no shutdown

interface vni1
description Clustering Interface
segment-id 1
vtep-nve 1

jumbo-frame reservation
mtu ccl_link 1654
object network ccl_link
range 10.1.90.4 10.1.90.254 //mandatory user input
object-group network cluster_group
network-object object ccl_link

nve 1
encapsulation vxlan
source-interface ccl_link
peer-group cluster_group

cluster group asav-cluster //mandatory user input

```

```

local-unit 1                                //mandatory user input
cluster-interface vni1 ip 10.1.1.1 255.255.255.0 //mandatory user input
priority 1
enable

```



Note If you are copying and pasting the configuration given above, ensure that you remove **//mandatory user input** from the configuration.

Deploy Cluster Nodes

Deploy the cluster nodes to form a cluster.

Procedure

Step 1 Deploy the ASA Virtual instance by using the cluster day 0 configuration with the required number of interfaces - three interfaces if you are using Gateway Load Balancer (GWLB), or four interfaces if you are using non-native load balancer. To do this, in the **Configure Instance Details > Advanced Details** section, paste the cluster day 0 configuration.

Note

Ensure that you attach interfaces to the instances in the order given below.

- AWS Gateway load balancer - three interfaces - management, outside, and cluster control link.
- Non-native load balancers - four interfaces - management, inside, outside, and cluster control link.

For more information on deploying ASA Virtual on AWS, see [Deploy the ASA Virtual on AWS](#).

Step 2 Repeat Step 1 to deploy the required number of additional nodes.

Step 3 Use the **show cluster info** command on the ASA Virtual console to verify if all nodes have successfully joined the cluster.

Step 4 Configure the AWS Gateway Load Balancer.

- a) Create a target group and GWLB.
- b) Attach the target group to the GWLB.

Note

Ensure that you configure the GWLB to use the correct security group, listener configuration, and health check settings.

- c) Register the data interface (inside interface) with the Target Group using IP addresses. For more information, see [Create a Gateway Load Balancer](#).

Enable Target Failover for ASA virtual in AWS

The data interface of ASA virtual is registered to a target group of GWLB in AWS. In the ASA virtual clustering, each instance is associated with a Target Group. The GWLB load balances and sends the traffic to this healthy instance identified or registered as a target node in the target group.

Before you begin

You must have deployed the ASA virtual stack in AWS either by manual method or using CloudFormation templates.

If you are deploying a cluster using a CloudFormation template, you can also enable the **Target Failover** parameter by assigning the **rebalance** attribute that is available under the **GWLB Configuration** section of the cluster deployment file `deploy_asav_clustering.yaml`. In the template, by default, the value is set to **rebalance** for this parameter. However, the default value for this parameter is set to **no_rebalance** on the AWS console.

Where,

- **no_rebalance** - GWLB continues to send the network flow to the failed or deregistered target.
- **rebalance** - GWLB sends the network flow to another healthy target when the existing target is failed or deregistered.

For information on deploying a stack in AWS, see:

- [Deploy the Cluster in AWS Manually](#)
- [Deploy the Stack in AWS Using a CloudFormation Template](#)

Procedure

-
- | | |
|---------------|--|
| Step 1 | On the AWS console, go to Services > EC2 |
| Step 2 | Click Target Groups to view the target groups page. |
| Step 3 | Choose and open the target group to which the ASA virtual instances IP addresses are registered. The target group details page is displayed. |
| Step 4 | Go to the Attributes menu. |
| Step 5 | Click Edit to edit the attributes. |
| Step 6 | Toggle the Rebalance flows slider button to the right. This enables the target failover to configure GWLB to rebalance and forward the existing network packets to a healthy target node in the event of target failover or deregistration. |
-

Deploy the Cluster in Azure

In an Azure service chain, ASA virtual acts as a transparent gateway that can intercept packets between the internet and customer service. The clustering of ASA virtual instances on Azure helps to scale up the throughput of multi-node ASAv's by abstracting them as a single device.

The ASAv consists of two logical interfaces - an **External Interface** facing the Internet and an **Internal Interface** facing customer service. These interfaces are defined on a single Network Interface Card (NIC) of the ASAv by utilizing VXLAN segments in a paired proxy.


About Azure Gateway Load Balancer

Azure Gateway Load Balancer (GWLB), help you balance and manage inbound and outbound traffic by routing through the VXLAN segments to the ASAv for traffic inspection. In an ASAv cluster environment, the Azure GWLB automatically scale up the throughput level of the ASAv nodes depending on the traffic load. The GWLB can ensure symmetrical flows or a consistent route to the network virtual appliance without having to update routes manually. With this capability, the packets can traverse the same network path in both directions.

The following figure shows traffic forwarded to the Azure GWLB from the Public Gateway Load Balancer on the external VXLAN segment. The **Gateway Load Balancer** primarily balances traffic across among multiple ASAv, which inspects the traffic before either dropping it or sending it back to the GWLB on the internal VXLAN segment. The Azure GWLB then sends the traffic back to the Public Gateway Load Balancer and the destination.

The following figure illustrated the network flow between GWLB and ASAv in Azure.

Figure 4: ASAv Clustering on Azure with GWLB

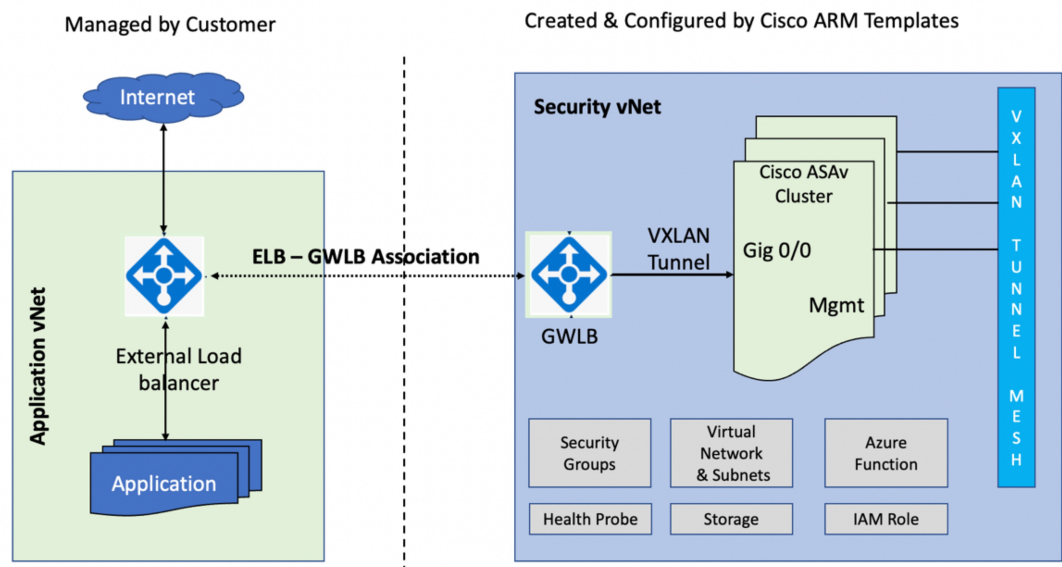

About Cluster Deployment in Azure

You can use the customized Azure Resource Manager (ARM) template to deploy the Virtual Machine Scale Set for Azure GWLB .

After the cluster deployment, you can configure each node on the cluster either manually by using the day0 configuration or through the Function app on the Azure portal.

Deploy the Cluster Using an Azure Resource Manager Template

Deploy the cluster nodes (virtual machine scale set) so they form a cluster using Azure Resource Manager (ARM) template.

Before you begin

- To manually create the Azure cluster, you must prepare the configuration text file with the day0 configuration. See [Prepare Configuration File for Cluster deployment on Azure](#).

Procedure

Step 1

Prepare the template.

- Clone the GitHub repository to your local folder. See <https://github.com/CiscoDevNet/cisco-asav/tree/master/cluster/azure>.
- For GWLB, modify `azure_asav_gwlb_cluster.json` and `asav-gwlb-cluster-config.txt` with the required parameters.

Step 2

Log into the Azure portal: <https://portal.azure.com>.

Step 3

Create a **Resource group**.

[Home](#) > [Resource groups](#) >

Create a resource group ...

Basics Tags Review + create

Resource group - A container that holds related resources for an Azure solution. The resource group can include all the resources for the solution, or only those resources that you want to manage as a group. You decide how you want to allocate resources to resource groups based on what makes the most sense for your organization. [Learn more](#)

Project details

Subscription * ⓘ

MSDN Dev/Test Pay-As-You-Go(Converted to EA)

Resource group * ⓘ

asav-cluster-demo

Resource details

Region * ⓘ

(US) East US

Step 4

Create a virtual network with three subnets: **Management**, **Outside**, and **Cluster Control Link (CCL)** for your ASAv cluster.

[Home](#) > [Resource groups](#) > [asav-cluster-demo](#) > [Marketplace](#) > [Virtual network](#) >

Create virtual network ...

[Basics](#) IP Addresses Security Tags Review + create

Azure Virtual Network (VNet) is the fundamental building block for your private network in Azure. VNet enables many types of Azure resources, such as Azure Virtual Machines (VM), to securely communicate with each other, the internet, and on-premises networks. VNet is similar to a traditional network that you'd operate in your own data center, but brings with it additional benefits of Azure's infrastructure such as scale, availability, and isolation. [Learn more about virtual network](#)

Project details

Subscription * ⓘ

MSDN Dev/Test Pay-As-You-Go(Converted to EA) ▼

Resource group * ⓘ

asav-cluster-demo ▼

[Create new](#)

Instance details

Name *

asav-cluster-vnet ✓

Region *

East US ▼

[Review + create](#)

< Previous

Next : IP Addresses >

[Download a template for automation](#)

Step 5

Add the subnets.

[Home](#) > [Resource groups](#) > [asav-cluster-demo](#) > [Marketplace](#) > [Virtual network](#) >

Create virtual network ...

Basics IP Addresses Security Tags Review + create

The virtual network's address space, specified as one or more address prefixes in CIDR notation (e.g. 192.168.1.0/24).

IPv4 address space

10.0.0.0/16 10.0.0.0 - 10.0.255.255 (65536 addresses)



Address space '10.0.0.0/16 (10.0.0.0 - 10.0.255.255)' overlaps with address space '10.0.0.0/16 (10.0.0.0 - 10.0.255.255)' of virtual network 'waweb-eastu-4034838410-vnet'. Virtual networks with overlapping address space cannot be peered. If you intend to peer these virtual networks, change address space '10.0.0.0/16 (10.0.0.0 - 10.0.255.255)'. [Learn more](#)

☐ Add IPv6 address space

The subnet's address range in CIDR notation (e.g. 192.168.1.0/24). It must be contained by the address space of the virtual network.

[+](#) Add subnet [Remove subnet](#)

<input type="checkbox"/> Subnet name	Subnet address range	NAT gateway
<input type="checkbox"/> Management	10.0.0.0/24	-
<input type="checkbox"/> Data	10.0.1.0/24	-
<input type="checkbox"/> Ccl	10.0.2.0/24	-

A NAT gateway is recommended for outbound internet access from subnets. Edit the subnet to add a NAT gateway. [Learn more](#)

[Review + create](#)

[< Previous](#)

[Next : Security >](#)

[Download a template for automation](#)

Step 6

Deploy the Custom template.

- Click **Create >> Template deployment** (deploy using custom templates).
- Click Build your template in the editor.
- Click **Load File** and upload the `azure_asav_gwlb_cluster.json`.
- Click **Save**.

Step 7

Configure the Instance details.

Step 8

Enter the required values and then click **Review + create**.

[Home](#) > [Microsoft.VirtualNetwork-20230119131203 | Overview](#) > [asav-cluster-vnet](#) > [asav-cluster-demo](#) > [Marketplace](#) > [Template deployment \(deploy using custom templates\)](#) >

Custom deployment

Deploy from a custom template

Project details

Select the subscription to manage deployed resources and costs. Use resource groups like folders to organize and manage all your resources.

Subscription *	MSDN Dev/Test Pay-As-You-Go(Converted to EA)
Resource group *	asav-cluster-demo

[Create new](#)

Instance details

Region *	(US) East US
Resource Name Prefix	asavcluster ✓
Virtual Network Rg	asav-cluster-demo ✓
Virtual Network Name	asav-cluster-vnet ✓
Mgmt Subnet	Management ✓
Data Interface Subnet	Data ✓
Gateway Load Balancer IP	10.0.2.4 ✓
Ccl Subnet	Ccl ✓
Internal Port Number	2000 ✓
External Port Number	2001 ✓
Internal Segment Id	800 ✓
External Segment Id	801 ✓

[Review + create](#) [< Previous](#) [Next : Review + create >](#)

Step 9

Click **Create** after the validation is passed.

Custom deployment ...

Deploy from a custom template

✓ Validation Passed

If any Microsoft products are included in a Marketplace offering (e.g. Windows Server or SQL Server), such products are licensed by Microsoft and not by any third party.

Basics

Subscription	MSDN Dev/Test Pay-As-You-Go(Converted to EA)
Resource group	sumis-asav-clustering
Region	East US
Resource Name Prefix	asacuster
Virtual Network Rg	asav-demo-clustering
Virtual Network Name	asav-clustering-vnet
Mgmt Subnet	Mgmt
Data Interface Subnet	Data
Gateway Load Balancer IP	172.23.2.4
Ccl Subnet	CCL
Internal Port Number	2000
External Port Number	2001
Internal Segment Id	800
External Segment Id	801
Cluster Group Name	asav-gwlb-cluster
Image Id	/subscriptions/33d2517e-ca88-46aa-beb2-74ff1dd61b41/resourceGroups/su...
Vm Size	Standard_D3_v2
Asa Admin User Name	cisco
Asa Admin User Password	*****
Asav Node Count	4
Asav Config File Url	https://asavconfigs.blob.core.windows.net/asav-configfiles/asav-configurati...

Create

< Previous

Next

Step 10

After the instance runs, verify the cluster deployment by logging into any of the nodes and entering the **show cluster info** command.

```
> show cluster info
Cluster gwlb-cluster-template-with-AN: On
Interface mode: individual
Cluster Member Limit : 16
This is "12" in state CONTROL_NODE
ID       : 0
Version  : 99.19(1)180
Serial No.: 9AKGFV8VH4G
CCL IP    : 10.1.1.12
CCL MAC   : 000d.3a55.5470
Module    : NGFWv
Resource  : 8 cores / 28160 MB RAM
Last join : 11:13:24 UTC Sep 5 2022
Last leave: N/A
```

What to do next

[Configure the Cluster in Azure, on page 35.](#)

Configure the Cluster in Azure

To configure cluster on ASAv nodes in Azure, you can either manually configure using a configuration file or using the Azure Function App. You can use the cluster with native GWLB .

Prepare the Configuration File for Creating Cluster on Azure

You can manually configure a cluster on ASA Virtual nodes using the configuration file or the Function App on the Azure portal.

For manual configuration of the cluster on an ASA Virtual node, you must have configured the `asav-gwlb-cluster-config.txt` . In this file, you must define the parameters such as range objects, day0, cluster group name, licensing type and so on that is configured in the ASA Virtual node of cluster.

This section explains about creating a cluster configuration file for configuring ASA Virtual nodes in Azure with GWLB .

Procedure

Step 1 Download the `asav-gwlb-cluster-config.txt` from the Cisco GitHub repository directory `asav-cluster/sample-config-file`.

Step 2 You can prepare the day0 configuration for cluster creation.

The following sample day0 configuration helps you understand the parameters required for cluster creation in Azure with GWLB.

- **Sample Day0 configuration for GWLB cluster creation**

The following is the sample day0 configuration required in the `asav-gwlb-cluster-config.txt` file used for GWLB cluster creation.

```
cluster interface-mode individual force
    policy-map global_policy
    class inspection_default
    no inspect h323 h225
    no inspect h323 ras
    no inspect rtsp
    no inspect skinny

interface GigabitEthernet0/0
    nameif vxlan_tunnel
    security-level 0
    ip address dhcp
    no shutdown

interface GigabitEthernet0/1
    nve-only cluster
    nameif ccl_link
    security-level 0
    ip address dhcp
    no shutdown

interface vni1
```

```

description ClusterInterface
segment-id 1
vtep-nve 1

interface vni2
  proxy paired
  nameif GWLB-backend-pool
  internal-segment-id 800
  external-segment-id 801
  internal-port 2000
  external-port 2001
  security-level 0
  vtep-nve 2

object network ccl#link
  range <CCLSubnetStartAddress> <CCLSubnetEndAddress>
  object-group network cluster#group
  network-object object ccl#link

nve 1
  encapsulation vxlan
  source-interface ccl_link
  peer-group cluster#group

nve 2
  encapsulation vxlan
  source-interface vxlan_tunnel
  peer ip <GatewayLoadbalancerIp>

mtu vxlan_tunnel 1454
mtu ccl_link 1374
cluster group <ClusterGroupName>
local-unit <Last Octet of CCL Interface IP>
cluster-interface vni1 ip 1.1.1.<Last Octet of CCL Interface IP> 255.255.255.0

priority 1
enable

```

In the above sample day0 configuration, when the Encapsulation type is mentioned as **vxlan**, the GWLB-related configuration is enabled. The **InternalPort** and **ExternalPort** are used for the vxlan tunnel interface configuration, while the **InternalSegId** and **ExternalSegId** are used as an identifier for internal and external interfaces.

Note

In the day0 configuration, you must specify the starting address (<CCLSubnetStartAddress>) and ending addresses of the cluster control link. Accordingly, the **StartAddress** must always start with **x.x.x.4** and **EndAddress** must be in the optimal range. It is recommended to specify only the required number of addresses (up to 16) because adding a large range of addresses might affect the performance.

For example: If the CCL subnet is 192.168.3.0/24, the **StartAddress** will be 192.168.3.4 and the **EndAddress** can be 192.168.3.30.

The following is the sample configuration required for the vni interface.

```

interface vni2
  proxy paired
  nameif GWLB-backend-pool
  internal-segment-id 800
  external-segment-id 801
  internal-port 2000
  external-port 2001
  security-level 0

```



```
vtep-nve 2
```

- Step 3** Upload the configuration file to the Azure storage and note the path (URL) of this location. This URL path is required for the manual configuration of the cluster on ASA Virtual nodes.

Configure Cluster using Configuration File Manually

To configure cluster on ASAv nodes in Azure manually using a configuration file.

Before you begin

You must have prepared the configuration file and noted the Azure storage location where it is uploaded. See [Prepare Cluster Configuration File for Azure](#).

Procedure

- Step 1** Log in to the Azure portal.
- Step 2** Open an ASAv instance deployed on Azure.
- Step 3** Run the following command to copy the cluster configuration file to the ASAv node by providing the URL of the file that you have uploaded to the Azure storage container.
- ```
copy <Config File URL> running-config
```
- Step 4** Run the following command to configure the cluster on the ASAv instances
- ```
cluster group <ClusterGroupName>
  local-unit <Last Octet of the Management Interface IP>
  cluster-interface vni1 ip 1.1.1.<Last Octet of the Management Interface IP>
255.255.255.0
  priority 1
  enable
```
- Step 5** Repeat steps 2 through 4 to configure the cluster on all the ASAv nodes.

Configure Cluster using Azure Function App

To configure cluster on ASAv nodes in Azure using Azure Function App service.

Procedure

- Step 1** Log in to the Azure portal.
- Step 2** Click the **Function App**.
- Step 3** Create FTPS Credentials by clicking **Deployment Center** > **FTPS credentials** > **User scope** > **Configure Username and Password** > , and then click **Save**.

The screenshot shows the 'FTP credentials' settings page in the Azure Portal. At the top, there are tabs for 'Settings' and 'FTP credentials *'. Below the tabs, a message states: 'App Service supports multiple technologies to access, publish and modify the content of your app. FTPS credentials can be scoped to the application or the user.' The 'FTP endpoint' is set to 'ftp://waws-prod-blu-231.ft.azurewebsites.windows.net/site/wwwroot'. Under the 'Application scope' section, the 'Username' is 'gwlb-an-function-app/\$gwlb-an-function-app' and the 'Password' is masked with dots, with a 'Reset' button. Under the 'User scope' section, the 'Username' is 'sumis', the 'Password' is masked, and there is a 'Confirm Password' field also masked.

Step 4 Upload the `Cluster_Function.zip` file to the function app by executing the following command in the local terminal.

```
curl -X POST -u <Userscope_Username> --data-binary @"Cluster_Function.zip"
https://<Function_App_Name>.scm.azurewebsites.net/api/zipdeploy
```

Figure 5: Functions

The screenshot shows the 'Functions' page for the 'gwlb-an-function-app'. The left sidebar contains navigation links: Overview, Activity log, Access control (IAM), Tags, Diagnose and solve problems, Microsoft Defender for Cloud, and Events (preview). The main area shows a table of functions. A warning message at the top states: 'Your app is currently in read only mode because you are running from a package file. To make any changes update the content in your zip file and WEBSITE_RUN_FROM_PACKAGE app setting.' The table has columns for Name, Trigger, and Status. One function is listed: 'cluster-function' with a 'Queue' trigger and 'Enabled' status.

Name	Trigger	Status
cluster-function	Queue	Enabled

Figure 6: Queues


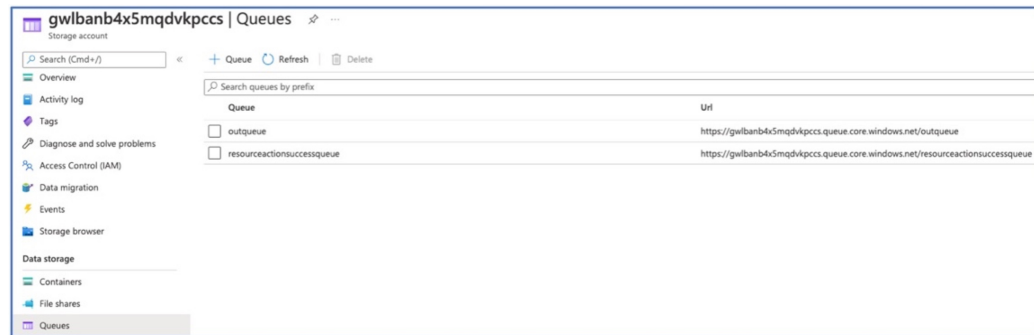


Figure 7: Outqueue

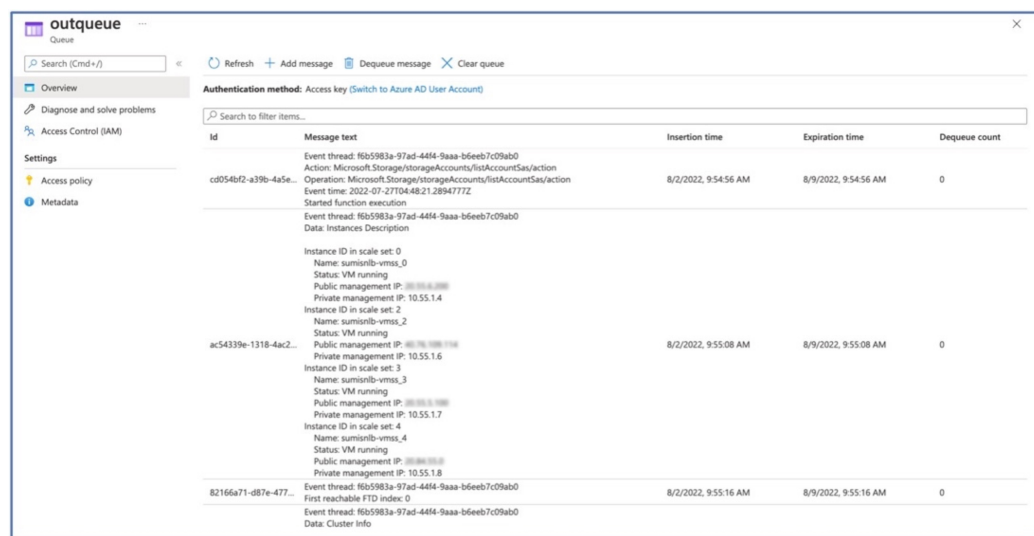

The function will be uploaded to the Function app. The function will start, and you can see the logs in the storage account's outqueue.

The cluster will be enabled on all the ASAv nodes after the function execution.

Troubleshooting ASA Virtual Cluster in Azure

Traffic Issues

If the traffic is not working, then verify the following:

1. Verify the health probe status of the ASA virtual instances with the Loadbalancer is healthy.

If the ASA virtual instance's health probe status is unhealthy, then perform the following:

 - a. Verify the Static route configured in ASA virtual.
 - b. Verify default gateway is data subnet's gateway IP.

- c. Ensure that the ASA virtual instance receives the health probe traffic.
- d. Verify the Access policy configured in the ASA virtual is allowing the health probe traffic.

Cluster Issues

If the Cluster is not formed, then verify the following:

- IP address of the Network Virtualization Endpoint (NVE-only) cluster interface. Ensure that you can ping the NVE-only cluster interface of other nodes.
- IP address of the NVE-only cluster interfaces are part of the object group. Ensure the NVE is configured with the object group.
- The cluster interface in the cluster group has the correct VNI interface. This VNI interface has the NVE of the corresponding object group.
- Each node has its own IP interface, verify that the nodes should be able to ping each other to ensure connectivity between the nodes in a cluster.
- Verify the CCL subnet's Start and End Addresses mentioned during the template deployment is correct. The starting address must begin with the first available IP address in the subnet. For example, if the subnet is 192.168.1.0/24. The start address should be 192.168.1.4 (The first three IP addresses are reserved by azure)

Role Related Issues

If there is any role-related error while deploying resources again in the same resource group, then perform the following:

When there is any issue related to specific roles, an error message is displayed.

The following is a sample error message.

```
"error": {
  "code": "RoleAssignmentUpdateNotPermitted",
  "message": "Tenant ID, application ID, principal ID, and scope are not allowed to be updated."}
```

Remove the following roles by executing the following commands from the terminal.

- Command to remove Storage Queue Data Contributor role:
az role assignment delete --resource-group <Resource Group Name> --role "Storage Queue Data Contributor"
- Command to remove Contributor role:
az role assignment delete --resource-group <Resource Group Name> --role "Contributor"

ASA Virtual Clustering Autoscale Solution on Azure

A typical cluster deployment in an Azure region includes a defined number of ASA Virtual instances (nodes). When the Azure region traffic varies, without dynamic scaling (autoscale) of the nodes, resource utilization in such cluster arrangement may underutilise the resources or cause latency. Cisco offers an autoscale solution

for ASA Virtual clustering in Version 9.23 and later that supports dynamic scaling of nodes in the Azure region. It allows you to scale-in or scale-out nodes from the cluster based on the network traffic. It uses logic based on the resource utilization statistics from Azure VMSS metrics such as CPU and memory metrics to dynamically add or remove a node from a cluster.

The ASA Virtual clustering with Autoscale solution in Azure supports both Network Load Balancer (NLB or Sandwich topology) and Gateway Load Balancer (GWLB). See [Sample Topologies, on page 41](#)


Cisco provides separate Azure Resource Manager (ARM) templates for deploying ASA Virtual cluster with autoscale in Azure using NLB and GWLB, as well as infrastructure and configuration templates for deploying the Azure services such as Function App and Logic App.

Sample Topologies

ASA Virtual Clustering with Autoscale in Azure using Sandwich Topology (Network Load Balancer)

The ASA Virtual clustering with autoscale in Azure using sandwich topology (NLB) use case is an automated horizontal scaling solution that positions the ASA Virtual scale set sandwiched between an Azure Internal load balancer (ILB) and an Azure External load balancer (ELB).

In this topology, the ASA Virtual uses only *four* interfaces: management, inside, outside, and CCL subnets.

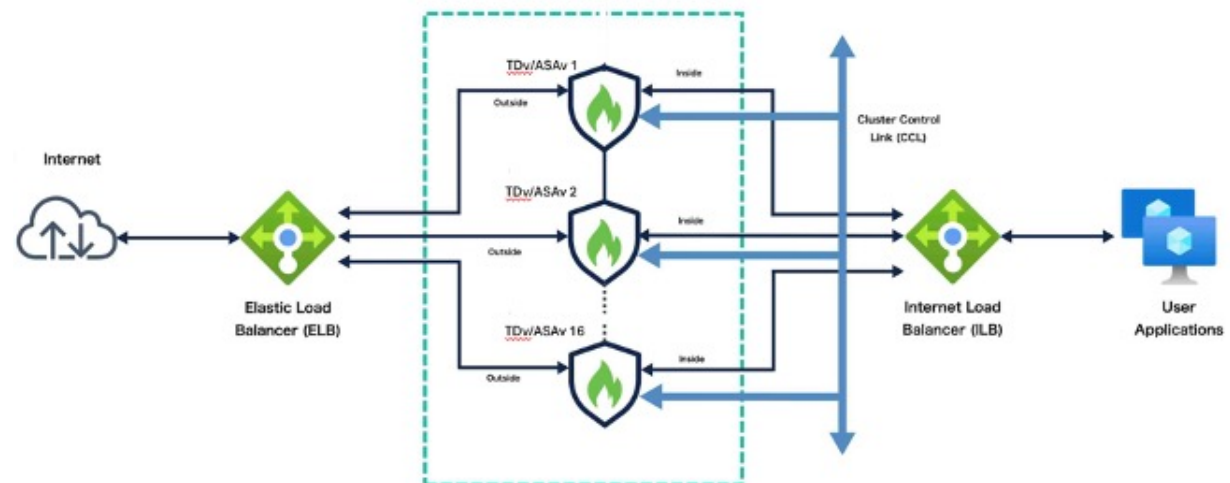

ASA Virtual Clustering with Autoscale in Azure using Sandwich Topology (NLB)

The following describes high-level flow on how a ASA Virtual cluster with autoscale in Azure using NLB functions:

- The ELB distributes traffic from the internet to the ASA Virtual instances in the scale set, and then the firewall forwards traffic to the application.
- The ILB distributes outbound internet traffic from an application to ASA Virtual instances in the scale set and then the firewall forwards traffic to the internet.
- A network packet will never pass through both (Internal and External) load balancers in a single connection.

- The number of ASA Virtual instances in the scale set will be scaled and configured automatically based on load conditions.

ASA Virtual Clustering with Autoscale in Azure using Gateway Load Balancer


The integration of the Azure Gateway Load Balancer (GWLB) and ASA Virtual cluster using autoscale solution simplifies deployment, management, and scaling of instances in the cluster setup. The Azure Gateway Load Balancer (GWLB) ensures that internet traffic to and from an Azure VM, such as an application server, is inspected by secure firewall without requiring any routing changes. This integration also reduces operational complexity and provides a single entry and exit point for traffic at the firewall. The applications and infrastructure can maintain visibility of source IP address, which is critical in some environments.

The ASA Virtual uses only *three* interfaces: management, data, and CCL interface in this use case.



Note

- Network Address Translation (NAT) is not required if you are deploying the Azure GWLB.
- Only IPv4 is supported.

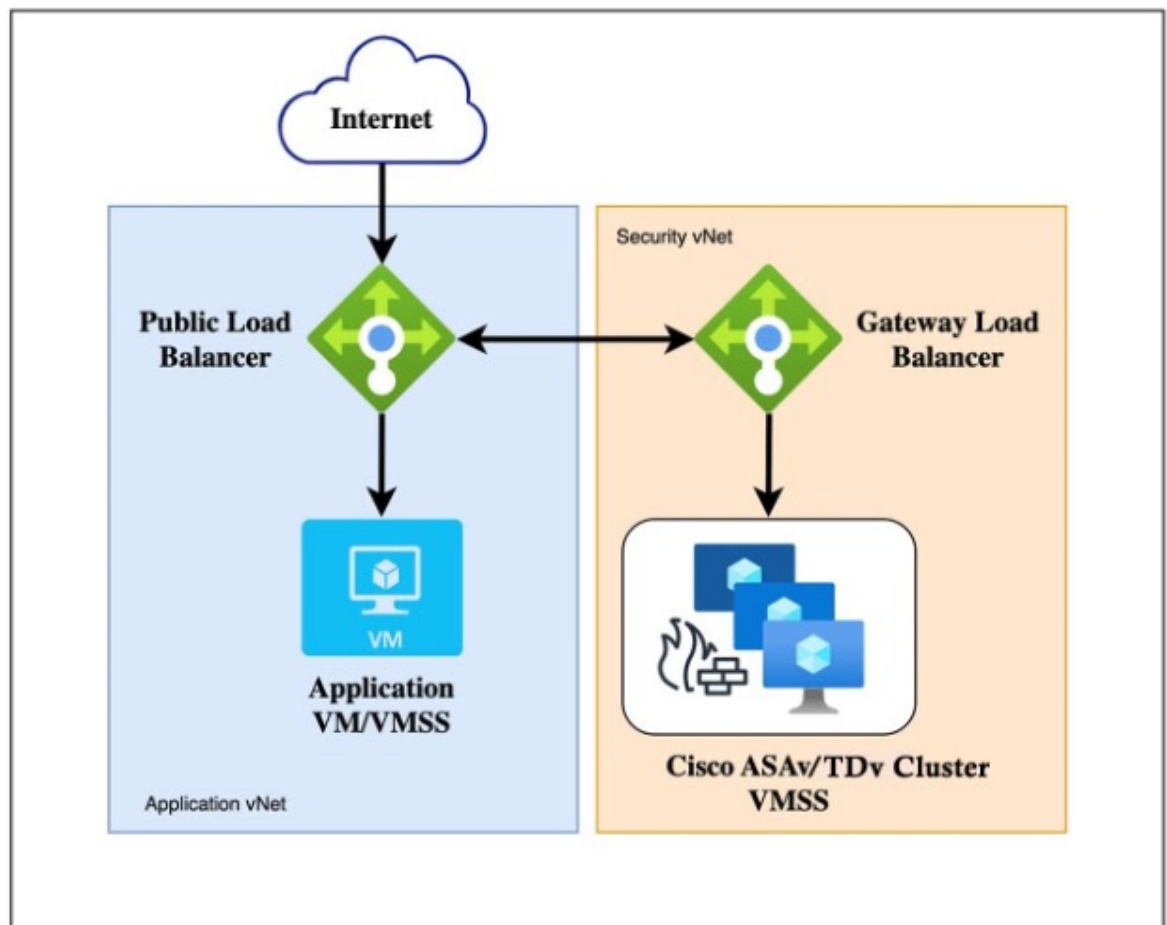

The following describes high-level flow on how a ASA Virtualcluster with autoscale in Azure using GWLB functions:

- Inbound traffic from the internet goes to the GWLB endpoint, which then transmits the traffic to the GWLB.
- The traffic is then routed to the ASA Virtual cluster. The autoscale solution applies scale-in or scale-out logic to add or remove nodes from the cluster based on the traffic load.
- After the traffic is inspected by the ASA Virtual instance in the cluster, it is forwarded to the application Application VM.

Autoscale Logic for ASA Virtual Clustering in Azure

Scaling Policy

In a cluster with autoscale, the scaling of nodes is determined based on the following policies:

- Scaling policy 1 - When one cluster node exceeds the resource utilization limits.
- Scaling policy 2 - Overall average resource utilization of all the nodes.

Scale-out

Scale-out is a process of adding a new node to the cluster when the traffic load threshold exceeds the configured CPU or memory limit on any one of the cluster's node.

The following is the process of adding a new node to the cluster during scale-out:

1. A new ASA Virtual instance is launched.
2. Appropriate configuration is applied to a ASA Virtual.
3. Appropriate licenses are applied.
4. A new ASA Virtual instance is added to the cluster.

If the configuration of the new ASA Virtual instance fails (low probability) during the scale-out process, the failing instance is terminated, and a new instance is launched and configured.

Scale-in

Scale-in is the process of removing a node from a cluster when the configured scale-in threshold and total number of cluster instances exceed the minimum cluster size.

The following is the process of terminating a node in the cluster during scale-in:

1. The ASA Virtual instance with the least CPU or memory usage is identified using VMSS metrics.
2. If there is more than one instance with the same least utilization, then the instance with the higher VM index in VMSS is chosen for scale-in.
3. Any new connections to this instance are disabled by appropriate configuration and policies.
4. The instance is de-registered from smart licensing (applicable for BYOL).
5. The instance is terminated.

Azure Functions (Function App)

The Function application helps to enable and register the ASA Virtual cluster. The Function application also help you select a hosting plan for ASA Virtual clustering with autoscale deployment.

The following two types of hosting plans are offered:

- **Consumption**

- This is the default hosting plan for ASA Virtual clustering with autoscale.
- This plan allows the Function app to connect to the ASA Virtual instances by opening the SSH port to the Azure data center IP addresses of the region.

- **Premium**

- You can select this hosting plan for the Function app during deployment.
- This plan supports adding a Network Address Translation (NAT) gateway to the Function app to control the outbound IP address of the Function app. This plan allows SSH access to ASA Virtual instances only from a fixed IP address of the NAT gateway thereby offering enhanced security.

Deployment and Infrastructure Templates on GitHub

Cisco provides Azure Resource Manager (ARM) templates and scripts for deploying a Virtual Machine Scale Set (VMSS) of ASA Virtual cluster using several Azure services, including Function App, Logic App, auto-scaling groups and so on.

The autoscale solution for ASA Virtual cluster is an ARM template-based deployment that provides support for GWLB and NLB load balancers.

ASA Virtual Clustering with Autoscale Solution Templates

Azure Resource Manager (ARM) templates

Two sets of templates are provided for autoscale solutions based on the (NLB or GWLB) load balancer you are using in Azure for the cluster.

The following templates are available on GitHub:

- Autoscale solution template for ASA Virtual clustering using NLB:
`azure_asav_nlb_cluster_autoscale.json` available in the folder
`azure_autoscale_clustering/asav_cluster/arm_templates/`
- Autoscale solution template for ASA Virtual clustering using GWLB:
`azure_asav_gwlb_cluster_autoscale.json` available in the folder
`azure_autoscale_clustering/asav_cluster/arm_templates/`

Azure Infrastructure and Configuration Templates on GitHub

The following are the templates required for setting up Azure infrastructure for clustering with autoscale on Azure.

- Function app to enable cluster on ASA Virtual instances: `cluster_functions.zip` available in the folder `azure_autoscale_clustering/asav_cluster/azure_function_app`.

- Logic App code for the ASA Virtual deployment, scale-in and scale-out workflow: `logic_app.txt` available in the folder `azure_autoscale_clustering/asav_cluster/logic_app/`.

Input Parameters

The following table defines the template parameters and provides an example. Once you decide on these values, you can use these parameters to create the ASA Virtual when you deploy the Azure Resource Manager (ARM) template into your Azure subscription. In the clustering with autoscale solution with GWLB for Azure, networking infrastructure is also created due to which additional input parameters have to be configured in the template. The parameter descriptions are self-explanatory.

Table 2: Template Parameters

Parameter Name	Allowed Values/Type	Description	Resource Creation Type
resourceNamePrefix	String* (3-10 characters)	All the resources are created with name containing this prefix. Note: Use only lowercase letters. Example: asav	New
virtualNetworkRg	String	The virtual network resource group name. Example: cisco-virtualnet-rg	Existing
virtualNetworkName	String	The virtual network name (already created). Example: cisco-virtualnet	Existing
mgmtSubnet	String	The management subnet name (already created). Example: cisco-mgmt-subnet	Existing
dataSubnet	String	The data subnet name (already created) Example: cisco-data-subnet	
cclSubnet	String	The cluster control link subnet name. Example: cisco-ccl-subnet	
cclSubnetStartAddr	String	The starting range of CCL subnet IP address. Example: 3.4.5.6	
cclSubnetEndAddr	String	The ending range of CCL subnet IP address. Example: 5.6.7.8	

Parameter Name	Allowed Values/Type	Description	Resource Creation Type
gwlbIP	String	GWLB is created in existing data subnet. Example: 10.0.2.4	
dataNetworkGatewayIp	String	The gateway IP address of the data subnet. Example: 10.0.2.7	
insideSubnet	String	The inside Subnet name (already created). Example: cisco-inside-subnet	Existing
internalLbIp	String	The internal load balancer IP address for the inside subnet (already created). Example: 1.2.3.4	Existing
outsideSubnet	String	The outside subnet name (already created). Example: cisco-outside-subnet	Existing
softwareVersion	String	The ASA Virtual Version (selected from drop-down list during deployment).	Existing
vmSize	String	Size of ASA Virtual instance (selected from drop-down list during deployment).	N/A
asaAdminUserName	String*	User name for the ASA Virtual 'admin' user. This cannot be 'admin'. See Azure for VM administrator user name guidelines. Note There is no compliance check for this in the template.	New

Parameter Name	Allowed Values/Type	Description	Resource Creation Type
asaAdminUserPassword	String*	<p>Password for the ASA Virtual administrator user.</p> <p>Passwords must be 12 to 72 characters long, and must have: lowercase, uppercase, numbers, and special characters; and must have no more than 2 repeating characters.</p> <p>Note There is no compliance check for this in the template.</p>	New
clusterGroupName	String	<p>The name of the cluster group to be used while registering the ASA virtual device.</p> <p>Example: asav-cluster</p>	
asaLicensingSku	String	The licensing mode (PAYG or BYOL) of ASA Virtual.	
healthCheckPortNumber	String	<p>The health check port number used while creating the health probe in the Gateway Load balancer.</p> <p>Example: 8080</p>	
functionHostingPlan	String	<p>Function deployment hosting plan (consumption uses the consumption hosting plan, premium: uses the premium hosting plan).</p> <p>Default: consumption</p>	
functionAppSubnet	String	<p>The function app subnet name (already created).</p> <p>Example: asav-fapp-subnet</p>	
functionAppSubnetCIDR	String	<p>The CIDR of the function app subnet (already created).</p> <p>Example: 10.0.4.0/24</p>	
scalingMetricsList	String	<p>The metrics used in determining the scaling the scaling decision.</p> <p>Allowed: CPU</p>	

Parameter Name	Allowed Values/Type	Description	Resource Creation Type
scalingPolicy	POLICY-1 / POLICY-2	<p>POLICY-1: Scale-Out will be triggered when the average load of any ASA Virtual goes beyond the Scale Out threshold for the configured duration.</p> <p>POLICY-2: Scale-Out will be triggered when average load of all the ASA Virtual devices in the VMSS goes beyond the Scale Out threshold for the configured duration.</p> <p>In both cases Scale-In logic remains the same: Scale-In will be triggered when average load of all the ASA Virtual devices comes below the Scale In threshold for the configured duration.</p>	N/A
scalingMetricsList	String	<p>Metrics used in making the scaling decision.</p> <p>Allowed: CPU</p> <p>Default: CPU</p>	N/A
scaleInThreshold	String	<p>The scale-in threshold in percentage.</p> <p>Default: 10</p> <p>When the ASA Virtual metric goes below this value the scale-in will be triggered.</p>	N/A
scaleOutThreshold	String	<p>The Scale-out threshold in percentage .</p> <p>Default: 80</p> <p>When the ASA Virtual metric goes above this value, the Scale-Out will be triggered.</p> <p>The 'scaleOutThreshold' should always be greater than the 'scaleInThreshold'.</p>	N/A
asavClusterSize	String	<p>The default node count of ASA Virtual instances available in the scale set at any given time.</p> <p>Example: 4</p>	

Parameter Name	Allowed Values/Type	Description	Resource Creation Type
minAsaCount	Integer	The minimum ASA Virtual instances available in the scale set at any given time. Example: 2	N/A
maxAsaCount	Integer	The maximum ASA Virtual instances allowed in the Scale set. Example: 10 Note The Auto Scale logic will not check the range of this variable, hence fill this carefully.	N/A
metricsAverageDuration	Integer	Select from the drop-down. This number represents the time (in minutes) over which the metrics are averaged out. If the value of this variable is 5 (i.e. 5min), when the Auto Scale Manager is scheduled it will check the past 5 minutes average of metrics and based on this it will make a scaling decision. Note Only numbers 1, 5, 15, and 30 are valid due to Azure limitations.	N/A
initDeploymentMode	BULK / STEP	Primarily applicable for the first deployment, or when the Scale Set does not contain any ASA Virtual instances. BULK: The Auto Scale Manager will try to deploy 'minAsaCount' number of ASA Virtual instances in parallel at one time. STEP: The Auto Scale Manager will deploy the 'minAsaCount' number of ASA Virtual devices one by one at each scheduled interval.	
smartLicenseToken	String	The smart license token for registering the ASA Virtual.	

Parameter Name	Allowed Values/Type	Description	Resource Creation Type
licenseThroughput	String	The smart license entitlement tier for the ASA Virtual.	
asavConfigFileUrl	String	The file path to the ASA Virtual configuration file. Example: <code>https://path_to_asav_config_file/config_file</code> Make sure the configuration file is accessible from the ASAv.	N/A
*Azure has restrictions on the naming convention for new resources. Review the limitations or simply use all lowercase. Do not use spaces or any other special characters.			

ASA Virtual Cluster with Autoscale Deployment Process and Resources

ASA Virtual cluster with autoscale deployment process on Azure involves the following:

- Deploy the ARM template.
- Build and deploy the clustering function.
- Update and enable the Logic application.

Azure Resource Manager Template Deployment Resources

The following resources are created within a resource group when you deploy ASA Virtual cluster with autoscale in Azure using the ARM template for **Sandwich Topology (NLB)** -

`azure_asav_nlb_cluster_autoscale.json`

- Virtual Machine Scale Set (VMSS)
- External Load Balancer
- Internal Load Balancer
- Azure Function App
- Logic App
- Security groups (For Data and Management interfaces)

The following resources are created within a resource group when you deploy ASA Virtual cluster with autoscale in Azure using the ARM template for **GWLB** -

`azure_asav_gwlb_cluster_autoscale.json`

- Virtual Machine (VM) or Virtual Machine Scale Set (VMSS)
- Gateway Load Balancer (GWLB)
- Azure Function App

- Logic App
- Networking Infrastructure
- Security Groups and other miscellaneous components needed for deployment.

Deploy ASA Virtual Cluster with Autoscale Solution

Deploy the ASA Virtual clustering with autoscale solution on Azure using the ARM template. Based on the topology, Sandwich (NLB) or GWLB use case, you are required to download and configure the appropriate ARM template for deploying the ASA Virtual clustering with autoscale solution on Azure.

Before you begin

Download the Deployment Package from GitHub

The ASA Virtual clustering autoscale with NLB solution for Azure is an Azure Resource Manager (ARM) template-based deployment which makes use of the serverless infrastructure provided by Azure (Logic App, Azure Functions, Load Balancers, Virtual Machine Scale Set, and so on).

The ASA Virtual clustering autoscale with GWLB solution for Azure is an ARM template-based deployment that creates the GWLB, networking infrastructure, virtual machine scale set, serverless components, and other required resources.

The deployment procedures for both solutions are similar.

Download the files required to launch the ASA Virtual clustering with autoscale solution for Azure.

Deployment scripts and templates for your version are available in the [GitHub](#) repository.


Procedure

-
- | | |
|---------------|--|
| Step 1 | Log in to the Microsoft Azure portal (https://portal.azure.com) using your Microsoft account username and password. |
| Step 2 | Click Resource groups from the menu of services to access the Resource Groups blade. You will see all the resource groups in your subscription listed in the blade. Create a new resource group or select an existing, empty resource group. For example, secure-firewall-asav-demo . |
| Step 3 | Click Create a resource (+) to create a new resource for template deployment. The Create Resource Group blade appears. |
| Step 4 | Click Virtual Network from the menu of services to access the Virtual network blade. Create a virtual network with subnets. <ul style="list-style-type: none">• For GWLB deployment, create virtual network with management, data, and CCL subnets.• For NLB deployment, create virtual network with management, inside, outside, and CCL subnets. |
| Step 5 | In Search the Marketplace , type Template deployment (deploy using custom templates), and then press Enter . |
| Step 6 | Click Create . There are several options for creating a template. Choose Build your own template in editor . |

[Home](#) > [Create a resource](#) > [Marketplace](#) > [Template deployment \(deploy using custom templates\)](#) >

Custom deployment

Deploy from a custom template

 New! Deployment Stacks let you manage the lifecycle of your deployments. Try it now →

Select a template **Basics** Review + create

Template



Customized template 
16 resources


 Edit template

 Edit parameters


 Visualize

Project details

Select the subscription to manage deployed resources and costs. Use resource groups like folders to organize and manage all your resources.

Subscription * 

cisco-secure-fw-virtual-test

Resource group * 

(New) secure-firewall-asav-demo

[Create new](#)

Instance details

Region * 

East US

Resource Name Prefix 

asavgwlb

Virtual Network Rg 

secure-firewall-demo-rg

Virtual Network Name 

secure-firewall-demo-vnet

Virtual Network Cidr 

10.0.0.0/16

Mgmt Subnet 

Management

Data Interface Subnet 

Data

Step 7

In the **Edit template** window, delete all the default content and copy the contents from the updated `azure_asav_gwlb_cluster_custom_image.json` or `azure_asav_nlb_cluster_custom_image.json` (depending on the type of autoscale solution you are deploying on Azure) and click **Save**. Or Click **Load file** to browse and upload this file from your computer.

Gateway Load Balancer IP ⓘ	10.0.1.4 ✓
Data Network Gateway Ip ⓘ	10.0.1.1 ✓
Ccl Subnet ⓘ	Ccl ✓
Ccl Subnet Start Addr ⓘ	10.0.3.4 ✓
Ccl Subnet End Addr ⓘ	10.0.3.24 ✓
Internal Port Number ⓘ	2000 ✓
External Port Number ⓘ	2001 ✓
Internal Segment Id ⓘ	800 ✓
External Segment Id ⓘ	801 ✓
Function Hosting Plan ⓘ	consumption ▼
Function App Subnet ⓘ	✓
Function App Subnet CIDR ⓘ	✓
Cluster Group Name ⓘ	asavgwlb-cls ✓
Image Id ⓘ	/subscriptions/1fd9165-db4d-4fc9-814b-8475c5adc637/resourceGro... ✓
Vm Size ⓘ	Standard_D4_v2 ▼
Asa Admin User Name ⓘ	cisco ✓
Asa Admin User Password ⓘ	*****
Scale In Threshold ⓘ	10 ✓
Scale Out Threshold ⓘ	60 ✓
Asav Cluster Size ⓘ	4 ✓
Metrics Average Duration ⓘ	1 ▼

Asav Cluster Size ⓘ	4 ✓
Metrics Average Duration ⓘ	1 ✓
Init Deployment Mode ⓘ	BULK ✓
Scaling Policy ⓘ	POLICY-2 ✓
License Throughput ⓘ	2G ✓
Smart License Token ⓘ	Zjc0YTMynjQtMDE0Yy00ZTA0LTgyZTkktZTExNmYyNDM0MWFkLTE3Mj... ✓
Asav Config File Url ⓘ	

Previous

Next

Review + create

- Step 8** In the parameter field sections, fill all the parameters. Refer to [Input Parameters, on page 45](#) for details about each parameter, then click **Review+Create**.
- Step 9** When a template deployment is successful, it creates all the required resources for the ASA Virtual auto scale for Azure solution. The Type column describes each resource, including the Logic App, VMSS, Load Balancers, Public IP address, etc.

Deploy the Azure Cluster Autoscale Function to the Function App

After the ARM template deployment is complete, the function app is created with the name `<resourceNamePrefix>-function-app`. After the function app is created, perform the steps given below to deploy the Azure cluster autoscale function to the function app.

Procedure

- Step 1** On your local computer, go to the target folder and run the following command to deploy the Azure cluster autoscale function to the function app.
- ```
az functionapp deployment source config-zip -g <Resource Group Name> -n <Function App Name>
--src <cluster_functions.zip> --build-remote true
```

**Step 2** Verify successful deployment of the functions by checking if the uploaded functions are visible in the **Overview** section of the function app as shown below.

Functions Metrics Properties Notifications (0)

{ } Set up local environment ∨ Refresh

Filter by name...

| Name                     | Trigger | Status    | Monitor                  |
|--------------------------|---------|-----------|--------------------------|
| AsaScaleIn               | HTTP    | ✓ Enabled | Invocations and more ... |
| AsaScaleOut              | HTTP    | ✓ Enabled | Invocations and more ... |
| AutoScaleManager         | HTTP    | ✓ Enabled | Invocations and more ... |
| CheckASAvLicenseConfig   | HTTP    | ✓ Enabled | Invocations and more ... |
| CleanupASAvConfiguration | HTTP    | ✓ Enabled | Invocations and more ... |
| ConfigureASAv            | HTTP    | ✓ Enabled | Invocations and more ... |
| DeleteUnconfiguredAsa    | HTTP    | ✓ Enabled | Invocations and more ... |
| GetAsaPublicIp           | HTTP    | ✓ Enabled | Invocations and more ... |
| StopNewConnections       | HTTP    | ✓ Enabled | Invocations and more ... |
| WaitForAsaToComeUp       | HTTP    | ✓ Enabled | Invocations and more ... |

## Update the Azure Logic App

The Logic App acts as the orchestrator for the Autoscale functionality. The ARM template creates a skeleton Logic App, which you then need to update manually to provide the information necessary to function as the auto scale orchestrator.

### Procedure

**Step 1** From the repository, retrieve the file *LogicApp.txt* to the local system and edit as shown below.

#### Important

Read and understand all of these steps before proceeding.

These manual steps are not automated in the ARM template so that only the Logic App can be upgraded independently later in time.

- Required: Find and replace all the occurrences of “SUBSCRIPTION\_ID” with your subscription ID information.
- Required: Find and replace all the occurrences of “RG\_NAME” with your resource group name.
- Required: Find and replace all of the occurrences of “FUNCTIONAPPNAME” to your function app name.

The following example shows a few of these lines in the *LogicApp.txt* file:

```
"AutoScaleManager": {
 "inputs": {
 "function": {
 "id":
"/subscriptions/SUBSCRIPTION_ID/resourceGroups/RG_NAME/providers/Microsoft.Web/sites/FUNCTIONAPPNAME/functions/AutoScaleManager"
```

```

 }
 .
 .
 },
 "Deploy_Changes_to_ASA": {
 "inputs": {
 "body": "@body('AutoScaleManager')",
 "function": {
 "id":
"/subscriptions/SUBSCRIPTION_ID/resourceGroups/RG_NAME/providers/Microsoft.Web/sites/FUNCTIONAPPNAME/functions/DeployConfiguration"
 }
 }
 }
 .
 .
 "DeviceDeRegister": {
 "inputs": {
 "body": "@body('AutoScaleManager')",
 "function": {
 "id":
"/subscriptions/SUBSCRIPTION_ID/resourceGroups/RG_NAME/providers/Microsoft.Web/sites/FUNCTIONAPPNAME/functions/DeviceDeRegister"
 }
 }
 },
 "runAfter": {
 "Delay_For_connection_Draining": [

```

- d) (Optional) Edit the trigger interval, or leave the default value (5). This is the time interval at which the Autoscale functionality is periodically triggered. The following example shows these lines in the *LogicApp.txt* file:

```

"triggers": {
 "Recurrence": {
 "conditions": [],
 "inputs": {},
 "recurrence": {
 "frequency": "Minute",
 "interval": 5
 }
 },

```

- e) (Optional) Edit the time to drain, or leave the default value (5). This is the time interval to drain existing connections from the ASA virtual before deleting the device during the Scale-In operation. The following example shows these lines in the *LogicApp.txt* file:

```

"actions": {
 "Branch_based_on_Scale-In_or_Scale-Out_condition": {
 "actions": {
 "Delay_For_connection_Draining": {
 "inputs": {
 "interval": {
 "count": 5,
 "unit": "Minute"
 }
 }
 }
 }
 }
}

```

- f) (Optional) Edit the cool down time, or leave the default value (10). This is the time to perform NO ACTION after the Scale-Out is complete. The following example shows these lines in the *LogicApp.txt* file:

```

"actions": {

```


```
"Branch_based_on_Scale-Out_or_Invalid_condition": {
 "actions": {
 "Cooldown_time": {
 "inputs": {
 "interval": {
 "count": 10,
 "unit": "Second"
 }
 }
 }
 }
}
```

### Note

These steps can also be done from the Azure portal. Consult the Azure documentation for more information.


**Step 2** Go to the **Logic App code view**, delete the default contents and paste the contents from the edited *LogicApp.txt* file, and click **Save**.

**Figure 8: Logic App Code View**

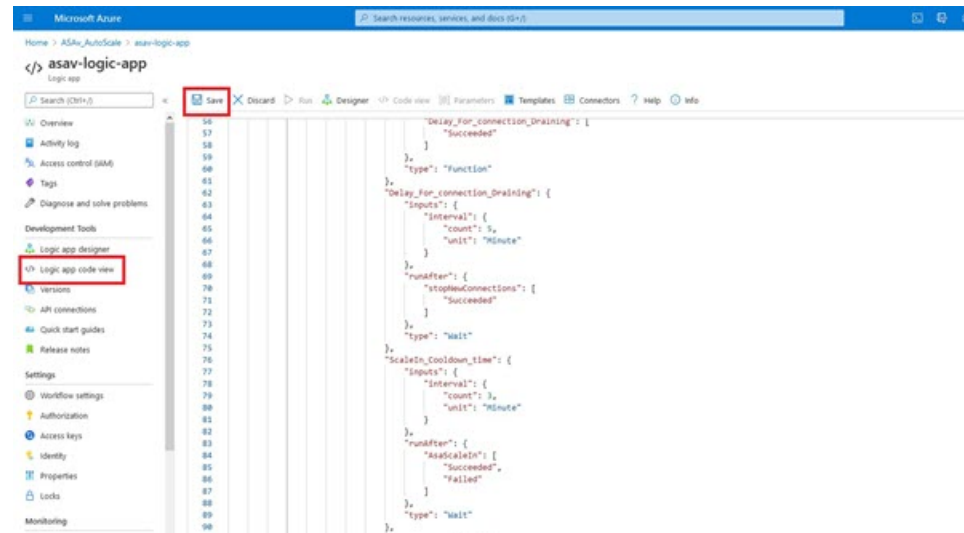


**Step 3** When you save the Logic App, it is in a 'Disabled' state. Click **Enable** when you want to start the Auto Scale Manager.

Figure 9: Enable Logic App

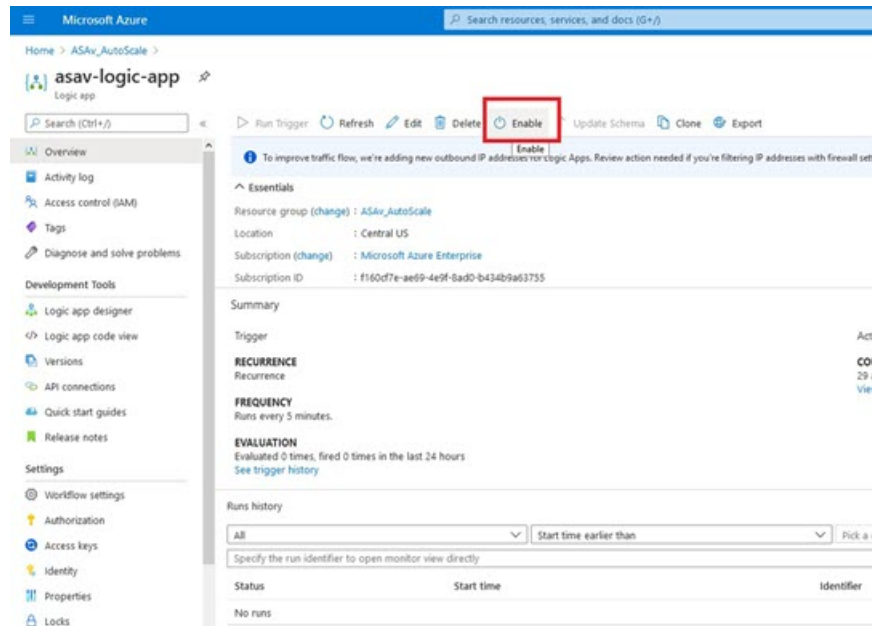

**Step 4** Once enabled, the tasks start running. Click the 'Running' status to see the activity.


Figure 10: Logic App Running Status

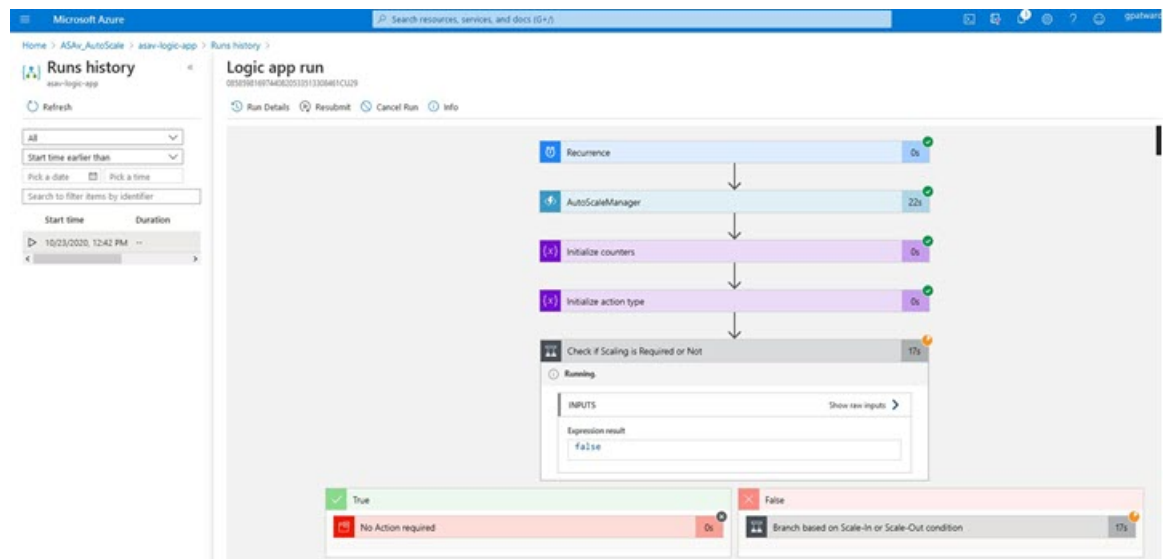

**Step 5** Once the Logic App starts, all the deployment-related steps are complete.

**Step 6** Verify in the VMSS that ASA virtual instances are being created.

**Figure 11: ASA Virtual Instances Running**

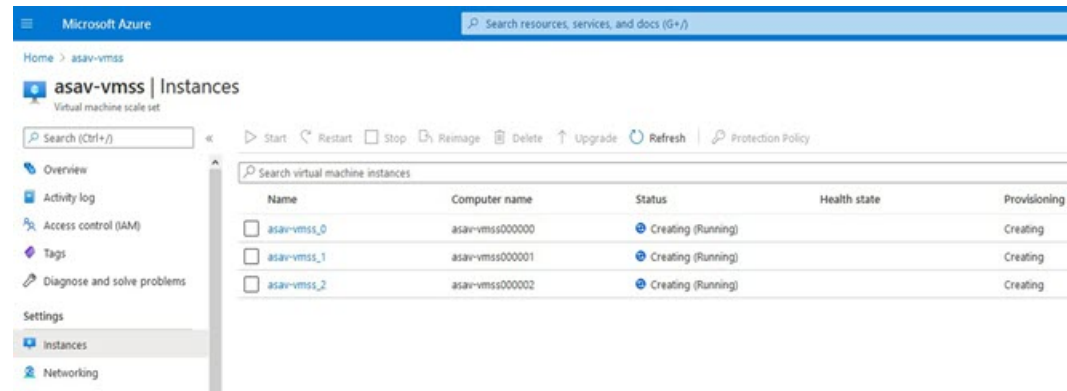

| Name        | Computer name   | Status             | Health state | Provisioning |
|-------------|-----------------|--------------------|--------------|--------------|
| asav-vmss_0 | asav-vmss000000 | Creating (Running) |              | Creating     |
| asav-vmss_1 | asav-vmss000001 | Creating (Running) |              | Creating     |
| asav-vmss_2 | asav-vmss000002 | Creating (Running) |              | Creating     |

In this example, three ASA virtual instances are launched because 'minAsaCount' was set to '3' and 'initDeploymentMode' was set to 'BULK' in the ARM template deployment.


## ASA Virtual Clustering with Autoscale Solution in GCP

From Release 9.24.1, the ASA Virtual clustering solution in Google Cloud Platform (GCP) is enhanced with dynamic autoscaling capabilities. The autoscale solution is based on CPU utilization metrics and helps to achieve optimal resource usage. It is deployed using Terraform-based templates.

You can choose the scaling option as either dynamic clustering or fixed-node clustering, depending on your requirements. You can also define the CPU threshold value, beyond which scaling will be initiated.

## Sample Topology of GCP Clustering Autoscale Solution

Figure 12: Sample Topology

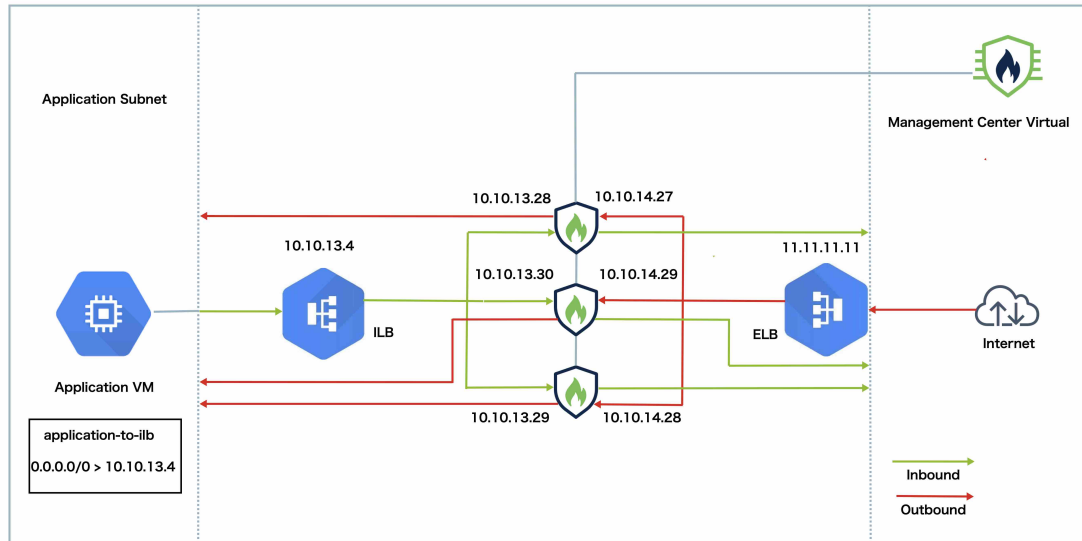

The topology shows both inbound and outbound traffic flow.

1. The ASA Virtual cluster is placed between the internal and external load balancers.
2. Inbound traffic from the internet goes to the external load balancer, which then transmits the traffic to the ASA Virtual cluster.
3. The ASA Virtual instance in the cluster inspects the traffic, and after inspection, forwards the traffic to the application VM.
4. Outbound traffic from the application VM goes to the internal load balancer. The load balancer forwards this traffic to the ASA Virtual cluster, which sends it to the internet.

## Requirements and Prerequisites

This section lists the requirements and supported configurations for ASA Virtual clustering autoscale solution on GCP .

### Model Requirements

- Supported ASA Virtual models:
- A valid Google Cloud Platform (GCP) account is required.
- Google Cloud SDK must be installed locally, or you should have access to GCP Cloud Shell.

### Licensing

- The license entitlement of the control node applies to all data nodes in a cluster, regardless of their initial performance tier configuration during boot-up.



- After cluster formation, changing the performance tier of any individual ASA Virtual is not allowed.
- By default, each unit includes a 100 kbps evaluation license.
- License behavior after deregistration:
  - Until reboot: The unit retains the existing throughput.
  - After reboot: The throughput reverts to the default 100 kbps.
- Only BYOL (Bring Your Own License) license type is supported.
- PAYG (Pay-As-You-Go) license type is not supported.

#### Supported configurations

- Cluster size: 1-16 nodes.
- Traffic topologies: North-South and East-West.
- Deployment mode: Deployment using Terraform templates.

## Templates

The following templates are available on GitHub.

- `infrastructure/main.tf` – Template for infrastructure deployment.
- `cluster_deployment/main.tf` – Template for cluster deployment.

## Deploying ASA Virtual Clustering Autoscale Solution on GCP

There are two steps in the deployment process:

1. Infrastructure deployment (optional) – to deploy the required network infrastructure.
2. Cluster deployment – to deploy the ASA Virtual cluster.



#### Note

If you choose to use your own infrastructure for deploying the ASA Virtual, then you can skip the infrastructure deployment step. However, it is essential to make sure that all the required resources are provided for the proper functioning of the solution.

## Infrastructure Deployment Parameters

The following parameters are used for the infrastructure deployment:

**Table 3: List of template parameters for infrastructure deployment (`infrastructure_params.tfvars`)**

| Parameter               | Description    | Example            |
|-------------------------|----------------|--------------------|
| <code>project_id</code> | GCP project ID | test-project-12345 |

| Parameter                   | Description                              | Example         |
|-----------------------------|------------------------------------------|-----------------|
| resource_name_prefix        | String (lowercase alphabets only.)       | demoasav        |
| region                      | GCP region to deploy                     | us-central1     |
| mgmt_ip_cidr_range          | Mgmt Subnet CIDR                         | 10.112.0.0/24   |
| vpc_connector_ip_cidr_range | Mgmt VPC Connector CIDR /28 subnet only  | 10.112.50.0/28  |
| inside_ip_cidr_range        | Inside Subnet CIDR                       | 10.112.1.0/24   |
| outside_ip_cidr_range       | Outside Subnet CIDR                      | 10.112.2.0/24   |
| ccl_ip_cidr_range           | CCL Subnet CIDR (/27 subnet recommended) | 10.112.100.0/27 |

## Deploy Infrastructure Using Terraform on GCP

The GCP Infrastructure Manager facilitates Terraform deployments as a stack. From this interface, you can manage resources and perform cleanups.

### Procedure

- 
- Step 1** Navigate to the [GCP console](#) and log in using your credentials.
- Step 2** Open Cloud Shell or local terminal.
- If you are using local terminal, make sure that GCP CLI is configured on your system.
- Step 3** Create a new directory.
- Example:**
- Use the command **mkdir infra** to create a directory named infra in Cloud Shell or your local terminal.
- Step 4** Navigate to the newly created directory.
- Example:**
- Use the command **cd infra** to change to the new directory.
- Step 5** Copy or download the infrastructure\_params.tfvars file from Cisco GitHub repository and save it to the new infra folder.
- Step 6** Open the infrastructure\_params.tfvars file and update all the placeholder values as required. Refer to [Infrastructure Deployment Parameters, on page 61](#).
- Step 7** Use the following commands after updating placeholder values to start the deployment.

```
gcloud infra-manager deployments \
 apply
"projects/<project_id>/locations/<region>/deployments
/<deployment_name>" \
--location="<region>" \
--git-source-repo="<repo name>" \
--git-source-directory="infrastructure" \
--git-source-ref="<branch name>" \
--serviceaccount="
```

```
projects/<project_id>/serviceAccounts/<service_account_name>" \
--artifacts-gcs-bucket="gs://<bucket_name>/artifacts" \
--inputs-file="/path/to/your/infra_params.tfvars"
```

**Table 4: Parameters description**

| Parameter            | Description                                                                              |
|----------------------|------------------------------------------------------------------------------------------|
| deployment_name      | Name of the Terraform deployment stack that will be shown in GCP Infrastructure Manager. |
| location             | The location or region where the deployment will be applied.                             |
| git-source-repo      | The name of the Git repository that contains the source code (Cisco GitHub Link).        |
| git-source-directory | The directory in the Git repository where the infrastructure code is located.            |
| git-source-ref       | The branch name in the Git repository to be used for the deployment.                     |
| service-account      | Name of the service account.                                                             |
| artifacts-gcs-bucket | The Google Cloud Storage bucket to store artifacts related to the deployment (optional). |
| inputs-file          | The file path to the input parameters for the infrastructure configuration.              |

**Note**

If you do not use the template to deploy the infrastructure, then you must provide the following resources for proper deployment and functioning of the solution.

- Management VPC
  - Management Subnet
  - Management Subnet for VPC connector
  - Management Firewall rule name
- Inside VPC
  - Inside Subnet
  - Inside firewall rule name
- Outside VPC
  - Outside Subnet
  - Outside Firewall rule name
  - Nat GW
- CCL VPC

- CCL Subnet
- CCL firewall rule name.
- Diagnostic VPC (optional)
  - Diagnostic Firewall rule name
- VPC Connector with management subnet

## Cluster Deployment Parameters

The following input parameters are used to deploy the cluster.

**Table 5: List of template parameters for cluster deployment**

| Parameter                    | Description                                                            | Example                                                      |
|------------------------------|------------------------------------------------------------------------|--------------------------------------------------------------|
| <b>Project configuration</b> |                                                                        |                                                              |
| project_id                   | The GCP project ID                                                     | test-project-12345                                           |
| resource_name_prefix         | Prefix for naming resources                                            | democluster                                                  |
| type_of_deployment           | Type of deployment (north_south or east_west)                          | north_south                                                  |
| region                       | GCP region                                                             | us-east1                                                     |
| zone1                        | Deployment zone                                                        | a                                                            |
| zone2                        | Deployment zone                                                        | b                                                            |
| zone3                        | Deployment zone                                                        | c                                                            |
| <b>VM configuration</b>      |                                                                        |                                                              |
| machine_type                 | VM instance type                                                       | n1-standard-4                                                |
| source_image_url             | URL of the source image                                                | projects/my-project/global/images/my-image                   |
| assign_public_ip_to_mgmt     | Whether to assign a public IP to the management interface (true/false) | false                                                        |
| public_key                   | SSH public key for authentication                                      | ssh-rsa<br>AAAAB3NzaC1yc2EAAAADAQABAAQ...                    |
| service_account_mail_id      | Service account email                                                  | service-account-mail@example-project.iam.gserviceaccount.com |
| asav_password_secret_name    | Secret name for ASAv password                                          | asav_password_secret in GCP Secret Manager                   |

| Parameter                        | Description                                      | Example                                        |
|----------------------------------|--------------------------------------------------|------------------------------------------------|
| asav_en_password_secret_name     | Secret name for ASAv encrypted password          | asav_en_password_secret" in GCP Secret Manager |
| <b>VPC configuration</b>         |                                                  |                                                |
| mgmt_vpc_name                    | Management VPC name                              | <resource_name_prefix>-mgmt-vpc                |
| mgmt_subnet_name                 | Management subnet name                           | <resource_name_prefix>-mgmt-subnet             |
| inside_vpc_name                  | Inside VPC name                                  | <resource_name_prefix>-inside-vpc              |
| inside_subnet_name               | Inside subnet name                               | <resource_name_prefix>-inside-subnet           |
| outside_vpc_name                 | Outside VPC name                                 | <resource_name_prefix>-outside-vpc             |
| outside_subnet_name              | Outside subnet name                              | <resource_name_prefix>-outside-subnet          |
| ccl_vpc_name                     | Name of the clustering VPC                       | <resource_name_prefix>-ccl-vpc                 |
| ccl_subnet_name                  | Name of the clustering subnet                    | <resource_name_prefix>-ccl-subnet              |
| vpc_connector_name               | Name of the VPC connector                        | my-vpc-connector                               |
| <b>Firewall rules</b>            |                                                  |                                                |
| ccl_firewall_rule_name           | Name of the clustering firewall rule             | <resource_name_prefix>-mgmt-firewall-rule      |
| mgmt_firewall_rule_name          | Name of the management firewall rule             | <resource_name_prefix>-mgmt-firewall-rule      |
| inside_firewall_rule_name        | Name of the inside firewall rule                 | <resource_name_prefix>-in-firewall-rule        |
| outside_firewall_rule_name       | Name of the outside firewall rule                | <resource_name_prefix>-out-firewall-rule       |
| <b>Cluster</b>                   |                                                  |                                                |
| cluster_grp_name                 | Name of the cluster group                        | cluster-group-name                             |
| ccl_subnet_firstIp               | First IP address in the clustering subnet        | 10.0.0.1                                       |
| ccl_subnet_lastIp                | Last IP address in the clustering subnet         | 10.0.0.254                                     |
| <b>Autoscaling configuration</b> |                                                  |                                                |
| auto_scaling                     | Enable or disabling autoscaling                  | true/false                                     |
| cpu_utilization_target           | Target CPU utilization for autoscaling [0.0-1.0] | 0.2                                            |

| Parameter                                   | Description                                                            | Example             |
|---------------------------------------------|------------------------------------------------------------------------|---------------------|
| min_asa_count                               | Minimum number of ASA Virtual instances in the autoscaling group       | 1                   |
| max_asa_count                               | Maximum number of ASA Virtual instances in the autoscaling group       | 2                   |
| <b>Internal Load Balancer configuration</b> |                                                                        |                     |
| ilb_frontend_protocol                       | Frontend protocol (TCP/UDP)                                            | TCP                 |
| ilb_backend_protocol                        | Backend protocol                                                       | TCP                 |
| ilb_health_check_port                       | ILB Health-check balancer port                                         | 80                  |
| ilb_timeout_sec                             | Load balancer timeout (seconds)                                        | 5                   |
| ilb_check_interval_sec                      | Interval between health checks for ILB (seconds)                       | 10                  |
| ilb_unhealthy_threshold                     | Unhealthy threshold for the internal load balancer                     | 3                   |
| <b>External Load Balancer configuration</b> |                                                                        |                     |
| elb_frontend_protocol                       | Frontend protocol name for External Load Balancer (TCP/UDP)            | TCP                 |
| elb_backend_protocol                        | Backend protocol name for External Load Balancer (TCP/UDP/UNSPECIFIED) | TCP                 |
| elb_front_end_ports                         | List of ELB frontend (listener) ports                                  | all or [80, 443]    |
| elb_health_check_port                       | ELB health-check port                                                  | 80                  |
| elb_timeout_sec                             | Load balancer timeout (seconds)                                        | 5                   |
| elb_unhealthy_threshold                     | Unhealthy threshold for the external load balancer                     | 2                   |
| elb_check_interval_sec                      | Interval between health checks for ELB (seconds)                       | 10                  |
| <b>Licensing</b>                            |                                                                        |                     |
| license_throughput                          | Throughput for the license                                             | 10G                 |
| license_id_token                            | License ID token                                                       | my-license-id-token |

## Deploy Cluster Using Terraform on GCP

The GCP Infrastructure Manager facilitates Terraform deployments as a stack. From this interface, you can manage resources and perform cleanups.

### Procedure

- Step 1** Navigate to the [GCP console](#) and log in using your credentials.
- Step 2** Open Cloud Shell or local terminal.
- If you are using local terminal, make sure that GCP CLI is configured on your system.
- Step 3** Create a new directory.
- Example:**
- Use the command **mkdir cluster** to create a directory named cluster in Cloud Shell or your local terminal.
- Step 4** Navigate to the newly created directory.
- Example:**
- Use the command **cd cluster** to change to the new directory.
- Step 5** Copy or download the cluster\_params.tfvars file from Cisco GitHub repository and save it to the new cluster folder.
- Step 6** Open the cluster\_params.tfvars file and update all the placeholder values as required. Refer to [Cluster Deployment Parameters, on page 64](#).
- Step 7** Use the following commands after updating placeholder values to start the deployment.

```
gcloud infra-manager deployments \
 apply "projects/<project_id>/locations/<region>/deployments/<deployment_name>" \
 --location="<region>" \
 --git-source-repo="<repo name>" \
 --git-source-directory="cluster_deployment" \
 --git-source-ref="<branch name>" \
 --service-account="projects/<project_id>/serviceAccounts/<service_account_name>" \
 --artifacts-gcs-bucket="gs://<bucket_name>/artifacts" \
 --inputs-file="/path/to/cluster_params.tfvars"
```

**Table 6: Parameters description**

| Parameter            | Description                                                                              |
|----------------------|------------------------------------------------------------------------------------------|
| deployment_name      | Name of the Terraform deployment stack that will be shown in GCP infrastructure manager. |
| location             | The location or region where the deployment will be applied.                             |
| git-source-repo      | The name of the Git repository that contains the source code (Cisco GitHub Link).        |
| git-source-directory | The directory in the Git repository where the infrastructure code is located.            |

| Parameter            | Description                                                                                                       |
|----------------------|-------------------------------------------------------------------------------------------------------------------|
| git-source-ref       | The branch name in the Git repository to be used for the deployment.                                              |
| service-account      | Name of the service account.                                                                                      |
| artifacts-gcs-bucket | The Google Cloud Storage bucket to store artifacts related to the deployment, for example, Terraform state files. |
| inputs-file          | The file path to the input parameters for the cluster deployment.                                                 |

## Deployment Configurations after Cluster Deployment

To create a route inside the VPC to forward the required traffic through an Internal Load balancer on Google Cloud Shell, follow these steps:

```
gcloud compute routes create <ilb-route-name>
--network=<inside-vpc-name> --priority=1000 --destination-range=0.0.0.0/0
--next-hop-ilb=<ilb-forwarding-rule-name> --next-hop-ilb-region=<region>
```



**Note** You can create route from the GCP UI as well. To create a route from the GCP UI, follow these steps:

1. In the [GCP UI](#), navigate to Routes > Route Management > Create route.
2. Fill in the Create a route dialog box.
  - a. **Name:** Specify a route name.
  - b. **Network:** Select **<inside-vpc-name>**.
  - c. **Route type:** Select **Static route**.
  - d. **Destination IPv4 range:** Enter **0.0.0.0/0**.
  - e. **Priority:** Set to **1000**.
  - f. **Next Hop:** Select **Specify a forwarding rule of internal passthrough Network Load balancer**.
  - g. **Forwarding rule name:** Select **<forwarding-rule-for-ilb>**.
3. Click **Create** to create the route.

## Deploy the Cluster in GCP Manually

Create the Day0 Configuration for GCP:

To deploy the cluster manually, prepare the day0 configuration.



```
{
 "AdminPassword": "password",
 "Hostname": "hostname",
 "FirewallMode": "Routed",
 "ManageLocally": "No",
 "Diagnostic": "OFF", //Optional user input from version 7.4.1
 "Cluster": {
 "CclSubnetRange": "ip_address_start ip_address_end",
 "ClusterGroupName": "cluster_name"
 }
}
```

For example:

```
{
 "AdminPassword": "C15co@!23",
 "Hostname": "cisco-asa",
 "FirewallMode": "routed",
 "Diagnostic": "OFF",
 "ManageLocally": "No",
 "Cluster": {
 "CclSubnetRange": "10.10.65.2 10.10.65.29",
 "ClusterGroupName": "gcp-cls-asa"
 }
}
```

## Troubleshooting GCP Clustering with Autoscale

**Issue: The cluster is not formed.**

**Workaround:**

- Check the IP address of NVE-only cluster interface. Make sure you can ping the NVE-only cluster interface of other nodes.
- Make sure that the IP addresses of the NVE-only cluster interfaces are part of the object group.
- Make sure that the NVE (Network Virtualization Edge) interface is configured with the corresponding object group.
- Make sure that the cluster interface in the cluster group has the correct VNI (Virtual Network Identifier) interface. This VNI interface should have the NVE with the corresponding object group.
- Each node has its own cluster interface IP address. Make sure the nodes can ping each other to verify connectivity.

## Customize the Clustering Operation

You can customize clustering health monitoring, TCP connection replication delay, flow mobility and other optimizations, either as part of the Day 0 configuration or after you deploy the cluster.

Perform these procedures on the control node.

## Configure Basic ASA Cluster Parameters

You can customize cluster settings on the control node.

## Procedure

**Step 1** Enter cluster configuration mode:

**cluster group** *name*

**Step 2** (Optional) Enable console replication from data nodes to the control node:

**console-replicate**

This feature is disabled by default. The ASA prints out some messages directly to the console for certain critical events. If you enable console replication, data nodes send the console messages to the control node so that you only need to monitor one console port for the cluster.

**Step 3** Set the minimum trace level for clustering events:

**trace-level** *level*

Set the minimum level as desired:

- **critical**—Critical events (severity=1)
- **warning**—Warnings (severity=2)
- **informational**—Informational events (severity=3)
- **debug**—Debugging events (severity=4)

**Step 4** Set the keepalive interval for flow state refresh messages (clu\_keepalive and clu\_update messages) from the flow owner to the director and backup owner.

**clu-keepalive-interval** *seconds*

- *seconds*—15 to 55. The default is 15.

You may want to set the interval to be longer than the default to reduce the amount of traffic on the cluster control link.

**Step 5** Enable concurrent join.

**concurrent-join**

This feature is enabled by default. When enabled, cluster nodes join concurrently instead of sequentially. If you have NAT and VPN distributed mode enabled, you cannot use concurrent join. To view incompatible configuration, enter **show cluster info concurrent-join incompatible-config**.

### Example:

```
ciscoasa(cfg-cluster)# concurrent-join
ciscoasa(cfg-cluster)# show cluster info concurrent-join incompatible-config
```

```
INFO: Clustering is not compatible with following commands. User must
manually remove them to activate the cluster concurrent-join feature.
nat (gre_outside,gre_inside) source static any interface destination static interface any
unidirectional
```

```
ciscoasa(cfg-cluster)# no nat (gre_outside,gre_inside) source static any interface destination
static interface any unidirectional
```

```
ciscoasa(cfg-cluster)# show cluster info concurrent-join incompatible-config
INFO: No concurrent-join incompatible config found.
```

## Configure Health Monitoring and Auto-Rejoin Settings

This procedure configures node and interface health monitoring.

You might want to disable health monitoring of non-essential interfaces, for example, the management interface. Health monitoring is not performed on VLAN subinterfaces. You cannot configure monitoring for the cluster control link; it is always monitored.

### Procedure

**Step 1** Enter cluster configuration mode.

**cluster group** *name*

**Example:**

```
ciscoasa(config)# cluster group test
ciscoasa(cfg-cluster)#
```

**Step 2** Customize the cluster node health check feature.

**health-check** [**holdtime** *timeout*]

To determine node health, the ASA cluster nodes send heartbeat messages on the cluster control link to other nodes. If a node does not receive any heartbeat messages from a peer node within the holdtime period, the peer node is considered unresponsive or dead.

- **holdtime** *timeout*—Determines the amount of time between node heartbeat status messages, between .3 and 45 seconds; The default is 3 seconds.

When any topology changes occur (such as adding or removing a data interface, enabling or disabling an interface on the ASA or the switch) you should disable the health check feature and also disable interface monitoring for the disabled interfaces (**no health-check monitor-interface**). When the topology change is complete, and the configuration change is synced to all nodes, you can re-enable the health check feature.

**Example:**

```
ciscoasa(cfg-cluster)# health-check holdtime 5
```

**Step 3** Configure the CPU usage threshold to suspend the health check on the cluster control link.

**cpu-healthcheck-threshold** *percent*

*percent*—Between 70 and 100. The default is 90.

When a cluster node CPU usage is high, the health check will be suspended, and the node will not be marked as unhealthy.

**Step 4** Disable the interface health check on an interface.

**no health-check monitor-interface** *interface\_id*

The interface health check monitors for link failures. The amount of time before the ASA removes a member from the cluster depends on whether the node is an established member or is joining the cluster. Health check is enabled by default for all interfaces. You can disable it per interface using the **no** form of this command. You might want to disable health monitoring of non-essential interfaces, for example, the management interface.

- *interface\_id*—Disables monitoring of an interface. Health monitoring is not performed on VLAN subinterfaces. You cannot configure monitoring for the cluster control link; it is always monitored.

When any topology changes occur (such as adding or removing a data interface, enabling or disabling an interface on the ASA or the switch) you should disable the health check feature (**no health-check**) and also disable interface monitoring for the disabled interfaces. When the topology change is complete, and the configuration change is synced to all nodes, you can re-enable the health check feature.

**Example:**

```
ciscoasa(cfg-cluster)# no health-check monitor-interface management1/1
```

**Step 5** Customize the auto-rejoin cluster settings after a health check failure.

**health-check {data-interface | cluster-interface | system} auto-rejoin [unlimited | auto\_rejoin\_max]**  
*auto\_rejoin\_interval auto\_rejoin\_interval\_variation*

- **system**—Specifies the auto-rejoin settings for internal errors. Internal failures include: application sync timeout; inconsistent application statuses; and so on.
- **unlimited**—(Default for the **cluster-interface**) Does not limit the number of rejoin attempts.
- *auto\_rejoin\_max*—Sets the number of rejoin attempts, between 0 and 65535. **0** disables auto-rejoining. The default for the **data-interface** and **system** is 3.
- *auto\_rejoin\_interval*—Defines the interval duration in minutes between rejoin attempts, between 2 and 60. The default value is 5 minutes. The maximum total time that the node attempts to rejoin the cluster is limited to 14400 minutes (10 days) from the time of last failure.
- *auto\_rejoin\_interval\_variation*—Defines if the interval duration increases. Set the value between 1 and 3: **1** (no change); **2** (2 x the previous duration), or **3** (3 x the previous duration). For example, if you set the interval duration to 5 minutes, and set the variation to 2, then the first attempt is after 5 minutes; the 2nd attempt is 10 minutes (2 x 5); the 3rd attempt 20 minutes (2 x 10), and so on. The default value is **1** for the cluster-interface and **2** for the data-interface and system.

**Example:**

```
ciscoasa(cfg-cluster)# health-check data-interface auto-rejoin 10 3 3
```

**Step 6** Configure the debounce time before the ASA considers an interface to be failed and the node is removed from the cluster.

**health-check monitor-interface debounce-time** *ms*

**Example:**

```
ciscoasa(cfg-cluster)# health-check monitor-interface debounce-time 300
```

Set the debounce time between 300 and 9000 ms. The default is 500 ms. Lower values allow for faster detection of interface failures. Note that configuring a lower debounce time increases the chances of false-positives. When an interface status update occurs, the ASA waits the number of milliseconds specified before marking the interface as failed and the node is removed from the cluster.

### Step 7 (Optional) Configure traffic load monitoring.

**load-monitor** [**frequency** *seconds*] [**intervals** *intervals*]

- **frequency** *seconds*—Sets the time in seconds between monitoring messages, between 10 and 360 seconds. The default is 20 seconds.
- **intervals** *intervals*—Sets the number of intervals for which the ASA maintains data, between 1 and 60. The default is 30.

You can monitor the traffic load for cluster members, including total connection count, CPU and memory usage, and buffer drops. If the load is too high, you can choose to manually disable clustering on the node if the remaining nodes can handle the load, or adjust the load balancing on the external switch. This feature is enabled by default. You can periodically monitor the traffic load. If the load is too high, you can choose to manually disable clustering on the node.

Use the **show cluster info load-monitor** command to view the traffic load.

#### Example:

```
ciscoasa(cfg-cluster)# load-monitor frequency 50 intervals 25
ciscoasa(cfg-cluster)# show cluster info load-monitor
ID Unit Name
0 B
1 A_1
Information from all units with 50 second interval:
Unit Connections Buffer Drops Memory Used CPU Used
Average from last 1 interval:
0 0 0 14 25
1 0 0 16 20
Average from last 25 interval:
0 0 0 12 28
1 0 0 13 27
```

#### Example

The following example configures the health-check holdtime to .3 seconds; disables monitoring on the Management 0/0 interface; sets the auto-rejoin for data interfaces to 4 attempts starting at 2 minutes, increasing the duration by 3 x the previous interval; and sets the auto-rejoin for the cluster control link to 6 attempts every 2 minutes.

```
ciscoasa(config)# cluster group test
ciscoasa(cfg-cluster)# health-check holdtime .3
ciscoasa(cfg-cluster)# no health-check monitor-interface management0/0
ciscoasa(cfg-cluster)# health-check data-interface auto-rejoin 4 2 3
```

```
ciscoasa(cfg-cluster)# health-check cluster-interface auto-rejoin 6 2 1
```

## Manage Cluster Nodes

After you deploy the cluster, you can change the configuration and manage cluster nodes.

### Become an Inactive Node

To become an inactive member of the cluster, disable clustering on the node while leaving the clustering configuration intact.



**Note** When an ASA becomes inactive (either manually or through a health check failure), all data interfaces are shut down; only the management-only interface can send and receive traffic. To resume traffic flow, re-enable clustering; or you can remove the node altogether from the cluster. The management interface remains up using the IP address the node received from the cluster IP pool. However if you reload, and the node is still inactive in the cluster (for example, you saved the configuration with clustering disabled), then the management interface is disabled. You must use the console port for any further configuration.

#### Procedure

**Step 1** Enter cluster configuration mode:

**cluster group** *name*

**Example:**

```
ciscoasa(config)# cluster group pod1
```

**Step 2** Disable clustering:

**no enable**

If this node was the control node, a new control election takes place, and a different member becomes the control node.

The cluster configuration is maintained, so that you can enable clustering again later.

## Deactivate a Data Node from the Control Node

To deactivate a member other than the node you are logged into, perform the following steps.



**Note** When an ASA becomes inactive, all data interfaces are shut down; only the management-only interface can send and receive traffic. To resume traffic flow, re-enable clustering. The management interface remains up using the IP address the node received from the cluster IP pool. However if you reload, and the node is still inactive in the cluster (for example, if you saved the configuration with clustering disabled), the management interface is disabled. You must use the console port for any further configuration.

## Procedure

Remove the node from the cluster.

**cluster remove unit** *node\_name*

The bootstrap configuration remains intact, as well as the last configuration synched from the control node, so that you can later re-add the node without losing your configuration. If you enter this command on a data node to remove the control node, a new control node is elected.

To view member names, enter **cluster remove unit ?**, or enter the **show cluster info** command.

### Example:

```
ciscoasa(config)# cluster remove unit ?

Current active units in the cluster:
asa2

ciscoasa(config)# cluster remove unit asa2
WARNING: Clustering will be disabled on unit asa2. To bring it back
to the cluster please logon to that unit and re-enable clustering
```

## Rejoin the Cluster

If a node was removed from the cluster, for example for a failed interface or if you manually deactivated a member, you must manually rejoin the cluster.

## Procedure

**Step 1** At the console, enter cluster configuration mode:

**cluster group** *name*

### Example:

```
ciscoasa(config)# cluster group pod1
```

**Step 2** Enable clustering.

**enable**

---

## Leave the Cluster

If you want to leave the cluster altogether, you need to remove the entire cluster bootstrap configuration. Because the current configuration on each node is the same (synced from the active unit), leaving the cluster also means either restoring a pre-clustering configuration from backup, or clearing your configuration and starting over to avoid IP address conflicts.

### Procedure

---

**Step 1** For a data node, disable clustering:

```
cluster group cluster_name
no enable
```

**Example:**

```
ciscoasa(config)# cluster group cluster1
ciscoasa(cfg-cluster)# no enable
```

You cannot make configuration changes while clustering is enabled on a data node.

**Step 2** Clear the cluster configuration:

```
clear configure cluster
```

The ASA shuts down all interfaces including the management interface and cluster control link.

**Step 3** Disable cluster interface mode:

```
no cluster interface-mode
```

The mode is not stored in the configuration and must be reset manually.

**Step 4** If you have a backup configuration, copy the backup configuration to the running configuration:

```
copy backup_cfg running-config
```

**Example:**

```
ciscoasa(config)# copy backup_cluster.cfg running-config

Source filename [backup_cluster.cfg]?

Destination filename [running-config]?
ciscoasa(config)#
```

**Step 5** Save the configuration to startup:

```
write memory
```



- Step 6** If you do not have a backup configuration, reconfigure management access. Be sure to change the interface IP addresses, and restore the correct hostname, for example.
- 

## Change the Control Node



**Caution** The best method to change the control node is to disable clustering on the control node, wait for a new control election, and then re-enable clustering. If you must specify the exact node you want to become the control node, use the procedure in this section. Note, however, that for centralized features, if you force a control node change using this procedure, then all connections are dropped, and you have to re-establish the connections on the new control node.

---

To change the control node, perform the following steps.

### Procedure

---

Set a new node as the control node:

**cluster control-node unit***node\_name*

**Example:**

```
ciscoasa(config)# cluster control-node unit asa2
```

You will need to reconnect to the Main cluster IP address.

To view member names, enter **cluster control-node unit ?** (to see all names except the current node), or enter the **show cluster info** command.

---

## Execute a Command Cluster-Wide

To send a command to all nodes in the cluster, or to a specific node, perform the following steps. Sending a **show** command to all nodes collects all output and displays it on the console of the current node. Other commands, such as **capture** and **copy**, can also take advantage of cluster-wide execution.

### Procedure

---

Send a command to all nodes, or if you specify the node name, a specific node:

**cluster exec** [**unit** *node\_name*] *command*

**Example:**

```
ciscoasa# cluster exec show xlate
```

To view node names, enter **cluster exec unit ?** (to see all names except the current node), or enter the **show cluster info** command.

### Examples

To copy the same capture file from all nodes in the cluster at the same time to a TFTP server, enter the following command on the control node:

```
ciscoasa# cluster exec copy /pcap capture: tftp://10.1.1.56/capture1.pcap
```

Multiple PCAP files, one from each node, are copied to the TFTP server. The destination capture file name is automatically attached with the node name, such as capture1\_asa1.pcap, capture1\_asa2.pcap, and so on. In this example, asa1 and asa2 are cluster node names.

## Monitoring the Cluster

You can monitor and troubleshoot cluster status and connections.

### Monitoring Cluster Status

See the following commands for monitoring cluster status:

- **show cluster info [health [details]]**

With no keywords, the **show cluster info** command shows the status of all members of the cluster.

The **show cluster info health** command shows the current health of interfaces, nodes, and the cluster overall. The **details** keyword shows the number heartbeat message failures.

See the following output for the **show cluster info** command:

```
ciscoasa# show cluster info
Cluster stbu: On
This is "C" in state DATA_NODE
 ID : 0
 Site ID : 1
 Version : 9.4(1)
 Serial No.: P3000000025
 CCL IP : 10.0.0.3
 CCL MAC : 000b.fcf8.c192
 Last join : 17:08:59 UTC Sep 26 2011
 Last leave: N/A
Other members in the cluster:
Unit "D" in state DATA_NODE
 ID : 1
 Site ID : 1
 Version : 9.4(1)
 Serial No.: P3000000001
```

```

CCL IP : 10.0.0.4
CCL MAC : 000b.fcf8.c162
Last join : 19:13:11 UTC Sep 23 2011
Last leave : N/A
Unit "A" in state CONTROL_NODE
ID : 2
Site ID : 2
Version : 9.4(1)
Serial No.: JAB0815R0JY
CCL IP : 10.0.0.1
CCL MAC : 000f.f775.541e
Last join : 19:13:20 UTC Sep 23 2011
Last leave : N/A
Unit "B" in state DATA_NODE
ID : 3
Site ID : 2
Version : 9.4(1)
Serial No.: P3000000191
CCL IP : 10.0.0.2
CCL MAC : 000b.fcf8.c61e
Last join : 19:13:50 UTC Sep 23 2011
Last leave : 19:13:36 UTC Sep 23 2011

```

- **show cluster info auto-join**

Shows whether the cluster node will automatically rejoin the cluster after a time delay and if the failure conditions (such as waiting for the license, chassis health check failure, and so on) are cleared. If the node is permanently disabled, or if the node is already in the cluster, then this command will not show any output.

See the following outputs for the **show cluster info auto-join** command:

```

ciscoasa(cfg-cluster)# show cluster info auto-join
Unit will try to join cluster in 253 seconds.
Quit reason: Received control message DISABLE

ciscoasa(cfg-cluster)# show cluster info auto-join
Unit will try to join cluster when quit reason is cleared.
Quit reason: Control node has application down that data node has up.

ciscoasa(cfg-cluster)# show cluster info auto-join
Unit will try to join cluster when quit reason is cleared.
Quit reason: Chassis-blade health check failed.

ciscoasa(cfg-cluster)# show cluster info auto-join
Unit will try to join cluster when quit reason is cleared.
Quit reason: Service chain application became down.

ciscoasa(cfg-cluster)# show cluster info auto-join
Unit will try to join cluster when quit reason is cleared.
Quit reason: Unit is kicked out from cluster because of Application health check failure.

ciscoasa(cfg-cluster)# show cluster info auto-join
Unit join is pending (waiting for the smart license entitlement: ent1)

ciscoasa(cfg-cluster)# show cluster info auto-join
Unit join is pending (waiting for the smart license export control flag)

```

- **show cluster info transport {asp | cp [detail]}**

Shows transport related statistics for the following:

- **asp** —Data plane transport statistics.
- **cp** —Control plane transport statistics.

If you enter the **detail** keyword, you can view cluster reliable transport protocol usage so you can identify packet drop issues when the buffer is full in the control plane. See the following output for the **show cluster info transport cp detail** command:

```
ciscoasa# show cluster info transport cp detail
Member ID to name mapping:
 0 - unit-1-1 2 - unit-4-1 3 - unit-2-1
```

Legend:

```
U - unreliable messages
UE - unreliable messages error
SN - sequence number
ESN - expecting sequence number
R - reliable messages
RE - reliable messages error
RDC - reliable message deliveries confirmed
RA - reliable ack packets received
RFR - reliable fast retransmits
RTR - reliable timer-based retransmits
RDP - reliable message dropped
RDPR - reliable message drops reported
RI - reliable message with old sequence number
RO - reliable message with out of order sequence number
ROW - reliable message with out of window sequence number
ROB - out of order reliable messages buffered
RAS - reliable ack packets sent
```

This unit as a sender

```

 all 0 2 3
U 123301 3867966 3230662 3850381
UE 0 0 0 0
SN 1656a4ce acb26fe 5f839f76 7b680831
R 733840 1042168 852285 867311
RE 0 0 0 0
RDC 699789 934969 740874 756490
RA 385525 281198 204021 205384
RFR 27626 56397 0 0
RTR 34051 107199 111411 110821
RDP 0 0 0 0
RDPR 0 0 0 0
```

This unit as a receiver of broadcast messages

```

 0 2 3
U 111847 121862 120029
R 7503 665700 749288
ESN 5d75b4b3 6d81d23 365ddd50
RI 630 34278 40291
RO 0 582 850
ROW 0 566 850
ROB 0 16 0
RAS 1571 123289 142256
```

This unit as a receiver of unicast messages

```

 0 2 3
```

```

U 1 3308122 4370233
R 513846 879979 1009492
ESN 4458903a 6d841a84 7b4e7fa7
RI 66024 108924 102114
RO 0 0 0
ROW 0 0 0
ROB 0 0 0
RAS 130258 218924 228303

```

#### Gated Tx Buffered Message Statistics

```

current sequence number: 0
```

```
total: 0
current: 0
high watermark: 0
```

```
delivered: 0
deliver failures: 0
```

```
buffer full drops: 0
message truncate drops: 0
```

```
gate close ref count: 0
```

```
num of supported clients:45
```

#### MRT Tx of broadcast messages

```
=====
```

```
Message high watermark: 3%
```

```
Total messages buffered at high watermark: 5677
```

```
[Per-client message usage at high watermark]
```

```

Client name Total messages Percentage
Cluster Redirect Client 4153 73%
Route Cluster Client 419 7%
RRI Cluster Client 1105 19%
```

```
Current MRT buffer usage: 0%
```

```
Total messages buffered in real-time: 1
```

```
[Per-client message usage in real-time]
```

```
Legend:
```

```
F - MRT messages sending when buffer is full
```

```
L - MRT messages sending when cluster node leave
```

```
R - MRT messages sending in Rx thread
```

```

Client name Total messages Percentage F L R
VPN Clustering HA Client 1 100% 0 0 0
```

#### MRT Tx of unitcast messages(to member\_id:0)

```
=====
```

```
Message high watermark: 31%
```

```
Total messages buffered at high watermark: 4059
```

```
[Per-client message usage at high watermark]
```

```

Client name Total messages Percentage
Cluster Redirect Client 3731 91%
RRI Cluster Client 328 8%
```

```
Current MRT buffer usage: 29%
```

```
Total messages buffered in real-time: 3924
```

```
[Per-client message usage in real-time]
```

```
Legend:
```

```
F - MRT messages sending when buffer is full
```

```

L - MRT messages sending when cluster node leave
R - MRT messages sending in Rx thread

Client name Total messages Percentage F L R
Cluster Redirect Client 3607 91% 0 0 0
RRI Cluster Client 317 8% 0 0 0

MRT Tx of unitcast messages(to member_id:2)
=====
Message high watermark: 14%
Total messages buffered at high watermark: 578
[Per-client message usage at high watermark]

Client name Total messages Percentage
VPN Clustering HA Client 578 100%

Current MRT buffer usage: 0%
Total messages buffered in real-time: 0

MRT Tx of unitcast messages(to member_id:3)
=====
Message high watermark: 12%
Total messages buffered at high watermark: 573
[Per-client message usage at high watermark]

Client name Total messages Percentage
VPN Clustering HA Client 572 99%
Cluster VPN Unique ID Client 1 0%

Current MRT buffer usage: 0%
Total messages buffered in real-time: 0

```

- **show cluster history**

Shows the cluster history, as well as error messages about why a cluster node failed to join or why a node left the cluster.

## Capturing Packets Cluster-Wide

See the following command for capturing packets in a cluster:

### **cluster exec capture**

To support cluster-wide troubleshooting, you can enable capture of cluster-specific traffic on the control node using the **cluster exec capture** command, which is then automatically enabled on all of the data nodes in the cluster.

## Monitoring Cluster Resources

See the following command for monitoring cluster resources:

### **show cluster {cpu | memory | resource} [options]**

Displays aggregated data for the entire cluster. The *options* available depends on the data type.

## Monitoring Cluster Traffic

See the following commands for monitoring cluster traffic:

- **show conn [detail], cluster exec show conn**

The **show conn** command shows whether a flow is a director, backup, or forwarder flow. Use the **cluster exec show conn** command on any node to view all connections. This command can show how traffic for a single flow arrives at different ASAs in the cluster. The throughput of the cluster is dependent on the efficiency and configuration of load balancing. This command provides an easy way to view how traffic for a connection is flowing through the cluster, and can help you understand how a load balancer might affect the performance of a flow.

The **show conn detail** command also shows which flows are subject to flow mobility.

The following is sample output for the **show conn detail** command:

```
ciscoasa/ASA2/data node# show conn detail
12 in use, 13 most used
Cluster stub connections: 0 in use, 46 most used
Flags: A - awaiting inside ACK to SYN, a - awaiting outside ACK to SYN,
 B - initial SYN from outside, b - TCP state-bypass or nailed,
 C - CTIQBE media, c - cluster centralized,
 D - DNS, d - dump, E - outside back connection, e - semi-distributed,
 F - outside FIN, f - inside FIN,
 G - group, g - MGCP, H - H.323, h - H.225.0, I - inbound data,
 i - incomplete, J - GTP, j - GTP data, K - GTP t3-response
 k - Skinny media, L - LISP triggered flow owner mobility,
 M - SMTP data, m - SIP media, n - GUP
 O - outbound data, o - offloaded,
 P - inside back connection,
 Q - Diameter, q - SQL*Net data,
 R - outside acknowledged FIN,
 R - UDP SUNRPC, r - inside acknowledged FIN, S - awaiting inside SYN,
 s - awaiting outside SYN, T - SIP, t - SIP transient, U - up,
 V - VPN orphan, W - WAAS,
 w - secondary domain backup,
 X - inspected by service module,
 x - per session, Y - director stub flow, y - backup stub flow,
 Z - Scansafe redirection, z - forwarding stub flow
ESP outside: 10.1.227.1/53744 NP Identity Ifc: 10.1.226.1/30604, , flags c, idle 0s,
uptime
1m21s, timeout 30s, bytes 7544, cluster sent/rcvd bytes 0/0, owners (0,255) Traffic
received
at interface outside Locally received: 7544 (93 byte/s) Traffic received at interface
NP
Identity Ifc Locally received: 0 (0 byte/s) UDP outside: 10.1.227.1/500 NP Identity
Ifc:
10.1.226.1/500, flags -c, idle 1m22s, uptime 1m22s, timeout 2m0s, bytes 1580, cluster
sent/rcvd bytes 0/0, cluster sent/rcvd total bytes 0/0, owners (0,255) Traffic received
at
interface outside Locally received: 864 (10 byte/s) Traffic received at interface NP
Identity
Ifc Locally received: 716 (8 byte/s)
```

To troubleshoot the connection flow, first see connections on all nodes by entering the **cluster exec show conn** command on any node. Look for flows that have the following flags: director (Y), backup (y), and forwarder (z). The following example shows an SSH connection from 172.18.124.187:22 to 192.168.103.131:44727 on all three ASAs; ASA 1 has the z flag showing it is a forwarder for the connection, ASA3 has the Y flag showing it is the director for the connection, and ASA2 has no special

flags showing it is the owner. In the outbound direction, the packets for this connection enter the inside interface on ASA2 and exit the outside interface. In the inbound direction, the packets for this connection enter the outside interface on ASA 1 and ASA3, are forwarded over the cluster control link to ASA2, and then exit the inside interface on ASA2.

```
ciscoasa/ASA1/control node# cluster exec show conn
ASA1 (LOCAL):*****
18 in use, 22 most used
Cluster stub connections: 0 in use, 5 most used
TCP outside 172.18.124.187:22 inside 192.168.103.131:44727, idle 0:00:00, bytes
37240828, flags z
```

```
ASA2:*****
12 in use, 13 most used
Cluster stub connections: 0 in use, 46 most used
TCP outside 172.18.124.187:22 inside 192.168.103.131:44727, idle 0:00:00, bytes
37240828, flags UIO
```

```
ASA3:*****
10 in use, 12 most used
Cluster stub connections: 2 in use, 29 most used
TCP outside 172.18.124.187:22 inside 192.168.103.131:44727, idle 0:00:03, bytes 0,
flags Y
```

- **show cluster info [conn-distribution | packet-distribution | loadbalance | flow-mobility counters]**

The **show cluster info conn-distribution** and **show cluster info packet-distribution** commands show traffic distribution across all cluster nodes. These commands can help you to evaluate and adjust the external load balancer.

The **show cluster info loadbalance** command shows connection rebalance statistics.

The **show cluster info flow-mobility counters** command shows EID movement and flow owner movement information. See the following output for **show cluster info flow-mobility counters**:

```
ciscoasa# show cluster info flow-mobility counters
EID movement notification received : 4
EID movement notification processed : 4
Flow owner moving requested : 2
```

- **show cluster info load-monitor [details]**

The **show cluster info load-monitor** command shows the traffic load for cluster members for the last interval and also the average over total number of intervals configured (30 by default). Use the **details** keyword to view the value for each measure at each interval.

```
ciscoasa(cfg-cluster)# show cluster info load-monitor
ID Unit Name
0 B
1 A_1
Information from all units with 20 second interval:
Unit Connections Buffer Drops Memory Used CPU Used
Average from last 1 interval:
0 0 0 14 25
1 0 0 16 20
Average from last 30 interval:
0 0 0 12 28
```



```

1 0 0 13 27

```

```
ciscoasa(cfg-cluster)# show cluster info load-monitor details

```

```
ID Unit Name

```

```
0 B

```

```
1 A_1

```

```
Information from all units with 20 second interval

```

```
Connection count captured over 30 intervals:

```

```
Unit ID 0

```

```

0 0 0 0 0 0
0 0 0 0 0 0
0 0 0 0 0 0
0 0 0 0 0 0
0 0 0 0 0 0

```

```
Unit ID 1

```

```

0 0 0 0 0 0
0 0 0 0 0 0
0 0 0 0 0 0
0 0 0 0 0 0
0 0 0 0 0 0

```

```
Buffer drops captured over 30 intervals:

```

```
Unit ID 0

```

```

0 0 0 0 0 0
0 0 0 0 0 0
0 0 0 0 0 0
0 0 0 0 0 0
0 0 0 0 0 0

```

```
Unit ID 1

```

```

0 0 0 0 0 0
0 0 0 0 0 0

```

|   |   |   |   |   |   |
|---|---|---|---|---|---|
| 0 | 0 | 0 | 0 | 0 | 0 |
| 0 | 0 | 0 | 0 | 0 | 0 |
| 0 | 0 | 0 | 0 | 0 | 0 |

Memory usage(%) captured over 30 intervals:

Unit ID 0

|    |    |    |    |    |    |
|----|----|----|----|----|----|
| 25 | 25 | 30 | 30 | 30 | 35 |
| 25 | 25 | 35 | 30 | 30 | 30 |
| 25 | 25 | 30 | 25 | 25 | 35 |
| 30 | 30 | 30 | 25 | 25 | 25 |
| 25 | 20 | 30 | 30 | 30 | 30 |

Unit ID 1

|    |    |    |    |    |    |
|----|----|----|----|----|----|
| 30 | 25 | 35 | 25 | 30 | 30 |
| 25 | 25 | 35 | 25 | 30 | 35 |
| 30 | 30 | 35 | 30 | 30 | 30 |
| 25 | 20 | 30 | 25 | 25 | 30 |
| 20 | 30 | 35 | 30 | 30 | 35 |

CPU usage(%) captured over 30 intervals:

Unit ID 0

|    |    |    |    |    |    |
|----|----|----|----|----|----|
| 25 | 25 | 30 | 30 | 30 | 35 |
| 25 | 25 | 35 | 30 | 30 | 30 |
| 25 | 25 | 30 | 25 | 25 | 35 |
| 30 | 30 | 30 | 25 | 25 | 25 |
| 25 | 20 | 30 | 30 | 30 | 30 |

Unit ID 1

|    |    |    |    |    |    |
|----|----|----|----|----|----|
| 30 | 25 | 35 | 25 | 30 | 30 |
| 25 | 25 | 35 | 25 | 30 | 35 |
| 30 | 30 | 35 | 30 | 30 | 30 |
| 25 | 20 | 30 | 25 | 25 | 30 |
| 20 | 30 | 35 | 30 | 30 | 35 |

• **show cluster** {**access-list** | **conn** | **traffic** | **user-identity** | **xlate**} [*options*]

Displays aggregated data for the entire cluster. The *options* available depends on the data type.

See the following output for the **show cluster access-list** command:

```
ciscoasa# show cluster access-list
hitcnt display order: cluster-wide aggregated result, unit-A, unit-B, unit-C, unit-D
access-list cached ACL log flows: total 0, denied 0 (deny-flow-max 4096) alert-interval
300
access-list 101; 122 elements; name hash: 0xe7d586b5
access-list 101 line 1 extended permit tcp 192.168.143.0 255.255.255.0 any eq www
(hitcnt=0, 0, 0, 0, 0) 0x207a2b7d
access-list 101 line 2 extended permit tcp any 192.168.143.0 255.255.255.0 (hitcnt=0,
0, 0, 0, 0) 0xfe4f4947
access-list 101 line 3 extended permit tcp host 192.168.1.183 host 192.168.43.238
(hitcnt=1, 0, 0, 0, 1) 0x7b521307
access-list 101 line 4 extended permit tcp host 192.168.1.116 host 192.168.43.238
(hitcnt=0, 0, 0, 0, 0) 0x5795c069
access-list 101 line 5 extended permit tcp host 192.168.1.177 host 192.168.43.238
(hitcnt=1, 0, 0, 1, 0) 0x51bde7ee
access-list 101 line 6 extended permit tcp host 192.168.1.177 host 192.168.43.13
(hitcnt=0, 0, 0, 0, 0) 0x1e68697c
access-list 101 line 7 extended permit tcp host 192.168.1.177 host 192.168.43.132
(hitcnt=2, 0, 0, 1, 1) 0xc1ce5c49
access-list 101 line 8 extended permit tcp host 192.168.1.177 host 192.168.43.192
(hitcnt=3, 0, 1, 1, 1) 0xb6f59512
access-list 101 line 9 extended permit tcp host 192.168.1.177 host 192.168.43.44
(hitcnt=0, 0, 0, 0, 0) 0xdc104200
access-list 101 line 10 extended permit tcp host 192.168.1.112 host 192.168.43.44
(hitcnt=429, 109, 107, 109, 104)
0xce4f281d
access-list 101 line 11 extended permit tcp host 192.168.1.170 host 192.168.43.238
(hitcnt=3, 1, 0, 0, 2) 0x4143a818
access-list 101 line 12 extended permit tcp host 192.168.1.170 host 192.168.43.169
(hitcnt=2, 0, 1, 0, 1) 0xb18dfea4
access-list 101 line 13 extended permit tcp host 192.168.1.170 host 192.168.43.229
(hitcnt=1, 1, 0, 0, 0) 0x21557d71
access-list 101 line 14 extended permit tcp host 192.168.1.170 host 192.168.43.106
(hitcnt=0, 0, 0, 0, 0) 0x7316e016
access-list 101 line 15 extended permit tcp host 192.168.1.170 host 192.168.43.196
(hitcnt=0, 0, 0, 0, 0) 0x013fd5b8
access-list 101 line 16 extended permit tcp host 192.168.1.170 host 192.168.43.75
(hitcnt=0, 0, 0, 0, 0) 0x2c7dba0d
```

To display the aggregated count of in-use connections for all nodes, enter:

```
ciscoasa# show cluster conn count
Usage Summary In Cluster:*****
200 in use (cluster-wide aggregated)
 cl2(LOCAL):*****
100 in use, 100 most used

 cl1:*****
100 in use, 100 most used
```

- **show asp cluster counter**

This command is useful for datapath troubleshooting.

## Monitoring Cluster Routing

See the following commands for cluster routing:

- **show route cluster**

- **debug route cluster**

Shows cluster information for routing.

- **show lisp eid**

Shows the ASA EID table showing EIDs and site IDs.

See the following output from the **cluster exec show lisp eid** command.

```
ciscoasa# cluster exec show lisp eid
L1 (LOCAL):*****
 LISP EID Site ID
 33.44.33.105 2
 33.44.33.201 2
 11.22.11.1 4
 11.22.11.2 4
L2:*****
 LISP EID Site ID
 33.44.33.105 2
 33.44.33.201 2
 11.22.11.1 4
 11.22.11.2 4
```

- **show asp table classify domain inspect-lisp**

This command is useful for troubleshooting.

## Configuring Logging for Clustering

See the following command for configuring logging for clustering:

### **logging device-id**

Each node in the cluster generates syslog messages independently. You can use the **logging device-id** command to generate syslog messages with identical or different device IDs to make messages appear to come from the same or different nodes in the cluster.

## Monitoring Cluster Interfaces

See the following commands for monitoring cluster interfaces:

- **show cluster interface-mode**

Shows the cluster interface mode.

## Debugging Clustering

See the following commands for debugging clustering:

- **debug cluster [ccp | datapath | fsm | general | hc | license | rpc | transport]**

Shows debug messages for clustering.

- **debug cluster flow-mobility**

Shows events related to clustering flow mobility.

- **debug lisp eid-notify-intercept**

Shows events when the eid-notify message is intercepted.

- **show cluster info trace**

The **show cluster info trace** command shows the debug information for further troubleshooting.

See the following output for the **show cluster info trace** command:

```
ciscoasa# show cluster info trace
Feb 02 14:19:47.456 [DEBUG]Receive CCP message: CCP_MSG_LOAD_BALANCE
Feb 02 14:19:47.456 [DEBUG]Receive CCP message: CCP_MSG_LOAD_BALANCE
Feb 02 14:19:47.456 [DEBUG]Send CCP message to all: CCP_MSG_KEEPALIVE from 80-1 at
CONTROL_NODE
```

For example, if you see the following messages showing that two nodes with the same **local-unit** name are acting as the control node, it could mean that either two nodes have the same **local-unit** name (check your configuration), or a node is receiving its own broadcast messages (check your network).

```
ciscoasa# show cluster info trace
May 23 07:27:23.113 [CRIT]Received datapath event 'multi control_nodes' with parameter
1.
May 23 07:27:23.113 [CRIT]Found both unit-9-1 and unit-9-1 as control_node units.
Control_node role retained by unit-9-1, unit-9-1 will leave then join as a Data_node
May 23 07:27:23.113 [DEBUG]Send event (DISABLE, RESTART | INTERNAL-EVENT, 5000 msec,
Detected another Control_node, leave and re-join as Data_node) to FSM. Current state
CONTROL_NODE
May 23 07:27:23.113 [INFO]State machine changed from state CONTROL_NODE to DISABLED
```

## Reference for Clustering

This section includes more information about how clustering operates.

## ASA Features and Clustering

Some ASA features are not supported with ASA clustering, and some are only supported on the control node. Other features might have caveats for proper usage.

## Unsupported Features with Clustering

These features cannot be configured with clustering enabled, and the commands will be rejected.

- Unified Communication features that rely on TLS Proxy
- Remote access VPN (SSL VPN and IPsec VPN)

- Virtual Tunnel Interfaces (VTIs)
- The following application inspections:
  - CTIQBE
  - H323, H225, and RAS
  - IPsec passthrough
  - MGCP
  - MMP
  - RTSP
  - SCCP (Skinny)
  - WAAS
  - WCCP
- Botnet Traffic Filter
- Auto Update Server
- DHCP client, server, and proxy. DHCP relay is supported.
- VPN load balancing
- Failover on Azure
- Integrated Routing and Bridging
- FIPS mode

## Centralized Features for Clustering

The following features are only supported on the control node, and are not scaled for the cluster.



**Note** Traffic for centralized features is forwarded from member nodes to the control node over the cluster control link.

If you use the rebalancing feature, traffic for centralized features may be rebalanced to non-control nodes before the traffic is classified as a centralized feature; if this occurs, the traffic is then sent back to the control node.

For centralized features, if the control node fails, all connections are dropped, and you have to re-establish the connections on the new control node.

- The following application inspections:
  - DCERPC
  - ESMTTP
  - IM

- NetBIOS
  - PPTP
  - RADIUS
  - RSH
  - SNMP
  - SQLNET
  - SUNRPC
  - TFTP
  - XDMCP
- 
- Static route monitoring
  - Authentication and Authorization for network access. Accounting is decentralized.
  - Filtering Services
  - Site-to-site VPN
  - Multicast routing

## Features Applied to Individual Nodes

These features are applied to each ASA node, instead of the cluster as a whole or to the control node.

- QoS—The QoS policy is synced across the cluster as part of configuration replication. However, the policy is enforced on each node independently. For example, if you configure policing on output, then the conform rate and conform burst values are enforced on traffic exiting a particular ASA. In a cluster with 3 nodes and with traffic evenly distributed, the conform rate actually becomes 3 times the rate for the cluster.
- Threat detection—Threat detection works on each node independently; for example, the top statistics is node-specific. Port scanning detection, for example, does not work because scanning traffic will be load-balanced between all nodes, and one node will not see all traffic.

## AAA for Network Access and Clustering

AAA for network access consists of three components: authentication, authorization, and accounting. Authentication and authorization are implemented as centralized features on the clustering control node with replication of the data structures to the cluster data nodes. If a control node is elected, the new control node will have all the information it needs to continue uninterrupted operation of the established authenticated users and their associated authorizations. Idle and absolute timeouts for user authentications are preserved when a control node change occurs.

Accounting is implemented as a distributed feature in a cluster. Accounting is done on a per-flow basis, so the cluster node owning a flow will send accounting start and stop messages to the AAA server when accounting is configured for a flow.


## Connection Settings and Clustering

Connection limits are enforced cluster-wide (see the **set connection conn-max**, **set connection embryonic-conn-max**, **set connection per-client-embryonic-max**, and **set connection per-client-max** commands). Each node has an estimate of the cluster-wide counter values based on broadcast messages. Due to efficiency considerations, the configured connection limit across the cluster might not be enforced exactly at the limit number. Each node may overestimate or underestimate the cluster-wide counter value at any given time. However, the information will get updated over time in a load-balanced cluster.

## Dynamic Routing and Clustering

In Individual interface mode, each node runs the routing protocol as a standalone router, and routes are learned by each node independently.

*Figure 13: Dynamic Routing in Individual Interface Mode*

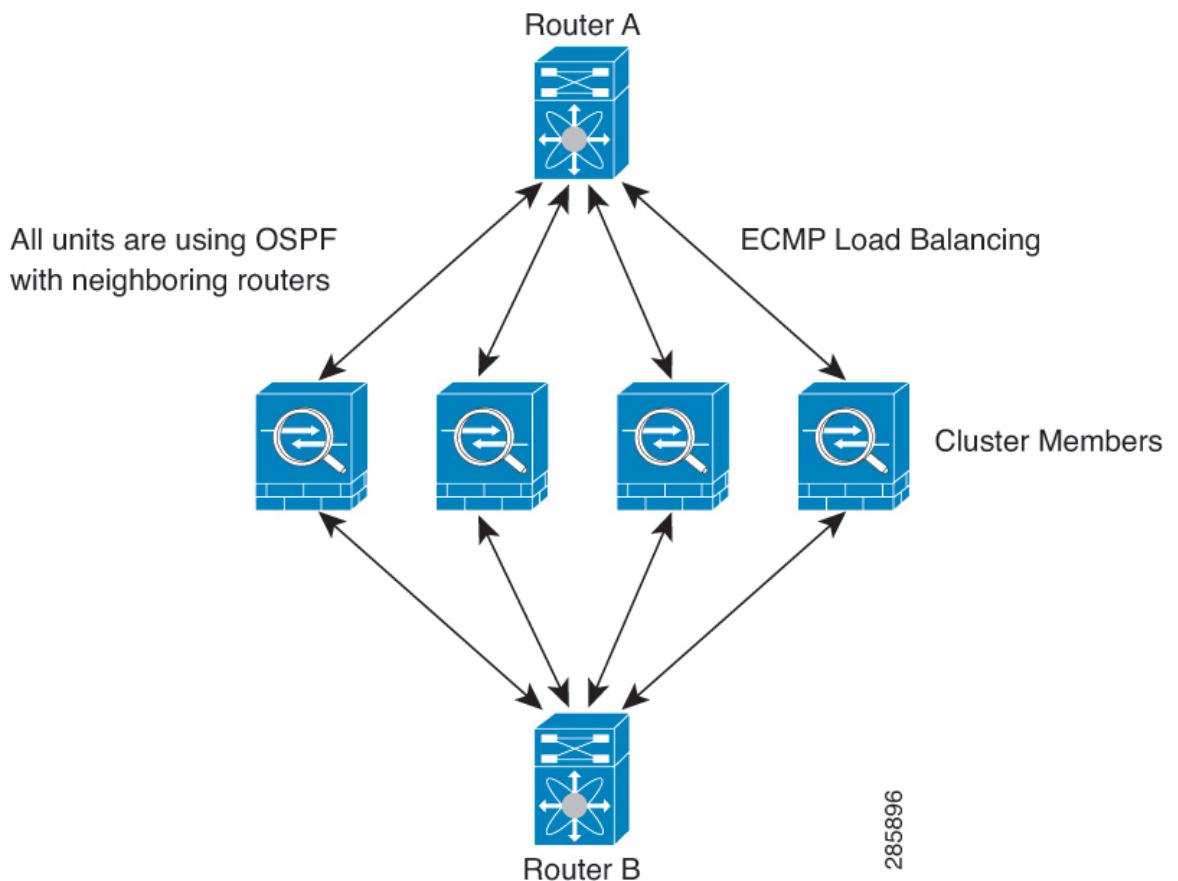

In the above diagram, Router A learns that there are 4 equal-cost paths to Router B, each through a node. ECMP is used to load balance traffic between the 4 paths. Each node picks a different router ID when talking to external routers.

You must configure a cluster pool for the router ID so that each node has a separate router ID.

EIGRP does not form neighbor relationships with cluster peers in individual interface mode.



**Note**

If the cluster has multiple adjacencies to the same router for redundancy purposes, asymmetric routing can lead to unacceptable traffic loss. To avoid asymmetric routing, group all of these node interfaces into the same traffic zone. See [Configure a Traffic Zone](#).

## FTP and Clustering

- If FTP data channel and control channel flows are owned by different cluster members, then the data channel owner will periodically send idle timeout updates to the control channel owner and update the idle timeout value. However, if the control flow owner is reloaded, and the control flow is re-hosted, the parent/child flow relationship will not longer be maintained; the control flow idle timeout will not be updated.
- If you use AAA for FTP access, then the control channel flow is centralized on the control node.

## ICMP Inspection and Clustering

The flow of ICMP and ICMP error packets through the cluster varies depending on whether ICMP/ICMP error inspection is enabled. Without ICMP inspection, ICMP is a one-direction flow, and there is no director flow support. With ICMP inspection, the ICMP flow becomes two-directional and is backed up by a director/backup flow. One difference for an inspected ICMP flow is in the director handling of a forwarded packet: the director will forward the ICMP echo reply packet to the flow owner instead of returning the packet to the forwarder.

## Multicast Routing and Clustering

In Individual interface mode, units do not act independently with multicast. All data and routing packets are processed and forwarded by the control unit, thus avoiding packet replication.

## NAT and Clustering

NAT can affect the overall throughput of the cluster. Inbound and outbound NAT packets can be sent to different ASAs in the cluster, because the load balancing algorithm relies on IP addresses and ports, and NAT causes inbound and outbound packets to have different IP addresses and/or ports. When a packet arrives at the ASA that is not the NAT owner, it is forwarded over the cluster control link to the owner, causing large amounts of traffic on the cluster control link. Note that the receiving node does not create a forwarding flow to the owner, because the NAT owner may not end up creating a connection for the packet depending on the results of security and policy checks.

If you still want to use NAT in clustering, then consider the following guidelines:

- No Proxy ARP—For Individual interfaces, a proxy ARP reply is never sent for mapped addresses. This prevents the adjacent router from maintaining a peer relationship with an ASA that may no longer be in the cluster. The upstream router needs a static route or PBR with Object Tracking for the mapped addresses that points to the Main cluster IP address. This is not an issue for a Spanned EtherChannel, because there is only one IP address associated with the cluster interface.
- PAT with Port Block Allocation—See the following guidelines for this feature:

- Maximum-per-host limit is not a cluster-wide limit, and is enforced on each node individually. Thus, in a 3-node cluster with the maximum-per-host limit configured as 1, if the traffic from a host is load-balanced across all 3 nodes, then it can get allocated 3 blocks with 1 in each node.
- Port blocks created on the backup node from the backup pools are not accounted for when enforcing the maximum-per-host limit.
- On-the-fly PAT rule modifications, where the PAT pool is modified with a completely new range of IP addresses, will result in xlate backup creation failures for the xlate backup requests that were still in transit while the new pool became effective. This behavior is not specific to the port block allocation feature, and is a transient PAT pool issue seen only in cluster deployments where the pool is distributed and traffic is load-balanced across the cluster nodes.
- When operating in a cluster, you cannot simply change the block allocation size. The new size is effective only after you reload each device in the cluster. To avoid having to reload each device, we recommend that you delete all block allocation rules and clear all xlates related to those rules. You can then change the block size and recreate the block allocation rules.
- NAT pool address distribution for dynamic PAT—When you configure a PAT pool, the cluster divides each IP address in the pool into port blocks. By default, each block is 512 ports, but if you configure port block allocation rules, your block setting is used instead. These blocks are distributed evenly among the nodes in the cluster, so that each node has one or more blocks for each IP address in the PAT pool. Thus, you could have as few as one IP address in a PAT pool for a cluster, if that is sufficient for the number of PAT'ed connections you expect. Port blocks cover the 1024-65535 port range, unless you configure the option to include the reserved ports, 1-1023, on the PAT pool NAT rule.
- Reusing a PAT pool in multiple rules—To use the same PAT pool in multiple rules, you must be careful about the interface selection in the rules. You must either use specific interfaces in all rules, or "any" in all rules. You cannot mix specific interfaces and "any" across the rules, or the system might not be able to match return traffic to the right node in the cluster. Using unique PAT pools per rule is the most reliable option.
- No round-robin—Round-robin for a PAT pool is not supported with clustering.
- No extended PAT—Extended PAT is not supported with clustering.
- Dynamic NAT xlates managed by the control node—The control node maintains and replicates the xlate table to data nodes. When a data node receives a connection that requires dynamic NAT, and the xlate is not in the table, it requests the xlate from the control node. The data node owns the connection.
- Stale xlates—The xlate idle time on the connection owner does not get updated. Thus, the idle time might exceed the idle timeout. An idle timer value higher than the configured timeout with a refcnt of 0 is an indication of a stale xlate.
- Per-session PAT feature—Although not exclusive to clustering, the per-session PAT feature improves the scalability of PAT and, for clustering, allows each data node to own PAT connections; by contrast, multi-session PAT connections have to be forwarded to and owned by the control node. By default, all TCP traffic and UDP DNS traffic use a per-session PAT xlate, whereas ICMP and all other UDP traffic uses multi-session. You can configure per-session NAT rules to change these defaults for TCP and UDP, but you cannot configure per-session PAT for ICMP. For example, with an increasing use of Quic protocol over UDP/443 as a best performance alternative compared to HTTPS TLS over TCP/443, you should enable per-session PAT for UDP/443. For traffic that benefits from multi-session PAT, such as H.323, SIP, or Skinny, you can disable per-session PAT for the associated TCP ports (the UDP ports for those H.323 and SIP are already multi-session by default). For more information about per-session PAT, see the firewall configuration guide.

- No static PAT for the following inspections—
  - FTP
  - PPTP
  - RSH
  - SQLNET
  - TFTP
  - XDMCP
  - SIP
- If you have an extremely large number of NAT rules, over ten thousand, you should enable the transactional commit model using the **asp rule-engine transactional-commit nat** command in the device CLI. Otherwise, the node might not be able to join the cluster.

## SCTP and Clustering

An SCTP association can be created on any node (due to load balancing); its multi-homing connections must reside on the same node.

## SIP Inspection and Clustering

A control flow can be created on any node (due to load balancing); its child data flows must reside on the same node.

TLS Proxy configuration is not supported.

## SNMP and Clustering

An SNMP agent polls each individual ASA by its Local IP address. You cannot poll consolidated data for the cluster.

You should always use the Local address, and not the Main cluster IP address for SNMP polling. If the SNMP agent polls the Main cluster IP address, if a new control node is elected, the poll to the new control node will fail.

When using SNMPv3 with clustering, if you add a new cluster node after the initial cluster formation, then SNMPv3 users are not replicated to the new node. You must re-add them on the control node to force the users to replicate to the new node, or directly on the data node.

## STUN and Clustering

STUN inspection is supported in failover and cluster modes, as pinholes are replicated. However, the transaction ID is not replicated among nodes. In the case where a node fails after receiving a STUN Request and another node received the STUN Response, the STUN Response will be dropped.

## Syslog and Clustering

- Syslog—Each node in the cluster generates its own syslog messages. You can configure logging so that each node uses either the same or a different device ID in the syslog message header field. For example, the hostname configuration is replicated and shared by all nodes in the cluster. If you configure logging

to use the hostname as the device ID, syslog messages generated by all nodes look as if they come from a single node. If you configure logging to use the local-node name that is assigned in the cluster bootstrap configuration as the device ID, syslog messages look as if they come from different nodes.

- NetFlow—Each node in the cluster generates its own NetFlow stream. The NetFlow collector can only treat each ASA as a separate NetFlow exporter.

## Cisco Trustsec and Clustering

Only the control node learns security group tag (SGT) information. The control node then populates the SGT to data nodes, and data nodes can make a match decision for SGT based on the security policy.

## VPN and Clustering

Site-to-site VPN is a centralized feature; only the control node supports VPN connections.



---

**Note** Remote access VPN is not supported with clustering.

---

VPN functionality is limited to the control node and does not take advantage of the cluster high availability capabilities. If the control node fails, all existing VPN connections are lost, and VPN users will see a disruption in service. When a new control node is elected, you must reestablish the VPN connections.

For connections to an Individual interface when using PBR or ECMP, you must always connect to the Main cluster IP address, not a Local address.

VPN-related keys and certificates are replicated to all nodes.

## Performance Scaling Factor

When you combine multiple units into a cluster, you can expect the total cluster performance to be approximately 80% of the maximum combined throughput.

For example, if your model can handle approximately 10 Gbps of traffic when running alone, then for a cluster of 8 units, the maximum combined throughput will be approximately 80% of 80 Gbps (8 units x 10 Gbps): 64 Gbps.

## Control Node Election

Nodes of the cluster communicate over the cluster control link to elect a control node as follows:

1. When you enable clustering for a node (or when it first starts up with clustering already enabled), it broadcasts an election request every 3 seconds.
2. Any other nodes with a higher priority respond to the election request; the priority is set between 1 and 100, where 1 is the highest priority.
3. If after 45 seconds, a node does not receive a response from another node with a higher priority, then it becomes the control node.



---

**Note** If multiple nodes tie for the highest priority, the cluster node name and then the serial number is used to determine the control node.

---

4. If a node later joins the cluster with a higher priority, it does not automatically become the control node; the existing control node always remains as the control node unless it stops responding, at which point a new control node is elected.
5. In a "split brain" scenario when there are temporarily multiple control nodes, then the node with highest priority retains the role while the other nodes return to data node roles.



---

**Note** You can manually force a node to become the control node. For centralized features, if you force a control node change, then all connections are dropped, and you have to re-establish the connections on the new control node.

---

## High Availability within the Cluster

Clustering provides high availability by monitoring node and interface health and by replicating connection states between nodes.

### Node Health Monitoring

Each node periodically sends a broadcast heartbeat packet over the cluster control link. If the control node does not receive any heartbeat packets or other packets from a data node within the configurable timeout period, then the control node removes the data node from the cluster. If the data nodes do not receive packets from the control node, then a new control node is elected from the remaining nodes.

If nodes cannot reach each other over the cluster control link because of a network failure and not because a node has actually failed, then the cluster may go into a "split brain" scenario where isolated data nodes will elect their own control nodes. For example, if a router fails between two cluster locations, then the original control node at location 1 will remove the location 2 data nodes from the cluster. Meanwhile, the nodes at location 2 will elect their own control node and form their own cluster. Note that asymmetric traffic may fail in this scenario. After the cluster control link is restored, then the control node that has the higher priority will keep the control node's role.

### Interface Monitoring

Each node monitors the link status of all named hardware interfaces in use, and reports status changes to the control node.

When you enable health monitoring, all physical interfaces are monitored by default; you can optionally disable monitoring per interface. Only named interfaces can be monitored.

A node is removed from the cluster if its monitored interfaces fail. The amount of time before the ASA removes a member from the cluster depends on whether the node is an established member or is joining the cluster. The ASA does not monitor interfaces for the first 90 seconds that a node joins the cluster. Interface status changes during this time will not cause the ASA to be removed from the cluster. The node is removed after 500 ms, regardless of the node state.

## Status After Failure

If the control node fails, then another member of the cluster with the highest priority (lowest number) becomes the control node.

The ASA automatically tries to rejoin the cluster, depending on the failure event.



**Note** When the ASA becomes inactive and fails to automatically rejoin the cluster, all data interfaces are shut down; only the management-only interface can send and receive traffic. The management interface remains up using the IP address the node received from the cluster IP pool. However if you reload, and the node is still inactive in the cluster, the management interface is disabled. You must use the console port for any further configuration.

## Rejoining the Cluster

After a cluster node is removed from the cluster, how it can rejoin the cluster depends on why it was removed:

- Failed cluster control link when initially joining—After you resolve the problem with the cluster control link, you must manually rejoin the cluster by re-enabling clustering at the CLI by entering **cluster group name**, and then **enable**.
- Failed cluster control link after joining the cluster—The ASA automatically tries to rejoin every 5 minutes, indefinitely. This behavior is configurable.
- Failed data interface—The ASA automatically tries to rejoin at 5 minutes, then at 10 minutes, and finally at 20 minutes. If the join is not successful after 20 minutes, then the ASA disables clustering. After you resolve the problem with the data interface, you have to manually enable clustering at the CLI by entering **cluster group name**, and then **enable**. This behavior is configurable.
- Failed node—If the node was removed from the cluster because of a node health check failure, then rejoining the cluster depends on the source of the failure. For example, a temporary power failure means the node will rejoin the cluster when it starts up again as long as the cluster control link is up and clustering is still enabled with the **enable** command. The ASA attempts to rejoin the cluster every 5 seconds.
- Internal error—Internal failures include: application sync timeout; inconsistent application statuses; and so on. A node will attempt to rejoin the cluster automatically at the following intervals: 5 minutes, 10 minutes, and then 20 minutes. This behavior is configurable.

## Data Path Connection State Replication

Every connection has one owner and at least one backup owner in the cluster. The backup owner does not take over the connection in the event of a failure; instead, it stores TCP/UDP state information, so that the connection can be seamlessly transferred to a new owner in case of a failure. The backup owner is usually also the director.

Some traffic requires state information above the TCP or UDP layer. See the following table for clustering support or lack of support for this kind of traffic.

**Table 7: Features Replicated Across the Cluster**

| Traffic | State Support | Notes                              |
|---------|---------------|------------------------------------|
| Up time | Yes           | Keeps track of the system up time. |

| Traffic                                                | State Support | Notes                                                                            |
|--------------------------------------------------------|---------------|----------------------------------------------------------------------------------|
| ARP Table                                              | Yes           | —                                                                                |
| MAC address table                                      | Yes           | —                                                                                |
| User Identity                                          | Yes           | Includes AAA rules (uauth).                                                      |
| IPv6 Neighbor database                                 | Yes           | —                                                                                |
| Dynamic routing                                        | Yes           | —                                                                                |
| SNMP Engine ID                                         | No            | —                                                                                |
| Distributed VPN (Site-to-Site) for Firepower 4100/9300 | Yes           | Backup session becomes the active session, then a new backup session is created. |

## How the Cluster Manages Connections

Connections can be load-balanced to multiple nodes of the cluster. Connection roles determine how connections are handled in both normal operation and in a high availability situation.

### Connection Roles

See the following roles defined for each connection:

- **Owner**—Usually, the node that initially receives the connection. The owner maintains the TCP state and processes packets. A connection has only one owner. If the original owner fails, then when new nodes receive packets from the connection, the director chooses a new owner from those nodes.
- **Backup owner**—The node that stores TCP/UDP state information received from the owner, so that the connection can be seamlessly transferred to a new owner in case of a failure. The backup owner does not take over the connection in the event of a failure. If the owner becomes unavailable, then the first node to receive packets from the connection (based on load balancing) contacts the backup owner for the relevant state information so it can become the new owner.

As long as the director (see below) is not the same node as the owner, then the director is also the backup owner. If the owner chooses itself as the director, then a separate backup owner is chosen.

For clustering on the Firepower 9300, which can include up to 3 cluster nodes in one chassis, if the backup owner is on the same chassis as the owner, then an additional backup owner will be chosen from another chassis to protect flows from a chassis failure.

If you enable director localization for inter-site clustering, then there are two backup owner roles: the local backup and the global backup. The owner always chooses a local backup at the same site as itself (based on site ID). The global backup can be at any site, and might even be the same node as the local backup. The owner sends connection state information to both backups.

If you enable site redundancy, and the backup owner is at the same site as the owner, then an additional backup owner will be chosen from another site to protect flows from a site failure. Chassis backup and site backup are independent, so in some cases a flow will have both a chassis backup and a site backup.

- **Director**—The node that handles owner lookup requests from forwarders. When the owner receives a new connection, it chooses a director based on a hash of the source/destination IP address and ports (see below for ICMP hash details), and sends a message to the director to register the new connection. If

packets arrive at any node other than the owner, the node queries the director about which node is the owner so it can forward the packets. A connection has only one director. If a director fails, the owner chooses a new director.

As long as the director is not the same node as the owner, then the director is also the backup owner (see above). If the owner chooses itself as the director, then a separate backup owner is chosen.

If you enable director localization for inter-site clustering, then there are two director roles: the local director and the global director. The owner always chooses a local director at the same site as itself (based on site ID). The global director can be at any site, and might even be the same node as the local director. If the original owner fails, then the local director chooses a new connection owner at the same site.

ICMP/ICMPv6 hash details:

- For Echo packets, the source port is the ICMP identifier, and the destination port is 0.
- For Reply packets, the source port is 0, and the destination port is the ICMP identifier.
- For other packets, both source and destination ports are 0.
- Forwarder—A node that forwards packets to the owner. If a forwarder receives a packet for a connection it does not own, it queries the director for the owner, and then establishes a flow to the owner for any other packets it receives for this connection. The director can also be a forwarder. If you enable director localization, then the forwarder always queries the local director. The forwarder only queries the global director if the local director does not know the owner, for example, if a cluster member receives packets for a connection that is owned on a different site. Note that if a forwarder receives the SYN-ACK packet, it can derive the owner directly from a SYN cookie in the packet, so it does not need to query the director. (If you disable TCP sequence randomization, the SYN cookie is not used; a query to the director is required.) For short-lived flows such as DNS and ICMP, instead of querying, the forwarder immediately sends the packet to the director, which then sends them to the owner. A connection can have multiple forwarders; the most efficient throughput is achieved by a good load-balancing method where there are no forwarders and all packets of a connection are received by the owner.



**Note** We do not recommend disabling TCP sequence randomization when using clustering. There is a small chance that some TCP sessions won't be established, because the SYN/ACK packet might be dropped.

- Fragment Owner—For fragmented packets, cluster nodes that receive a fragment determine a fragment owner using a hash of the fragment source IP address, destination IP address, and the packet ID. All fragments are then forwarded to the fragment owner over the cluster control link. Fragments may be load-balanced to different cluster nodes, because only the first fragment includes the 5-tuple used in the switch load balance hash. Other fragments do not contain the source and destination ports and may be load-balanced to other cluster nodes. The fragment owner temporarily reassembles the packet so it can determine the director based on a hash of the source/destination IP address and ports. If it is a new connection, the fragment owner will register to be the connection owner. If it is an existing connection, the fragment owner forwards all fragments to the provided connection owner over the cluster control link. The connection owner will then reassemble all fragments.

### Port Address Translation Connections

When a connection uses Port Address Translation (PAT), then the PAT type (per-session or multi-session) influences which member of the cluster becomes the owner of a new connection:



- Per-session PAT—The owner is the node that receives the initial packet in the connection.

By default, TCP and DNS UDP traffic use per-session PAT.

- Multi-session PAT—The owner is always the control node. If a multi-session PAT connection is initially received by a data node, then the data node forwards the connection to the control node.

By default, UDP (except for DNS UDP) and ICMP traffic use multi-session PAT, so these connections are always owned by the control node.


You can change the per-session PAT defaults for TCP and UDP so connections for these protocols are handled per-session or multi-session depending on the configuration. For ICMP, you cannot change from the default multi-session PAT. For more information about per-session PAT, see the firewall configuration guide.

## New Connection Ownership

When a new connection is directed to a node of the cluster via load balancing, that node owns both directions of the connection. If any connection packets arrive at a different node, they are forwarded to the owner node over the cluster control link. For best performance, proper external load balancing is required for both directions of a flow to arrive at the same node, and for flows to be distributed evenly between nodes. If a reverse flow arrives at a different node, it is redirected back to the original node.

## Sample Data Flow for TCP

The following example shows the establishment of a new connection.

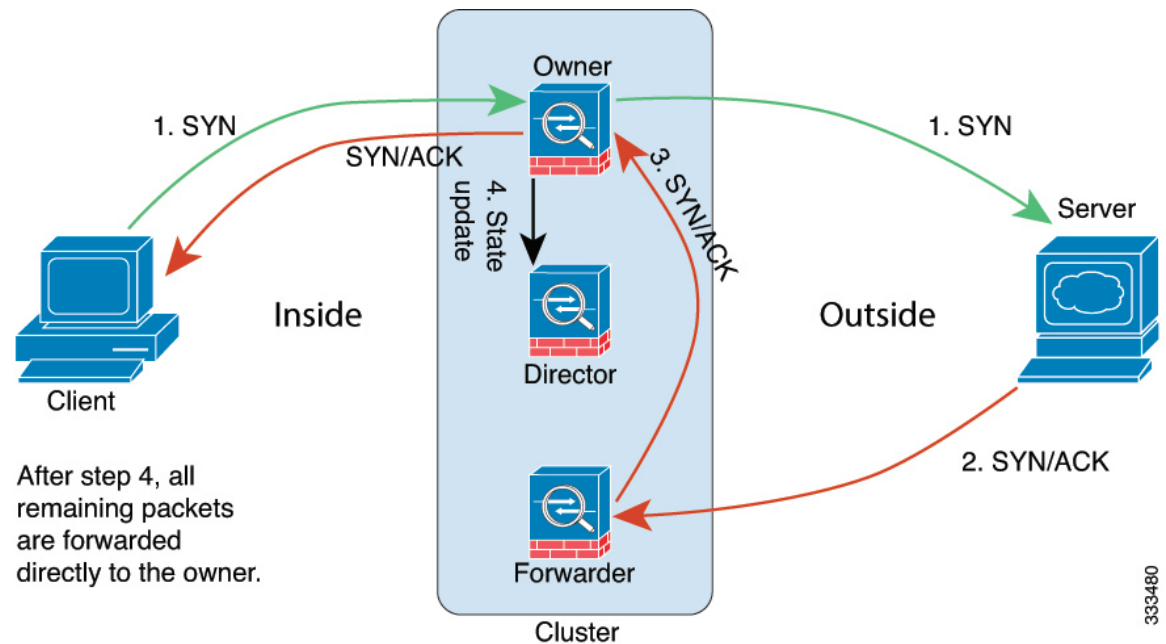


1. The SYN packet originates from the client and is delivered to one ASA (based on the load balancing method), which becomes the owner. The owner creates a flow, encodes owner information into a SYN cookie, and forwards the packet to the server.
2. The SYN-ACK packet originates from the server and is delivered to a different ASA (based on the load balancing method). This ASA is the forwarder.

3. Because the forwarder does not own the connection, it decodes owner information from the SYN cookie, creates a forwarding flow to the owner, and forwards the SYN-ACK to the owner.
4. The owner sends a state update to the director, and forwards the SYN-ACK to the client.
5. The director receives the state update from the owner, creates a flow to the owner, and records the TCP state information as well as the owner. The director acts as the backup owner for the connection.
6. Any subsequent packets delivered to the forwarder will be forwarded to the owner.
7. If packets are delivered to any additional nodes, it will query the director for the owner and establish a flow.
8. Any state change for the flow results in a state update from the owner to the director.

## Sample Data Flow for ICMP and UDP

The following example shows the establishment of a new connection.

1. **Figure 14: ICMP and UDP Data Flow**

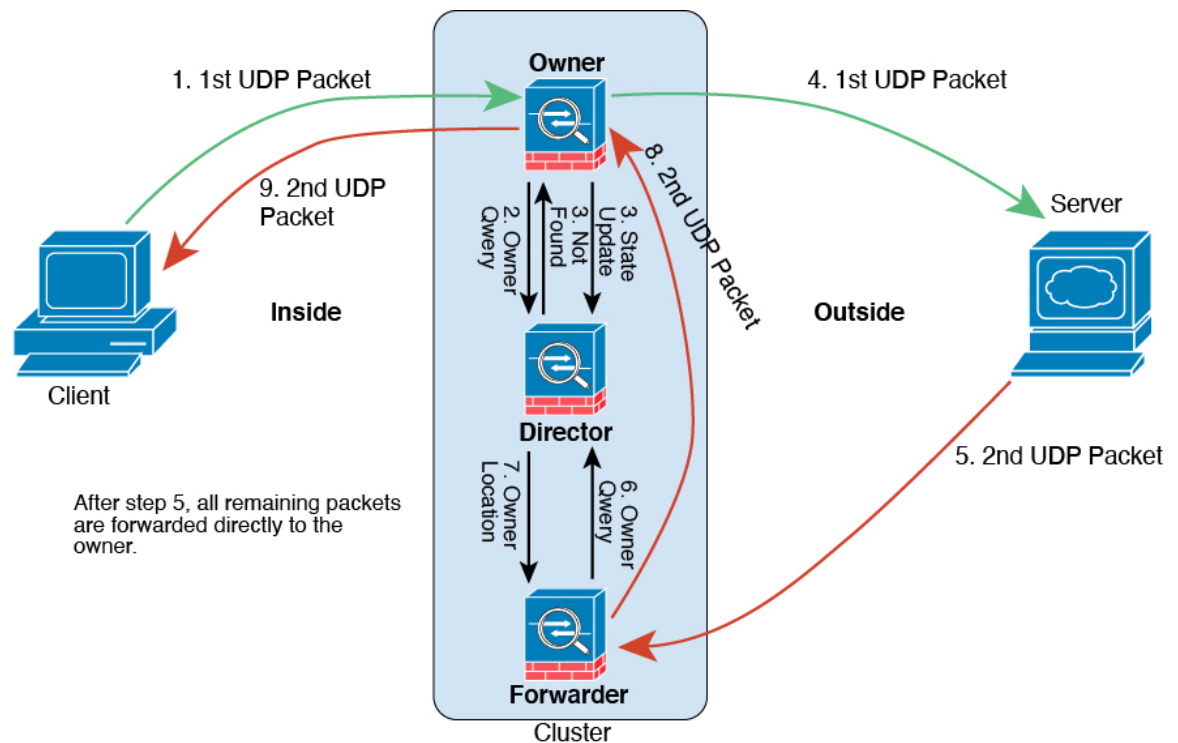

The first UDP packet originates from the client and is delivered to one ASA (based on the load balancing method).

2. The node that received the first packet queries the director node that is chosen based on a hash of the source/destination IP address and ports.
3. The director finds no existing flow, creates a director flow and forwards the packet back to the previous node. In other words, the director has elected an owner for this flow.
4. The owner creates the flow, sends a state update to the director, and forwards the packet to the server.

5. The second UDP packet originates from the server and is delivered to the forwarder.
6. The forwarder queries the director for ownership information. For short-lived flows such as DNS, instead of querying, the forwarder immediately sends the packet to the director, which then sends it to the owner.
7. The director replies to the forwarder with ownership information.
8. The forwarder creates a forwarding flow to record owner information and forwards the packet to the owner.
9. The owner forwards the packet to the client.

## History for ASA Virtual Clustering in the Public Cloud

| Feature                                                                             | Version | Details                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------------------------------------------------------------------------------|---------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Data nodes can join the cluster concurrently                                        | 9.24(1) | Formerly, the control node only allowed one data node to join the cluster at a time. If the configuration sync takes a long time, data nodes can take a long time to join. Concurrent join is enabled by default. If you have NAT and VPN distributed mode enabled, you cannot use concurrent join.<br><br>Added/modified commands: <b>concurrent-join</b> , <b>show cluster info</b><br><b>concurrent-join incompatible-config</b>                                                                                                                                                                                         |
| MTU ping test on cluster node join provides more information by trying smaller MTUs | 9.24(1) | When a node joins the cluster, it checks MTU compatibility by sending a ping to the control node with a packet size matching the cluster control link MTU. If the ping fails, it tries the MTU divided by 2 and keeps dividing by 2 until an MTU ping is successful. A notification is generated so you can fix the MTU to a working value and try again. We recommend increasing the switch MTU size to the recommended value, but if you can't change the switch configuration, a working value for the cluster control link will let you form the cluster.<br><br>Added/modified commands: <b>show cluster history</b> . |
| Improved cluster control link health check with high CPU                            | 9.24(1) | When a cluster node CPU usage is high, the health check will be suspended, and the node will not be marked as unhealthy. You can configure at what CPU use threshold to suspend the health check.<br><br>Added/modified commands: <b>cpu-healthcheck-threshold</b> .                                                                                                                                                                                                                                                                                                                                                        |
| MTU ping test on node join                                                          | 9.22(1) | When a node joins the cluster, it checks MTU compatibility by sending a ping to the control node with a packet size matching the cluster control link MTU. If the ping fails, a notification is generated so you can fix the MTU mismatch on connecting switches and try again.                                                                                                                                                                                                                                                                                                                                             |
| ASA Virtual on Azure: Clustering with Gateway Load Balancing                        | 9.20(2) | We now support the ASA Virtual clustering deployment on Azure using the Azure Resource Manager (ARM) template and then configure the ASAv clusters to use the Gateway Load Balancer (GWLB) for load balancing the network traffic.                                                                                                                                                                                                                                                                                                                                                                                          |

| Feature                                                               | Version | Details                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Configure Target Failover for ASA Virtual Clustering with GWLB in AWS | 9.20(2) | The Target Failover feature in AWS enables GWLB to redirect network packets to a healthy target node in the event of node deregistration during planned maintenance or a target node failure. It takes advantage of the cluster's stateful failover.                                                                                                                                                                                                     |
| Configurable cluster keepalive interval for flow status               | 9.20(2) | The flow owner sends keepalives (clu_heartbeat messages) and updates (clu_update messages) to the director and backup owner to refresh the flow state. You can now set the keepalive interval. The default is 15 seconds, and you can set the interval between 15 and 55 seconds. You may want to set the interval to be longer to reduce the amount of traffic on the cluster control link.<br><br>New/Modified commands: <b>clu-keepalive-interval</b> |
| ASA Virtual Amazon Web Services (AWS) clustering                      | 9.19(1) | The ASA Virtual supports Individual interface clustering for up to 16 nodes on AWS. You can use clustering with or without the AWS Gateway Load Balancer.                                                                                                                                                                                                                                                                                                |
| ASA virtual IMDSv2 support in Amazon Web Services (AWS) clustering    | 9.22    | The ASA Virtual supports IMDSv2 on AWS. You can enable IMDSv2 Required mode by updating the stack.                                                                                                                                                                                                                                                                                                                                                       |