

Α	SFP/SFP+ modules 3-6
	slide rail kit hardware 4-29
adaptive security appliances loose connections 4-43	SSPs 4-2
ASA 5585-X	Management 0/0 3-5
AC power module indicators	management port described 3-5
illustration 4-13	MDI/MDIX support 3-4, 5-1
AC power supply module configurations 4-12	memory requirements 1-12
ASDM 1-2	models 1-1
back panel features 1-4, 1-9	network I/O modules 4-5
back panel features (illustration) 1-9	packing box contents 2-1
cable management brackets	power module indicators
described 4-41	described 1-10, 4-13
installing 4-41	illustration 1-9
cable support 3-4, 5-1	power supply modules
connecting cables 3-5	installing 4-14
console port 3-6	removing 4-14
DC power module indicators	requirements 1-12
described 4-17	rack mounting 4-39
illustration 4-16	removing
DC power supply module configurations 4-16	SSPs 4-2
described 1-1	SFP ports 3-6
Ethernet port indicators 1-6	slide rail kit hardware
fan modules	installing 4-29
installing 4-28	specifications 1-10
removing 4-28	ASA 5585-X SSP-10
front panel features 1-4	described 1-3
front panel features (illustration) 1-4	memory requirements 1-12
front panel indicators	ASA 5585-X SSP-20
described 1-8	described 1-3
illustration 1-7	memory requirements 1-12
installing	ASA 5585-X SSP-40
cable management brackets 4-41	described 1-3
network modules 4-8	memory requirements 1-12

ASA 5585-X SSP-60	
described 1-3	
memory requirements 1-12	installing
	network modules (ASA 5585-X) 4-8
<u> </u>	IPS 4510
	AC power module indicators
cable pinouts	illustration 4-13
RJ-45 to DB-9 5-5	power module indicators
Cisco Adaptive Security Device Manager. See ASDM. 1-2	described 4-13
Cisco warranty 2-2	specifications 1-10
console port described 3-6	supported SFP+ modules 1-13, 4-7
console port described 3-0	supported SFP modules 1-13, 4-7
	IPS 4520
D	AC power module indicators
DC nower cumply modules	illustration 4-13
DC power supply modules installing 4-17	power module indicators
	described 4-13
removing 4-17	specifications 1-10
	supported SFP+ modules 1-13, 4-7
E	supported SFP modules 1-13, 4-7
electrostatic discharge. See ESD.	
equipment racks	L
tips 2-5	loose connections on edentities consuity applicances. 4.42
ventilation fans 2-5	loose connections on adaptive security appliances 4-43
ESD	
described 2-3	M
preventing 2-3	Management 0/0 port described 3-5
1 8	Management 0/0 port described 3-5
F	
fan modules	N
hot-pluggable 4-27	network I/O modules
installing 4-28	ASA 5585-X 4-5
OIR 4-27	11011 3303 11 40
removing 4-28	
fans	0
equipment racks 2-5	OIR
ventilation 2-5	not supported for modules 1-2
	not supported for modules

Book Title

supported		
fan modules 1-2		
power supply modules 1-2		
SFP/SFP+ modules 1-2		
P		
ports		
console 3-6		
Management 0/0 3-5		
Management 0/1 3-5		
SFP 3-6		
power supply modules		
installing (ASA 5585-X) 4-14		
installing (IPS 4510) 4-14		
installing (IPS 4520) 4-14		
redundant configuration 4-12		
removing (ASA 5585-X) 4-14		
removing (IPS 4510) 4-14		
removing (IPS 4520) 4-14		
R		
mak maynting the chassis 4.20		
rack-mounting the chassis 4-39		
RJ-45 to DB-9 cable pinouts 5-5		
S		
safety 2-2		
Security Services Processor. See SSP. 1-2		
SFP+ modules		
described 1-13		
supported (table) 1-13, 4-7		
supported (table) 1-13, 4-7 SFP modules		
SFP modules		
SFP modules described 1-13		

```
described 1-3

SSP-20
components 1-3
described 1-3

SSP-40
components 1-3
described 1-3

SSP-60
components 1-3
described 1-3

SSPs
slot 0 4-1
```

T

troubleshooting adaptive security appliance loose connections 4-43

W

warranty 2-2

Book Title

components 1-3

Index