



About this Book vii

CHAPTER 1

Install Cisco x90 Series Content Security Appliances 1-1

Unpack and Inspect Cisco x90 Series Content Security Appliances 1-2

Prepare for Cisco x90 Series Content Security Appliances Installation 1-3

 Installation Guidelines 1-3

 Safety Recommendations 1-4

 Maintain Safety with Electricity 1-5

 Prevent ESD Damage 1-5

 Site Environment 1-6

 Power Supply Considerations 1-6

 Rack Requirements 1-6

 Equipment Requirements 1-7

 Slide Rail Adjustment Range 1-7

Install Cisco x90 Series Content Security Appliances In a Rack 1-7

 Use the Rack Kit to Install Cisco x90 Series Content Security Appliances 1-7

 Install the Cable Management Arm (Optional) 1-10

 Reverse the Cable Management Arm (Optional) 1-11

CHAPTER 2

Cisco C190 Email Security Appliance 2-1

 Rear Panel Ports 2-1

 Status LEDs and Buttons for Maintenance 2-2

 Front Panel LEDs 2-2

 Rear Panel LEDs and Buttons 2-4

 Summary of Features 2-4

CHAPTER 3

Cisco C390 Email Security Appliance 3-1

 Rear Panel Ports 3-1

 Status LEDs and Buttons for Maintenance 3-2

 Front Panel LEDs 3-2

 Rear Panel LEDs and Buttons 3-4

 Summary of Features 3-5

CHAPTER 4

Cisco C690 Email Security Appliance 4-1

- Available Models 4-1
- Rear Panel Ports 4-2
 - Models with Ethernet Ports 4-2
 - Models with Fiber Optic Ports 4-3
- Status LEDs and Buttons for Maintenance 4-4
 - Front Panel LEDs 4-4
 - Rear Panel LEDs and Buttons 4-6
- Summary of Features 4-7

CHAPTER 5

Cisco M190 Content Security Management Appliance 5-1

- Rear Panel Ports 5-1
- Status LEDs and Buttons for Maintenance 5-2
 - Front Panel LEDs 5-2
 - Rear Panel LEDs and Buttons 5-4
- Summary of Features 5-4

CHAPTER 6

Cisco M390 Content Security Management Appliance 6-1

- Available Models 6-1
- Rear Panel Ports 6-1
- Using Status LEDs and Buttons for Maintenance 6-2
 - Front Panel LEDs 6-2
 - Rear Panel LEDs and Buttons 6-4
- Summary of Features 6-5

CHAPTER 7

Cisco M690 Content Security Management Appliance 7-1

- Available Models 7-1
- Rear Panel Ports 7-2
 - Models with Ethernet Ports 7-2
 - Models with Fiber Optic Ports 7-3
- Using Status LEDs and Buttons for Maintenance 7-4
 - Front Panel LEDs 7-4
 - Rear Panel LEDs and Buttons 7-6
- Summary of Features 7-7

CHAPTER 8

Cisco S190 Web Security Appliance 8-1

- Rear Panel Ports 8-1

| | |
|---|-----|
| Using Status LEDs and Buttons for Maintenance | 8-2 |
| Front Panel LEDs | 8-2 |
| Rear Panel LEDs and Buttons | 8-4 |
| Summary of Features | 8-5 |

CHAPTER 9**Cisco S390 Web Security Appliance 9-1**

| | |
|---|-----|
| Rear Panel Ports | 9-1 |
| Using Status LEDs and Buttons for Maintenance | 9-2 |
| Front Panel LEDs | 9-2 |
| Rear Panel LEDs and Buttons | 9-4 |
| Summary of Features | 9-5 |

CHAPTER 10**Cisco S690 Web Security Appliance 10-1**

| | |
|---|------|
| Available Models | 10-1 |
| Rear Panel Ports | 10-2 |
| Models with Ethernet Ports | 10-2 |
| Models with Fiber Optic Ports | 10-3 |
| Using Status LEDs and Buttons for Maintenance | 10-4 |
| Front Panel LEDs | 10-4 |
| Rear Panel LEDs and Buttons | 10-6 |
| Summary of Features | 10-8 |

CHAPTER 11**Maintain Cisco Content Security Appliances 11-1**

| | |
|--|-------|
| Monitor System Health | 11-1 |
| Prepare for Cisco Content Security Appliance Component Replacement | 11-2 |
| Required Equipment | 11-2 |
| Shut Down and Power Off the Appliance | 11-2 |
| Serial Number Location | 11-3 |
| Hot-Swap Replacement | 11-3 |
| Replace Cisco Content Security Appliance Components | 11-3 |
| Replace Hard Drives or Solid State Drives | 11-4 |
| Drive Population Guidelines | 11-4 |
| Drive Replacement Procedure | 11-5 |
| Replace Power Supplies | 11-6 |
| Install a DC Power Supply | 11-7 |
| Enable Remote Power Cycling | 11-9 |
| Remotely Reset Appliance Power | 11-10 |
| | 11-10 |

APPENDIX A

Appliance Specifications A-1

Physical Specifications A-1

Environmental Specifications A-2

Power Specifications A-3

770 W AC Power Supply A-3

650 W AC Power Supply A-4

930W DC Power Supply A-5

APPENDIX B

Power Cord Specifications B-1

Supported Power Cords and Plugs B-1

AC Power Cord Illustrations B-4