



Overview

- [Objective, on page 2](#)
- [Accessing the CLI, on page 3](#)

Objective

This document is a practical guide to essential Cisco Cyber Vision commands. It provides clear examples of how to use key commands for managing, monitoring, and troubleshooting your Cyber Vision systems. Commands are organized by theme for easy navigation.

Accessing the CLI

Accessing the Cisco Cyber Vision Center CLI

You can access the Center CLI in several ways:

- **Center hosted on Cisco Unified Computing System (Cisco UCS):**
 - Direct SSH (`ssh cv-admin@<Center IP>`)
 - UCS Cisco Integrated Management Controller (CIMC) virtual KVM
 - Cisco UCS Serial Over LAN
- **Center hosted on a hypervisor:**
 - Direct SSH (`ssh cv-admin@<Center IP>`)
 - Hypervisor virtual machine console

You can use the same credentials for all connections to the Center CLI: username `cv-admin` and the installation password.

For accessing the Cisco Cyber Vision sensor CLI, see [Cyber Vision 4.3.0 Onwards](#).

