



## Configure the Center

---

- [Install Cisco Cyber Vision, on page 1](#)
- [Cisco Cyber Vision configuration, on page 4](#)

## Install Cisco Cyber Vision

Access the Cisco Cyber Vision installation wizard:

### Procedure


---

**Step 1** With your browser, access <https://<CENTERNAME>/>.

**Note** Accessing the Center using its name enables HTTPS secure interface. Yet, this requires a DNS or local host configuration to associate the name and the IP address. The Center access through its IP address is possible but the connection is not secure.

**Step 2** The setup wizard used for the first access to Cisco Cyber Vision is displayed:

**Step 3** **Create an admin account:**

  
**Welcome to Cyber Vision**  
 Please follow this few steps to be fully ready to use the product

👤 Create the first user ————— 📄 Agree to the license terms ————— ✅ Done

Firstname :  Lastname :   
 Email :   
 Password :  Confirm password :   
 Suggested password:  
 SkvIH2Qq\*odz90fj0E3 📄 📋

Create

**Step 4****Step 5**

Enter the information required.

**Note** Email will be asked for login access.

**Note** Passwords must contain at least 6 characters and comply with the rules below. Passwords:


- Must contain a lower case character: a-z.
- Must contain an upper case character: A-Z.
- Must contain a numeric character: 0-9.
- Cannot contain the user id.
- Must contain a special character: ~!"#\$%&'()\*+,-./:;<=>?@[^\_{}.

Passwords should be changed regularly to ensure the platform and the industrial network security.

**Note** You can reset users using the following command in the Center's CLI:

```
sbs-db reset-users
```


**Step 6 Accept the software license agreement:**

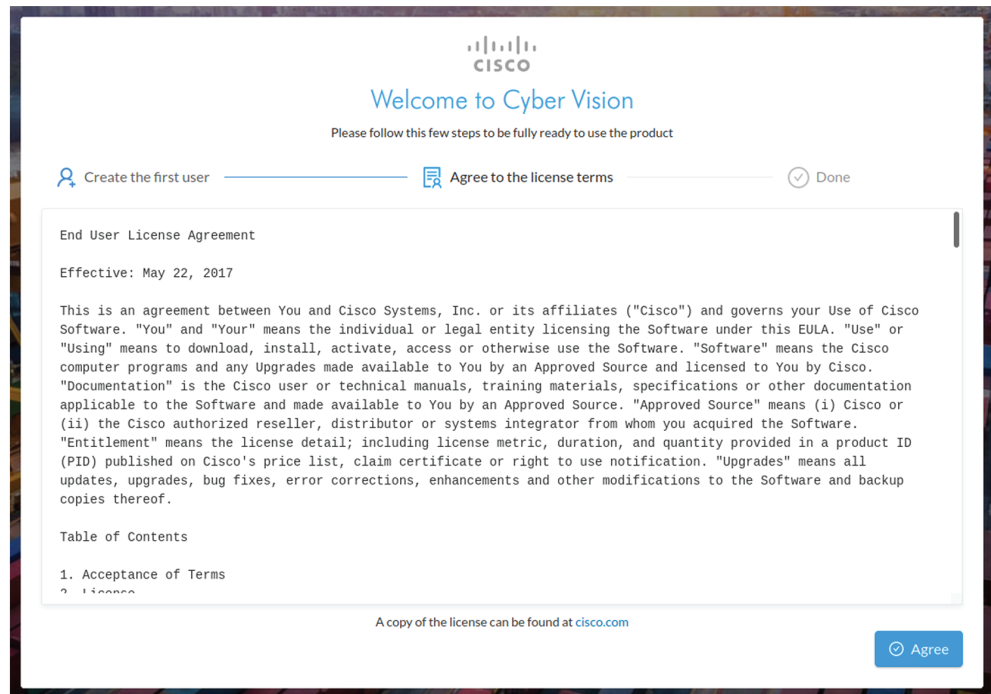**Step 7****Step 8 Finish the installation:**

The Center is now correctly installed and Cisco Cyber Vision is ready to operate.

**Step 9**

Click Start to Explore.

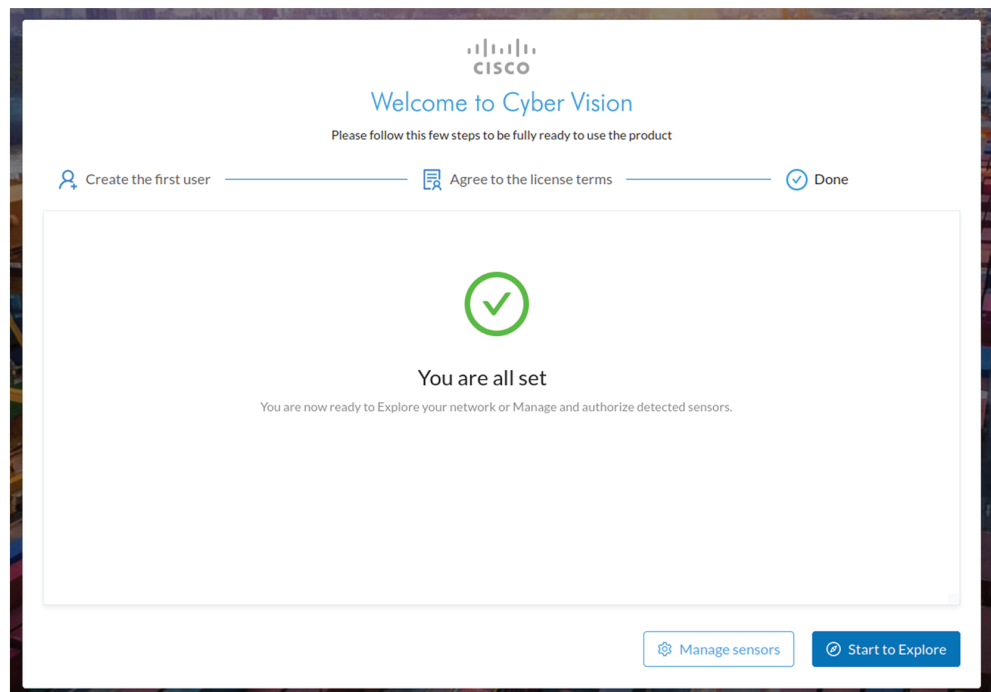

Cisco Cyber Vision installation is now complete.

---

### What to do next

If you aim to use an enterprise certificate, proceed with [Configure the user interface security, on page 14](#).

If you already installed a self-signed certificate, and if you are installing a Global Center or a synchronized Center, proceed with [Configure Center data synchronization, on page 19](#).

If you already installed a self-signed certificate, and if you are installing a standalone Center, you can start installing the sensors. To do so, refer to the corresponding Cisco Cyber Vision Sensor Installation Guides.

## Cisco Cyber Vision configuration

Once the Basic Center configuration is done, you must connect through a web browser to the URL displayed on the last step of the basic configuration wizard (i.e. the Center's IP address). A message saying that the URL is not secure will appear.

- If you plan to use a self-signed certificate, you must [Install the certificate in your browser](#) and then access the [Install Cisco Cyber Vision](#) to configure users and sensors.
- If you plan to use an enterprise certificate, you must ignore the security message and perform the following steps in this order:
  1. Access the [Install Cisco Cyber Vision](#) to configure users and sensors.
  2. [Configure the user interface security](#) itself.

Then, you will configure the Centers data synchronization (Global Center and its Centers' only).

### Browser requirements:

Cisco Cyber Vision supports Chrome 54, Firefox 49 and newer versions.

## Install the certificate in your browser

This task explains how to install a Cisco Cyber Vision self-signed certificate in your browser.

### Before you begin

Perform this task if you aim to install a self-signed certificate. If you're planning to use an enterprise certificate, proceed directly with [Install Cisco Cyber Vision, on page 1](#).


### Procedure

---


- Step 1** Open your browser.
- Step 2** Enter 'http://<CENTERIPADDRESS>/ca.crt' inside the search bar.  
The certificate is downloaded.
- Step 3** Save the certificate on your computer.

**Step 4** In the browser, access the settings.


Example: Chrome

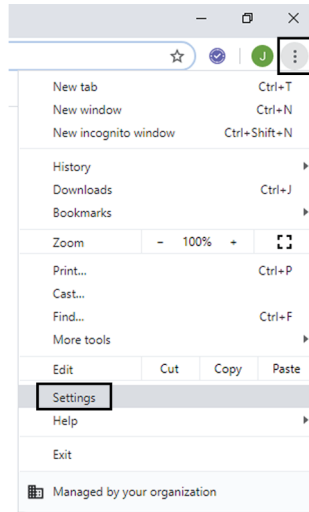

**Step 5** Type 'certificate' in the search bar and access the certificates management menu.

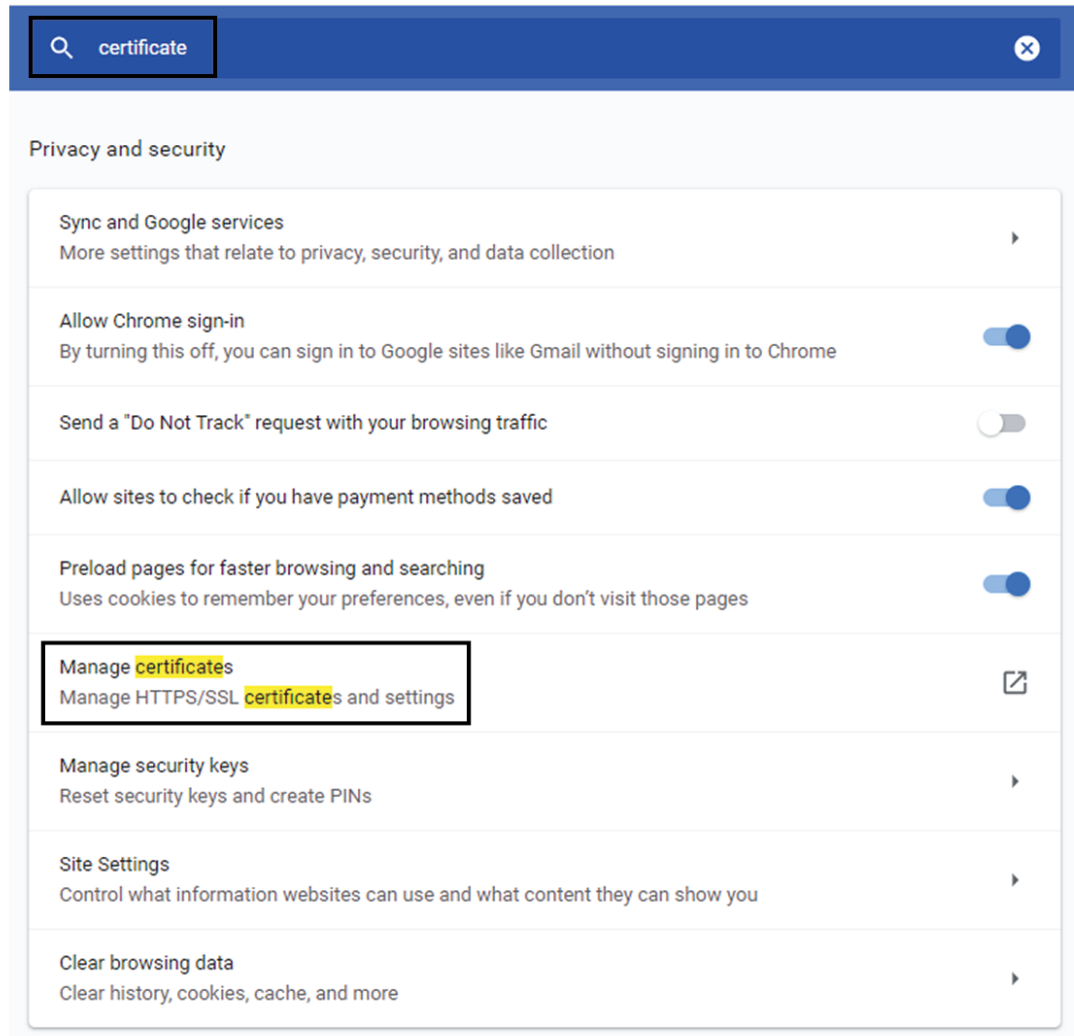


**Step 6** Access the Trusted Root Certification tab and click Import.

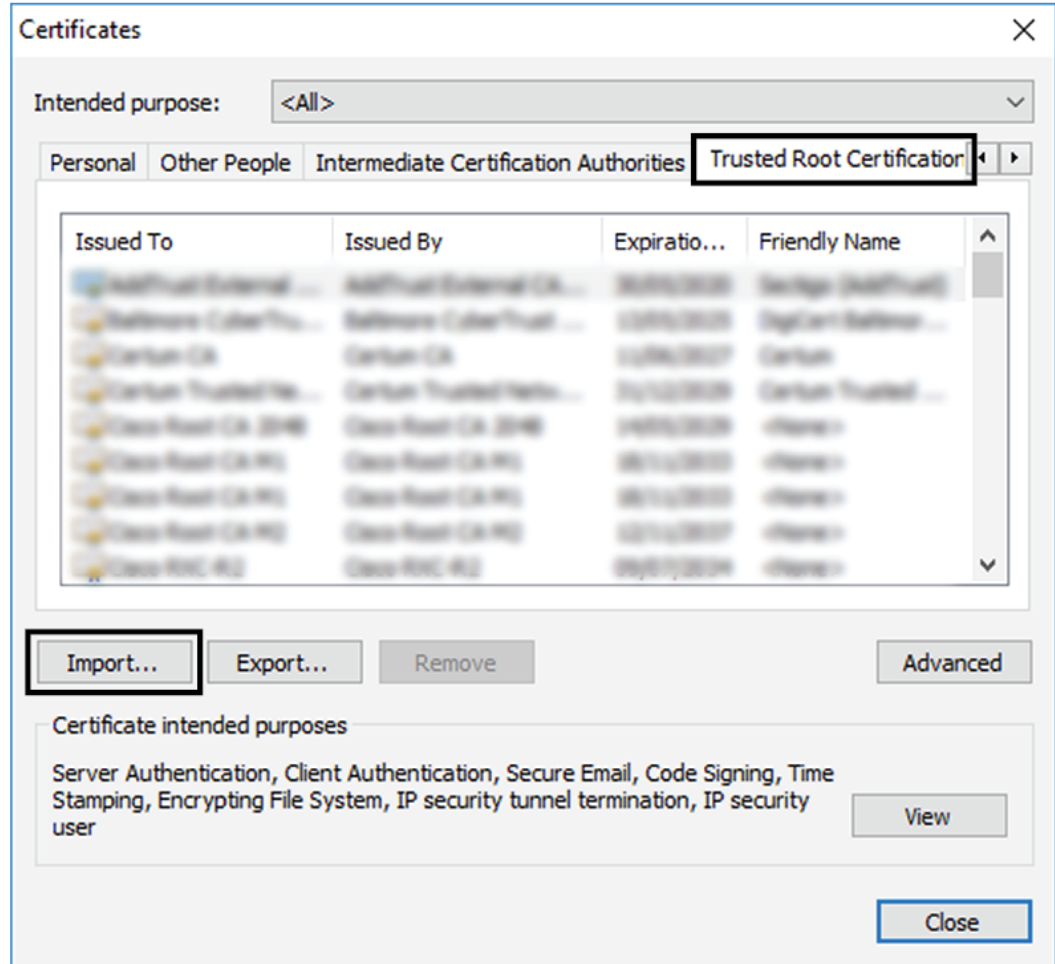

A certificate importation wizard opens.

**Step 7**


Go to the next step.

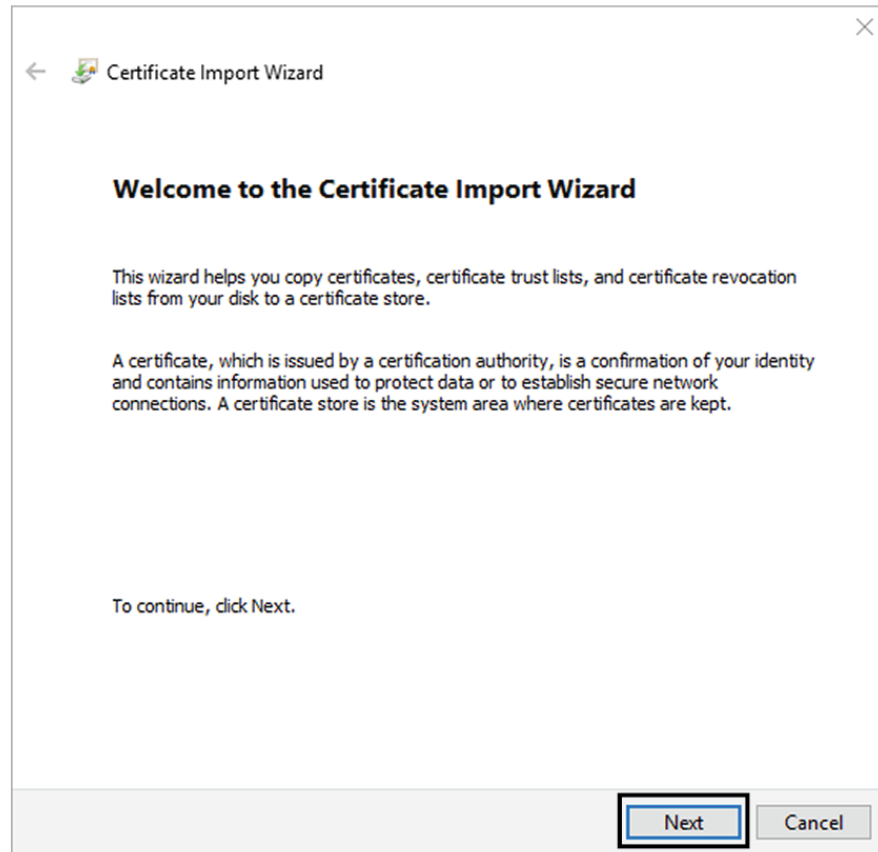


**Step 8** Search for the certificate you downloaded earlier.

**Step 9** Go to the next step.




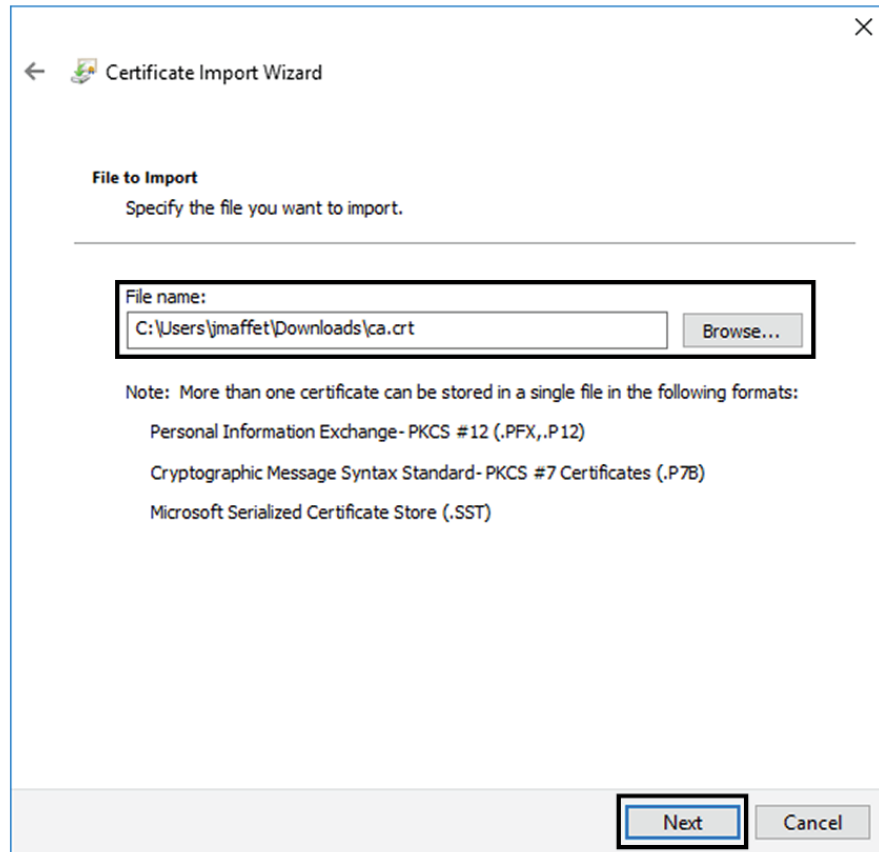

**Step 10** Accept the default values by accessing the next step.

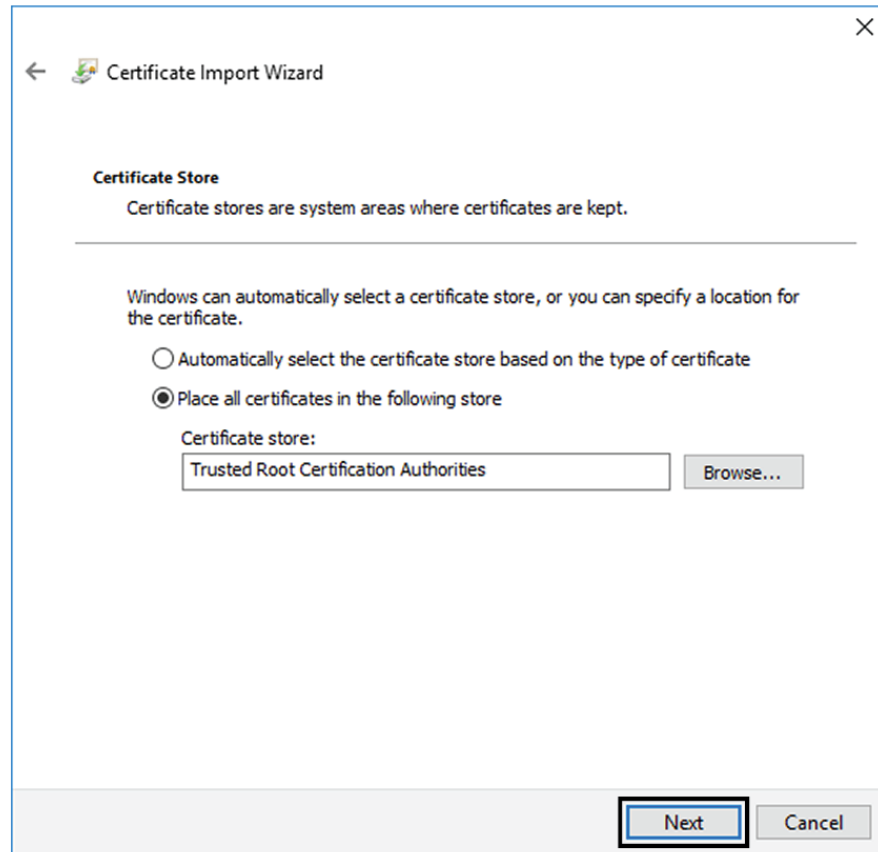

**Step 11** The certificate is now considered as trusted by the browser. It will be imported as soon as you will click Finish.

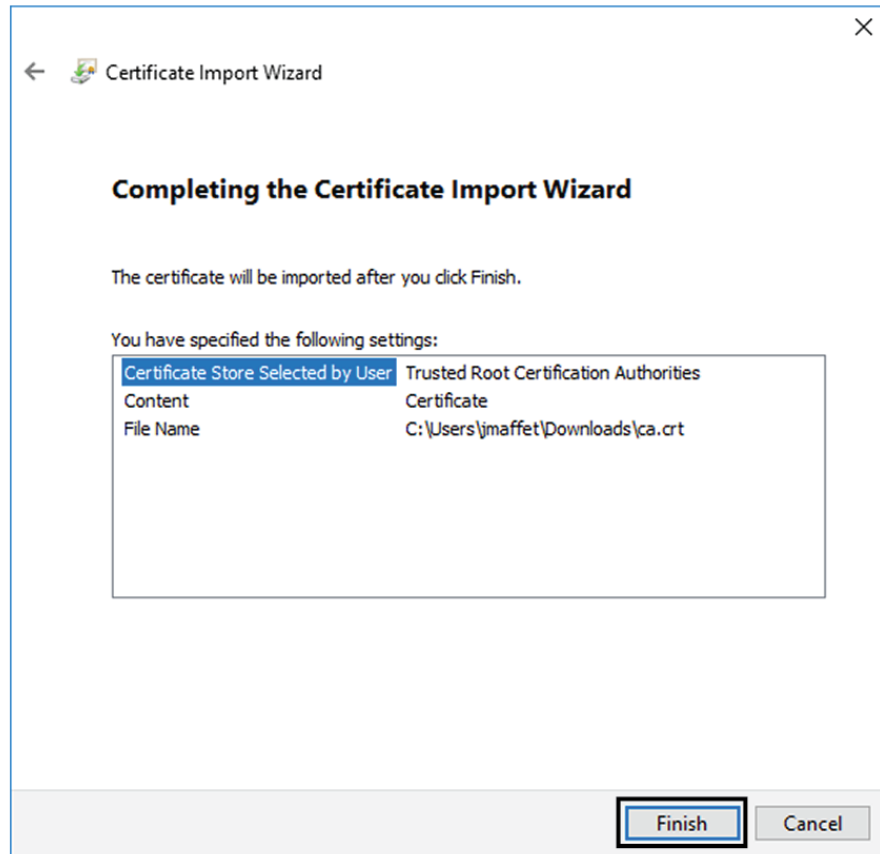

#### What to do next

[Install Cisco Cyber Vision, on page 1](#)

## Install Cisco Cyber Vision

Access the Cisco Cyber Vision installation wizard:


#### Procedure

**Step 1** With your browser, access `https://<CENTERNAME>/`.

**Note** Accessing the Center using its name enables HTTPS secure interface. Yet, this requires a DNS or local host configuration to associate the name and the IP address. The Center access through its IP address is possible but the connection is not secure.

**Step 2** The setup wizard used for the first access to Cisco Cyber Vision is displayed:

**Step 3** Create an admin account:

  
**Welcome to Cyber Vision**  
 Please follow this few steps to be fully ready to use the product

👤 Create the first user ————— 📄 Agree to the license terms ————— ✅ Done

Firstname :  Lastname :   
 Email :   
 Password :  Confirm password :   
 Suggested password:  
 SkvIH2Qq\*odz90fj0E3 📄 📋

Create

**Step 4****Step 5**

Enter the information required.

**Note** Email will be asked for login access.

**Note** Passwords must contain at least 6 characters and comply with the rules below. Passwords:

- Must contain a lower case character: a-z.
- Must contain an upper case character: A-Z.
- Must contain a numeric character: 0-9.
- Cannot contain the user id.
- Must contain a special character: ~!"#\$%&'()\*+,-./:;<=>?@[^\_{}.


Passwords should be changed regularly to ensure the platform and the industrial network security.

**Note** You can reset users using the following command in the Center's CLI:


```
sbs-db reset-users
```

**Step 6**

**Accept the software license agreement:**

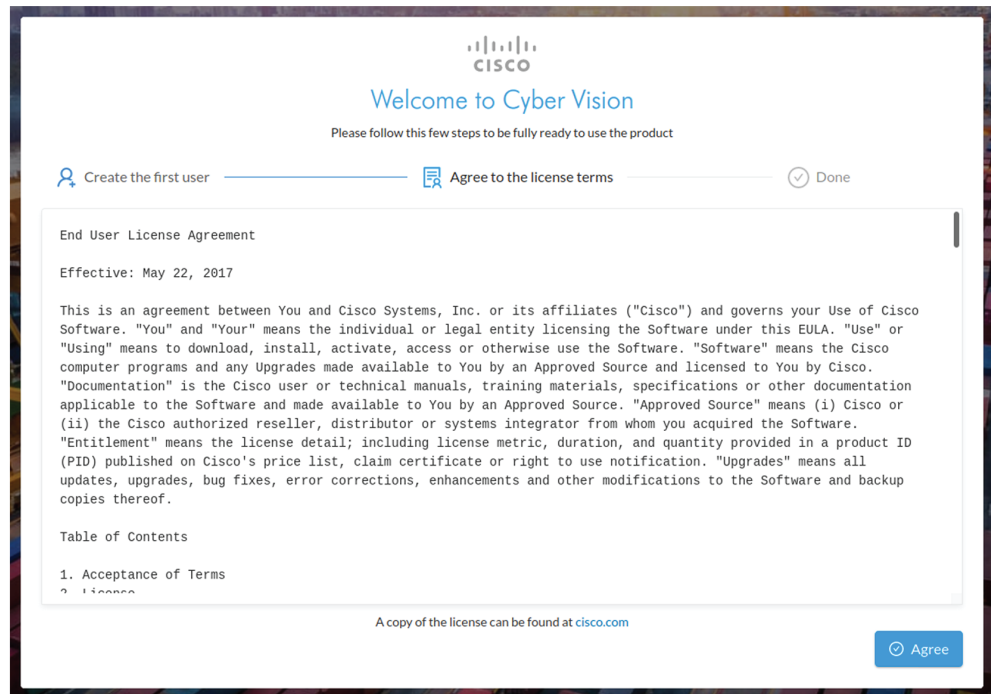**Step 7****Step 8 Finish the installation:**

The Center is now correctly installed and Cisco Cyber Vision is ready to operate.

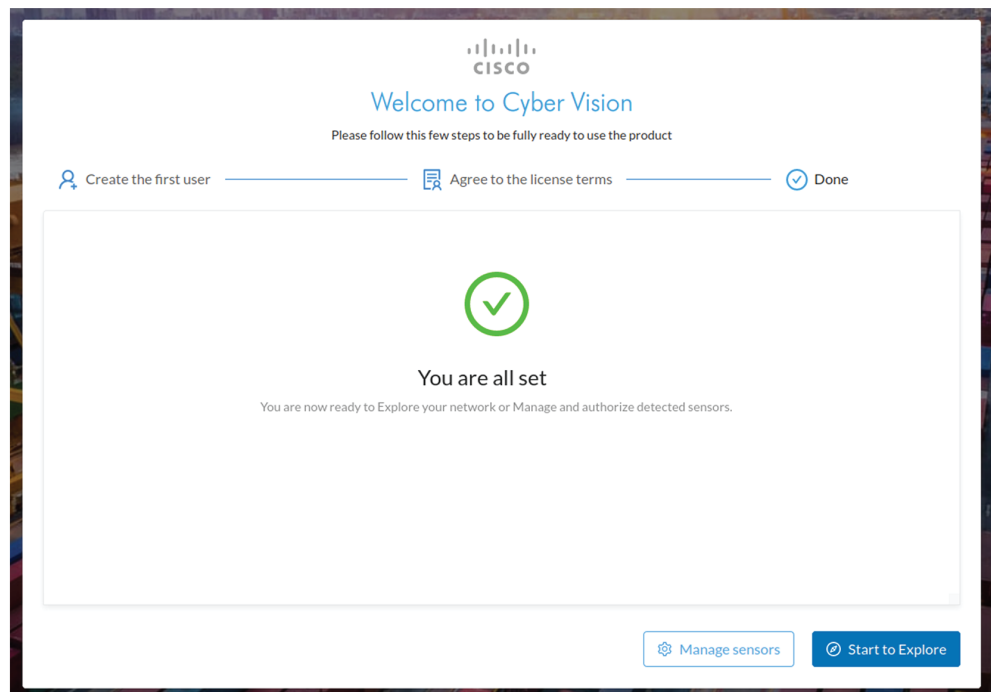**Step 9** Click Start to Explore.

Cisco Cyber Vision installation is now complete.

### What to do next

If you aim to use an enterprise certificate, proceed with [Configure the user interface security, on page 14](#).

If you already installed a self-signed certificate, and if you are installing a Global Center or a synchronized Center, proceed with [Configure Center data synchronization, on page 19](#).

If you already installed a self-signed certificate, and if you are installing a standalone Center, you can start installing the sensors. To do so, refer to the corresponding Cisco Cyber Vision Sensor Installation Guides.

## Configure the user interface security


This section explains how to configure Cisco Cyber Vision user interface security with an enterprise certificate. You will have the option to upload a .p12 or to generate a CSR.

### Before you begin

Perform this task if you're planning to use an enterprise certificate. You must [Install Cisco Cyber Vision](#) beforehand.

### Procedure

**Step 1** To use an enterprise certificate, navigate to Admin > Center certificate.

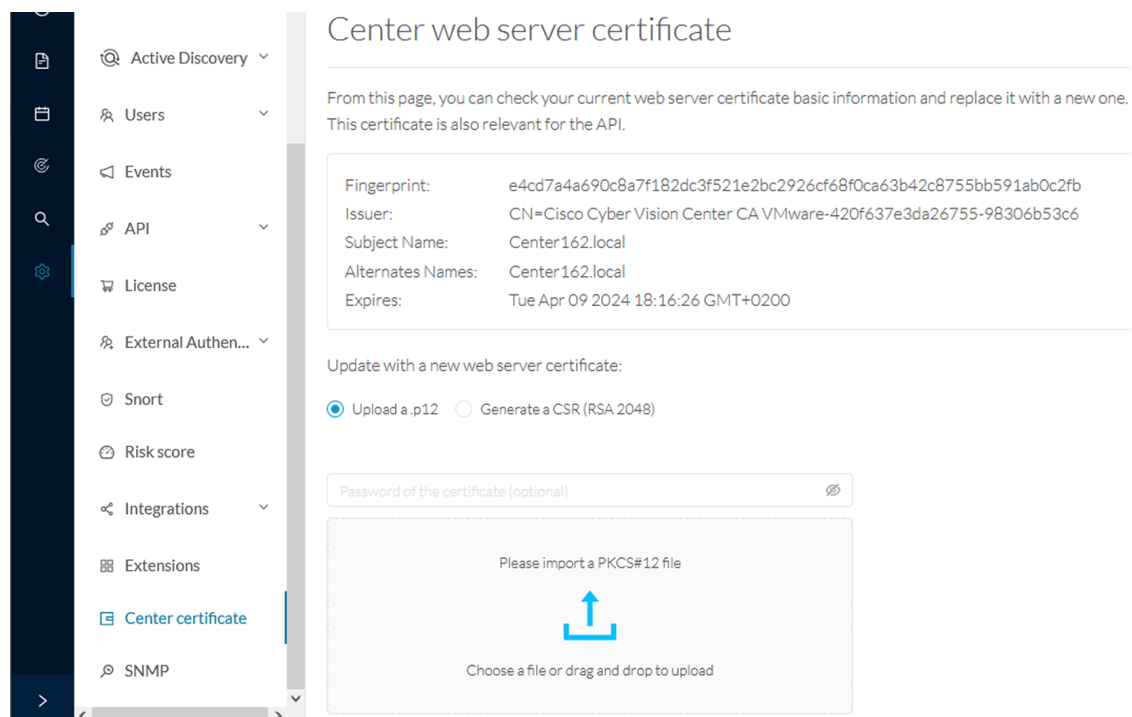

The screenshot shows the 'Center web server certificate' configuration page in the Cisco Cyber Vision Admin console. The left sidebar contains a navigation menu with items like Active Discovery, Users, Events, API, License, External Authen..., Snort, Risk score, Integrations, Extensions, Center certificate (highlighted), and SNMP. The main content area shows the following information:

**Center web server certificate**

From this page, you can check your current web server certificate basic information and replace it with a new one. This certificate is also relevant for the API.

Fingerprint:	e4cd7a4a690c8a7f182dc3f521e2bc2926cf68f0ca63b42c8755bb591ab0c2fb
Issuer:	CN=Cisco Cyber Vision Center CA VMware-420f637e3da26755-98306b53c6
Subject Name:	Center162.local
Alternates Names:	Center162.local
Expires:	Tue Apr 09 2024 18:16:26 GMT+0200

Update with a new web server certificate:

Upload a .p12  Generate a CSR (RSA 2048)

Password of the certificate (optional)

Please import a PKCS#12 file

Choose a file or drag and drop to upload

**Step 2** You can [Upload a p12](#) or [Generate a CSR](#).

---

## Upload a p12

### Before you begin

The p12 (or Microsoft pfx) file must contain a private key, a password, and the field "X509v3 Subject Alternative Name" must contain the Center DNS name.

### Procedure

---


**Step 1** Select Upload a .p12.

Update with a new web server certificate:

Upload a .p12  Generate a CSR (RSA 2048)

Password of the certificate (optional) 

Please import a PKCS#12 file



Choose a file or drag and drop to upload

 Save

Click Please import a PKCS12 file and choose you pfx or p12 file generated from your certification server.


**Step 2** Type the certificate password.

**Step 3** Click the Import a PKCS#12 file button or drag and drop the file to import it.

Update with a new web server certificate:

Upload a .p12  Generate a CSR (RSA 2048)

.....

 


File selected: CenterAD2019.2019lab.local1.pfx

Save

**Step 4** Click Save.


The following message appears:



**Step 5** Click Reload.

**Step 6** In your browser, use the DNS name to connect to your Cisco Cyber Vision instance.

The error message does not appear and the connection is secure.

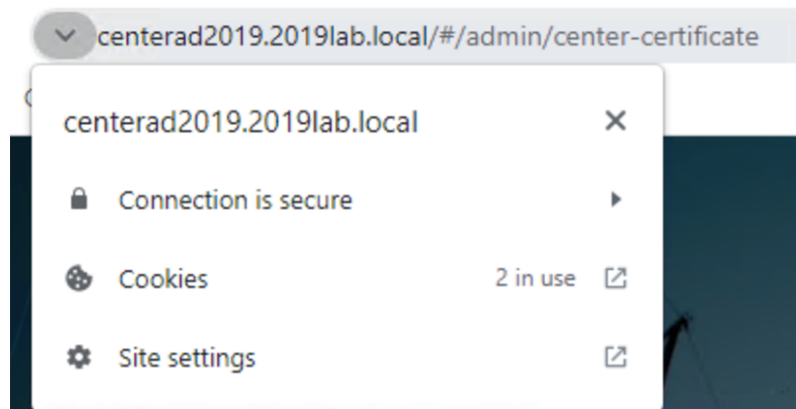

### What to do next

If you are installing a Global Center or a synchronized Center, proceed with [Configure Center data synchronization, on page 19](#).

If you are installing a standalone Center, you can start installing the sensors. To do so, refer to the corresponding Cisco Cyber Vision Sensor Installation Guides.



## Generate a CSR

### Procedure


**Step 1**

Select Generate a CSR.

Update with a new web server certificate:

Upload a .p12  Generate a CSR (RSA 2048)

Enter your FQDN

 Generate and download CSR

**Step 2**

Enter the Center FQDN as registered on your DNS server.


**Step 3**

Click the Generate and download CSR button.

Update with a new web server certificate:

Upload a .p12  Generate a CSR (RSA 2048)

CenterAD2019.2019lab.local

 Generate and download CSR

A message indicating that the CSR has been generated is displayed.

**Step 4**

Click the download button (1).

Update with a new web server certificate:


Upload a .p12  Generate a CSR (RSA 2048)

i CSR has been generated. Please import the certificate.

FQDN: CenterAD2019.2019lab.local

CSR: download 1

Import a complete PEM bundle (concatenated CA, subCA, certificate) 2



Choose a file or drag and drop to upload

Discard
Save

A <FQDN>.csr file is downloaded.

**Step 5** Use the <FQDN>.csr file to generate a pem certificate from your enterprise Certification Authority.

**Step 6** Once the pem certificate is generated, return to Cisco Cyber Vision and click the Import a complete PEM bundle button (2) or drag and drop it to import it.


Update with a new web server certificate:

Upload a .p12  Generate a CSR (RSA 2048)

i CSR has been generated. Please import the certificate.

FQDN: CenterAD2019.2019lab.local

CSR: download

 


File selected: CenterAD2019.2019lab.local.crt

Discard
Save

**Step 7** Click Save.


The following message appears:



**Step 8** Click Reload.

**Step 9** In your browser, use the DNS name to connect to your Cisco Cyber Vision instance.

The error message does not appear and the connection is secure.

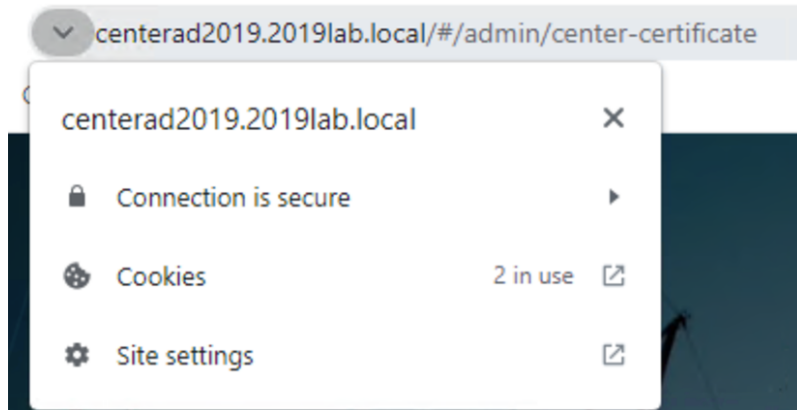

### What to do next

If you are installing a Global Center or a synchronized Center, proceed with [Configure Center data synchronization, on page 19](#).

If you are installing a standalone Center, you can start installing the sensors. To do so, refer to the corresponding Cisco Cyber Vision Sensor Installation Guides.

## Configure Center data synchronization


This step is applicable to the Global Center and its synchronized Centers.

Once the Global Center and its synchronized Centers are installed, proceed to data synchronization, which consists in registering the Center in the Global Center and enrolling the Center to the Global Center. To do so, you need to open each's Cisco Cyber Vision's GUI.



**Note** To differentiate each user interface, check the top left corner of Cisco Cyber Vision's "Global Center" or "Center".


In the Global Center's Cisco Cyber Vision GUI, navigate to Admin > System Management > Management. Click the Register a Center button.

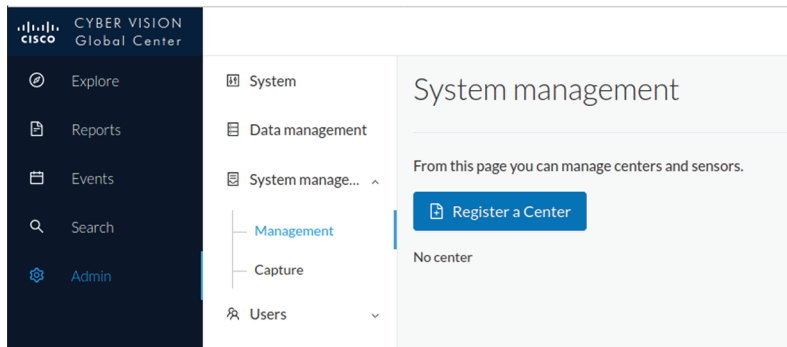


The window "Register a Center" pops up, ready to be filled. Now you must access the Center's GUI to retrieve its fingerprint.

In the Center's Cisco Cyber Vision GUI, navigate to Admin > System.

Scroll down to Certificate fingerprint and copy it.

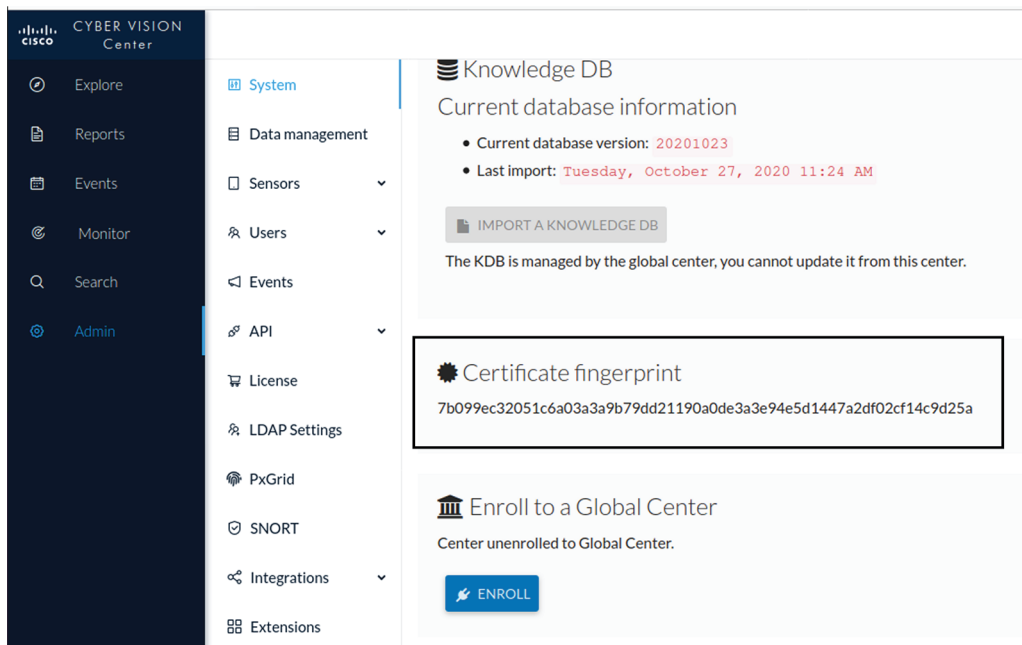


In the Global Center's GUI, give a name to the Center, and paste the Center's fingerprint into the corresponding field.

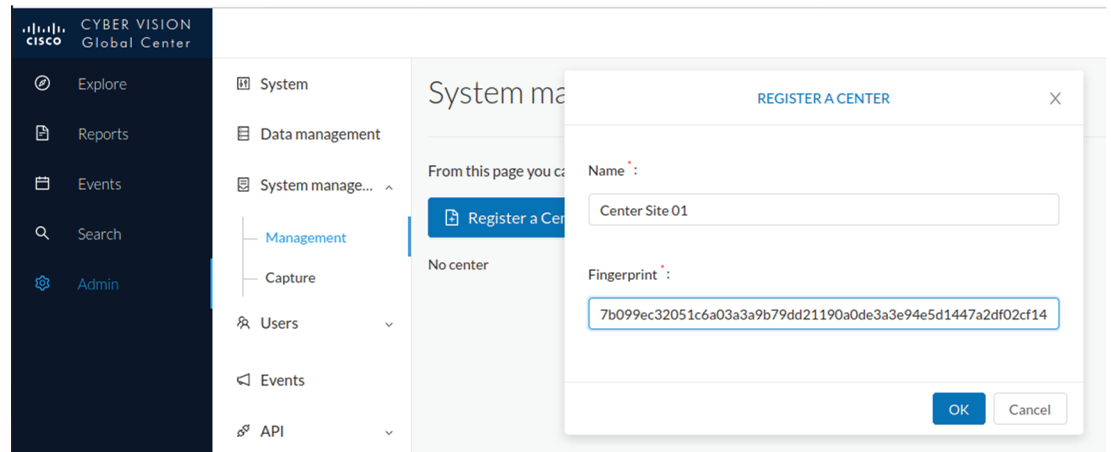


Click OK.

The Center appears in the list as unenrolled.

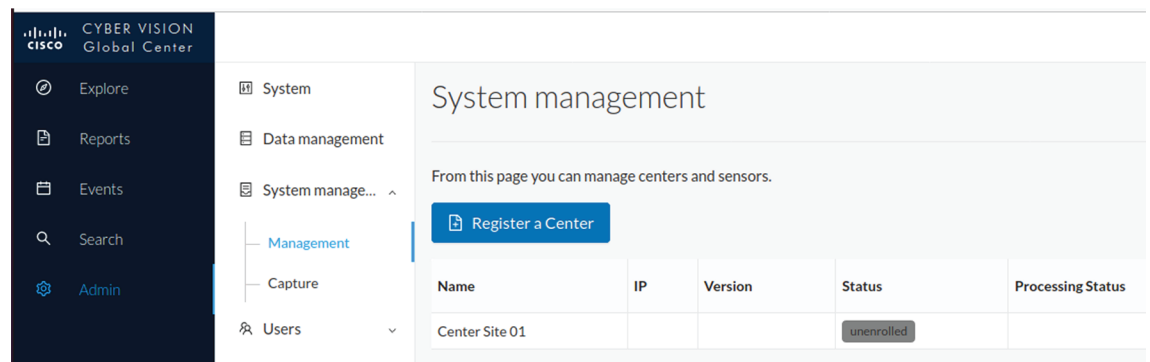

At this point you must switch to the Center's GUI and enroll it to the Global Center.


In the Center's GUI, scroll down to Enroll a Global Center and click the Enroll button.

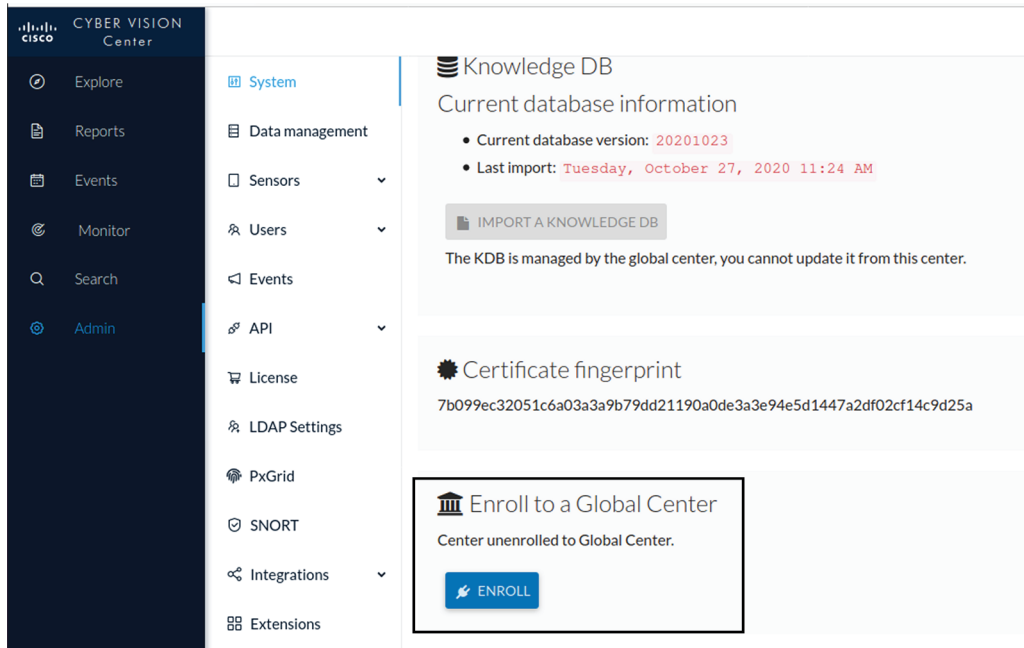


The Enrollment window pops up.

Copy the Global Center's fingerprint from its GUI's System administration page (same location as the Center's).


Enter the Global Center's IP address and click Enroll.

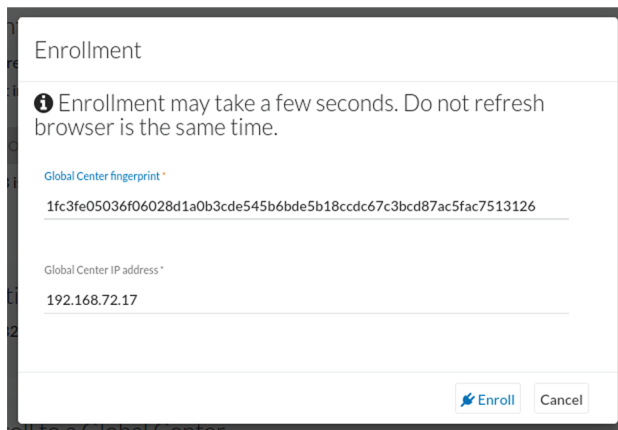

 Once the synchronization is on, it is indicated that the Center is enrolled to the Global Center.



In the Global Center's GUI, the Center status changes to Connected.

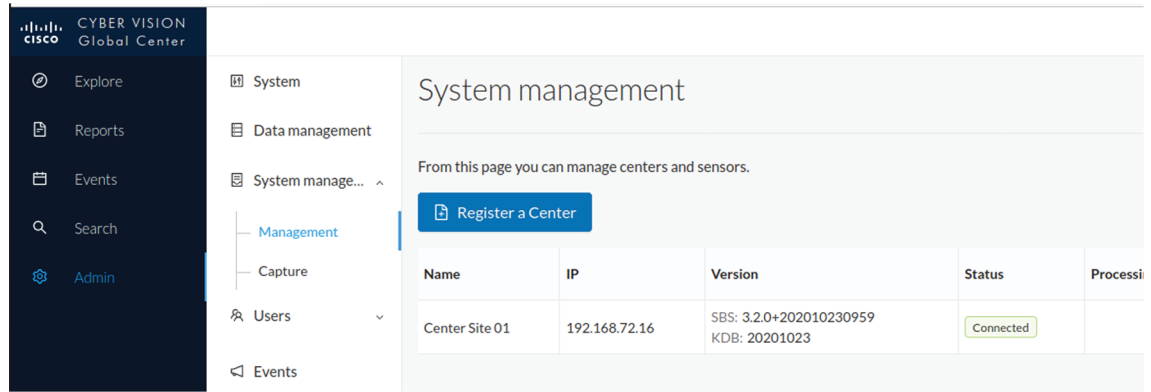

The Global Center and the Center are successfully connected.

Repeat the previous steps as many times as necessary to connect other Centers.

The next step will be to install and enroll the sensors. To do so, refer to the corresponding Cisco Cyber Vision Sensors Installation Guides.

Once a sensor will be connected it will appear in the Global Center's GUI as below:

Name	IP	Version	Status	Processing Status	Capture Mode	UpTime
<input type="checkbox"/> Center Site 01	192.168.72.16	SBS: 3.2.0+202010230959 KDB: 20201023	Connected			1 hr 19 mins 42 secs
Sensor IE3400-LAB1	192.168.69.210	3.2.0+202010231006	Connected	Pending data		7 mins 29 secs

