



About this documentation

- [Document purpose, on page 1](#)
- [Warnings and notices, on page 1](#)

Document purpose

This user guide presents the [concepts](#) you will meet in Cisco Cyber Vision and how to [navigate](#) within the application by explaining available features.

It takes into consideration the GUI with the highest license level (Advantage) and involves all available users roles (from full rights to read-only).

This manual is applicable to **system version 4.1.0**.



Important

Cisco Cyber Vision EAP is a snapshot of the ongoing development process and is in the qualifying phase. Testing for this program is under progress and may contain features that are incomplete or may change before the next full release.

Warnings and notices

This manual contains notices you have to observe to ensure your personal safety as well as to prevent damage to property.

The notices referring to your personal safety and to your property damage are highlighted in the manual by a safety alert symbol described below. These notices are graded according to the degree of danger.



Warning

Indicates risks that involve industrial network safety or production failure that could possibly result in personal injury or severe property damage if proper precautions are not taken.

**Important**

Indicates risks that could involve property or Cisco equipment damage and minor personal injury if proper precautions are not taken.

**Note**

Indicates important information on the product described in the documentation to which attention should be paid.
