



# Requirements

---

- [Requirements, on page 1](#)

## Requirements

The hardware must have an access set to the Local Manager and to the CLI (ssh or console port).

### Elements to collect

- The Cisco Cyber Vision Sensor application to collect from Cisco.com, i.e.
  - CiscoCyberVision-IOx-aarch64-<version>.tar (Cisco IE3300 10G, Cisco IE3400, Cisco IE9300)
  - CiscoCyberVision-IOx-x86-64-<version>.tar (Cisco Catalyst 9300)
  - CiscoCyberVision-IOx-Active-Discovery-aarch64-<version>.tar (Cisco IE3300 10G, Cisco IE3400, Cisco IE9300 with Active Discovery)
  - CiscoCyberVision-IOx-Active-Discovery-x86-64-<version>.tar (Cisco Catalyst 9300 with Active Discovery)
- A console cable, for the connection to the hardware's console port.  
OR
- An Ethernet cable, for the connection to one of the hardware's port.

