



# Global FXOS CLI Commands

- [Global FXOS CLI Commands, on page 1](#)

## Global FXOS CLI Commands

The following commands are global for all modes in the FXOS CLI.

Command	Description
acknowledge fault	Acknowledges a fault. Command syntax: For example: <code>acknowledge fault 1</code> Where <i>id</i> is the fault identification number. The range of valid values is 0 to 9223372036854775807.
clear	Clears managed objects.
commit-buffer	Commits transaction buffer.
connect	Connect to another CLI. For example: <code>connect ftd</code>
discard-buffer	Discard transaction buffer.
end	Go to exec mode.
exit	Exit from command interpreter.
scope	Enters a new mode.
set	Sets property values.
show	Shows system information.
terminal	Terminal.
top	Goes to the top of the mode.

<b>Command</b>	<b>Description</b>
ucspe-copy	Copies a file in UCSPE.
up	Goes up one mode.
where	Shows information about the current mode.
backup	Backup.