



## Management Capability in Version 6.2.0.x

- [Management Capability: Firepower Management Center, on page 1](#)
- [Local Management Capability: ASA FirePOWER Module, Firepower Device Manager, and 7000 and 8000 Series Devices, on page 2](#)

### Management Capability: Firepower Management Center

You can use the Firepower Management Center web interface to configure and manage the Firepower Management Center and its managed devices. Alternatively, you can use the UI on specific device platforms to configure and manage those specific device platforms (see [Local Management Capability: ASA FirePOWER Module, Firepower Device Manager, and 7000 and 8000 Series Devices](#)).

If a managed device is running Version 6.2.0.x, you *must* use at least Version 6.2.0 of the Firepower Management Center to manage the device. If a Firepower Management Center is running Version 6.2.0.x, it can manage devices running the versions specified in the following table.

**Table 1: Device Version Requirements to be Managed by Firepower Management Center Running Version 6.2.0.x**

Device	Minimum Required Version for Device
7000 and 8000 Series managed devices	Version 6.1.0
NGIPSv virtual managed devices	Version 6.1.0
ASA with FirePOWER Services on ASA 5512-X, ASA 5515-X, ASA 5525-X, ASA 5545-X, ASA 5555-X, ASA 5585-X-SSP-10, ASA 5585-X-SSP-20, ASA 5585-X-SSP-40, ASA 5585-X-SSP-60	Version 6.1.0
ASA with FirePOWER Services on ASA 5506-X, ASA 5506W-X, ASA 5506H-X, ASA 5508-X, ASA 5516-X	Version 6.1.0
Firepower Threat Defense on ASA 5506-X, ASA 5506W-X, ASA 5506H-X, ASA 5508-X, ASA 5512-X, ASA 5515-X, ASA 5516-X, ASA 5525-X, ASA 5545-X, ASA 5555-X	Version 6.1.0

Device	Minimum Required Version for Device
Firepower Threat Defense on Firepower 9300 (with SM-24, SM-36, or SM-44 security modules)	Version 6.1.0
Firepower Threat Defense on Firepower 4110, Firepower 4120, Firepower 4140, Firepower 4150	Version 6.1.0
Firepower Threat Defense Virtual	On VMware: Version 6.1.0 On AWS: Version 6.1.0 On KVM: Version 6.1.0 On Azure: Version 6.2.0

## Local Management Capability: ASA FirePOWER Module, Firepower Device Manager, and 7000 and 8000 Series Devices

On select device platforms tailored for smaller deployments, you can use a GUI to configure and manage the devices. These platforms include the ASA with FirePOWER Services module managed with ASDM or devices running FTD managed by Firepower Device Manager.

Also, you can use a web interface to perform limited configuration on 7000 and 8000 Series devices.

Alternatively, you can use the Firepower Management Center web interface to configure and manage these devices (see [Management Capability: Firepower Management Center, on page 1](#)).

### ASA FirePOWER Module Managed with ASDM

**Supported Platforms:** ASA 5506-X, ASA 5506H-X, ASA 5506W-X, ASA 5508-X, ASA 5516-X, ASA 5512-X, ASA 5515-X, ASA 5525-X, ASA 5545-X, ASA 5555-X, ASA 5585-X-SSP-10, ASA 5585-X-SSP-20, ASA 5585-X-SSP-40, ASA 5585-X-SSP-60

You can use ASDM to configure and manage an ASA FirePOWER module running Version 6.2.0.x.

See the [Cisco ASA with FirePOWER Services Local Management Configuration Guide](#) for more information.

### Firepower Threat Defense Devices Managed by Firepower Device Manager

**Supported Platforms:** ASA 5506-X, ASA 5506H-X, ASA 5506W-X, ASA 5508-X, ASA 5512-X, ASA 5515-X, ASA 5516-X, ASA 5525-X, ASA 5545-X, ASA 5555-X

You can use the Firepower Device Manager to configure and manage a FTD device running Version 6.2.0.x.

See the [Cisco Firepower Threat Defense Configuration Guide for Firepower Device Manager](#) for more information.

### 7000 and 8000 Series Devices

**Supported Platforms:** 7010, 7020, 7030, 7050, 7110, 7115, 7120, 7125, 8120, 8130, 8140, 8250, 8260, 8270, 8290, 8350, 8360, 8370, 8390, AMP7150, AMP8050, AMP8150, AMP8350, AMP8360, AMP8370, AMP8390

You can use the web interface for a 7000 or 8000 Series device running Version 6.2.0.x to manage limited configurations on that device. You must use the Firepower Management Center for some device configurations not accessible from the 7000 and 8000 Series web interface.

See the [Firepower Management Center Configuration Guide](#) for more information.

