

Standalone Firepower Management Center Model Migration Workflow

Use the following workflow to migrate your Firepower Management Center from the source model to the target model.

1	Create a backup file in the source Firepower Management Center.	Back up the Firepower Management Center	
		Note In addition to Back Up Configuration, you must also select Backup Events and Backup Threat Intelligence Director. If Threat Intelligence Director is not enabled, the option to select TID backup does not appear.	
2	Set up the target FMC.	Prepare for Migration, on page 4	
3	Copy the generated backup file to the target FMC.	Upload a Backup File	
4	Disconnect the target FMC from the network.	Physically disconnect (unplug) the target FMC device from the network.	
5	Execute the migration script in the target FMC.	Firepower Management Center Model Migration Script, on page 4	
6	Unregister your source Firepower Management Center from the Cisco Smart Software Manager.	Deregister a Firepower Management Center from the Cisco Smart Software Manager	

Table 1, Standalana I	Eironowar Mar	anoment Conter	Model Mi	reation Workflow
Table I. Stallualoile r	ritepower wan	iayemeni center	wouer wiig	

7	Disconnect the source FMC from the network.	Physically disconnect (unplug) the source FMC device from the network.
8	Connect the target FMC to the network. Note that it may take a few minutes for the managed devices to establish a heartbeat with the target FMC.	See the Getting Started Guide for your Firepower Management Center model.
9	Enable smart licensing in the target FMC.	License Requirements for Firepower Management Center
10	Verify that a heartbeat is established for all devices managed by target FMC.	After a successful migration, the target Firepower Management Center has the IP address that the source model had before migration. Log in to the target FMC and verify that all configurations are restored and that basic FMC operations such as policy editing, deployment, and scheduled jobs work as expected.

• High Availability Firepower Management Center Model Migration Workflow, on page 2

- Prepare for Migration, on page 4
- Firepower Management Center Model Migration Script, on page 4

High Availability Firepower Management Center Model Migration Workflow

Use the following workflow to migrate your Firepower Management Center High Availability setup from the source models to the target models.

1	Create a backup file in each of the source Firepower Management Centers.	Back up the Firepower Management Center	
		Note	In addition to Back Up Configuration , you must also select Backup Events and Backup Threat Intelligence Director . If Threat Intelligence Director is not enabled, the option to select TID backup does not appear.
2	Set up the target Firepower Management Centers.	Prepare f	or Migration, on page 4

Table 2: High Availability Firepower Management Center Model Migration Workflow

3	Copy the generated backup files to the target Firepower Management Centers.	Upload a Backup File
4	Disconnect target Firepower Management Centers from the nework.	Physically disconnect (unplug) the target FMC devices from the network.
5	Execute the migration script in the target FMCs.	Firepower Management Center Model Migration Script, on page 4
6	Verify that the data migrated successfully to the target FMCs.	After a successful migration, the target Firepower Management Center has the IP address that the source model had before migration. Log in to the target FMC and verify that all configurations are restored and that basic FMC operations such as policy editing, deployment, and scheduled jobs work as expected.
7	Unregister your source Firepower Management Centers from the Cisco Smart Software Manager.	Deregister a Firepower Management Center from the Cisco Smart Software Manager
8	Disconnect source Firepower Management Centers from the network.	Physically disconnect (unplug) the source FMC devices from the network.
9	Connect the target Firepower Management Centers to the network. Note that it may take a few minutes for the managed devices to establish a heartbeat with the target FMCs.	See the Getting Started Guide for your Firepower Management Center models.
10	Validate connectivity between the target FMCs.	Viewing Firepower Management Center High Availability Status
11	Pause FMC HA synchronization from Active Firepower Management Center and wait for the operation to complete.	Pausing Communication Between Paired Firepower Management Centers
12	Resume FMC HA synchronization from Active Firepower Management Center and wait for the operation to complete.	Restarting Communication Between Paired Firepower Management Centers
13	Verify that the FMC HA configuration is healthy, and alerts are cleared.	Viewing Firepower Management Center High Availability Status
14	Register smart licensing in the target primary Active FMC.	License Requirements for Firepower Management Center

15	Verify that heartbeat is established for all devices	After a successful migration, the
	managed by the target Firepower Management Centers.	target Firepower Management
		Centers have the IP address that the
		source model had before migration.
		Log in to the target FMC and verify
		that all configurations are restored
		and that basic FMC operations such
		as policy editing, deployment, and
		scheduled jobs work as expected.

Prepare for Migration

Before you begin, perform the following steps to prepare your target Firepower Management Center model for migration:

- Refer to the Supported Migration Paths to determine which target model you can migrate to from your source model.
- Ensure that the target FMC has the same number of interfaces as your source FMC (see About Management Interfaces).
- Connect the new FMC to your network and assign an IP address (see Cisco Firepower Management Center Getting Started Guide for Models 750, 1500, 2000, 3500, and 4000 and Cisco Firepower Management Center Getting Started Guide for Models 1000, 2500, and 4500).
- Verify that the target FMC version matches the source FMC version (including patch, VDB, and SRU):

In each FMC, choose **Help** > **About**.

 Verify that all pending deployments have completed successfully. For more information about viewing deployment status, see the Deployment Management chapter in the Firepower Management Center Configuration Guide for your Firepower version (https://www.cisco.com/c/en/us/td/docs/security/ firepower/650/configuration/guide/fpmc-config-guide-v65/policy_management.html).

Firepower Management Center Model Migration Script

Use the following procedure to migrate your Firepower Management Center configurations from the source model to the target model. Note that this procedure is one step in the Firepower Management Center model migration. See Standalone Firepower Management Center Model Migration Workflow, on page 1 for the full model migration workflow.

Procedure

Step 1	Log into the target Firepower Management Center CLI in expert mode.
Step 2	Execute the migration command:
	sf-migration.pl backup_file_path
	Example:

[root@firepower:/var/sf/backup# [root@firepower:/var/sf/backup# /var/sf/bin/sf-migration.pl /var/sf/backup/100LocalBackup-2019examp.tar

Once the migration process is complete, the system reboots.

What to do next

Return to Standalone Firepower Management Center Model Migration Workflow, on page 1 or High Availability Firepower Management Center Model Migration Workflow, on page 2 and complete all remaining steps.

Standalone Firepower Management Center Model Migration Workflow