



CHAPTER 16

Administrative Tasks for the Sensor

This chapter contains procedures that will help you with the administrative aspects of your sensor. It contains the following sections:

- [Recovering the Password, page 16-2](#)
- [Clearing the Sensor Databases, page 16-12](#)
- [Configuring Health Status Information, page 16-13](#)
- [Showing Sensor Overall Health Status, page 16-17](#)
- [Creating a Banner Login, page 16-18](#)
- [Terminating CLI Sessions, page 16-18](#)
- [Modifying Terminal Properties, page 16-19](#)
- [Displaying and Clearing Events, page 16-20](#)
- [Displaying and Setting the System Clock, page 16-23](#)
- [Clearing the Denied Attackers List, page 16-25](#)
- [Displaying Policy Lists, page 16-27](#)
- [Displaying Statistics, page 16-28](#)
- [Displaying Tech Support Information, page 16-37](#)
- [Displaying Version Information, page 16-38](#)
- [Diagnosing Network Connectivity, page 16-40](#)
- [Resetting the Appliance, page 16-40](#)
- [Displaying Command History, page 16-41](#)
- [Displaying Hardware Inventory, page 16-42](#)
- [Tracing the Route of an IP Packet, page 16-43](#)
- [Displaying Submode Settings, page 16-43](#)

Recovering the Password

For most IPS platforms, you can now recover the password on the sensor rather than using the service account or reimaging the sensor. This section describes how to recover the password for the various IPS platforms. It contains the following topics:

- [Understanding Password Recovery, page 16-2](#)
- [Recovering the Appliance Password, page 16-3](#)
- [Recovering the AIM IPS Password, page 16-4](#)
- [Recovering the AIP SSC-5 Password, page 16-5](#)
- [Recovering the AIP SSM Password, page 16-7](#)
- [Recovering the IDSM2 Password, page 16-9](#)
- [Recovering the NME IPS Password, page 16-10](#)
- [Disabling Password Recovery, page 16-10](#)
- [Verifying the State of Password Recovery, page 16-11](#)
- [Troubleshooting Password Recovery, page 16-12](#)

Understanding Password Recovery

Password recovery implementations vary according to IPS platform requirements. Password recovery is implemented only for the cisco administrative account and is enabled by default. The IPS administrator can then recover user passwords for other accounts using the CLI. The cisco user password reverts to `cisco` and must be changed after the next login.



Note

Administrators may need to disable the password recovery feature for security reasons.

[Table 16-1](#) lists the password recovery methods according to platform.

Table 16-1 Password Recovery Methods According to Platform

Platform	Description	Recovery Method
4200 series sensors	Standalone IPS appliances	GRUB prompt or ROMMON
AIM IPS NME IPS	Router IPS modules	Bootloader command
AIP SSM AIP SSC-5	ASA 5500 series adaptive security appliance modules	adaptive security appliance CLI command
IDSM2	Switch IPS module	Password recovery image file

Recovering the Appliance Password

This section describes the two ways to recover the password for appliances. It contains the following topics:

- [Using the GRUB Menu, page 16-3](#)
- [Using ROMMON, page 16-3](#)

Using the GRUB Menu

For 4200 series appliances, the password recovery is found in the GRUB menu, which appears during bootup. When the GRUB menu appears, press any key to pause the boot process.



Note

You must have a terminal server or direct serial connection to the appliance to use the GRUB menu to recover the password.

To recover the password on appliances, follow these steps:

Step 1 Reboot the appliance to see the GRUB menu.

```
GNU GRUB version 0.94 (632K lower / 523264K upper memory)
```

```
-----
0: Cisco IPS
1: Cisco IPS Recovery
2: Cisco IPS Clear Password (cisco)
-----
```

```
Use the ^ and v keys to select which entry is highlighted.
Press enter to boot the selected OS, 'e' to edit the
Commands before booting, or 'c' for a command-line.
```

```
Highlighted entry is 0:
```

Step 2 Press any key to pause the boot process.

Step 3 Choose **2: Cisco IPS Clear Password (cisco)**.

The password is reset to **cisco**. You can change the password the next time you log in to the CLI.

Using ROMMON

For IPS 4240 and IPS 4255 you can use the ROMMON to recover the password. To access the ROMMON CLI, reboot the sensor from a terminal server or direct connection and interrupt the boot process. To recover the password using the ROMMON CLI, follow these steps:

Step 1 Reboot the appliance.

Step 2 To interrupt the boot process, press **ESC** or **Control-R** (terminal server) or send a **BREAK** command (direct connection). The boot code either pauses for 10 seconds or displays something similar to one of the following:

- Evaluating boot options
- Use BREAK or ESC to interrupt boot

Step 3 Enter the following commands to reset the password.

```
confreg 0x7
boot
```

Sample ROMMON session:

```
Booting system, please wait...
CISCO SYSTEMS
Embedded BIOS Version 1.0(11)2 01/25/06 13:21:26.17
...
Evaluating BIOS Options...
Launch BIOS Extension to setup ROMMON
Cisco Systems ROMMON Version (1.0(11)2) #0: Thu Jan 26 10:43:08 PST 2006
Platform IPS 4240-K9
Use BREAK or ESC to interrupt boot.
Use SPACE to begin boot immediately.
Boot interrupted.
Management0/0
Link is UP
MAC Address:000b.fcfa.d155
Use ? for help.
rommon #0> confreg 0x7
Update Config Register (0x7) in NVRAM...
rommon #1> boot
```

Recovering the AIM IPS Password

To recover the password for the AIM IPS, use the **clear password** command. You must have console access to the AIM IPS and administrative access to the router. To recover the password for the AIM IPS, follow these steps:

Step 1 Log in to the router.

Step 2 Enter privileged EXEC mode on the router.

```
router> enable
```

Step 3 Confirm the module slot number in your router.

```
router# show run | include ids-sensor
interface IDS-Sensor0/0
router#
```

Step 4 Session in to the AIM IPS.

```
router# service-module ids-sensor slot/port session
```

Example

```
router# service-module ids-sensor 0/0 session
```

Step 5 Press **Control-shift-6** followed by **x** to navigate to the router CLI.

Step 6 Reset the AIM IPS from the router console.

```
router# service-module ids-sensor 0/0 reset
```

Step 7 Press **Enter** to return to the router console.

Step 8 When prompted for boot options, enter ******* quickly.

You are now in the bootloader.

Step 9 Clear the password.

```
ServicesEngine boot-loader# clear password
```

The AIM IPS reboots. The password is reset to **cisco**. Log in to the CLI with username **cisco** and password **cisco**. You can then change the password.

Recovering the AIP SSC-5 Password

You can reset the password to the default (**cisco**) for the AIP SSC-5 using the CLI or the ASDM. Resetting the password causes it to reboot. IPS services are not available during a reboot.



Note

To reset the password, you must have ASA 8.2(1) or later.

Use the **hw-module module slot_number password-reset** command to reset the password to the default **cisco**. If the module in the specified slot has an IPS version that does not support password recovery, the following error message is displayed:

```
ERROR: the module in slot <n> does not support password recovery.
```

Resetting the Password Using the CLI

To reset the password on the AIP SSC-5, follow these steps:

Step 1 Reset the password for module 1.

```
asa# hw-module module 1 password-reset
Reset the password on module in slot 1? [confirm]
```

Step 2 Press **Enter** to confirm.

```
Password-Reset issued for slot 1.
```

Step 3 Verify the status of the module. Once the status reads Up, you can session to the AIP SSC-5.

```
asa# show module 1
Mod Card Type                               Model                               Serial No.
-----
  1 ASA 5500 Series Security Services Card-5  ASA-SSC-AIP-5                      JAF1243BMDR

Mod MAC Address Range                       Hw Version  Fw Version  Sw Version
-----
  1 0021.1bfe.5108 to 0021.1bfe.5108  1.0         1.0(15)7   6.2(4)E4

Mod SSC Application Name                     Status      SSC Application Version
-----
  1 IPS                                       Up          6.2(4)E4

Mod Status      Data Plane Status  Compatibility
-----
  1 Up           Up
```

Step 4 Session to the AIP SSC-5.

```
asa# session 1
Opening command session with slot 1.
Connected to slot 1. Escape character sequence is 'CTRL-^X'.
```

Step 5 Enter the default username (**cisco**) and password (**cisco**) at the login prompt.

```
login: cisco
Password: cisco

You are required to change your password immediately (password aged)
Changing password for cisco.
(current) password: cisco
```

Step 6 Enter your new password twice.

```
New password: new password
Retype new password: new password
```

NOTICE

This product contains cryptographic features and is subject to United States and local country laws governing import, export, transfer and use. Delivery of Cisco cryptographic products does not imply third-party authority to import, export, distribute or use encryption. Importers, exporters, distributors and users are responsible for compliance with U.S. and local country laws. By using this product you agree to comply with applicable laws and regulations. If you are unable to comply with U.S. and local laws, return this product immediately.

A summary of U.S. laws governing Cisco cryptographic products may be found at:
<http://www.cisco.com/wwl/export/crypto/tool/stqrg.html>

If you require further assistance please contact us by sending email to export@cisco.com.

LICENSE NOTICE

There is no license key installed on this IPS platform. The system will continue to operate with the currently installed signature set. A valid license must be obtained in order to apply signature updates. Please go to <http://www.cisco.com/go/license> to obtain a new license or install a license.
aip_ssc-5#

Using the ASDM

To reset the password in the ASDM, follow these steps:

Step 1 From the ASDM menu bar, choose **Tools > IPS Password Reset**.

Note This option does not appear in the menu if there is no IPS present.

Step 2 In the IPS Password Reset confirmation dialog box, click **OK** to reset the password to the default (**cisco**). A dialog box displays the success or failure of the password reset. If the reset fails, make sure you have the correct ASA and IPS software versions.**Step 3** Click **Close** to close the dialog box. The sensor reboots.

Recovering the AIP SSM Password

You can reset the password to the default (**cisco**) for the ASA 5500 AIP SSM using the CLI or the ASDM. Resetting the password causes it to reboot. IPS services are not available during a reboot.



Note

To reset the password, you must have ASA 7.2.2 or later.

Use the **hw-module module slot_number password-reset** command to reset the password to the default **cisco**. If the module in the specified slot has an IPS version that does not support password recovery, the following error message is displayed:

```
ERROR: the module in slot <n> does not support password recovery.
```

Resetting the Password Using the CLI

To reset the password on the ASA 5500 AIP SSM, follow these steps:

- Step 1** Log into the adaptive security appliance and enter the following command to verify the module slot number:

```
asa# show module
Mod Card Type                               Model                               Serial No.
-----
  0 ASA 5510 Adaptive Security Appliance    ASA5510                             JMX1135L097
  1 ASA 5500 Series Security Services Module-40 ASA-SSM-40                          JAF1214AMRL

Mod MAC Address Range                       Hw Version  Fw Version  Sw Version
-----
  0 001b.d5e8.e0c8 to 001b.d5e8.e0cc 2.0         1.0(11)2    8.4(3)
  1 001e.f737.205f to 001e.f737.205f 1.0         1.0(14)5    7.0(7)E4

Mod SSM Application Name                    Status      SSM Application Version
-----
  1 IPS                                       Up          7.0(7)E4

Mod Status      Data Plane Status  Compatibility
-----
  0 Up Sys       Not Applicable
  1 Up           Up
```

- Step 2** Reset the password for module 1.

```
asa# hw-module module 1 password-reset
Reset the password on module in slot 1? [confirm]
```

- Step 3** Press **Enter** to confirm.

```
Password-Reset issued for slot 1.
```

- Step 4** Verify the status of the module. Once the status reads Up, you can session to the ASA 5500 AIP SSM.

```
asa# show module 1
Mod Card Type                               Model                               Serial No.
-----
  1 ASA 5500 Series Security Services Module-40 ASA-SSM-40                          JAF1214AMRL

Mod MAC Address Range                       Hw Version  Fw Version  Sw Version
-----
  1 001e.f737.205f to 001e.f737.205f 1.0         1.0(14)5    7.0(7)E4

Mod SSM Application Name                    Status      SSM Application Version
-----
  1 IPS                                       Up          7.0(7)E4
```

```

-----
 1 IPS                               Up                               7.0(7)E4
Mod Status                          Data Plane Status          Compatibility
-----
 1 Up                                Up

```

Step 5 Session to the ASA 5500 AIP SSM.

```
asa# session 1
Opening command session with slot 1.
Connected to slot 1. Escape character sequence is 'CTRL-^X'.
```

Step 6 Enter the default username (**cisco**) and password (**cisco**) at the login prompt.

```
login: cisco
Password: cisco
```

```
You are required to change your password immediately (password aged)
Changing password for cisco.
(current) password: cisco
```

Step 7 Enter your new password twice.

```
New password: new password
Retype new password: new password
```

```
***NOTICE***
```

```
This product contains cryptographic features and is subject to United States and local
country laws governing import, export, transfer and use. Delivery of Cisco cryptographic
products does not imply third-party authority to import, export, distribute or use
encryption. Importers, exporters, distributors and users are responsible for compliance
with U.S. and local country laws. By using this product you agree to comply with
applicable laws and regulations. If you are unable to comply with U.S. and local laws,
return this product immediately.
```

```
A summary of U.S. laws governing Cisco cryptographic products may be found at:
http://www.cisco.com/wwl/export/crypto/tool/stqrg.html
```

```
If you require further assistance please contact us by sending email to export@cisco.com.
```

```
***LICENSE NOTICE***
```

```
There is no license key installed on this IPS platform. The system will continue to
operate with the currently installed signature set. A valid license must be obtained in
order to apply signature updates. Please go to http://www.cisco.com/go/license to obtain a
new license or install a license.
aip_ssm#
```

Using the ASDM

To reset the password in the ASDM, follow these steps:

Step 1 From the ASDM menu bar, choose **Tools > IPS Password Reset**.

Note This option does not appear in the menu if there is no IPS present.

- Step 2** In the IPS Password Reset confirmation dialog box, click **OK** to reset the password to the default (**cisco**). A dialog box displays the success or failure of the password reset. If the reset fails, make sure you have the correct ASA and IPS software versions.
- Step 3** Click **Close** to close the dialog box. The sensor reboots.
-

Recovering the IDSM2 Password

To recover the password for the IDSM2, you must install a special password recovery image file. This installation only resets the password, all other configuration remains intact. The password recovery image is version-dependent and can be found on the Cisco Download Software site. For IPS 6.x, download WS-SVC-IDSM2-K9-a-6.0-password-recovery.bin.gz. For IPS 7.x, download WS-SVC-IDSM2-K9-a-7.0-password-recovery.bin.gz.

FTP is the only supported protocol for image installations, so make sure you put the password recovery image file on an FTP server that is accessible to the switch. You must have administrative access to the Cisco 6500 series switch to recover the password on the IDSM2.

During the password recovery image installation, the following message appears:

```
Upgrading will wipe out the contents on the hard disk.  
Do you want to proceed installing it [y|n]:
```

This message is in error. Installing the password recovery image does not remove any configuration, it only resets the login account.

Once you have downloaded the password recovery image file, follow the instructions to install the system image file but substitute the password recovery image file for the system image file. The IDSM2 should reboot into the primary partition after installing the recovery image file. If it does not, enter the following command from the switch:

```
hw-module module module_number reset hdd:1
```



Note

The password is reset to **cisco**. Log in to the CLI with username **cisco** and password **cisco**. You can then change the password.

For More Information

- For the procedure for installing system images on the IDSM-2, [Installing the IDSM2 System Image, page 23-28](#).
- For more information on downloading Cisco IPS software, see [Obtaining Cisco IPS Software, page 22-1](#).

Recovering the NME IPS Password

To recover the password for the NME IPS, use the **clear password** command. You must have console access to the NME IPS and administrative access to the router. To recover the password for the NME IPS, follow these steps:

Step 1 Log in to the router.

Step 2 Enter privileged EXEC mode on the router.

```
router> enable
```

Step 3 Confirm the module slot number in your router.

```
router# show run | include ids-sensor
interface IDS-Sensor1/0
router#
```

Step 4 Session in to the NME IPS.

```
router# service-module ids-sensor slot/port session
```

Example

```
router# service-module ids-sensor 1/0 session
```

Step 5 Press **Control-shift-6** followed by **x** to navigate to the router CLI.

Step 6 Reset the NME IPS from the router console.

```
router# service-module ids-sensor 1/0 reset
```

Step 7 Press **Enter** to return to the router console.

Step 8 When prompted for boot options, enter ******* quickly.

You are now in the bootloader.

Step 9 Clear the password.

```
ServicesEngine boot-loader# clear password
```

The NME IPS reboots.

The password is reset to **cisco**. Log in to the CLI with username **cisco** and password **cisco**. You can then change the password.

Disabling Password Recovery



Caution

If you try to recover the password on a sensor on which password recovery is disabled, the process proceeds with no errors or warnings; however, the password is not reset. If you cannot log in to the sensor because you have forgotten the password, and password recovery is set to disabled, you must reimage your sensor.

Password recovery is enabled by default. You can disable password recovery through the CLI, IDM, or IME.

Disabling Password Recovery Using the CLI

To disable password recovery in the CLI, follow these steps:

Step 1 Log in to the CLI using an account with administrator privileges.

Step 2 Enter global configuration mode.

```
sensor# configure terminal
```

Step 3 Enter host mode.

```
sensor(config)# service host
```

Step 4 Disable password recovery.

```
sensor(config-hos)# password-recovery disallowed
```

Disabling Password Recovery using IDM or IME

To disable password recovery in IDM or IME, follow these steps:

Step 1 Log in to IDM or IME using an account with administrator privileges.

Step 2 Choose **Configuration > sensor_name > Sensor Setup > Network**.

Step 3 To disable password recovery, uncheck the **Allow Password Recovery** check box.

Verifying the State of Password Recovery

Use the **show settings | include password** command to verify whether password recovery is enabled. To verify whether password recovery is enabled, follow these steps:

Step 1 Log in to the CLI.

Step 2 Enter service host submode.

```
sensor# configure terminal  
sensor (config)# service host  
sensor (config-hos)#
```

Step 3 Verify the state of password recovery by using the **include** keyword to show settings in a filtered output.

```
sensor(config-hos)# show settings | include password  
password-recovery: allowed <defaulted>  
sensor(config-hos)#
```

Troubleshooting Password Recovery

When you troubleshoot password recovery, pay attention to the following:

- You cannot determine whether password recovery has been disabled in the sensor configuration from the ROMMON prompt, GRUB menu, switch CLI, or router CLI. If you attempt password recovery, it always appears to succeed. If it has been disabled, the password is not reset to **cisco**. The only option is to reimage the sensor.
- You can disable password recovery in the host configuration. For the platforms that use external mechanisms, such as the AIM IPS and the NME IPS bootloader, ROMMON, and the maintenance partition for the IDSM2, although you can run commands to clear the password, if password recovery is disabled in the IPS, the IPS detects that password recovery is not allowed and rejects the external request.
- To check the state of password recovery, use the **show settings | include password** command.
- When performing password recovery on the IDSM2, you see the following message: *Upgrading will wipe out the contents on the storage media.* You can ignore this message. Only the password is reset when you use the specified password recovery image.

Clearing the Sensor Databases

Use the **clear database [virtual-sensor] all | nodes | alerts | inspectors** command in privileged EXEC mode to clear specific parts of the sensor database. The **clear database** command is useful for troubleshooting and testing.



Caution

We do not recommend that you use this command unless under the direction of TAC or in some testing conditions when you need to clear accumulated state information and start with a clean database.

The following options apply:

- *virtual-sensor*—Name of a virtual sensor configured on the sensor.
- **all**— Clear all the nodes, inspectors, and alerts databases.



Caution

This command causes summary alerts to be discarded.

- **nodes**—Clears the overall packet database elements, including the packet nodes, TCP session information, and inspector lists.
- **alerts**—Clears the alert database including the alerts nodes, Meta inspector information, summary state, and event count structures.
- **inspectors**—Clears the inspector lists in the nodes.

Inspector lists represent the packet work and observations collected during the time the sensor is running.

Clearing the Sensor Database

To clear the sensor database, follow these steps:

-
- Step 1** Log in to the CLI using an account with administrator privileges.
- Step 2** Clear the entire sensor database,
- ```
sensor# clear database all
Warning: Executing this command will delete database on all virtual sensors
Continue? [yes]:
```
- Step 3** Enter **yes** to clear all the databases on the sensor.
- Step 4** Clear the packet nodes.
- ```
sensor# clear database nodes
Warning: Executing this command will delete database on all virtual sensors
Continue? [yes]:
```
- Step 5** Enter **yes** to clear the packet nodes database.
- Step 6** Clear the alerts database on a specific virtual sensor:
- ```
sensor# clear database vs0 alerts
Warning: Executing this command will delete database on all virtual sensors
Continue? [yes]:
```
- Step 7** Enter **yes** to clear the alerts database.
- Step 8** Clear inspector lists on the sensor.
- ```
sensor# clear database inspectors
Warning: Executing this command will delete database on all virtual sensors
Continue? [yes]:
```
- Step 9** Enter **yes** to clear the inspectors database.
-

Configuring Health Status Information

Use the **health-monitor** command in service submode to configure the health statistics for the sensor. Use the **show health** command to see the results of the **health-monitor** command.

The following options apply:

- **application-failure-policy {enable | disable} {true | false} status {green | yellow | red}**—Lets you choose to have an application failure applied to the overall sensor health rating.
- **bypass-policy {enable | disable} {true | false} status {green | yellow | red}**—Lets you choose to know if bypass mode is active and have that apply to the overall sensor health rating.
- **enable-monitoring {true | false}**—Lets you choose to monitor sensor health and security.
- **event-retrieval-policy {enable | disable} {true | false} red-threshold yellow-threshold seconds**—Lets you set a threshold for when the last event was retrieved and have that apply to the overall sensor health rating. The health status is degraded to red or yellow when that threshold is met. The range for the threshold is 0 to 4294967295 seconds.



Note The event retrieval metric keeps track of when the last event was retrieved by an external monitoring application such as IME. Disable event retrieval policy if you are not doing external event monitoring.

- **heartbeat-events {enable | disable} seconds**—Lets you enable heartbeat events to be emitted at the specified interval in seconds and have that apply to the overall sensor health rating. The range for the interval is 15 to 86400 seconds.
- **inspection-load-policy {enable | disable} {true | false} red-threshold yellow-threshold seconds**—Lets you set the threshold for inspection load. The health status is degraded to red or yellow when that threshold is met. The range is 0 to 100.
- **interface-down-policy {enable | disable} {true | false} status {green | yellow | red}**—Lets you choose to know if one or more enabled interfaces are down and have that apply to the overall sensor health rating.
- **license-expiration-policy {enable | disable} {true | false} red-threshold yellow-threshold**—Lets you set a threshold for when the license expires and whether this metric is applied to the overall sensor health rating. The range for the threshold is 0 to 4294967295 seconds.
- **memory-usage-policy {enable | disable} {true | false} red-threshold yellow-threshold**—Lets you set a threshold percentage for memory usage and whether this metric is applied to the overall sensor health rating. The range is 0 to 100.
- **missed-packet-policy {enable | disable} {true | false} red-threshold yellow-threshold**—Lets you set a threshold percentage for missed packets and whether this metric is applied to the overall sensor health rating.
- **persist-security-status**—Lets you set the number of minutes that a lower security persists following the occurrence of the latest event to lower the security status.
- **signature-update-policy {enable | disable} {true | false} red-threshold yellow-threshold**—Lets you set a threshold for the number of days elapsed since the last signature update and whether this metric is applied to the overall sensor health rating. The range for the threshold is 0 to 4294967295 seconds

The health status categories are rated by red and green with red being critical.

To configure the health statistics for the sensor, follow these steps:

Step 1 Log in to the CLI using an account with administrator privileges.

Step 2 Enter service health monitor submode.

```
sensor# configure terminal
sensor(config)# service health-monitor
sensor(config-hea)#
```

Step 3 Enable application failure status.

```
sensor(config-hea)# application-failure-policy
sensor(config-hea-app)# enable true
sensor(config-hea-app)# status red
sensor(config-hea-app)# exit
sensor(config-hea)#
```

Step 4 Enable bypass policy.

```
sensor(config-hea)# bypass-policy
sensor(config-hea-byp)# enable true
sensor(config-hea-byp)# status yellow
```

```
sensor(config-hea-byp) # exit
sensor(config-hea) #
```

Step 5 Enable sensor health and security monitoring.

```
sensor(config-hea) # enable-monitoring true
sensor(config-hea) #
```

Step 6 Set the event retrieval thresholds.

```
sensor(config-hea) # event-retrieval-policy
sensor(config-hea-eve) # enable true
sensor(config-hea-eve) # red-threshold 100000
sensor(config-hea-eve) # yellow-threshold 100
sensor(config-hea-eve) # exit
sensor(config-hea) #
```

Step 7 Enable heartbeat events to be emitted at the specified interval of seconds.

```
sensor(config-hea) # heartbeat-events enable 20000
sensor(config-hea) #
```

Step 8 Set the inspection load threshold.

```
sensor(config-hea) # inspection-load-policy
sensor(config-hea-ins) # enable true
sensor(config-hea-ins) # red-threshold 100
sensor(config-hea-ins) # yellow-threshold 50
sensor(config-hea-ins) # exit
sensor(config-hea) #
```

Step 9 Enable the interface down policy.

```
sensor(config-hea) # interface-down-policy
sensor(config-hea-int) # enable true
sensor(config-hea-int) # status yellow
sensor(config-hea-int) # exit
sensor(config-hea) #
```

Step 10 Set the number of days until the license expires.

```
sensor(config-hea) # license-expiration-policy
sensor(config-hea-lic) # enable true
sensor(config-hea-lic) # red-threshold 400000
sensor(config-hea-lic) # yellow-threshold 200000
sensor(config-hea-lic) # exit
sensor(config-hea) #
```

Step 11 Set the threshold for memory usage.

```
sensor(config-hea) # memory-usage-policy
sensor(config-hea-mem) # enable true
sensor(config-hea-mem) # red-threshold 100
sensor(config-hea-mem) # yellow-threshold 50
sensor(config-hea-mem) # exit
sensor(config-hea) #
```

Step 12 Set the missed packet threshold.

```
sensor(config-hea) # missed-packet-policy
sensor(config-hea-mis) # enable true
sensor(config-hea-mis) # red-threshold 50
sensor(config-hea-mis) # yellow-threshold 20
sensor(config-hea-mis) # exit
sensor(config-hea) #
```

- Step 13** Set the number of minutes that a lower security persists following the occurrence of the latest event to lower the security status.

```
sensor(config-hea)# persist-security-status 10
sensor(config-hea)#
```

- Step 14** Set the number of days since the last signature update.

```
sensor(config-hea)# signature-update-policy
sensor(config-hea-sig)# enable true
sensor(config-hea-sig)# red-threshold 30000
sensor(config-hea-sig)# yellow-threshold 10000
sensor(config-hea-sig)# exit
sensor(config-hea)#
```

- Step 15** Verify your settings.

```
sensor(config-hea)# show settings
enable-monitoring: true default: true
persist-security-status: 10 minutes default: 5
heartbeat-events
-----
enable: 20000 seconds default: 300
-----
application-failure-policy
-----
enable: true default: true
status: red default: red
-----
bypass-policy
-----
enable: true default: true
status: yellow default: red
-----
interface-down-policy
-----
enable: true default: true
status: yellow default: red
-----
inspection-load-policy
-----
enable: true default: true
yellow-threshold: 50 percent default: 80
red-threshold: 100 percent default: 91
-----
missed-packet-policy
-----
enable: true default: true
yellow-threshold: 20 percent default: 1
red-threshold: 50 percent default: 6
-----
memory-usage-policy
-----
enable: true default: false
yellow-threshold: 50 percent default: 80
red-threshold: 100 percent default: 91
-----
signature-update-policy
-----
enable: true default: true
yellow-threshold: 10000 days default: 30
red-threshold: 30000 days default: 60
-----
license-expiration-policy
```

```

-----
enable: true default: true
yellow-threshold: 200000 days default: 30
red-threshold: 400000 days default: 0
-----
event-retrieval-policy
-----
enable: true <defaulted>
yellow-threshold: 100000 seconds default: 300
red-threshold: 100 seconds default: 600
-----
sensor(config-hea)#

```

Step 16 Exit health monitoring submode.

```

sensor(config-hea)# exit
Apply Changes:[yes]:

```

Step 17 Press **Enter** to apply the changes or enter **no** to discard them.

Showing Sensor Overall Health Status

Use the **show health** command in privileged EXEC mode to display the overall health status information of the sensor. The health status categories are rated by red and green with red being critical.



Caution

When the sensor is first starting, it is normal for certain health metric statuses to be red until the sensor is fully up and running.

To display the overall health status of the sensor, follow these steps:

Step 1 Log in to the CLI.

Step 2 Show the health and security status of the sensor.

```

sensor# show health
Overall Health Status                               Red
Health Status for Failed Applications                Green
Health Status for Signature Updates                 Green
Health Status for License Key Expiration            Red
Health Status for Running in Bypass Mode            Green
Health Status for Interfaces Being Down              Red
Health Status for the Inspection Load                Green
Health Status for the Time Since Last Event Retrieval Green
Health Status for the Number of Missed Packets       Green
Health Status for the Memory Usage                   Not Enabled

Security Status for Virtual Sensor vs0               Green
sensor#

```

Creating a Banner Login

Use the **banner login** command to create a banner login that will be displayed before the user and password login prompts. The maximum message length is 2500 characters. Use the **no banner login** command to remove the banner.

To create a banner login, follow these steps:

Step 1 Log in to the CLI using an account with administrator privileges.

Step 2 Enter global configuration mode.

```
sensor# configure terminal
```

Step 3 Create the banner login.

```
sensor(config)# banner login
Banner[ ]:
```

Step 4 Enter your message.

```
Banner[ ]: This message will be displayed on banner login. ^M Thank you
sensor(config)#
```



Note To use a ? or a carriage return in the message, press **Ctrl-V-?** or **Ctrl-V-Enter**. They are represented by ^M.

Example

```
This message will be displayed on login.
Thank you
login: cisco
Password:****
```

Step 5 To remove the banner login.

```
sensor(config)# no banner login
```

The banner no longer appears at login.

Terminating CLI Sessions

Use the **clear line** *cli_id* [**message**] command to terminate another CLI session. If you use the **message** keyword, you can send a message along with the termination request to the receiving user. The maximum message length is 2500 characters.

The following options apply:

- *cli_id*—CLI ID number associated with the login session. Use the **show users** command to find the CLI ID number.
- **message**—Message to send to the receiving user.

**Caution**

You can only clear CLI login sessions with the **clear line** command. You cannot clear service logins with this command.

If an administrator tries to log in when the maximum sessions have been reached, the following message appears:

```
Error: The maximum allowed CLI sessions are currently open, would you like to terminate
one of the open sessions? [no]
```

If an operator or viewer tries to log in when the maximum sessions are open, the following message appears:

```
Error: The maximum allowed CLI sessions are currently open, please try again later.
```

To terminate a CLI session, follow these steps:

Step 1 Log in to the CLI using an account with administrator privileges.



Note Operator and viewer can only clear lines with the same username as the current login.

Step 2 Find the CLI ID number associated with the login session.

```
sensor# show users
      CLI ID  User      Privilege
*    13533   jtaylor  administrator
      15689   jsmith   operator
      20098   viewer   viewer
```

Step 3 Terminate the CLI session of jsmith.

```
sensor# clear line cli_id message
Message[]:
```

Example

```
sensor# clear line 15689 message
Message{}: Sorry! I need to terminate your session.
sensor#
```

The user jsmith receives the following message from the administrator jtaylor.

```
sensor#
***
***
*** Termination request from jtaylor
***
Sorry! I need to terminate your session.
```

Modifying Terminal Properties

Use the **terminal {length} screen _length** command to modify terminal properties for a login session. The *screen_length* option lets you set the number of lines that appear on the screen before the `--more--` prompt is displayed. A value of zero results in no pause in the output. The default value is 24 lines.

**Note**

You are not required to specify the screen length for some types of terminal sessions because the specified screen length can be learned by some remote hosts.

To modify the terminal properties, follow these steps:

Step 1 Log in to the CLI.

Step 2 To have no pause between multi-screen outputs, use 0 for the screen length value.

```
sensor# terminal length 0
```

**Note**

The screen length values are not saved between login sessions.

Step 3 To have the CLI pause and display the `--more--` prompt every 10 lines, use 10 for the *screen length* value.

```
sensor# terminal length 10
```

Displaying and Clearing Events

This section describes how to display and clear events from Event Store, and contains the following topics:

- [Displaying Events, page 16-20](#)
- [Clearing Events from Event Store, page 16-23](#)

Displaying Events

**Note**

The Event Store has a fixed size of 30 MB for all platforms except for AIP SSC-5, which has a fixed size of 10 MB.

Use the **show events** `[{alert [informational] [low] [medium] [high] [include-traits traits] [exclude-traits traits] [min-threat-rating min-rr] [max-threat-rating max-rr] | error [warning] [error] [fatal] | NAC | status}] [hh:mm:ss [month day [year]]] | past hh:mm:ss` command to display events from Event Store.

Events are displayed beginning at the start time. If you do not specify a start time, events are displayed beginning at the current time. If you do not specify an event type, all events are displayed.

**Note**

Events are displayed as a live feed. To cancel the request, press **Ctrl-C**.

The following options apply:

- **alert**—Displays alerts. Provides notification of some suspicious activity that may indicate an attack is in process or has been attempted. Alert events are generated by Analysis Engine whenever a signature is triggered by network activity.
If no level is selected (informational, low, medium, or high), all alert events are displayed.
- **include-traits**—Displays alerts that have the specified traits.
- **exclude-traits**—Does not display alerts that have the specified traits.
- **traits**—Trait bit position in decimal (0 to 15).
- **min-threat-rating**—Displays events with a threat rating above or equal to this value. The default is 0. The valid range is 0 to 100.
- **max-threat-rating**—Displays events with a threat rating below or equal to this value. The default is 100. The valid range is 0 to 100.
- **error**—Displays error events. Error events are generated by services when error conditions are encountered.
If no level is selected (warning, error, or fatal), all error events are displayed.
- **NAC**—Displays ARC (block) requests.



Note ARC is formerly known as NAC. This name change has not been completely implemented throughout IDM, IME, and the CLI for Cisco IPS 6.2.

- **status**—Displays status events.
- **past**—Displays events starting in the past for the specified hours, minutes, and seconds.
- *hh:mm:ss*—Hours, minutes, and seconds in the past to begin the display.



Note

The **show events** command continues to display events until a specified event is available. To exit, press **Ctrl-C**.

To display events from Event Store, follow these steps:

- Step 1** Log in to the CLI.
- Step 2** Display all events starting now.

```

sensor# show events
evError: eventId=1041472274774840147 severity=warning vendor=Cisco
  originator:
    hostId: sensor2
    appName: cidwebserver
    appInstanceId: 12075
  time: 2008/01/07 04:41:45 2008/01/07 04:41:45 UTC
  errorMessage: name=errWarning received fatal alert: certificate_unknown

evError: eventId=1041472274774840148 severity=error vendor=Cisco
  originator:
    hostId: sensor2
    appName: cidwebserver
    appInstanceId: 351
  time: 2008/01/07 04:41:45 2008/01/07 04:41:45 UTC
  errorMessage: name=errTransport WebSession::sessionTask(6) TLS connection exce

```

```
ption: handshake incomplete.
```

The feed continues showing all events until you press **Ctrl-C**.

Step 3 Display the block requests beginning at 10:00 a.m. on February 9, 2008.

```
sensor# show events NAC 10:00:00 Feb 9 2008
evShunRqst: eventId=1106837332219222281 vendor=Cisco
  originator:
    deviceName: Sensor1
    appName: NetworkAccessControllerApp
    appInstance: 654
  time: 2008/02/09 10:33:31 2008/08/09 13:13:31
  shunInfo:
    host: connectionShun=false
    srcAddr: 11.0.0.1
    destAddr:
    srcPort:
    destPort:
    protocol: numericType=0 other
    timeoutMinutes: 40
    evAlertRef: hostId=esendHost 123456789012345678
sensor#
```

Step 4 Display errors with the warning level starting at 10:00 a.m. on February 9, 2008.

```
sensor# show events error warning 10:00:00 Feb 9 2008
evError: eventId=1041472274774840197 severity=warning vendor=Cisco
  originator:
    hostId: sensor
    appName: cidwebserver
    appInstanceId: 12160
  time: 2008/01/07 04:49:25 2008/01/07 04:49:25 UTC
  errorMessage: name=errWarning received fatal alert: certificate_unknown
```

Step 5 Display alerts from the past 45 seconds.

```
sensor# show events alert past 00:00:45

evIdsAlert: eventId=1109695939102805307 severity=medium vendor=Cisco
  originator:
    hostId: sensor
    appName: sensorApp
    appInstanceId: 367
  time: 2008/03/02 14:15:59 2008/03/02 14:15:59 UTC
  signature: description=Nachi Worm ICMP Echo Request id=2156 version=S54
    subsigId: 0
    sigDetails: Nachi ICMP
  interfaceGroup:
    vlan: 0
  participants:
    attacker:
      addr: locality=OUT 10.89.228.202
    target:
      addr: locality=OUT 10.89.150.185
  riskRatingValue: 70
  interface: fe0_1
  protocol: icmp

evIdsAlert: eventId=1109695939102805308 severity=medium vendor=Cisco
  originator:
  --MORE--
```

Step 6 Display events that began 30 seconds in the past.

```

sensor# show events past 00:00:30
evStatus: eventId=1041526834774829055 vendor=Cisco
  originator:
    hostId: sensor
    appName: mainApp
    appInstanceId: 2215
  time: 2008/01/08 02:41:00 2008/01/08 02:41:00 UTC
  controlTransaction: command=getVersion successful=true
  description: Control transaction response.
  requestor:
    user: cids
    application:
      hostId: 64.101.182.101
      appName: -cidcli
      appInstanceId: 2316

evStatus: eventId=1041526834774829056 vendor=Cisco
  originator:
    hostId: sensor
    appName: login(pam_unix)
    appInstanceId: 2315
  time: 2008/01/08 02:41:00 2008/01/08 02:41:00 UTC
  syslogMessage:
    description: session opened for user cisco by cisco(uid=0)

```

Clearing Events from Event Store

Use the **clear events** command to clear Event Store. To clear events from Event Store, follow these steps:

Step 1 Log in to the CLI using an account with administrator privileges.

Step 2 Clear Event Store.

```

sensor# clear events
Warning: Executing this command will remove all events currently stored in the event
store.
Continue with clear? []:

```

Step 3 Enter **yes** to clear the events.

Displaying and Setting the System Clock

This section explains how to display and manually set the system clock. It contains the following topics:

- [Displaying the System Clock, page 16-24](#)
- [Manually Setting the System Clock, page 16-24](#)

Displaying the System Clock

Use the **show clock [detail]** command to display the system clock. You can use the **detail** option to indicate the clock source (NTP or system) and the current summertime setting (if any).

The system clock keeps an authoritative flag that indicates whether the time is authoritative (believed to be accurate). If the system clock has been set by a timing source, such as NTP, the flag is set.

Table 16-2 lists the system clock flags.

Table 16-2 System Clock Flags

Symbol	Description
*	Time is not authoritative.
(blank)	Time is authoritative.
.	Time is authoritative, but NTP is not synchronized.

To display the system clock, follow these steps:

Step 1 Log in to the CLI.

Step 2 Display the system clock.

```
sensor# show clock
*19:04:52 UTC Thu Apr 03 2008
```

Step 3 Display the system clock with details.

```
sensor# show clock detail
20:09:43 UTC Thu Apr 03 2008
Time source is NTP
Summer time starts 03:00:00 UTC Sun Mar 09 2008
Summer time stops 01:00:00 UTC Sun Nov 02 2008
```

This indicates that the sensor is getting its time from NTP and that is configured and synchronized.

```
sensor# show clock detail
*20:09:43 UTC Thu Apr 03 2008
No time source
Summer time starts 03:00:00 UTC Sun Mar 09 2008
Summer time stops 01:00:00 UTC Sun Nov 02 2008
```

This indicates that no time source is configured.

Manually Setting the System Clock

Use the **clock set hh:mm [:ss] month day year** command to manually set the clock on the appliance. Use this command if no other time sources are available.



Note

You do not need to set the system clock if your sensor is synchronized by a valid outside timing mechanism such as an NTP clock source.

The **clock set** command does not apply to the following platforms:

- AIM IPS
- AIP SSC-5
- AIP SSM
- IDSM2
- NME IPS

To manually set the clock on the appliance, follow these steps:

Step 1 Log in to the CLI using an account with administrator privileges.

Step 2 Set the clock manually.

```
sensor# clock set 13:21 Mar 29 2008
```



Note The time format is 24-hour time.

Clearing the Denied Attackers List

Use the **show statistics denied-attackers** command to display the list of denied attackers. Use the **clear denied-attackers** [*virtual_sensor*] [*ip-address ip_address*] command to delete the denied attackers list and clear the virtual sensor statistics.

If your sensor is configured to operate in inline mode, the traffic is passing through the sensor. You can configure signatures to deny packets, connections, and attackers while in inline mode, which means that single packets, connections, and specific attackers are denied, that is, not transmitted, when the sensor encounters them.

When the signature fires, the attacker is denied and placed in a list. As part of sensor administration, you may want to delete the list or clear the statistics in the list.

The following options apply:

- *virtual_sensor*—(Optional) The virtual sensor whose denied attackers list should be cleared.
- *ip_address*—(Optional) The IP address to clear.

To display the list of denied attackers and delete the list and clear the statistics, follow these steps:

Step 1 Log in to the CLI using an account with administrator privileges.

Step 2 Display the list of denied IP addresses.

```
sensor# show statistics denied-attackers
Denied Attackers and hit count for each.
 10.20.4.2 = 9
 10.20.5.2 = 5
```

The statistics show that there are two IP addresses being denied at this time.

Step 3 Delete the denied attackers list.

```
sensor# clear denied-attackers
```

Warning: Executing this command will delete all addresses from the list of attackers currently being denied by the sensor.
Continue with clear? [yes]:

Step 4 Enter **yes** to clear the list.

Step 5 Delete the denied attackers list for a specific virtual sensor.

```
sensor# clear denied-attackers vs0
Warning: Executing this command will delete all addresses from the list of attackers being
denied by virtual sensor vs0.
Continue with clear? [yes]:
```

Step 6 Enter **yes** to clear the list.

Step 7 Remove a specific IP address from the denied attackers list for a specific virtual sensor.

```
sensor# clear denied-attackers vs0 ip-address 10.1.1.1
Warning: Executing this command will delete ip address 10.1.1.1 from the list of attackers
being denied by virtual sensor vs0.
Continue with clear? [yes]:
```

Step 8 Enter **yes** to clear the list.

Step 9 Verify that you have cleared the list.

You can use the **show statistics denied-attackers** or **show statistics virtual-sensor** command.

```
sensor# show statistics denied-attackers
Denied Attackers and hit count for each.
Denied Attackers and hit count for each.
Statistics for Virtual Sensor vs0
  Denied Attackers with percent denied and hit count for each.
```

```
  Denied Attackers with percent denied and hit count for each.
```

```
Statistics for Virtual Sensor vs1
  Denied Attackers with percent denied and hit count for each.
```

```
  Denied Attackers with percent denied and hit count for each.
sensor#
```

```
sensor# show statistics virtual-sensor
Virtual Sensor Statistics
  Statistics for Virtual Sensor vs0
    Name of current Signature-Definition instance = sig0
    Name of current Event-Action-Rules instance = rules0
    List of interfaces monitored by this virtual sensor = mypair
  Denied Address Information
    Number of Active Denied Attackers = 0
    Number of Denied Attackers Inserted = 2
    Number of Denied Attackers Total Hits = 287
    Number of times max-denied-attackers limited creation of new entry = 0
    Number of exec Clear commands during uptime = 1
  Denied Attackers and hit count for each.
```

Step 10 Clear only the statistics.

```
sensor# show statistics virtual-sensor clear
```

Step 11 Verify that you have cleared the statistics.

```
sensor# show statistics virtual-sensor
```

```

Virtual Sensor Statistics
  Statistics for Virtual Sensor vs0
    Name of current Signature-Definition instance = sig0
    Name of current Event-Action-Rules instance = rules0
    List of interfaces monitored by this virtual sensor = mypair
  Denied Address Information
    Number of Active Denied Attackers = 2
    Number of Denied Attackers Inserted = 0
    Number of Denied Attackers Total Hits = 0
    Number of times max-denied-attackers limited creation of new entry = 0
    Number of exec Clear commands during uptime = 1
  Denied Attackers and hit count for each.
    10.20.2.5 = 0
    10.20.5.2 = 0

```

The statistics have all been cleared except for the `Number of Active Denied Attackers` and `Number of exec Clear commands during uptime` categories. It is important to know if the list has been cleared.

Displaying Policy Lists

Use the `list {anomaly-detection-configurations | event-action-rules-configurations | signature-definition-configurations}` in EXEC mode to display the list of policies for these components. The file size is in bytes. A virtual sensor with N/A indicates that the policy is not assigned to a virtual sensor.

To display a list of policies on the sensor, follow these steps:

Step 1 Log in to the CLI.

Step 2 Display the list of policies for anomaly detection.

```

sensor# list anomaly-detection-configurations
Anomaly Detection
  Instance   Size   Virtual Sensor
  ----     -
  ad0        255   vs0
  temp       707   N/A
  MyAD       255   N/A
  ad1        141   vs1
sensor#

```

Step 3 Display the list of policies for event action rules.

```

sensor# list event-action-rules-configurations
Event Action Rules
  Instance   Size   Virtual Sensor
  ----     -
  rules0     112   vs0
  rules1     141   vs1
sensor#

```

Step 4 Display the list of policies for signature definition.

```

sensor# list signature-definition-configurations
Signature Definition
  Instance   Size   Virtual Sensor
  ----     -
  sig0       336   vs0
  sig1       141   vs1
  sig2       141   N/A

```

sensor#

Displaying Statistics

Use the `show statistics [analysis-engine | authentication | event-server | event-store | external-product-interface | host | logger | network-access | notification | sdee-server | transaction-server | web-server] [clear]` command to display statistics for each sensor application.

Use the `show statistics [anomaly-detection | denied-attackers | os-identification | virtual-sensor] [name | clear]` to display statistics for these components for all virtual sensors. If you provide the virtual sensor name, the statistics for that virtual sensor only are displayed.



Note

The `clear` option is not available for the analysis engine, anomaly detection, host, network access, or OS identification applications.

To display statistics for the sensor, follow these steps:

- Step 1** Log in to the CLI.
- Step 2** Display the statistics for Analysis Engine.

```

sensor# show statistics analysis-engine
Analysis Engine Statistics
  Number of seconds since service started = 1421127
  Measure of the level of current resource utilization = 0
  Measure of the level of maximum resource utilization = 0
  The rate of TCP connections tracked per second = 0
  The rate of packets per second = 0
  The rate of bytes per second = 0
Receiver Statistics
  Total number of packets processed since reset = 0
  Total number of IP packets processed since reset = 0
Transmitter Statistics
  Total number of packets transmitted = 0
  Total number of packets denied = 0
  Total number of packets reset = 0
Fragment Reassembly Unit Statistics
  Number of fragments currently in FRU = 0
  Number of datagrams currently in FRU = 0
TCP Stream Reassembly Unit Statistics
  TCP streams currently in the embryonic state = 0
  TCP streams currently in the established state = 0
  TCP streams currently in the closing state = 0
  TCP streams currently in the system = 0
  TCP Packets currently queued for reassembly = 0
The Signature Database Statistics.
  Total nodes active = 0
  TCP nodes keyed on both IP addresses and both ports = 0
  UDP nodes keyed on both IP addresses and both ports = 0
  IP nodes keyed on both IP addresses = 0
Statistics for Signature Events
  Number of SigEvents since reset = 0
Statistics for Actions executed on a SigEvent
  Number of Alerts written to the IdsEventStore = 0
sensor#
    
```

Step 3 Display the statistics for anomaly detection.

```

sensor# show statistics anomaly-detection
Statistics for Virtual Sensor vs0
  No attack
  Detection - ON
  Learning - ON
  Next KB rotation at 10:00:01 UTC Sat Jan 18 2008
  Internal Zone
    TCP Protocol
    UDP Protocol
    Other Protocol
  External Zone
    TCP Protocol
    UDP Protocol
    Other Protocol
  Illegal Zone
    TCP Protocol
    UDP Protocol
    Other Protocol
Statistics for Virtual Sensor vs1
  No attack
  Detection - ON
  Learning - ON
  Next KB rotation at 10:00:00 UTC Sat Jan 18 2008
  Internal Zone
    TCP Protocol
    UDP Protocol
    Other Protocol
  External Zone
    TCP Protocol
    UDP Protocol
    Other Protocol
  Illegal Zone
    TCP Protocol
    UDP Protocol
    Other Protocol
sensor#

```

Step 4 Display the statistics for authentication.

```

sensor# show statistics authentication
General
  totalAuthenticationAttempts = 128
  failedAuthenticationAttempts = 0
sensor#

```

Step 5 Display the statistics for the denied attackers in the system.

```

sensor# show statistics denied-attackers
Denied Attackers and hit count for each.
Denied Attackers and hit count for each.
Statistics for Virtual Sensor vs0
  Denied Attackers with percent denied and hit count for each.

  Denied Attackers with percent denied and hit count for each.

Statistics for Virtual Sensor vs1
  Denied Attackers with percent denied and hit count for each.

  Denied Attackers with percent denied and hit count for each.

```

```
sensor#
```

Step 6 Display the statistics for Event Server.

```
sensor# show statistics event-server
General
  openSubscriptions = 0
  blockedSubscriptions = 0
Subscriptions
sensor#
```

Step 7 Display the statistics for Event Store.

```
sensor# show statistics event-store
Event store statistics
  General information about the event store
    The current number of open subscriptions = 2
    The number of events lost by subscriptions and queries = 0
    The number of queries issued = 0
    The number of times the event store circular buffer has wrapped = 0
  Number of events of each type currently stored
    Debug events = 0
    Status events = 9904
    Log transaction events = 0
    Shun request events = 61
    Error events, warning = 67
    Error events, error = 83
    Error events, fatal = 0
    Alert events, informational = 60
    Alert events, low = 1
    Alert events, medium = 60
    Alert events, high = 0
sensor#
```

Step 8 Display the statistics for the host.

```
sensor# show statistics host
General Statistics
  Last Change To Host Config (UTC) = 16:11:05 Thu Feb 10 2008
  Command Control Port Device = FastEthernet0/0
Network Statistics
  fe0_0    Link encap:Ethernet HWaddr 00:0B:46:53:06:AA
          inet addr:10.89.149.185 Bcast:10.89.149.255 Mask:255.255.255.128
          UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
          RX packets:1001522 errors:0 dropped:0 overruns:0 frame:0
          TX packets:469569 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:57547021 (54.8 Mib) TX bytes:63832557 (60.8 MiB)
          Interrupt:9 Base address:0xf400 Memory:c0000000-c0000038
NTP Statistics
  status = Not applicable
Memory Usage
  usedBytes = 500592640
  freeBytes = 8855552
  totalBytes = 509448192
Swap Usage
  Used Bytes = 77824
  Free Bytes = 600649728

  Total Bytes = 600727552
CPU Statistics
  Usage over last 5 seconds = 0
  Usage over last minute = 1
  Usage over last 5 minutes = 1
```

```

Memory Statistics
Memory usage (bytes) = 500498432
Memory free (bytes) = 894976032
Auto Update Statistics
lastDirectoryReadAttempt = 15:26:33 CDT Tue Jun 17 2008
  = Read directory: http://tester@198.133.219.243//cisco/ciscosecure/ips/6.x/sigup/
  = Success
lastDownloadAttempt = 15:26:33 CDT Tue Jun 17 2008
  = Download: http://bmarquardt@198.133.219.243//cisco/ciscosecure/ips/6.x/sigup/IPS-
sig-S338-req-E1.pkg
  = Error: httpResponse status returned: Unauthorized
lastInstallAttempt = N/A
nextAttempt = 16:26:30 CDT Tue Jun 17 2008

sensor#

```

Step 9 Display the statistics for the logging application.

```

sensor# show statistics logger
The number of Log interprocessor FIFO overruns = 0
The number of syslog messages received = 11
The number of <evError> events written to the event store by severity
  Fatal Severity = 0
  Error Severity = 64
  Warning Severity = 35
  TOTAL = 99
The number of log messages written to the message log by severity
  Fatal Severity = 0
  Error Severity = 64
  Warning Severity = 24
  Timing Severity = 311
  Debug Severity = 31522
  Unknown Severity = 7
  TOTAL = 31928

sensor#

```

Step 10 Display the statistics for ARC.

```

sensor# show statistics network-access
Current Configuration
LogAllBlockEventsAndSensors = true
EnableNvramWrite = false
EnableAclLogging = false
AllowSensorBlock = false
BlockMaxEntries = 11
MaxDeviceInterfaces = 250
NetDevice
  Type = PIX
  IP = 10.89.150.171
  NATAddr = 0.0.0.0
  Communications = ssh-3des
NetDevice
  Type = PIX
  IP = 10.89.150.219
  NATAddr = 0.0.0.0
  Communications = ssh-des
NetDevice
  Type = PIX
  IP = 10.89.150.250
  NATAddr = 0.0.0.0
  Communications = telnet
NetDevice
  Type = Cisco
  IP = 10.89.150.158

```

```

NATAddr = 0.0.0.0
Communications = telnet
BlockInterface
  InterfaceName = ethernet0/1
  InterfaceDirection = out
  InterfacePostBlock = Post_Acl_Test
BlockInterface
  InterfaceName = ethernet0/1
  InterfaceDirection = in
  InterfacePreBlock = Pre_Acl_Test
  InterfacePostBlock = Post_Acl_Test
NetDevice
  Type = CAT6000_VACL
  IP = 10.89.150.138
  NATAddr = 0.0.0.0
  Communications = telnet
  BlockInterface
    InterfaceName = 502
    InterfacePreBlock = Pre_Acl_Test
  BlockInterface
    InterfaceName = 507
    InterfacePostBlock = Post_Acl_Test
State
  BlockEnable = true
NetDevice
  IP = 10.89.150.171
  AclSupport = Does not use ACLs
  Version = 6.3
  State = Active
  Firewall-type = PIX
NetDevice
  IP = 10.89.150.219
  AclSupport = Does not use ACLs
  Version = 7.0
  State = Active
  Firewall-type = ASA
NetDevice
  IP = 10.89.150.250
  AclSupport = Does not use ACLs
  Version = 2.2
  State = Active
  Firewall-type = FWSM
NetDevice
  IP = 10.89.150.158
  AclSupport = uses Named ACLs
  Version = 12.2
  State = Active
NetDevice
  IP = 10.89.150.138
  AclSupport = Uses VACLs
  Version = 8.4
  State = Active
BlockedAddr
  Host
    IP = 22.33.4.5
    Vlan =
    ActualIp =
    BlockMinutes =
  Host
    IP = 21.21.12.12
    Vlan =
    ActualIp =
    BlockMinutes =
  Host

```

```

        IP = 122.122.33.4
        Vlan =
        ActualIp =
        BlockMinutes = 60
        MinutesRemaining = 24
    Network
        IP = 111.22.0.0
        Mask = 255.255.0.0
        BlockMinutes =
sensor#

```

Step 11 Display the statistics for the notification application.

```

sensor# show statistics notification
General
    Number of SNMP set requests = 0
    Number of SNMP get requests = 0
    Number of error traps sent = 0
    Number of alert traps sent = 0
sensor#

```

Step 12 Display the statistics for the SDEE server.

```

sensor# show statistics sdee-server
General
    Open Subscriptions = 0
    Blocked Subscriptions = 0
    Maximum Available Subscriptions = 5
    Maximum Events Per Retrieval = 500
Subscriptions
sensor#

```

Step 13 Display the statistics for the transaction server.

```

sensor# show statistics transaction-server
General
    totalControlTransactions = 35
    failedControlTransactions = 0
sensor#

```

Step 14 Display the statistics for a virtual sensor.

```

sensor# show statistics virtual-sensor vs0
Statistics for Virtual Sensor vs0
    Name of current Signature-Definition instance = sig0
    Name of current Event-Action-Rules instance = rules0
    List of interfaces monitored by this virtual sensor =
    General Statistics for this Virtual Sensor
        Number of seconds since a reset of the statistics = 1421711
        Measure of the level of resource utilization = 0
        Total packets processed since reset = 0
        Total IP packets processed since reset = 0
        Total packets that were not IP processed since reset = 0
        Total TCP packets processed since reset = 0
        Total UDP packets processed since reset = 0
        Total ICMP packets processed since reset = 0
        Total packets that were not TCP, UDP, or ICMP processed since reset =
        Total ARP packets processed since reset = 0
        Total ISL encapsulated packets processed since reset = 0
        Total 802.1q encapsulated packets processed since reset = 0
        Total packets with bad IP checksums processed since reset = 0
        Total packets with bad layer 4 checksums processed since reset = 0
        Total number of bytes processed since reset = 0
        The rate of packets per second since reset = 0
        The rate of bytes per second since reset = 0

```

```

    The average bytes per packet since reset = 0
  Denied Address Information
    Number of Active Denied Attackers = 0
    Number of Denied Attackers Inserted = 0
    Number of Denied Attacker Victim Pairs Inserted = 0
    Number of Denied Attacker Service Pairs Inserted = 0
    Number of Denied Attackers Total Hits = 0
    Number of times max-denied-attackers limited creation of new entry = 0
    Number of exec Clear commands during uptime = 0
  Denied Attackers and hit count for each.
  Denied Attackers with percent denied and hit count for each.

  The Signature Database Statistics.
    The Number of each type of node active in the system (can not be reset
      Total nodes active = 0
      TCP nodes keyed on both IP addresses and both ports = 0
      UDP nodes keyed on both IP addresses and both ports = 0
      IP nodes keyed on both IP addresses = 0
    The number of each type of node inserted since reset
      Total nodes inserted = 0
      TCP nodes keyed on both IP addresses and both ports = 0
      UDP nodes keyed on both IP addresses and both ports = 0
      IP nodes keyed on both IP addresses = 0
    The rate of nodes per second for each time since reset
      Nodes per second = 0
      TCP nodes keyed on both IP addresses and both ports per second = 0
      UDP nodes keyed on both IP addresses and both ports per second = 0
      IP nodes keyed on both IP addresses per second = 0
    The number of root nodes forced to expire because of memory constraint
      TCP nodes keyed on both IP addresses and both ports = 0
    Packets dropped because they would exceed Database insertion rate limits = 0
  Fragment Reassembly Unit Statistics for this Virtual Sensor
    Number of fragments currently in FRU = 0
    Number of datagrams currently in FRU = 0
    Number of fragments received since reset = 0
    Number of fragments forwarded since reset = 0
    Number of fragments dropped since last reset = 0
    Number of fragments modified since last reset = 0
    Number of complete datagrams reassembled since last reset = 0
    Fragments hitting too many fragments condition since last reset = 0
    Number of overlapping fragments since last reset = 0
    Number of Datagrams too big since last reset = 0
    Number of overwriting fragments since last reset = 0
    Number of Initial fragment missing since last reset = 0
    Fragments hitting the max partial dgrams limit since last reset = 0
    Fragments too small since last reset = 0
    Too many fragments per dgram limit since last reset = 0
    Number of datagram reassembly timeout since last reset = 0
    Too many fragments claiming to be the last since last reset = 0
    Fragments with bad fragment flags since last reset = 0
  TCP Normalizer stage statistics
    Packets Input = 0
    Packets Modified = 0
    Dropped packets from queue = 0
    Dropped packets due to deny-connection = 0
    Current Streams = 0
    Current Streams Closed = 0
    Current Streams Closing = 0
    Current Streams Embryonic = 0
    Current Streams Established = 0
    Current Streams Denied = 0
  Statistics for the TCP Stream Reassembly Unit
    Current Statistics for the TCP Stream Reassembly Unit

```

```

TCP streams currently in the embryonic state = 0
TCP streams currently in the established state = 0
TCP streams currently in the closing state = 0
TCP streams currently in the system = 0
TCP Packets currently queued for reassembly = 0
Cumulative Statistics for the TCP Stream Reassembly Unit since reset
TCP streams that have been tracked since last reset = 0
TCP streams that had a gap in the sequence jumped = 0
TCP streams that was abandoned due to a gap in the sequence = 0
TCP packets that arrived out of sequence order for their stream = 0
TCP packets that arrived out of state order for their stream = 0
The rate of TCP connections tracked per second since reset = 0
SigEvent Preliminary Stage Statistics
Number of Alerts received = 0
Number of Alerts Consumed by AlertInterval = 0
Number of Alerts Consumed by Event Count = 0
Number of FireOnce First Alerts = 0
Number of FireOnce Intermediate Alerts = 0
Number of Summary First Alerts = 0
Number of Summary Intermediate Alerts = 0
Number of Regular Summary Final Alerts = 0
Number of Global Summary Final Alerts = 0
Number of Active SigEventDataNodes = 0
Number of Alerts Output for further processing = 0
SigEvent Action Override Stage Statistics
Number of Alerts received to Action Override Processor = 0
Number of Alerts where an override was applied = 0
Actions Added
deny-attacker-inline = 0
deny-attacker-victim-pair-inline = 0
deny-attacker-service-pair-inline = 0
deny-connection-inline = 0
deny-packet-inline = 0
modify-packet-inline = 0
log-attacker-packets = 0
log-pair-packets = 0
log-victim-packets = 0
produce-alert = 0
produce-verbose-alert = 0
request-block-connection = 0
request-block-host = 0
request-snmp-trap = 0
reset-tcp-connection = 0
request-rate-limit = 0
SigEvent Action Filter Stage Statistics
Number of Alerts received to Action Filter Processor = 0
Number of Alerts where an action was filtered = 0
Number of Filter Line matches = 0
Number of Filter Line matches causing decreased DenyPercentage = 0
Actions Filtered
deny-attacker-inline = 0
deny-attacker-victim-pair-inline = 0
deny-attacker-service-pair-inline = 0
deny-connection-inline = 0
deny-packet-inline = 0
modify-packet-inline = 0
log-attacker-packets = 0
log-pair-packets = 0
log-victim-packets = 0
produce-alert = 0
produce-verbose-alert = 0
request-block-connection = 0
request-block-host = 0
request-snmp-trap = 0

```

```

        reset-tcp-connection = 0
        request-rate-limit = 0
    SigEvent Action Handling Stage Statistics.
    Number of Alerts received to Action Handling Processor = 0
    Number of Alerts where produceAlert was forced = 0
    Number of Alerts where produceAlert was off = 0
    Actions Performed
        deny-attacker-inline = 0
        deny-attacker-victim-pair-inline = 0
        deny-attacker-service-pair-inline = 0
        deny-connection-inline = 0
        deny-packet-inline = 0
        modify-packet-inline = 0
        log-attacker-packets = 0
        log-pair-packets = 0
        log-victim-packets = 0
        produce-alert = 0
        produce-verbose-alert = 0
--MORE--

```

Step 15 Display the statistics for Web Server.

```

sensor# show statistics web-server
listener-443
    number of server session requests handled = 61
    number of server session requests rejected = 0
    total HTTP requests handled = 35
    maximum number of session objects allowed = 40
    number of idle allocated session objects = 10
    number of busy allocated session objects = 0
crypto library version = 6.0.3
sensor#

```

Step 16 Clear the statistics for an application, for example, the logging application.

```

sensor# show statistics logger clear
The number of Log interprocessor FIFO overruns = 0
The number of syslog messages received = 141
The number of <evError> events written to the event store by severity
    Fatal Severity = 0
    Error Severity = 14
    Warning Severity = 142
    TOTAL = 156
The number of log messages written to the message log by severity
    Fatal Severity = 0
    Error Severity = 14
    Warning Severity = 1
    Timing Severity = 0
    Debug Severity = 0
    Unknown Severity = 28
    TOTAL = 43

```

The statistics were retrieved and cleared.

Step 17 Verify that the statistics have been cleared. The statistics all begin from 0.

```

sensor# show statistics logger
The number of Log interprocessor FIFO overruns = 0
The number of syslog messages received = 0
The number of <evError> events written to the event store by severity
    Fatal Severity = 0
    Error Severity = 0
    Warning Severity = 0
    TOTAL = 0
The number of log messages written to the message log by severity

```

```

Fatal Severity = 0
Error Severity = 0
Warning Severity = 0
Timing Severity = 0
Debug Severity = 0
Unknown Severity = 0
TOTAL = 0
sensor#

```

Displaying Tech Support Information

Use the **show tech-support** [**page**] [**destination-url** *destination_url*] command to display system information on the screen or have it sent to a specific URL. You can use the information as a troubleshooting tool with TAC.

The following parameters are optional:

- **page**—Displays the output, one page of information at a time. Press **Enter** to display the next line of output or use the spacebar to display the next page of information.
- **destination-url**—Indicates the information should be formatted as HTML and sent to the destination that follows this command. If you use this keyword, the output is not displayed on the screen.
- *destination_url*—Indicates the information should be formatted as HTML. The URL specifies where the information should be sent. If you do not use this keyword, the information is displayed on the screen.

To display tech support information, follow these steps:

Step 1 Log in to the CLI using an account with administrator privileges.

Step 2 View the output on the screen.

```
sensor# show tech-support page
```

The system information appears on the screen, one page at a time. Press the spacebar to view the next page or press **Ctrl-C** to return to the prompt.

Step 3 Send the output (in HTML format) to a file, follow these steps:

- Enter the following command, followed by a valid destination:

```
sensor# show tech-support destination-url destination_url
```

You can specify the following destination types:

- **ftp**—Destination URL for FTP network server. The syntax for this prefix is
ftp: [[//username@location]/relativeDirectory]/filename OR
ftp: [[//username@location]//absoluteDirectory]/filename.
- **scp**—Destination URL for the SCP network server. The syntax for this prefix is
scp: [[//username@]location]/relativeDirectory]/filename OR
scp: [[//username@]location]//absoluteDirectory]/filename.

For example, to send the tech support output to the file `/absolute/reports/sensor1Report.html`.

```
sensor# show tech support dest
ftp://csidsuser@10.2.1.2//absolute/reports/sensor1Report.html
```

The `password:` prompt appears.

- b. Enter the password for this user account.

The `Generating report:` message is displayed.

Displaying Version Information

Use the **show version** command to display version information for all installed operating system packages, signature packages, and IPS processes running on the system. To view the configuration for the entire system, use the **more current-config** command.

To display the version and configuration, follow these steps:

Step 1 Log in to the CLI.

Step 2 View version information.

```

sensor# show version
Application Partition:

Cisco Intrusion Prevention System, Version 6.2(1)E3

Host:
  Realm Keys          key1.0
Signature Definition:
  Signature Update    S323.0          2008-03-24
  Virus Update        V1.2            2005-11-24
OS Version:          2.4.30-IDS-smp-bigphys
Platform:            IPS 4240-K9
Serial Number:       P30000000652
No license present
Sensor up-time is 4 days.
Using 1421475840 out of 1984548864 bytes of available memory (71% usage)
system is using 17.7M out of 29.0M bytes of available disk space (61% usage)
application-data is using 41.0M out of 166.8M bytes of available disk space (26% usage)
boot is using 40.4M out of 68.6M bytes of available disk space (62% usage)

MainApp             M-2008_APR_16_21_44 (Release) 2008-04-16T22:25:36-0500 Running
AnalysisEngine     M-2008_APR_16_21_44 (Release) 2008-04-16T22:25:36-0500 Running
CLI                 M-2008_APR_16_21_44 (Release) 2008-04-16T22:25:36-0500

Upgrade History:

  IPS-K9-6.2-1-E3 21:44:00 UTC Wed Apr 16 2008

Recovery Partition Version 1.1 - 6.2(1)E3

Host Certificate Valid from: 23-Apr-2008 to 24-Apr-2010

sensor#

```



Note If the `--MORE--` prompt is displayed, press the spacebar to see more information or **Ctrl-C** to cancel the output and get back to the CLI prompt.

Step 3 View configuration information.

Note You can use the **more current-config** or **show configuration** commands.

```

sensor# more current-config
! -----
! Current configuration last modified Thu Apr 24 16:21:25 2008
! -----
! Version 6.2(1)E3
! Host:
!   Realm Keys          key1.0
! Signature Definition:
!   Signature Update    S323.0    2008-03-24
!   Virus Update        V1.2      2005-11-24
! -----
service interface
exit
! -----
service authentication
exit
! -----
service event-action-rules rules0
exit
! -----
service host
network-settings
host-ip 10.89.147.45/25,10.89.147.126
telnet-option enabled
access-list 0.0.0.0/0
exit
exit
! -----
service logger
exit
! -----
service network-access
exit
! -----
service notification
exit
! -----
service signature-definition sig0
exit
! -----
service ssh-known-hosts
exit
! -----
service trusted-certificates
exit
! -----
service web-server
exit
! -----
service anomaly-detection ad0
exit
! -----
service external-product-interface
exit
! -----
service health-monitor
exit
! -----

```

```
service analysis-engine
exit
sensor#
```

Diagnosing Network Connectivity

Use the **ping** *ip_address* [**count**] command to diagnose basic network connectivity.

**Caution**

No command interrupt is available for this command. It must run to completion.

To diagnose basic network connectivity, follow these steps:

Step 1 Log in to the CLI.

Step 2 Ping the address you are interested in.

```
sensor# ping ip_address count
```

The count is the number of echo requests to send. If you do not specify a number, 4 requests are sent. The range is 1 to 10,000.

Example of a successful ping:

```
sensor# ping 10.89.146.110 6
PING 10.89.146.110 (10.89.146.110): 56 data bytes
64 bytes from 10.89.146.110: icmp_seq=0 ttl=61 time=0.3 ms
64 bytes from 10.89.146.110: icmp_seq=1 ttl=61 time=0.1 ms
64 bytes from 10.89.146.110: icmp_seq=2 ttl=61 time=0.1 ms
64 bytes from 10.89.146.110: icmp_seq=3 ttl=61 time=0.2 ms
64 bytes from 10.89.146.110: icmp_seq=4 ttl=61 time=0.2 ms
64 bytes from 10.89.146.110: icmp_seq=5 ttl=61 time=0.2 ms
```

```
--- 10.89.146.110 ping statistics ---
6 packets transmitted, 6 packets received, 0% packet loss
round-trip min/avg/max = 0.1/0.1/0.3 ms
```

Example of an unsuccessful ping:

```
sensor# ping 172.21.172.1 3
PING 172.21.172.1 (172.21.172.1): 56 data bytes

--- 172.21.172.1 ping statistics ---
3 packets transmitted, 0 packets received, 100% packet loss
sensor#
```

Resetting the Appliance

Use the **reset** [**powerdown**] command to shut down the applications running on the appliance and to reboot the appliance. You can include the **powerdown** option to power off the appliance, if possible, or to have the appliance left in a state where the power can be turned off.

Shutdown (stopping the applications) begins immediately after you execute the command. Shutdown can take a while, and you can still access CLI commands while it is taking place, but the session is terminated without warning.

To reset the appliance, follow these steps:

Step 1 Log in to the CLI using an account with administrator privileges.

Step 2 To stop all applications and reboot the appliance, follow Steps 2 and 3. Otherwise, to power down the appliance, go to Steps 4 and 5.

```
sensor# reset
Warning: Executing this command will stop all applications and reboot the node.
Continue with reset? []:
```

Step 3 Enter **yes** to continue the reset.

```
sensor# yes
Request Succeeded.
sensor#
```

Step 4 Stop all applications and power down the appliance.

```
sensor# reset powerdown
Warning: Executing this command will stop all applications and power off the node if
possible. If the node can not be powered off it will be left in a state that is safe to
manually power down.
Continue with reset? []:
```

Step 5 Enter **yes** to continue with the reset and power down.

```
sensor# yes
Request Succeeded.
sensor#
```

For More Information

To reset the modules, see the following individual procedures:

- [Rebooting, Resetting, and Shutting Down the AIM IPS, page 17-18](#)
- [Reloading, Shutting Down, Resetting, and Recovering the AIP SSM, page 19-12](#)
- [Reloading, Shutting Down, Resetting, and Recovering the AIP SSC-5, page 18-10](#)
- [Resetting the IDSM2, page 20-41](#)
- [Rebooting, Resetting, and Shutting Down the NME IPS, page 21-12](#)

Displaying Command History

Use the **show history** command to obtain a list of the commands you have entered in the current menu. The maximum number of commands in the list is 50.

To obtain a list of the commands you have used recently, follow these steps:

Step 1 Log in to the CLI.

Step 2 Show the history of the commands you have used in EXEC mode.

```
sensor# show history
clear line
configure terminal
show history
```

Step 3 Show the history of the commands you have used in network access mode.

```
sensor# configure terminal
sensor (config)# service network-access
sensor (config-net)# show history
show settings
show settings terse
show settings | include profile-name|ip-address
exit
show history
sensor (config-net)#
```

Displaying Hardware Inventory

Use the **show inventory** command to display PEP information. This command displays the UDI information that consists of the PID, the VID, and the SN of your sensor.

PEP information provides an easy way to obtain the hardware version and serial number through the CLI.



Note

The **show inventory** command does not apply to the AIM IPS, AIP SSC-5, IDSM2, or NME IPS.

To display PEP information, follow these steps:

Step 1 Log in to the CLI.

Step 2 Display the PEP information.

```
sensor# show inventory

Name: "Chassis", DESCR: "IPS 4255 Intrusion Prevention Sensor"
PID: IPS 4255-K9, VID: V01 , SN: JAB0815R017

Name: "Power Supply", DESCR: ""
PID: ASA-180W-PWR-AC, VID: V01 , SN: 123456789AB
sensor#

sensor# show inventory

Name: "Module", DESCR: "ASA 5500 Series Security Services Module-20"
PID: ASA-SSM-20, VID: V01 , SN: JAB0815R036
sensor#

sensor-4240# show inventory

Name: "Chassis", DESCR: "IPS 4240 Appliance Sensor"
PID: IPS 4240-K9, VID: V01 , SN: P3000000653
sensor-4240#
```

You can use this information when dealing with the TAC.

Tracing the Route of an IP Packet

Use the `trace ip_address count` command to display the route an IP packet takes to a destination. The `ip_address` option is the address of the system to trace the route to. The `count` option lets you define how many hops you want to take. The default is 4. The valid values are 1 to 256.



Caution

There is no command interrupt available for this command. It must run to completion.

To trace the route of an IP packet, follow these steps:

Step 1 Log in to the CLI.

Step 2 Display the route of IP packet you are interested in.

```
sensor# trace 10.1.1.1
traceroute to 10.1.1.1 (10.1.1.1), 4 hops max, 40 byte packets
 1 10.89.130.1 (10.89.130.1) 0.267 ms 0.262 ms 0.236 ms
 2 10.89.128.17 (10.89.128.17) 0.24 ms * 0.399 ms
 3 * 10.89.128.17 (10.89.128.17) 0.424 ms *
 4 10.89.128.17 (10.89.128.17) 0.408 ms * 0.406 ms
sensor#
```

Step 3 Configure the route to take more hops than the default of 4, use the `count` option.

```
sensor# trace 10.1.1.1 8
traceroute to 10.1.1.1 (10.1.1.1), 8 hops max, 40 byte packets
 1 10.89.130.1 (10.89.130.1) 0.35 ms 0.261 ms 0.238 ms
 2 10.89.128.17 (10.89.128.17) 0.36 ms * 0.344 ms
 3 * 10.89.128.17 (10.89.128.17) 0.465 ms *
 4 10.89.128.17 (10.89.128.17) 0.319 ms * 0.442 ms
 5 * 10.89.128.17 (10.89.128.17) 0.304 ms *
 6 10.89.128.17 (10.89.128.17) 0.527 ms * 0.402 ms
 7 * 10.89.128.17 (10.89.128.17) 0.39 ms *
 8 10.89.128.17 (10.89.128.17) 0.37 ms * 0.486 ms
sensor#
```

Displaying Submode Settings

Use the `show settings [terse]` command in any submode to view the contents of the current configuration. To display the current configuration settings for a submode, follow these steps:

Step 1 Log in to the CLI.

Step 2 Show the current configuration for ARC submode.

```
sensor# configure terminal
sensor (config)# service network-access
sensor (config-net)# show settings
general
-----
log-all-block-events-and-errors: true <defaulted>
enable-nvram-write: false <defaulted>
enable-acl-logging: false <defaulted>
allow-sensor-block: false <defaulted>
```

```

block-enable: true <defaulted>
block-max-entries: 250 <defaulted>
max-interfaces: 250 default: 250
master-blocking-sensors (min: 0, max: 100, current: 0)
-----
never-block-hosts (min: 0, max: 250, current: 0)
-----
never-block-networks (min: 0, max: 250, current: 0)
-----
block-hosts (min: 0, max: 250, current: 0)
-----
block-networks (min: 0, max: 250, current: 0)
-----
-----
user-profiles (min: 0, max: 250, current: 11)
-----
profile-name: 2admin
-----
enable-password: <hidden>
password: <hidden>
username: pix default:
-----
profile-name: r7200
-----
enable-password: <hidden>
password: <hidden>
username: netrangr default:
-----
profile-name: insidePix
-----
enable-password: <hidden>
password: <hidden>
username: <defaulted>
-----
profile-name: qatest
-----
enable-password: <hidden>
password: <hidden>
username: <defaulted>
-----
profile-name: fwsm
-----
enable-password: <hidden>
password: <hidden>
username: pix default:
-----
profile-name: outsidePix
-----
enable-password: <hidden>
password: <hidden>
username: pix default:
-----
profile-name: cat
-----
enable-password: <hidden>
password: <hidden>
username: <defaulted>
-----
profile-name: rcat

```

```

-----
enable-password: <hidden>
password: <hidden>
username: cisco default:
-----
profile-name: nopass
-----
enable-password: <hidden>
password: <hidden>
username: <defaulted>
-----
profile-name: test
-----
enable-password: <hidden>
password: <hidden>
username: pix default:
-----
profile-name: sshswitch
-----
enable-password: <hidden>
password: <hidden>
username: cisco default:
-----
-----
cat6k-devices (min: 0, max: 250, current: 1)
-----
ip-address: 10.89.147.61
-----
communication: telnet default: ssh-3des
nat-address: 0.0.0.0 <defaulted>
profile-name: cat
block-vlans (min: 0, max: 100, current: 1)
-----
vlan: 1
-----
pre-vacl-name: <defaulted>
post-vacl-name: <defaulted>
-----
-----
router-devices (min: 0, max: 250, current: 1)
-----
ip-address: 10.89.147.54
-----
communication: telnet default: ssh-3des
nat-address: 0.0.0.0 <defaulted>
profile-name: r7200
block-interfaces (min: 0, max: 100, current: 1)
-----
interface-name: fa0/0
direction: in
-----
pre-acl-name: <defaulted>
post-acl-name: <defaulted>
-----
-----
firewall-devices (min: 0, max: 250, current: 2)
-----
ip-address: 10.89.147.10
-----
communication: telnet default: ssh-3des

```

```

    nat-address: 0.0.0.0 <defaulted>
    profile-name: insidePix
-----
ip-address: 10.89.147.82
-----
    communication: ssh-3des <defaulted>
    nat-address: 0.0.0.0 <defaulted>
    profile-name: f1
-----
-----
sensor (config-net)#

```

Step 3 Show the ARC settings in terse mode.

```

sensor(config-net)# show settings terse
general
-----
log-all-block-events-and-errors: true <defaulted>
enable-nvram-write: false <defaulted>
enable-acl-logging: false <defaulted>
allow-sensor-block: false <defaulted>
block-enable: true <defaulted>
block-max-entries: 250 <defaulted>
max-interfaces: 250 default: 250
master-blocking-sensors (min: 0, max: 100, current: 0)
-----
never-block-hosts (min: 0, max: 250, current: 0)
-----
never-block-networks (min: 0, max: 250, current: 0)
-----
block-hosts (min: 0, max: 250, current: 0)
-----
block-networks (min: 0, max: 250, current: 0)
-----
-----
user-profiles (min: 0, max: 250, current: 11)
-----
profile-name: 2admin
profile-name: r7200
profile-name: insidePix
profile-name: gatest
profile-name: fwsm
profile-name: outsidePix
profile-name: cat
profile-name: rcat
profile-name: nopass
profile-name: test
profile-name: sshswitch
-----
cat6k-devices (min: 0, max: 250, current: 1)
-----
ip-address: 10.89.147.61
-----
router-devices (min: 0, max: 250, current: 1)
-----
ip-address: 10.89.147.54
-----
firewall-devices (min: 0, max: 250, current: 2)
-----

```

```
ip-address: 10.89.147.10
ip-address: 10.89.147.82
-----
```

```
sensor(config-net)#
```

- Step 4** You can use the **include** keyword to show settings in a filtered output, for example, to show only profile names and IP addresses in the ARC configuration.

```
sensor(config-net)# show settings | include profile-name|ip-address
profile-name: 2admin
profile-name: r7200
profile-name: insidePix
profile-name: gatest
profile-name: fwsm
profile-name: outsidePix
profile-name: cat
profile-name: rcat
profile-name: nopass
profile-name: test
profile-name: sshswitch
ip-address: 10.89.147.61
  profile-name: cat
ip-address: 10.89.147.54
  profile-name: r7200
ip-address: 10.89.147.10
  profile-name: insidePix
ip-address: 10.89.147.82
  profile-name: test
sensor(config-net)#
```
