



Preface

This preface describes the purpose, audience, organization, obtaining documentation and submitting a service request and safety warnings of the *Cisco Physical Access Gateway User Guide*.

This chapter contains the following sections:

- [Purpose](#)
- [Audience](#)
- [Organization](#)
- [Obtaining Documentation and Submitting a Service Request](#)
- [Safety Warnings](#)

Purpose

This document provides information to install and configure the components located near each door of a Cisco Physical Access Control system.

Audience

This guide is intended for the Cisco Physical Access Gateway Administrators.

Organization

Chapter Number	Chapter Title	Description
Chapter 1	Overview	This chapter gives an overview of the Cisco Physical Access Gateway.
Chapter 2	Installing and Configuring the Cisco Physical Access Gateway	This chapter explains the Gateway appliance, Port description, configuration and installation instructions and its relation with the Cisco Physical Access Manager.

Chapter Number	Chapter Title	Description
Chapter 3	Connecting a Cisco Reader Module	This chapter explains the configuration and installation instructions of the Cisco Reader Module.
Chapter 4	Connecting a Cisco Input Module	This chapter explains the configuration and installation instructions of the Cisco Input Module.
Chapter 5	Connecting a Cisco Output Module	This chapter explains the configuration and installation instructions of the Cisco Output Module.
Appendix A	Environmental Specifications for the Cisco Physical Access Gateway	This chapter lists the environmental specifications for Cisco Physical Access gateway, Cisco Reader, Cisco Input and Cisco Output modules.
Appendix B	Safety Warnings	Lists the warnings while installing the Cisco Physical Access Gateway.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.

Safety Warnings

Before you install the device, observe the safety warnings described in [Appendix B, “Safety Warnings”](#).