



CHAPTER 6

Administration

The Administrator windows lets you perform several general administrative operations, including enabling HTTP and HTTPS access to the IP camera, configuring users, resetting or rebooting the IP camera, and updating firmware.

The following sections describe the Administration windows in detail:

- [Initialization Window, page 6-1](#)
- [User Window, page 6-3](#)
- [Maintenance Window, page 6-4](#)
- [Firmware Window, page 6-6](#)
- [Device Processes Window, page 6-7](#)
- [Password Complexity Window, page 6-8](#)

Initialization Window

The Account Initialization window provides options for configuring passwords for the IP camera default administrator accounts, and for configuring which protocols can be used to access the IP camera.

The IP camera always has an HTTP/HTTPS administrator who can access the IP camera through an HTTP or HTTPS connection. The name of this administrator is **admin**. The password is configurable.

If you want to access the IP camera through SSH, you must configure a password for an SSH administrator. The name of this administrator is **root**. The password is configurable.

To display the Initialization window, perform the following steps:

Procedure

- Step 1** From the IP camera user interface, click the **Setup** link.
- Step 2** Click **Administration** to expand the menu.
- Step 3** From the Administration menu, click **Initialization**.

The Initialization window appears. If you change any options in this window, you must click the **Save Settings** button to save the changes. If you do not click this button, changes are not retained when you exit the window. **Save Settings** appears at the bottom of the window. You may need to scroll down to it.

Table 6-1 describes the options in the Initialization window.

Table 6-1 Initialization Window Options

Option	Description
Administrator Accounts Area	
Protocol	<i>Display only.</i> Indicates the protocol that the corresponding administrator can use to access the IP camera: HTTP/HTTPS or SSH.
User Name	<i>Display only.</i> Indicates the default user name for the corresponding administrator: admin or root
Password	Enter a password for the corresponding administrator. The password is case sensitive and must contain from 8 to 32 characters, which can be letters, numbers, and special characters, but no spaces. Special characters are: ! \$ () - . @ ^ _ ` { } ~
Confirm password	Re-enter the password for the corresponding administrator.
Access Protocols Area	
Enable HTTP	Check this check box if you want to allow HTTP connections to the IP camera.
HTTP Port	Enter the HTTP port that is used to access the IP camera. Valid port numbers are 80 and 1024 through 32767. The default port is 80. If you configure the HTTP port to a value other than 80, you must specify the port number in the URL for the IP camera when you access it through an HTTP connection. For example, if the IP address of the IP camera is 192.168.1.100 and the HTTP port is 1024, enter this URL for the IP camera: http://192.168.1.100:1024.
Enable HTTPS	Check this check box if you want to allow HTTPS connections to the IP camera.
HTTPS Port	Enter the HTTPS port that is used to access the IP camera. Valid port numbers are 443 and 1024 through 65535. The default port is 443. If you configure the HTTPS port to a value other than 443, you must specify the port number in the URL for the IP camera when you access it through an HTTPS connection. For example, if the IP address of the IP camera is 192.168.1.100 and the HTTPS port is 1024, enter this URL for the IP camera: https://192.168.1.100:1024.
Enable Secure Shell (SSH)	Check this check box if you want to allow access to the camera through a SSH connection.
Secure Shell (SSH) Port	Enter the SSH port that is used to access the IP camera. Valid port numbers are 22 and 1024 through 65535. The default port is 22.

User Window

The User window lets you configure the following types of IP camera users:

- Administrator—Can access all IP camera windows, features, and functions.
- Viewer—Can access only the Camera Video & Control window and all features in that window except:
 - Video image controls
 - Set Current Preset as Home button
 - Add Preset Position button
 - Deleted Selected Preset button
 - Pan/tilt speed controls
 - Motion detection controls

There is always at least one user with Administrator privileges configured. The user name of this user is “admin.” You can configure up to four additional users and assign privilege levels to each one.

When you configure users, follow these guidelines:

- After you enter a name, password, and privilege level for a user, click **Add** next to the user information to save your changes.
- To change the password for an existing user, click **Change** next to the user name.
- To remove a user, click **Delete** next to the user. If you delete a user who is logged into the IP camera, the user remains logged in and can continue access the IP camera.
- To change the name of a user, you must delete the user then create a new user.

To display the User window, perform the following steps:

Procedure

- Step 1** From the IP camera user interface, click the **Setup** link.
- Step 2** Click **Administration** to expand the menu.
- Step 3** From the Administration menu, click **Users**.

The User window appears. If you change any options in this window, you must click the **Save Settings** button to save the changes. If you do not click this button, changes are not retained when you exit the window. **Save Settings** appears at the bottom of the window. You may need to scroll down to it.

[Table 6-2](#) describes the options in the User window.

Table 6-2 User Window Options

Option	Description
User List Area	
User Name	Enter a unique name for the user. The user name is case sensitive and can include up to 64 letters, numbers, and special characters, but no spaces. Special characters are: ! % () + , - = @ _ ~ There is always one user named admin (all lower case), which cannot be deleted.
Password	Enter a password for the user. The password is case sensitive and must contain from 8 to 32 characters, which can be letters, numbers, and special characters, but no spaces. Special characters are: ! \$ () - . @ ^ _ ` { } ~
Confirm Password	Re-enter the password for the user.
Privilege Level	Select the desired privilege level for the user: <ul style="list-style-type: none"> • Administrator—Can access all IP camera windows, features, and functions. • Viewer—Can access the Camera Video & Control window with limited controls, and can access the Refresh, Logout, About, and Help links from that window.
Change button	Click this button to change the password of the corresponding user.
Add button	Click this button to add the corresponding user. That user can then log in to the IP camera.
Delete button	Click this button to remove the corresponding user. This user can no longer log in to the IP camera.

Maintenance Window

The Maintenance window provides options for setting or restarting the IP camera, saving configuration information from the IP camera, and uploading the configuration information to the IP camera.

Saving and uploading configuration is useful for these activities:

- Configuring multiple IP cameras—If your network includes several IP cameras that should have similar configurations, you can configure one IP camera, save that configuration, and upload it to other IP cameras. Then, instead of manually configuring all options on each IP camera, you manually configure only the options that are unique, such as the IP address, if not obtained from DHCP.
- Backing up configuration—If you save the configuration from the IP camera, you can upload it to the IP camera to restore the configuration if it is lost, or if you can upload it to a replacement IP camera, if needed.

To display the Maintenance window, perform the following steps:

Procedure

- Step 1** From the IP camera user interface, click the **Setup** link.
- Step 2** Click **Administration** to expand the menu.
- Step 3** From the Administration menu, click **Maintenance**.

The Maintenance window appears. If you change any options in this window, you must click the **Save Settings** button to save the changes. If you do not click this button, changes are not retained when you exit the window. **Save Settings** appears at the bottom of the window. You may need to scroll down to it.

[Table 6-3](#) describes the options in the Maintenance window.

Table 6-3 Maintenance Window Options

Option	Description
Factory Default Area	
Restore button	<p>Click the Restore button to reset all IP camera settings to their factory default values.</p> <p>To confirm the restore procedure, click OK in the confirmation pop-up window. Otherwise, click Cancel.</p> <p>This action has the same effect as pressing and holding the Reset button on the IP camera for at least 15 seconds. After you perform this procedure, follow the steps in the Chapter 2, “Performing the Initial Setup of the IP Camera.”</p>
Reset button	<p>Click the Reset button to reset all IP camera settings except the static IP address, gateway IP address, and log in credentials (user name and password) to their factory default values.</p> <p>To confirm the restore procedure, click OK in the confirmation pop-up window. Otherwise, click Cancel.</p>
Reboot Area	
Reboot button	<p>Click the Reboot button to reboot the software on IP camera.</p> <p>To confirm the reboot procedure, click OK in the confirmation pop-up window. Otherwise, click Cancel.</p> <p>This action has the same effect as pressing and immediately releasing the Reset button on the IP camera, or powering the IP camera down and then powering it up.</p>
Device Configuration Area	
Export Configuration from Camera	<p>Click the Export button to save the current IP camera configuration information to a binary file.</p> <p>When you click this button, the File Download window appears. Use this window to save the configuration file.</p> <p>You can then load this configuration information to any same-model IP camera in the network. This feature is useful for creating a backup of this configuration and for configuring other IP cameras based on this configuration.</p>

Table 6-3 Maintenance Window Options (continued)

Option	Description
Import configuration to Camera	<p>Path and folder where a configuration file is stored. You can click Browse to find this location. After you enter this information, click Import to load the configuration file to the IP camera.</p> <p>After you upload a configuration file to the IP camera, the IP camera restarts automatically.</p> <p>If you upload configuration from another IP camera that is active in your network, make sure to configure this IP camera with a name, description, and unique IP address (if not obtained through DHCP). To change these options, see the “Basic Window” section on page 5-1 and the “IP Addressing Window” section on page 5-2.</p> <p>A configuration file that you upload includes the passwords that are configured for the administrator and for users. If you change any passwords after saving the configuration file, be aware that uploading the file overwrites the new passwords with the saved ones.</p>

Firmware Window

The Firmware window lets you view information about the firmware that is installed on the IP camera and upgrade the firmware.

Before you upgrade firmware, download the firmware file to a PC that is accessible on your network and unzip the file if it is zipped. To download firmware, go to this web page:

http://www.cisco.com/en/US/products/ps6918/Products_Sub_Category_Home.html

After you upgrade firmware, the IP camera restarts automatically. It retains all configuration information.

To display the Firmware window, perform the following steps:

Procedure

-
- Step 1** From the IP camera user interface, click the **Setup** link.
 - Step 2** Click **Administration** to expand the menu.
 - Step 3** From the Administration menu, click **Firmware**.

The Firmware window appears. If you change any options in this window, you must click the **Save Settings** button to save the changes. If you do not click this button, changes are not retained when you exit the window. **Save Settings** appears at the bottom of the window. You may need to scroll down to it.

[Table 6-4](#) describes the options in the Firmware window.

Table 6-4 Firmware Window Options

Option	Description
Device Information Area	
IP Address	<i>Display only.</i> IP address of the IP camera
MAC Address	<i>Display only.</i> MAC address of the IP camera.
Device Name	<i>Display only.</i> ID of the IP camera, as configured in the Basic window. For more information, see the “Basic Window” section on page 5-1.
Firmware Maintenance Area	
Firmware Version	Version of the firmware that is installed on the IP camera.
Firmware Released Date	Release date of the current firmware.
Details button	Click this button to display a pop-up window with additional information about the firmware on the IP camera.
Firmware Upgrade	To upgrade the firmware on the IP camera, begin by entering the path and folder where new firmware file for the IP camera is stored. The upgrade file may be stored on another PC. You can click Browse to find this location.
Upgrade button	After entering the path and folder for the firmware file, click this button to load the firmware upgrade on the IP camera. Do not power down the IP camera during the upgrade procedure.

Device Processes Window

The Device Processes window displays the processes that occupy TCP or UDP ports, and lets you stop any of these processes.



Note

To stop any process, click the **Delete** button that appears to the right of the process in the window.

Take care when stopping processes because some processes are required for the camera to operate properly. Processes that you stop in this window can restart the next time that you log in to the IP camera. If you delete a required process and the camera stops functioning, exit your web browser and then log back in to the IP camera to restart the process. If the process does not restart, power the IP camera off and then back on.

To display the Device Processes window, perform the following steps:

Procedure

- Step 1** From the IP camera user interface, click the **Setup** link.
- Step 2** Click **Administration** to expand the menu.
- Step 3** From the Administration menu, click **Device Processes**.

The Device Processes window appears. If you change any options in this window, you must click the **Save Settings** button to save the changes. If you do not click this button, changes are not retained when you exit the window. **Save Settings** appears at the bottom of the window. You may need to scroll down to it.

[Table 6-5](#) describes the options in the Device Processes window. All options are for display only.

Table 6-5 Device Processes Window Options

Option	Description
Protocol	Port (tcp or udp) that the process occupies
Local Address	IP address of the device that the process is listening to
Foreign Address	IP address and port number of the client device that is connected for the process
State	State of the process
Program Name	Name of the process

Password Complexity Window

IP camera administrator and user passwords must always meet the requirements that are described in the “[User Window](#)” section on page 6-3. The Password Complexity window provides options for configuring additional requirements for the IP camera passwords.

To display the Password Complexity window, perform the following steps:

Procedure

-
- Step 1** From the IP camera user interface, click the **Setup** link.
 - Step 2** Click **Administration** to expand the menu.
 - Step 3** From the Administration menu, click **Password Complexity**.

The Password Complexity window appears. If you change any options in this window, you must click the **Save Settings** button to save the changes. If you do not click this button, changes are not retained when you exit the window. **Save Settings** appears at the bottom of the window. You may need to scroll down to it.

[Table 6-6](#) describes the options in the Password Complexity window.

Table 6-6 Password Complexity Window Options

Option	Description
Password must contain at least three of the following: lower case letters, upper case letters, digits, and special characters	Password must contain characters from at least 3 of these categories: <ul style="list-style-type: none"> • Lower case letters (a through z) • Upper case letters (A through Z) • Digits (0 through 9) • Special characters: ! " # \$ % & ' () * + , - . : ; < = > ? @ [\] ^ _ ` { } ~
Password cannot include any character that occurs three or more times consecutively	Administrator password cannot include any character that occurs 3 or more times in a row.
Password cannot be a repeat or reverse of the user name	Password cannot be the same as the user name either forward or reversed

