



INDEX

Numerics

802.1x window

- EAP-FAST configuration [7-12](#)
- EAP-PEAP configuration [7-11](#)
- EAP-TTLS configuration [7-11](#)
- enable 802.1x [7-11](#)
- EPA-TLS configuration [7-11](#)
- overview [7-10](#)

A

- About link [1-7](#)
- action, triggered by event [4-26, 5-1](#)
- ActiveX controls [1-6](#)
- Administration windows [9-1, 10-1](#)
- alert, trigger types [4-27](#)
- Alert Notification window
 - options [4-27](#)
 - overview [4-26](#)
- app
 - configuring [8-6](#)
 - description [8-1](#)
 - enabling [8-2](#)
 - installing [8-6](#)
 - license, installing [8-5](#)
 - running [8-7](#)
 - stopping [8-8](#)
 - uninstalling [8-8](#)
- App Configuration window
 - options [8-2](#)
 - overview [8-1](#)
- application manager, restoring [8-8](#)

- Application Manager windows [8-1](#)

App License window

- options [8-3](#)
- overview [8-2](#)

App Setup window

- options [8-3](#)
- overview [8-3](#)

- audio, settings [4-19](#)

B

- backing up, configuration of IP camera [9-4](#)
- Basic Settings window
 - options [7-2](#)
 - overview [7-1](#)
- bit rate, of video [4-19](#)
- Bonjour, enabling on camera [7-7](#)
- brightness [3-5](#)
- browses, supported [1-4](#)

C

- camera settings, controls in Camera Video/Control window [3-4](#)
- Camera Settings window
 - options [4-20](#)
 - overview [4-20](#)
- Camera Video & Control window
 - accessing [3-1](#)
 - description [1-7](#)
 - displaying [1-6](#)
- configuration windows
 - 802.1x window [7-10](#)

accessing [1-2](#)
 Administration windows [9-1](#)
 Alert Notification window [4-26](#)
 App Configuration window [8-1](#)
 Basic Settings window [7-1](#)
 Camera Settings window [4-20](#)
 Device Processes window [9-7](#)
 Discovery Settings window [7-7](#)
 Event Notification window [5-1](#)
 Events windows [5-1](#)
 Feature Setup windows [4-1](#)
 Firmware Settings window [9-6](#)
 History Settings window [5-7](#)
 History window [5-9](#)
 Initialization window [9-1](#)
 IO Ports Settings window [4-25](#)
 IP Addressing window [7-3](#)
 IP Filter Settings window [7-12](#)
 Local Log window [10-4](#)
 Local Storage window [6-1](#)
 Log Setup Settings window [10-1](#)
 Log windows [10-1](#)
 Maintenance Settings window [9-4](#)
 Medianet window [7-8](#)
 Network Setup windows [7-1](#)
 Password Complexity window [9-8](#)
 QoS Settings window [7-13](#)
 SNMP Settings window [7-8](#)
 Streaming Settings window [4-1](#)
 Time Settings window [7-5](#)
 User Settings window [9-3](#)
 configuring app [8-6](#)
 connecting, to the IP camera
 after the first time [1-2](#)
 for the first time [2-1](#)
 PC requirements for [1-3, 2-1](#)
 secure connection [1-3](#)
 contrast [3-5](#)

D

date and time
 configuring manually [7-5](#)
 updating through NTP server [7-5](#)
 day
 filter [4-20](#)
 mode [4-20](#)
 daylight saving time, adjustment for [7-6](#)
 Device Processes window
 options [9-8](#)
 overview [9-7](#)
 DHCP, obtaining IP address through [2-1, 7-4](#)
 Differentiated Services (DiffServ) [7-14](#)
 Discovery Settings window
 options [7-7](#)
 overview [7-7](#)
 DNS server
 primary [7-4](#)
 secondary [7-4](#)
 dual streaming [4-1](#)

E

email notification
 configuring [5-3, 5-4](#)
 for alert [4-28](#)
 From field [4-29, 5-5](#)
 recipients [4-29, 5-5](#)
 event
 actions
 email notification [5-1](#)
 FTP notification [5-2](#)
 HTTP notification [4-27, 5-1](#)
 output port state change [4-27, 5-1](#)
 syslog server message [4-27, 5-1](#)
 notification, from system trigger [5-1](#)
 trigger types [5-3, 5-8](#)
 Event Notification window

- options 5-3
- overview 5-1

Events windows 5-1

event triggering, enabling for app 8-7

F

factory default configurations, resetting

- from command line 1-4
- from menu 9-5

factory default configurations, restoring

- from command line 1-4
- from menu 9-5

Feature Setup windows 4-1, 6-1

firmware

- upgrading 9-6, 9-7
- version in IP camera 9-7

Firmware Settings window

- options 9-7
- overview 9-6

focus/zoom, controls 3-10

FTP notification, configuring 5-6

G

gateway, for IP camera 7-4

H

help, for IP camera windows 1-7

History Settings window

- options 5-8
- overview 5-7

History window

- options 5-10
- overview 5-9

Home window

- accessing 1-2

description 1-4, 1-7

displaying 1-6

HTTP

- accessing camera through 1-3
- allowing access through 2-2, 9-2
- default port 9-2
- port 9-2

HTTPS

- accessing camera through 1-3
- allowing access through 9-2
- default port 9-2
- port 9-2

I

image overlay, on video 4-25

Initialization window

- options 9-2
- overview 9-1

input ports, state change 5-1, 5-7

installing

- app 8-6
- app license 8-5

IO Ports Settings window

- options 4-26
- overview 4-25

IP address

- controlling access by 7-12
- default for IP camera 1-3, 2-1
- fixed 7-4
- obtaining from DHCP server 2-1
- obtaining through DHCP 7-4
- static 7-4

IP Addressing window

- options 7-4
- overview 7-3

IP camera

- accessing through a web browser 1-2, 2-1
- connecting to after the first time 1-2

- connecting to for the first time [2-1](#)
- controlling access to [7-12](#)
- day mode [4-20](#)
- logging in to [1-4](#)
- logging out of [1-7](#)
- MAC address [9-7](#)
- name [7-2](#)
- night mode [4-20](#)
- overview [1-1](#)
- rebooting [9-5](#)
- restarting [9-5](#)
- restoring factory default configurations
 - from command line [1-4](#)
 - from menu [9-5](#)
- time zone [7-6](#)
- windows [1-2, 1-7](#)

IP Filter Settings window

- options [7-13](#)
- overview [7-12](#)

L

live video

- viewing through home window [3-1](#)
- viewing through third-party device or software [3-1](#)
- See also* video

Local [6-1](#)

Local Log window

- options [10-4](#)
- overview [10-4](#)

Local Storage window, overview [6-1](#)

log file

- sending to Syslog server [10-2](#)
- storage of [10-1](#)
- viewing [10-4](#)

log in, to IP camera [1-4](#)

log out, of IP camera [1-7](#)

Log Setup Settings window

- options [10-2](#)

- overview [10-1](#)

M

MAC address, of IP camera [9-7](#)

Maintenance Settings window

- options [9-5](#)
- overview [9-4](#)

Medianet window

- Enable Flow Metadata [7-8](#)
- overview [7-8](#)

microphone, use [4-20](#)

motion detection

- controls [3-8, 3-11](#)
- enabling [3-8](#)
- sensitivity [3-9](#)

multicast

- address [4-17, 4-18](#)
- enabling [4-17, 4-18](#)
- port [4-17, 4-18](#)

N

name, of IP camera [7-2, 9-7](#)

Network Setup windows [7-1](#)

night

- filter [4-20](#)
- mode [4-20](#)

O

operating systems, supported [1-3](#)

output ports, power on state [4-26](#)

P

password

- complexity [9-8](#)

- configuring requirements for 9-8
- for primary SMTP server 5-5
- for secondary SMTP server 5-5
- for SMTP server 4-28
- for user 9-4
- hardening 9-8
- requirements for 2-2, 9-4

Password Complexity window

- options 9-9
- overview 9-8

port number 1-3

processes

- descriptions 9-8
- stopping 9-8

profile controls 3-4

Q

QoS Settings window

- options 7-13
- overview 7-13

quality of service 7-13

R

rebooting, IP camera 9-5

Refresh link 1-6

resetting, factory default configurations

- from command line 1-4
- from menu 9-5

restarting, IP camera 9-5

restoring, factory default configurations

- from command line 1-4
- from menu 9-5

S

saturation 3-5

secure connection 1-3

security

- controlling processes 9-8
- password hardening 9-8
- stopping processes 9-8

Setup window

- description 1-7
- displaying 1-7

sharpness 3-5

SNMP, configuring 7-8

SNMP Settings window

- options 6-2, 7-8
- overview 7-8
- SNMP v2c 7-9
- SNMP v3 7-9

SSH

- allowing access through 9-2
- alternative port 9-2
- default port 9-2

statistics, on video 4-24

Streaming Settings window

- options 4-16
- overview 4-1

subnet mask, of IP camera 7-4

Syslog server 10-2

T

text overlay, on video 4-24

Time Settings window

- options 7-5
- overview 7-5

time stamp, on video 4-24

time zone, of IP camera 7-6

trigger

- for alert 4-27
- for event 5-3, 5-8
- system 5-1, 5-7

U

- uninstalling app [8-8](#)
- user, password [9-4](#)
- user name, requirements for [9-4](#)
- User Settings window
 - options [9-4](#)
 - overview [9-3](#)

V

- video
 - bit rate [4-19](#)
 - image, optimizing for lighting condition [4-20](#)
 - image overlay [4-25](#)
 - primary stream [4-1](#)
 - quality [4-19](#)
 - secondary stream [4-1](#)
 - statistics [4-24](#)
 - text overlay [4-24](#)
 - time stamp on [4-24](#)
 - viewing live
 - through Home window [3-1](#)
 - through third-party device or software [3-1](#)
 - See also* live video
- video codec
 - controls in Camera Video/Control window [3-1](#)
 - display in Streaming Settings window [4-19](#)
- Video Overlay Settings window
 - options [4-24](#)
 - overview [4-23](#)
- video resolution
 - configuration guidelines [4-1](#)
 - controls in Camera Video/Control window [3-1](#)
- View Video link [1-6](#)