

- Step 6** Click **Apply** and wait for the IP camera to reboot.
- Step 7** After the IP camera reboots, start Internet Explorer, enter *protocol://ip_address* in the Address field, then press **Enter**.
Replace *protocol* with **HTTPS** or **HTTP**. (You can use HTTP only if you enabled it Step 5.) Replace *ip_address* with the IP address that you used in Step 1.
- Step 8** If you are prompted to install ActiveX controls, follow the on-screen prompts to do so. ActiveX is required to view video from the IP camera.
The Home window appears. You can now click **View Video** to view live video, click **Setup** to configure the IP camera, or click **Logout** to exit
-

6 Where to go from Here

For detailed information about understanding, installing, configuring, operating, administering, and troubleshooting the IP dome, see the following documents that are available at www.cisco.com/go/ipcamera:

- *Cisco Video Surveillance 6020 IP Camera Installation Guide*
- *Cisco Video Surveillance 6000 Series IP Camera Configuration Guide*

7 Technical Support

To request technical assistance, contact the Cisco Technical Assistance Center (TAC) in one of the following ways:

- Online—<http://www.cisco.com/tac/>
- E-mail—tac@cisco.com
- Phone—In North America: 800 553-2447
Outside North America: 408 526-7209

Americas Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

Cisco, Cisco Systems, the Cisco logo, and the Cisco Systems logo are registered trademarks or trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries. All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0705R)

© 2012 Cisco Systems, Inc. All rights reserved.

Printed in China PRC



QUICK START GUIDE



Cisco Video Surveillance 6020 IP Dome Model CIVS-IPC-6020

- 1 Overview
- 2 Package Contents
- 3 Optional Accessories
- 4 About Installing the IP Dome
- 5 Accessing the IP Camera for the First Time
- 6 Where to go from Here
- 7 Technical Support

1 Overview

The Cisco Video Surveillance 6020 IP Dome model CIVS-IPC-6020 is a high-resolution, feature-rich IP camera. It offers a wide dynamic range, dual streaming, motion detection, event notification, day/night operation, power options (Power over Ethernet, AC, or DC), flexible mounting options, and many other features. It also supports external devices that trigger alarms and respond to alarms.

2 Package Contents

The Cisco Video Surveillance IP Dome package includes these items:

- IP Camera (qty. 1)
- Installation Template/Alignment Sticker (qty. 1)
- Screws (T4x32) (qty. 3)
- Wall Anchors (qty. 3)
- DC Power Cable (qty. 1)
- Ethernet Cable (qty. 1)
- Connector (qty. 1)
- Lens Hood (qty. 1)
- Cisco Pointer Card (qty. 1)
- Cisco RoHS Document (qty. 1)
- Identification labels (3)

3 Optional Accessories

The following accessories are available for the 6020 IP Dome. You can order these accessories from Cisco or a Cisco partner.

- Dome trim assembly with clear bubble for 6020 IP Dome—Cisco part number CIVS-6KA-INSURF-C
- Dome trim assembly with smoked bubble for 6020 IP Dome—Cisco part number CIVS-6KA-INSURF-S
- Audio video cable—Cisco part number CIVS-6KA-AVCABLE
- 12 VDC power supply—CIVS-IPCA-PWR12V

4 About Installing the IP Dome

Installing the IP dome involves mounting it on a ceiling or wall and connecting it to power and a network.

The IP dome requires a connection to a network via a category 5 or higher network cable. If this connection does not provide Power over Ethernet (PoE), the IP dome also requires a power cable from a 12 VDC or 24 VAC power adapter. The 12 VDC or 24 VAC source must be isolated from the ground (floating output).

In addition, you can use an external input device and an external output device with the 6020 IP dome:

5 Accessing the IP Camera for the First Time

After you install the IP camera, you can access it by using a PC and configure basic settings. To do so, follow these steps from a PC that is on the same network as the IP camera and that is running Microsoft Windows 7 (32-bit or 64-bit) or higher:

Procedure

Step 1 Start Internet Explorer 8 (32-bit only) or later, enter **HTTPS://ip_address** in the Address field, then press **Enter**.

Replace *ip_address* with the IP address that the IP camera obtains through DHCP in your network. If the camera does not obtain this IP address after 90 seconds, enter **192.168.0.100**.

The Login window appears.

Step 2 Enter the default login credentials:

- Username: **admin**
- Password: **admin**

The Initialization window appears.

Step 3 In the Password and Confirm Password fields in the admin row, enter a password for the IP camera administrator. Enter the same password in both fields. The password is case sensitive and can contain up to 8 letters, numbers, and special characters, but no spaces.

Step 4 In the Password and Conform Password fields in the root row, enter a password for accessing the IP camera through a SSH connection. Enter the same password in both fields. The password is case sensitive and can contain up to 8 letters, numbers, and special characters, but no spaces.

You use this password if you need to troubleshoot the IP camera through an SSH connection with the assistance of the Cisco Technical Assistance Center.

Step 5 In the HTTP area, click the **HTTP** radio button if you want to allow both HTTP and HTTPS connections to the IP camera.

The default setting is HTTPS, which allows only HTTPS (secure) connections to the IP camera.