



A

- About link [4-2](#)
- ActiveX controls [4-2](#)

B

- brightness [4-7](#)

C

- camera
 - See* IP camera
- camera settings, controls in Camera Video/Control window [4-7](#)
- Camera Video & Control window
 - description [4-2](#)
 - displaying [4-2](#)
- connecting, to the IP camera
 - for the first time [3-1](#)
 - PC requirements for [3-1](#)
- contrast [4-7](#)

D

- DHCP, obtaining IP address through [3-1](#)

F

- factory reset [4-4](#)

H

- help, for IP camera windows [4-2](#)
- Home window
 - description [4-2](#)
 - displaying [4-1](#)
- HTTP, allowing access through [3-2](#)

I

- installing, IP camera [2-1](#)
- IP address
 - default for IP camera [3-1](#)
 - obtaining from DHCP server [3-1](#)
- IP camera
 - accessing through a web browser [3-1](#)
 - connecting to for the first time [3-1](#)
 - installation [2-1](#)
 - logging out of [4-2](#)
 - mounting [2-5](#)
 - P-iris lens connector pinouts [1-5](#)
 - P-iris lens description [1-5](#)
 - powering off [4-4](#)
 - powering on [4-4](#)
 - windows [4-2](#)

L

- lens, P-iris, connecting [2-4](#)
- live video, viewing
 - See also* video
 - through home window [4-4](#)
 - through third-party device or software [4-4](#)

REVIEW DRAFT – CISCO CONFIDENTIAL

log out, of IP camera [4-2](#)

M

motion detection

controls [4-10, 4-12](#)

enabling [4-10](#)

sensitivity [4-11](#)

mounting, IP camera [2-5](#)

P

password

requirements for [3-2](#)

password, requirements for [3-2](#)

pinouts, for P-iris lens connector [1-5](#)

P-iris lens

connecting [2-4](#)

connector pinouts [1-5](#)

description [1-5](#)

power

powering off the IP camera [4-4](#)

powering on the IP camera [4-4](#)

Power over Ethernet (PoE) [2-1](#)

power adapter, supported [2-1](#)

Power over Ethernet (PoE) [2-1](#)

R

rebooting, IP camera [4-4](#)

Refresh link [4-1](#)

reset

factory default values [4-4](#)

reboot [4-4](#)

S

saturation [4-7](#)

Setup window

description [4-2](#)

displaying [4-2](#)

sharpness [4-7](#)

V

video

codec, controls in Camera Video/Control window [4-5](#)

resolution, controls in Camera Video/Control window [4-5](#)

viewing live

through Home window [4-4](#)

through third-party device or software [4-4](#)

See also live video

View Video link [4-2](#)