

INDEX

^	configuration windows
A	accessing 1-2
About link 1-4	Account Initialization window 6-1
Account Initialization window	Administration windows 6-1
options 6-2	Basic Settings window 5-1
overview 6-1	Camera Settings window 4-5
action	Device Processes window 6-7
triggered by event 4-9	Discovery Settings window 5-5
ActiveX controls 1-4	Event Notification window 4-9
Administration windows 6-1, 7-1	Feature Setup windows 4-1
audio	Firmware Settings window 6-6
settings 4-4	IO Ports Settings window 4-8
	IP Addressing window 5-2
	IP Filter Settings window 5-6
В	Local Log window 7-4
backing up, configuration of IP camera 6-4	Log Setup Settings window 7-1
Basic Settings window	Log windows 7-1
options 5-2	Maintenance Settings window 6-4
overview 5-1	Network Setup windows 5-1
bit rate, of video 4-4	Password Complexity window 6-8
Bonjour, enabling on camera 5-6	QoS Settings window 5-7
brightness 3-2	Streaming Settings window 4-1
	Time Settings window 5-4
	User Settings window 6-3
C	Video Overlay Settings window 4-7
Camera Settings window	connecting, to the IP camera
options 4-5	after the first time 1-2
overview 4-5	for the first time 2-1
Camera Video & Control window	PC requirements for 1-2, 2-1
accessing 3-1	secure connection 1-3
description 1-4	contrast 3-2
displaying 1-4	
CDP (Cisco Discovery Protocol), enabling on camera 5-6	

D	F
date and time	factory default configurations, resetting 6-5
configuring manually 5-4	factory default configurations, restoring 6-5
updating through NTP server 5-4	Feature Setup windows 4-1
day	firmware
filter 4-5	upgrading 6-6, 6-7
mode 4-5	version in IP camera 6-7
daylight saving time, adjustment for 5-4	Firmware Settings window
Device Processes window	options 6-7
options 6-8	overview 6-6
overview 6-7	focus/zoom
DHCP, obtaining IP address through 2-1, 5-3	accessing controls 3-5
Differentiated Services (DiffServ) 5-8	controls 3-5
Discovery Settings window	FTP notification
options 5-6	configuring 4-14
overview 5-5	
DNS server	
primary 5-3	G
secondary 5-3	gateway, for IP camera 5-3
dual streaming 4-1	
	
	Н
E	help, for IP camera windows 1-4
e-mail notification	Home window
configuring 4-12	accessing 1-2
From field 4-13	description 1-3, 1-4
recipients 4-13	displaying 1-4
event	НТТР
actions	accessing camera through 1-3
HTTP notification 4-9	allowing access through 2-2, 6-2
output port state change 4-10	default port 6-2
syslog server message 4-10	port 6-2
overview 4-9	HTTPS
trigger types 4-11	accessing camera through 1-3
Event Notification window	allowing access through 6-2
options 4-11	default port 6-2
overview 4-9	port 6-2

1	L
input ports	live video
state change 4-9	viewing
IO Ports Settings window	through home window 3-1
options 4-9	through third-party device or software 3-1
overview 4-8	See also video
IP address	Local Log window
controlling access by 5-6	options 7-4
default for IP camera 1-2, 1-3, 2-1	overview 7-4
fixed 5-3	log file
obtaining from DCHP server 2-1	sending to Syslog server 7-2
obtaining through DHCP 5-3	storage of 7-1
static 5-3	viewing 7-4
IP Addressing window	log in, to IP camera 1-3
options 5-3	log out, of IP camera 1-4
overview 5-2	Log Setup Settings window
IP camera	options 7-2
accessing through a web browser 1-2, 2-1	overview 7-1
connecting to after the first time 1-2	
connecting to for the first time 2-1	
controlling access to 5-6	M
day mode 4-5	MAC address, of IP camera 6-7
logging in to 1-3	Maintenance Settings window
logging out of 1-4	options 6-5
MAC address 6-7	overview 6-4
name 5-2	motion detection
night mode 4-5	accessing controls 3-3
overview 1-1	enabling 3-4
panning 3-3	sensitivity 3-4, 3-5
rebooting 6-5	threshold 3-4, 3-5
restarting 6-5	Motion detection controls 3-4
restoring factory default configurations 6-5	multicast
tilting 3-3	address 4-3
time zone 5-4	enabling 4-3
windows 1-2, 1-4	port 4-3, 4-4
IP Filter Settings window	
options 5-6	
overview 5-6	

N	R
name, of IP camera 5-2, 6-7	rebooting, IP camera 6-5
Network Setup windows 5-1	Refresh link 1-4
night	resetting, factory default configurations 6-5
filter 4-5	restarting, IP camera 6-5
mode 4-5	restoring, factory default configurations 6-5
0	
output ports	saturation 3-2
power on state 4-9	secure connection 1-3
	security
 P	controlling processes 6-7
r	password hardening 6-8
panning 3-3	stopping processes 6-7
password	sensitivity, for motion detection 3-4, 3-5
complexity 6-8	Setup window
configuring requirements for 6-8	description 1-4
for primary SMTP server 4-13	displaying 1-4
for secondary SMTP server 4-13	sharpness 3-2
for user 6-4	SSH
hardening 6-8	allowing access through 6-2
requirements for 2-2, 6-4	alternative port 6-2
Password Complexity window	default port 6-2
options 6-9	Streaming Settings window
overview 6-8	options 4-3
port number 1-2	overview 4-1
processes	subnet mask, of IP camera 5-3
descriptions 6-8	Syslog server 7-2
stopping 6-7	
	Т
Q	text overlay, on video 4-8
QoS Settings window	threshold, for motion detection 3-4, 3-5
options 5-7	tilting 3-3
overview 5-7	Time Settings window
quality of service 5-7	options 5-4
	overview EA

```
time stamp, on video 4-8
time zone, of IP camera 5-4
trigger, for event 4-11
U
user, password 6-4
user name, requirements for 6-4
User Settings window
    options 6-4
    overview 6-3
video
    bit rate 4-4
    primary stream 4-1
    quality 4-4
    secondary stream 4-1
    text overlay 4-8
    time stamp on 4-8
    viewing live
        through Home window 3-1
        through third-party device or software 3-1
    See also live video
video codec
    controls in Camera Video/Control window 3-1
    display in Streaming Settings window 4-4
video image
    controls in Camera Video/Control window
                                             3-2
    optimizing for lighting condition 4-5
Video Overlay Settings window
    options 4-8
    overview 4-7
video resolution
    configuration guidelines 4-1
    controls in Camera Video/Control window 3-2
View Video link 1-4
```

zoom
accessing controls 3-5
zoom controls 3-5

Z

Index