



# INDEX

---

## Numerics

### 802.1x window

- EAP-FAST configuration [7-12](#)
- EAP-PEAP configuration [7-11](#)
- EAP-TTLS configuration [7-11](#)
- enable 802.1x [7-11](#)
- EPA-TLS configuration [7-11](#)
- overview [7-10](#)

---

## A

- About link [1-7](#)
- action, triggered by event [4-25, 5-1](#)
- ActiveX controls [1-6](#)
- Administration windows [9-1, 10-1](#)
- alert, trigger types [4-26](#)
- Alert Notification window
  - options [4-26](#)
  - overview [4-25](#)
- app
  - configuring [8-6](#)
  - description [8-1](#)
  - enabling [8-2](#)
  - installing [8-6](#)
  - license, installing [8-5](#)
  - running [8-7](#)
  - stopping [8-8](#)
  - uninstalling [8-8](#)
- App Configuration window
  - options [8-2](#)
  - overview [8-1](#)
- application manager, restoring [8-8](#)

- Application Manager windows [8-1](#)
- App License window
  - options [8-3](#)
  - overview [8-2](#)
- App Setup window
  - options [8-3](#)
  - overview [8-3](#)
- audio, settings [4-18](#)

---

## B

- backing up, configuration of IP camera [9-4](#)
- Basic Settings window
  - options [7-2](#)
  - overview [7-1](#)
- bit rate, of video [4-18](#)
- Bonjour, enabling on camera [7-7](#)
- brightness [3-5](#)
- browsers, supported [1-4](#)

---

## C

- camera settings, controls in Camera Video/Control window [3-4](#)
- Camera Settings window
  - options [4-19](#)
  - overview [4-19](#)
- Camera Video & Control window
  - accessing [3-1](#)
  - description [1-7](#)
  - displaying [1-6](#)
- configuration windows
  - 802.1x window [7-10](#)

accessing [1-2](#)  
 Administration windows [9-1](#)  
 Alert Notification window [4-25](#)  
 App Configuration window [8-1](#)  
 Basic Settings window [7-1](#)  
 Camera Settings window [4-19](#)  
 Device Processes window [9-7](#)  
 Discovery Settings window [7-7](#)  
 Event Notification window [5-1](#)  
 Events windows [5-1](#)  
 Feature Setup windows [4-1](#)  
 Firmware Settings window [9-6](#)  
 History Settings window [5-7](#)  
 History window [5-9](#)  
 Initialization window [9-1](#)  
 IO Ports Settings window [4-24](#)  
 IP Addressing window [7-3](#)  
 IP Filter Settings window [7-12](#)  
 Local Log window [10-4](#)  
 Local Storage window [6-1](#)  
 Log Setup Settings window [10-1](#)  
 Log windows [10-1](#)  
 Maintenance Settings window [9-4](#)  
 Medianet window [7-8](#)  
 Network Setup windows [7-1](#)  
 Password Complexity window [9-8](#)  
 QoS Settings window [7-13](#)  
 SNMP Settings window [7-8](#)  
 Streaming Settings window [4-1](#)  
 Time Settings window [7-5](#)  
 User Settings window [9-3](#)  
 Video Overlay Settings window [4-22](#)  
 configuring app [8-6](#)  
 connecting, to the IP camera  
     after the first time [1-2](#)  
     for the first time [2-1](#)  
     PC requirements for [1-3, 2-1](#)  
     secure connection [1-3](#)  
 contrast [3-5](#)

---

## D

date and time  
     configuring manually [7-5](#)  
     updating through NTP server [7-5](#)  
 day  
     filter [4-19](#)  
     mode [4-19](#)  
 daylight saving time, adjustment for [7-6](#)  
 Device Processes window  
     options [9-8](#)  
     overview [9-7](#)  
 DHCP, obtaining IP address through [2-1, 7-4](#)  
 Differentiated Services (DiffServ) [7-14](#)  
 Discovery Settings window  
     options [7-7](#)  
     overview [7-7](#)  
 DNS server  
     primary [7-4](#)  
     secondary [7-4](#)  
 dual streaming [4-1](#)

---

## E

email notification  
     configuring [5-3, 5-4](#)  
     for alert [4-27](#)  
     From field [4-28, 5-5](#)  
     recipients [4-28, 5-5](#)  
 event  
     actions  
         email notification [5-1](#)  
         FTP notification [5-2](#)  
         HTTP notification [4-26, 5-1](#)  
         output port state change [4-26, 5-1](#)  
         syslog server message [4-26, 5-1](#)  
     notification, from system trigger [5-1](#)  
     trigger types [5-3, 5-8](#)  
 Event Notification window

- options 5-3
- overview 5-1

Events windows 5-1

event triggering, enabling for app 8-7

---

## F

factory default configurations, resetting

- from command line 1-4
- from menu 9-5

factory default configurations, restoring

- from command line 1-4
- from menu 9-5

Feature Setup windows 4-1

- Local Storage 6-1

firmware

- upgrading 9-6, 9-7
- version in IP camera 9-7

Firmware Settings window

- options 9-7
- overview 9-6

focus/zoom, controls 3-10

FTP notification, configuring 5-6

---

## G

gateway, for IP camera 7-4

---

## H

help, for IP camera windows 1-7

History Settings window

- options 5-8
- overview 5-7

History window

- options 5-10
- overview 5-9

Home window

- accessing 1-2
- description 1-4, 1-7
- displaying 1-6

### HTTP

- accessing camera through 1-3
- allowing access through 2-2, 9-2
- default port 9-2
- port 9-2

### HTTPS

- accessing camera through 1-3
- allowing access through 9-2
- default port 9-2
- port 9-2

---

## I

image overlay, on video 4-24

Initialization window

- options 9-2
- overview 9-1

input ports, state change 5-1, 5-7

installing

- app 8-6
- app license 8-5

IO Ports Settings window

- options 4-25
- overview 4-24

IP address

- controlling access by 7-12
- default for IP camera 1-3, 2-1
- fixed 7-4
- obtaining from DHCP server 2-1
- obtaining through DHCP 7-4
- static 7-4

IP Addressing window

- options 7-4
- overview 7-3

IP camera

- accessing through a web browser 1-2, 2-1

- connecting to after the first time [1-2](#)
- connecting to for the first time [2-1](#)
- controlling access to [7-12](#)
- day mode [4-19](#)
- logging in to [1-4](#)
- logging out of [1-7](#)
- MAC address [9-7](#)
- name [7-2](#)
- night mode [4-19](#)
- overview [1-1](#)
- rebooting [9-5](#)
- restarting [9-5](#)
- restoring factory default configurations
  - from command line [1-4](#)
  - from menu [9-5](#)
- time zone [7-6](#)
- windows [1-2, 1-7](#)

#### IP Filter Settings window

- options [7-13](#)
- overview [7-12](#)

---

## L

#### live video

- viewing through home window [3-1](#)
- viewing through third-party device or software [3-1](#)
- See also* video

#### Local [6-1](#)

#### Local Log window

- options [10-4](#)
- overview [10-4](#)

#### Local Storage window, overview [6-1](#)

#### log file

- sending to Syslog server [10-2](#)
- storage of [10-1](#)
- viewing [10-4](#)

#### log in, to IP camera [1-4](#)

#### log out, of IP camera [1-7](#)

#### Log Setup Settings window

- options [10-2](#)
- overview [10-1](#)

---

## M

#### MAC address, of IP camera [9-7](#)

#### Maintenance Settings window

- options [9-5](#)
- overview [9-4](#)

#### Medianet window

- Enable Flow Metadata [7-8](#)
- overview [7-8](#)

#### microphone, use [4-19](#)

#### motion detection

- controls [3-8, 3-11](#)
- enabling [3-8](#)
- sensitivity [3-9](#)

#### multicast

- address [4-17](#)
- enabling [4-17](#)
- port [4-17](#)

---

## N

#### name, of IP camera [7-2, 9-7](#)

#### Network Setup windows [7-1](#)

#### night

- filter [4-19](#)
- mode [4-19](#)

---

## O

#### operating systems, supported [1-3](#)

#### output ports, power on state [4-25](#)

---

**P**

## password

- complexity [9-8](#)
- configuring requirements for [9-8](#)
- for primary SMTP server [5-5](#)
- for secondary SMTP server [5-5](#)
- for SMTP server [4-27](#)
- for user [9-4](#)
- hardening [9-8](#)
- requirements for [2-2, 9-4](#)

## Password Complexity window

- options [9-9](#)
- overview [9-8](#)

port number [1-3](#)

## processes

- descriptions [9-8](#)
- stopping [9-8](#)

profile controls [3-4](#)

---

**Q**

## QoS Settings window

- options [7-13](#)
- overview [7-13](#)

quality of service [7-13](#)

---

**R**rebooting, IP camera [9-5](#)Refresh link [1-6](#)

## resetting, factory default configurations

- from command line [1-4](#)
- from menu [9-5](#)

restarting, IP camera [9-5](#)

## restoring, factory default configurations

- from command line [1-4](#)
- from menu [9-5](#)

---

**S**saturation [3-5](#)secure connection [1-3](#)

## security

- controlling processes [9-8](#)
- password hardening [9-8](#)
- stopping processes [9-8](#)

## Setup window

- description [1-7](#)
- displaying [1-7](#)

sharpness [3-5](#)SNMP, configuring [7-8](#)

## SNMP Settings window

- options [6-2, 7-8](#)
- overview [7-8](#)
- SNMP v2c [7-9](#)
- SNMP v3 [7-9](#)

## SSH

- allowing access through [9-2](#)
- alternative port [9-2](#)
- default port [9-2](#)

statistics, on video [4-23](#)

## Streaming Settings window

- options [4-16](#)
- overview [4-1](#)

subnet mask, of IP camera [7-4](#)Syslog server [10-2](#)

---

**T**text overlay, on video [4-23](#)

## Time Settings window

- options [7-5](#)
- overview [7-5](#)

time stamp, on video [4-23](#)time zone, of IP camera [7-6](#)

## trigger

- for alert [4-26](#)

for event [5-3, 5-8](#)  
system [5-1, 5-7](#)

---

## U

uninstalling app [8-8](#)  
user, password [9-4](#)  
user name, requirements for [9-4](#)  
User Settings window  
    options [9-4](#)  
    overview [9-3](#)

---

## V

video  
    bit rate [4-18](#)  
    codec  
        controls in Camera Video/Control window [3-1](#)  
        display in Streaming Settings window [4-18](#)  
    image, optimizing for lighting condition [4-19](#)  
    image overlay [4-24](#)  
    primary stream [4-1](#)  
    quality [4-18](#)  
    resolution  
        configuration guidelines [4-1](#)  
        controls in Camera Video/Control window [3-1](#)  
    secondary stream [4-1](#)  
    statistics [4-23](#)  
    text overlay [4-23](#)  
    time stamp on [4-23](#)  
    viewing live  
        through Home window [3-1](#)  
        through third-party device or software [3-1](#)  
    *See also* live video  
Video Overlay Settings window  
    options [4-23](#)  
    overview [4-22](#)  
View Video link [1-6](#)