

# Numerics

802.1x window

EAP-FAST configuration 5-11

EAP-PEAP configuration 5-11

EAP-TTLS configuration 5-11

enable 802.1x 5-10

EPA-TLS configuration 5-10

overview 5-10

### Α

About link 1-5 Account Initialization window options 7-2 action triggered by event 4-19 action, triggered by event 4-24 ActiveX controls 1-4 Administration windows 7-1, 8-1 alert, trigger types 4-26 Alert Notification window options 4-26 overview 4-24 app configuring 6-6 description 6-1 enabling 6-1 installing 6-5 license, installing 6-5 running 6-7 stopping 6-7

App Configuration window
options 6-1
overview 6-1
application manager, restoring 6-8
Application Manager windows 6-1
App License window
options 6-2
overview 6-2
App Setup window
options 6-3
overview 6-3
audio
settings 4-13

#### В

backing up, configuration of IP camera 7-4
Basic Settings window
options 5-2
overview 5-1
bit rate, of video 4-13
Bonjour, enabling on camera 5-7
brightness 3-4

## C

camera settings, controls in Camera Video/Control window 3-4

Camera Settings window options 4-15 overview 4-14

Camera Video & Control window accessing 3-1

uninstalling 6-8

description 1-5	contrast 3-4
displaying 1-4	
configuration windows	D
802.1x window <b>5-10</b>	b
accessing 1-2	date and time
Administration windows 7-1	configuring manually 5-5
Alert Notification window 4-24	updating through NTP server 5-5
App Configuration window 6-1	day
Basic Settings window 5-1	filter <b>4-14</b>
Camera Settings window 4-14	mode <b>4-14</b>
Device Processes window 7-7	daylight saving time, adjustment for 5-5
Discovery Settings window 5-6	Device Processes window
Event Notification window 4-18	options 7-8
Feature Setup windows 4-1	overview 7-7
Firmware Settings window 7-6	DHCP, obtaining IP address through 2-1, 5-4
Initialization window 7-1	Differentiated Services (DiffServ) 5-13
IO Ports Settings window 4-17	Discovery Settings window
IP Addressing window 5-3	options 5-7
IP Filter Settings window 5-12	overview <b>5-6</b>
Local Log window 8-4	DNS server
Local Storage window 4-27	primary <b>5-4</b>
Log Setup Settings window 8-1	secondary 5-4
Log windows 8-1	dual streaming 4-1
Maintenance Settings window 7-4	
Medianet window 5-7	<del>_</del>
Network Setup windows 5-1	E
Password Complexity window 7-8	e-mail notification
QoS Settings window 5-13	configuring <b>4-21</b> , <b>4-22</b>
SNMP Settings window 5-8	for alert 4-26, 4-27
Streaming Settings window 4-1	From field 4-23, 4-27
Time Settings window 5-5	recipients 4-22, 4-27
User Settings window 7-3	event
Video Overlay Settings window 4-16	actions
configuring, app 6-6	email notification 4-19, 4-24
connecting, to the IP camera	FTP notification 4-19, 4-25
after the first time 1-2	HTTP notification 4-19, 4-25
for the first time 2-1	output port state change 4-19, 4-24
PC requirements for 1-3, 2-1	syslog server message 4-19, 4-24
secure connection 1-3	·

notification	allowing access through 2-2,7-2
from health trigger 4-24	default port 7-2
from system trigger 4-18	port <b>7-2</b>
trigger types 4-20	HTTPS
Event Notification window	accessing camera through 1-3
options 4-20	allowing access through 7-2
overview 4-18	default port 7-2
event triggering, enabling for app 6-6	port <b>7-2</b>
F	<u>I</u>
factory default configurations, resetting 7-5	Initialization window
factory default configurations, restoring 7-5	overview 7-1
Feature Setup windows 4-1	input ports, state change 4-18
Local Storage 4-27	installing
firmware	app <b>6-5</b>
upgrading 7-6, 7-7	app license 6-5
version in IP camera 7-7	IO Ports Settings window
Firmware Settings window	options 4-18
options 7-7	overview 4-17
overview <b>7-6</b>	IP address
focus and zoom controls 3-8	controlling access by 5-12
FTP notification	default for IP camera 1-3, 2-1
configuring 4-23	fixed 5-4
	obtaining from DCHP server 2-1
	obtaining through DHCP 5-4
G	static 5-4
gateway, for IP camera 5-4	IP Addressing window
	options 5-3
	overview 5-3
Н	IP camera
help, for IP camera windows 1-5	accessing through a web browser 1-2, 2-1
Home window	connecting to after the first time 1-2
accessing 1-2	connecting to for the first time 2-1
description 1-4, 1-5	controlling access to 5-12
displaying 1-4	day mode 4-14
HTTP	logging in to 1-4
accessing camera through 1-3	logging out of 1-4
	MAC address 7-7

Cisco Video Surveillance 7000 Series IP Camera Configuration Guide

name <b>5-2</b>	Maintenance Settings window
night mode 4-14	options 7-5
overview 1-1	overview <b>7-4</b>
rebooting 7-5	Medianet window
restarting 7-5	Enable Flow Metadata 5-8
restoring factory default configurations <b>7-5</b>	overview <b>5-7</b>
time zone 5-5	microphone
windows 1-2, 1-5	use <b>4-14</b>
IP Filter Settings window	motion detection
options 5-12	controls <b>3-7, 3-10</b>
overview 5-12	enabling 3-7
	sensitivity 3-8
	multicast
<b>L</b>	address 4-12
live video	enabling 4-12
viewing	port <b>4-12</b>
through home window <b>3-1</b>	
through third-party device or software 3-1	N
See also video	IN
Local 4-27	name, of IP camera 5-2, 7-7
Local Log window	Network Setup windows 5-1
options 8-4	night
overview 8-4	filter 4-14
Local Storage window, overview 4-27	mode <b>4-14</b>
log file	
sending to Syslog server 8-2	0
storage of 8-1	<b>O</b>
viewing 8-4	output ports
log in, to IP camera 1-4	power on state 4-18
log out, of IP camera 1-4	
Log Setup Settings window	
options 8-2	P
overview 8-1	password
	complexity 7-8
M	configuring requirements for 7-8
<b>171</b>	for primary SMTP server 4-22
MAC address, of IP camera 7-7	for secondary SMTP server 4-22, 4-27
	for SMTP server 4-27

for user 7-4	SNMP, configuring 5-8
hardening 7-8	SNMP Settings window
requirements for 2-2, 7-4	options 4-29, 5-8
Password Complexity window	overview 5-8
options 7-8	SNMP v2c <b>5-8</b>
overview <b>7-8</b>	SNMP v3 <b>5-9</b>
port number 1-3	SSH
processes	allowing access through 7-2
descriptions 7-8	alternative port 7-2
stopping 7-7	default port 7-2
	Streaming Settings window
0	options 4-12
Q	overview 4-1
QoS Settings window	subnet mask, of IP camera 5-4
options 5-13	Syslog server 8-2
overview 5-13	
quality of service 5-13	T
R	text overlay, on video 4-17
••	Time Settings window
rebooting, IP camera 7-5	options <b>5-5</b>
Refresh link 1-4	overview <b>5-5</b>
resetting, factory default configurations 7-5	time stamp, on video 4-17
restarting, IP camera 7-5	time zone, of IP camera 5-5
restoring, factory default configurations 7-5	trigger
	for alert 4-26
<u></u>	health <b>4-24</b>
	system <b>4-18</b>
saturation 3-4	trigger, for event 4-20
secure connection 1-3	
security	U
controlling processes 7-7	
password hardening 7-8	uninstalling app 6-8
stopping processes 7-7	user, password 7-4
Setup window	user name, requirements for 7-3
description 1-5	User Settings window
displaying 1-4	options 7-3
sharpness 3-4	overview <b>7-3</b>

# V

```
video
    bit rate 4-13
    codec, controls in Camera Video/Control
    window 3-1
    primary stream 4-1
    quality 4-13
    resolution, controls in Camera Video/Control
    window 3-1
    secondary stream 4-1
    text overlay 4-17
    time stamp on 4-17
    viewing live
        through Home window 3-1
        through third-party device or software 3-1
    See also live video
video codec
    display in Streaming Settings window 4-13
video image
    optimizing for lighting condition 4-14
Video Overlay Settings window
    options 4-17
    overview 4-16
video resolution, configuration guidelines 4-1
View Video link 1-4
```