

uninstalling 8-8 **Numerics** App Configuration window 802.1x window options 8-2 EAP-FAST configuration 7-12 overview 8-1 EAP-PEAP configuration application manager, restoring EAP-TTLS configuration 7-11 Application Manager windows 8-1 enable 802.1x 7-10 App License window EPA-TLS configuration 7-11 options 8-3 overview 7-10 overview 8-2 App Setup window options 8-3 Α overview 8-3 About link 1-5 audio Account Initialization window settings 4-14 options 9-2 action В triggered by event 4-20 action, triggered by event 5-1 backing up, configuration of IP camera 9-4 ActiveX controls 1-5 Basic Settings window Administration windows 9-1, 10-1 options 7-2 alert overview 7-1 trigger types 4-21 bit rate, of video 4-13 Alert Notification window Bonjour, enabling on camera 7-7 options 4-21 brightness 3-5 overview 4-20 app C configuring 8-6 description 8-1 camera settings, controls in Camera Video/Control window 3-4 enabling 8-2 Camera Settings window installing 8-6 options 4-15 license, installing 8-5 overview 4-14 running 8-7 Camera Video & Control window stopping 8-8

REVIEW DRAFT-CISCO CONFIDENTIAL

accessing 3-1	connecting, to the IP camera	
description 1-5	after the first time 1-2	
displaying 1-5	for the first time 2-1	
configuration windows	PC requirements for 1-2, 2-1	
802.1x window 7-10	secure connection 1-3	
accessing 1-2	contrast 3-5	
Administration windows 9-1		
Alert Notification window 4-20	D	
App Configuration window 8-1	U	
Basic Settings window 7-1	date and time	
Camera Settings window 4-14	configuring manually 7-5	
Device Processes window 9-7	updating through NTP server 7-5	
Discovery Settings window 7-7	day	
Event Notification window 5-1	filter 4-14	
Events windows 5-1	mode 4-14	
Feature Setup windows 4-1	daylight saving time, adjustment for 7-6	
Firmware Settings window 9-6	Device Processes window	
History Settings window 5-7	options 9-8	
History window 5-9	overview 9-7	
Initialization window 9-1	DHCP, obtaining IP address through 2-1,7-4	
IO Ports Settings window 4-19	Differentiated Services (DiffServ) 7-14	
IP Addressing window 7-3	Discovery Settings window	
IP Filter Settings window 7-12	options 7-7	
Local Log window 10-4	overview 7-7	
Local Storage window 6-1	DNS server	
Log Setup Settings window 10-1	primary 7-4	
Log windows 10-1	secondary 7-4	
Maintenance Settings window 9-4	dual streaming 4-1	
Medianet window 7-7		
Network Setup windows 7-1		
Password Complexity window 9-8	E	
QoS Settings window 7-13	email notification	
SNMP Settings window 7-8	configuring 5-4, 5-5	
Streaming Settings window 4-1	for alert 4-21, 4-22	
Time Settings window 7-5	From field 4-22, 5-5	
User Settings window 9-3	recipients 4-22, 5-5	
Video Overlay Settings window 4-17		
configuring, app. 8-6		

event	History Settings window
actions	options 5-8
email notification 5-1	overview 5-7
FTP notification 5-2	History window
HTTP notification 4-20, 5-1	options 5-10
output port state change 4-20, 5-1	overview 5-9
syslog server message 4-20, 5-1	Home window
notification	accessing 1-2
from system trigger 5-1	description 1-4, 1-5
trigger types 5-3, 5-8	displaying 1-5
Event Notification window	НТТР
options 5-3	accessing camera through 1-3
overview 5-1	allowing access through 2-2, 9-2
Events windows 5-1	default port 9-2
event triggering, enabling for app 8-7	port 9-2
	HTTPS
	— accessing camera through 1-3
r	allowing access through 9-2
factory default configurations, resetting 9-5	default port 9-2
factory default configurations, restoring 9-5	port 9-2
Feature Setup windows 4-1	
Local Storage 6-1	·
firmware	I
upgrading 9-6, 9-7	image overlay, on video 4-18, 4-19
version in IP camera 9-7	Initialization window
Firmware Settings window	overview 9-1
options 9-7	input ports, state change 5-1, 5-7
overview 9-6	installing
focus and zoom controls 3-10	app 8-6
FTP notification, configuring 5-6	app license 8-5
	IO Ports Settings window
0	— options 4-20
G	overview 4-19
gateway, for IP camera 7-4	IP address
	controlling access by 7-12
	default for IP camera 1-3, 2-1
Н	fixed 7-4
help, for IP camera windows 1-5	obtaining from DCHP server 2-1
**	obtaining through DHCP 7-4

REVIEW DRAFT-CISCO CONFIDENTIAL

static 7-4	storage of 10-1	
IP Addressing window	viewing 10-4	
options 7-4	log in, to IP camera 1-3	
overview 7-3	log out, of IP camera 1-5	
IP camera	Log Setup Settings window	
accessing through a web browser 1-2, 2-1	options 10-2	
connecting to after the first time 1-2	overview 10-1	
connecting to for the first time 2-1		
controlling access to 7-12	M	
day mode 4-14	141	
logging in to 1-3	MAC address, of IP camera 9-7	
logging out of 1-5	Maintenance Settings window	
MAC address 9-7	options 9-5	
name 7-2	overview 9-4	
night mode 4-14	Medianet window	
overview 1-1	Enable Flow Metadata 7-8	
rebooting 9-5	overview 7-7	
restarting 9-5	microphone, use 4-14	
restoring factory default configurations 9-5	motion detection	
time zone 7-6	controls 3-9, 3-11	
windows 1-2, 1-5	enabling 3-9	
IP Filter Settings window	sensitivity 3-10	
options 7-12	multicast	
overview 7-12	address 4-13	
	enabling 4-13	
L	port 4-13	
live video		
viewing	N	
through home window 3-1	name, of IP camera 7-2, 9-7	
through third-party device or software 3-1	Network Setup windows 7-1	
See also video	night	
Local 6-1	filter 4-14	
Local Log window	mode 4-14	
options 10-4		
overview 10-4		
Local Storage window, overview 6-1		
log file		
sending to Syslog server 10-2		

0	S
output ports	saturation 3-6
power on state 4-20	secure connection 1-3
	security
P	controlling processes 9-7
	password hardening 9-8
password	stopping processes 9-7
complexity 9-8	Setup window
configuring requirements for 9-8	description 1-5
for primary SMTP server 5-5	displaying 1-5
for secondary SMTP server 5-5	sharpness 3-6
for SMTP server 4-22	SNMP, configuring 7-8
for user 9-4	SNMP Settings window
hardening 9-8	options 6-2, 7-8
requirements for 2-2, 9-4	overview 7-8
Password Complexity window	SNMP v2c 7-9
options 9-8	SNMP v3 7-9
overview 9-8	SSH
port number 1-3	allowing access through 9-2
processes	alternative port 9-2
descriptions 9-8	default port 9-2
stopping 9-7	Streaming Settings window
	options 4-12
Q	overview 4-1
u	subnet mask, of IP camera 7-4
QoS Settings window	Syslog server 10-2
options 7-13	
overview 7-13	T
quality of service 7-13	•
	text overlay, on video 4-18
	Time Settings window
R	options 7-5
rebooting, IP camera 9-5	overview 7-5
Refresh link 1-5	time stamp, on video 4-18
resetting, factory default configurations 9-5	time zone, of IP camera 7-6
restarting, IP camera 9-5	trigger
restoring, factory default configurations 9-5	for alert 4-21
	for event 5-8

REVIEW DRAFT-CISCO CONFIDENTIAL

```
system 5-1, 5-7
trigger, for event 5-3
U
uninstalling app 8-8
user, password 9-4
user name, requirements for 9-3
User Settings window
    options 9-3
    overview 9-3
V
video
    bit rate 4-13
    codec, controls in Camera Video/Control
    window 3-2
    codec, display in Streaming Settings window 4-13
    image, optimizing for lighting condition 4-14
    image overlay 4-18, 4-19
    primary stream 4-1
    quality 4-13
    resolution, configuration guidelines 4-1
    resolution, controls in Camera Video/Control
    window 3-2
    secondary stream 4-1
    text overlay 4-18
    time stamp on 4-18
    viewing live
        through Home window 3-1
        through third-party device or software 3-1
    See also live video
Video Overlay Settings window
    options 4-18
    overview 4-17
View Video link 1-5
```