



# Preface

---

This manual describes how to use the Auto Update Server (AUS) application. It is for users who are skilled in network management and configuration, and who are responsible for configuring and maintaining PIX firewalls and Adaptive Security Appliance (ASA) devices.

- [Conventions, page vii](#)
- [Product Documentation, page viii](#)
- [Obtaining Documentation and Submitting a Service Request, page viii](#)

## Conventions

This document uses the following conventions:

Item	Convention
Commands or keywords	<b>boldface</b> font
Variables for which you supply values	<i>italic</i> font
Displayed session and system information	<code>screen</code> font
Selecting a menu item in paragraphs	<b>Option &gt; Network Preferences</b>



### Note

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the publication.



### Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

## Product Documentation

For a list of documentation for the Cisco Security Management Suite, see the documentation roadmap for your product release at <http://www.cisco.com/c/en/us/support/security/security-manager/products-documentation-roadmaps-list.html>.

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation*.

To receive new and revised Cisco technical content directly to your desktop, you can subscribe to the [What's New in Cisco Product Documentation RSS feed](#). The RSS feeds are a free service.