



## INDEX

### A

#### Access Control Server (ACS)

- activating NDG feature [7-15](#)
- adding devices as AAA clients without NDGs [7-13](#)
- adding managed devices [7-13](#)
- adding managed devices and configuring NDGs [7-22](#)
- adding multihomed devices [7-26](#)
- adding users [7-11](#)
- assigning roles to user groups [7-21](#)
- assigning roles to user groups with NDGs [7-22](#)
- assigning roles to user groups without NDGs [7-21](#)
- associating user roles and permissions [7-7](#)
- authentication fails [7-24](#)
- changes not appearing in Security Manager [7-25](#)
- configuring CiscoWorks AAA mode [7-18](#)
- configuring network device groups [7-14](#)
- configuring SMTP and e-mail for notifications [7-20](#)
- creating administration control user [7-16](#)
- creating local users in CiscoWorks [7-17](#)
- creating network device groups [7-15](#)
- customizing user roles [7-6](#)
- default roles [7-6](#)
- defining system identity user [7-11](#)
- devices not appearing in Security Manager [7-25](#)
- integrating with Security Manager [7-8](#)
- integration checklist [7-10](#)
- integration requirements [7-9](#)
- performing integration [7-11](#)
- performing integration in CiscoWorks [7-17](#)
- read-only access for system administrators [7-24](#)
- registering Security Manager [7-19](#)
- reinstalling server applications [4-4](#)

- restarting Daemon Manager [7-20](#)
- restoring access [7-26](#)
- troubleshooting [7-23](#)
- understanding user permissions [7-1](#)
- user permissions [7-2](#)
- using multiple versions of Security Manager [7-23](#)
- working after ACS becomes unreachable [7-25](#)

#### accounts, user

- managing [7-1](#)
- required [4-1](#)

#### antivirus utilities, requirement to disable [3-4](#)

#### applications

- downgrading server [4-19](#)
- installing and configuring client [5-1](#)
- installing and upgrading server [4-1](#)
- logging into [5-9](#)
- required changes after upgrading server [4-14](#)
- uninstalling server [4-18](#)
- upgrading server [4-9](#)

#### approve permissions [7-3](#)

#### approver role [7-4](#)

#### assign permissions [7-3](#)

#### authorization, changes in ACS for devices [7-25](#)

#### Auto Update Server (AUS)

- installing [4-3](#)
- licensing [1-7](#)
- logging into [5-10](#)
- overview [1-2](#)
- required user accounts [4-1](#)
- server requirements [2-3](#)
- uninstalling [4-18](#)
- upgrading [4-9](#)

**B**

## backup

- committing pending data before performing [4-11](#)
- Cygwin limitations [A-5](#)
- database [4-12](#)

backup/restore upgrade path, definition of [4-9](#)back up database [4-12](#)bootstrapping devices [6-4](#)

## browsers

- configuring required settings [5-1](#)
- configuring required settings for Firefox [5-3](#)
- configuring required settings for Internet Explorer [5-2](#)
- logging into applications [5-10](#)
- supported [2-6, 2-8](#)

Bundled Cisco Security Agent, definition of [1-3, B-1](#)**C**

## certificates

- requirement to create [6-1](#)
- troubleshooting [3-4](#)

## Cisco Security Agent (CSA)

- cleaning an unclean agent [B-3](#)
- importing policies into full version [3-2](#)
- installation, conditions for [1-3](#)
- installing [4-3](#)
- logs [B-2](#)
- manually removing [B-4](#)
- overview [1-3](#)
- policies for Bundled Cisco Security Agent [B-1](#)
- security levels [B-2](#)
- troubleshooting [A-15](#)
- uninstalling [B-2](#)
- upgrading [4-9](#)

## Cisco Security Management Suite

- adding applications to home page [4-18](#)

## CiscoWorks Common Services

assigning roles to users [7-5](#)associating user roles and permissions [7-7](#)available user roles [7-4](#)configuring AAA mode [7-18](#)creating administration control user in ACS [7-16](#)creating local user for Cisco Secure ACS [7-17](#)defining system identity user [7-18](#)installing [4-3](#)licensing [1-7](#)logging into [5-10](#)overview [1-1](#)performing integration for Cisco Secure ACS [7-17](#)registering Security Manager with Cisco Secure ACS [7-19](#)required version [1-1](#)understanding user permissions [7-1](#)uninstalling [4-18](#)upgrading [4-9](#)

## client

clearing server list in Login window [A-14](#)log files [A-14](#)operating systems [2-7](#)requirements [2-7](#)troubleshooting after installation [A-12](#)troubleshooting installation [A-9](#)Compatibility View in Internet Explorer 8 [2-6, 2-8](#)control permissions [7-3](#)Cygwin problems during database backup [A-5](#)**D**

## Daemon Manager

- restarting after Cisco Secure ACS integration [7-20](#)

## database

- backing up [4-12](#)
- committing pending data before upgrade [4-11](#)
- restoring [4-13](#)

date and time settings [2-1, 3-4](#)deploy permissions [7-3](#)

## devices

- bootstrapping [6-4](#)
- changes to ACS authorization not appearing in Security Manager [7-25](#)

directory encryption, restriction against [2-4](#)

## documentation

- Common Services [i-xi](#)
- Resource Manager Essentials (RME) [i-xii](#)
- Security Manager, AUS, Performance Monitor [i-xi](#)

domain controllers (primary or backup), unsupported use [2-4](#)

dual-screen setups [A-15](#)

---

**E**

e-mail address, Security Manager administrator [7-20](#)

encrypted directories, restriction against [2-4](#)

## error messages

- client installation [A-9](#)
- server installation [A-4](#)
- server uninstallation [A-8](#)

External Cisco Security Agent, definition of [1-3, B-1](#)

---

**F**

## Firefox

- cache size requirement [5-3](#)
- configuring required settings [5-3](#)
- disabling popup blocker [5-4](#)
- displaying help in new tab [5-4](#)
- editing the preferences file [5-3](#)
- enabling Javascript [5-4](#)
- supported versions [2-6, 2-8](#)

for more information [6-4](#)

---

**H**

help desk user role [7-4](#)

home page, adding applications to [4-18](#)

HTTP, configuring non-default port [5-8](#)

## HTTPS

- configuring non-default port [5-8](#)
- determining mode [A-14](#)

---

**I**

import permissions [7-3](#)

indirect upgrade path, definition of [4-9](#)

## installation

- Performance Monitor [4-5](#)
- RME [4-7](#)
- Security Manager, AUS, Common Services [4-3](#)
- Security Manager client [5-6](#)
- security settings that prevent client [5-7](#)
- troubleshooting client [A-9](#)
- troubleshooting server [A-4](#)
- using remote desktop or VNC [4-2](#)
- verifying [6-3](#)

## Internet Explorer

- cache size requirement [5-2](#)
- configuring required settings [5-2](#)
- security settings [5-2](#)
- supported versions [2-6, 2-8](#)

Internet Explorer 8 Compatibility View [2-6, 2-8](#)

Internet Information Server (IIS), requirement to uninstall [3-3](#)

---

**J**

Java requirements [2-8](#)

---

**L**

language support [2-7](#)

LAN Management Solution (LMS), unsupported use [3-3](#)

LiaisonServlet error, troubleshooting [A-6](#)

## licenses

- effect of upgrade [1-6](#)

- how handled during product upgrade [4-9](#)
- obtaining [1-6](#)
- overview [1-5](#)
- Product Authorization Key (PAK) [1-6](#)
- Security Manager kit part numbers [1-6](#)
- Software License Claim Certificate [1-6](#)
- understanding [1-5](#)
- updating [4-16](#)

local upgrade path, definition of [4-9](#)

log files [A-19](#)

---

## M

memory (RAM)

- client requirements [2-7](#)

modify permissions [7-2](#)

---

## N

Network Access Restriction (NAR) [7-9](#)

network administrator role

- Cisco Secure ACS [7-6](#)

- CiscoWorks [7-4](#)

network device groups (NDGs)

- activating NDG feature [7-15](#)

- associating with roles and user groups [7-22](#)

- configuring [7-14](#)

- creating [7-15](#)

- effect on user permissions [7-14](#)

network operator role [7-4](#)

---

## O

operating systems

- client [2-7](#)

overview [1-1](#)

---

## P

pdshow command [6-2](#)

pending data, committing [4-11](#)

performance

- client recommendations [2-7](#)

- server best practices [3-1](#)

- server recommendations [2-3](#)

Performance Monitor

- installing [4-5](#)

- licensing [1-7](#)

- logging into [5-10](#)

- overview [1-3](#)

- required user accounts [4-1](#)

- server requirements [2-3](#)

- uninstalling [4-18](#)

- updating licenses [4-16](#)

- upgrading [4-9](#)

permanent license, upgrading from evaluation license [1-6](#)

permissions

- assigning roles in CiscoWorks [7-5](#)

- associating with user roles [7-7](#)

- categories [7-2](#)

- customizing for ACS [7-6](#)

- impact of NDGs [7-14](#)

- understanding [7-1](#)

point patches

- applying to a client [5-9](#)

- obtaining [4-17](#)

popup blocker

- disabling [5-5](#)

- disabling for Firefox [5-4](#)

ports

- comprehensive list of required TCP/UDP [A-2](#)

- configuring non-default HTTP/HTTPS [5-8](#)

- list of typically required [2-1](#)

processes

- restarting server [A-18](#)

- troubleshooting [A-18](#)

- verifying [6-2](#)
- product registration [1-6](#)
- property files [4-11](#)

---

## R

- remote desktop, using for installation [4-2](#)
- remote upgrade path, definition of [4-9](#)
- requirements
  - client [2-7](#)
  - data and time settings [2-1, 3-4](#)
  - general server [2-1](#)
  - server [2-3](#)
  - unsupported server configurations [2-4](#)
- Resource Manager Essentials (RME)
  - documentation [i-xii](#)
  - installing [4-7](#)
  - licensing [1-7](#)
  - logging into [5-10](#)
  - required user accounts [4-1](#)
  - server requirements [2-3](#)
  - uninstalling [4-18](#)
  - updating licenses [4-16](#)
  - upgrading [4-9](#)
- restorebackup.pl command [4-13](#)
- restore database [4-13](#)
- roles
  - Cisco Secure ACS users [7-5](#)
  - CiscoWorks users [7-4](#)

---

## S

- Security [1-2](#)
- security
  - server best practices [3-1](#)
  - security administrator role [7-6](#)
  - security approver role [7-6](#)
- Security Manager

- committing pending data before upgrade [4-11](#)
- component applications [1-1](#)
- downgrading server [4-19](#)
- getting started with [6-4](#)
- installing [4-3](#)
- licenses
  - effect on upgrade [1-6](#)
  - obtaining [1-6](#)
  - overview [1-5](#)
  - understanding [1-5](#)
- logging in using browser [5-10](#)
- logging in using client [5-10](#)
- overview [1-2](#)
- related applications [1-4](#)
- required changes after upgrade [4-14](#)
- required user accounts [4-1](#)
- restarting Daemon Manager [7-20](#)
- server requirements [2-3](#)
- service startup requirements [A-1](#)
- troubleshooting interaction with ACS [7-23](#)
- uninstalling server [4-18](#)
- updating licenses [4-16](#)
- upgrading server [4-9](#)

### Security Manager client

- clearing server list in Login window [A-14](#)
- configuring non-default HTTP/HTTPS port [5-8](#)
- determining HTTPS mode [A-14](#)
- handling security settings that prevent installation [5-7](#)
- installing [5-6](#)
- locating client logs [A-14](#)
- logging into [5-10](#)
- patching [5-9](#)
- resolving version mismatch [A-14](#)
- running in dual-screen mode [A-15](#)
- unable to upgrade [5-8](#)
- uninstalling [5-11](#)

### server

- best practices for security [6-3](#)

- date and time settings [2-1, 3-4](#)
- general requirements [2-1](#)
- performance, best practices for enhancing [3-1](#)
- post installation tasks [6-1](#)
- preparation checklists [3-1](#)
- readiness checklist [3-4](#)
- requirements [2-3](#)
- security, best practices for enhancing [3-1](#)
- troubleshooting post-installation problems [A-5](#)
- unsupported configurations [2-4](#)
- verifying processes [6-2](#)

service packs

- applying to a client [5-9](#)
- obtaining [4-17](#)

services, minimum required for Windows [3-3](#)

service startup requirements [A-1](#)

SMTP, configuring for ACS notifications [7-20](#)

SSL certificate invalidation [3-4](#)

submit permissions [7-3](#)

Sybase, requirement to disable [3-4](#)

system administrator role [7-4](#)

system identity user [7-11, 7-18](#)

---

## T

### TACACS+

- selecting as CiscoWorks AAA mode [7-18](#)
- using ACS as [7-8](#)

### TCP

- comprehensive list of required ports [A-2](#)
- list of typically required ports [2-1](#)

Terminal Services, unsupported configuration [2-4](#)

### troubleshooting

- ACS configurations [7-23](#)
- antivirus scanners [3-2](#)
- Cisco Security Agent
  - blocking a valid operation [A-16](#)
  - blocking network access [A-15](#)
  - icon appearance changed in system tray [A-16](#)

- client after installation [A-12](#)
- client installation [A-9](#)
- client installer says old version is installed when it is not [A-12](#)
- collecting server troubleshooting information [A-17](#)
- Cygwin prevents backup [A-5](#)
- dual-screen setups [A-15](#)
- error messages
  - client installation [A-9](#)
  - server installation [A-4](#)
  - server uninstallation [A-8](#)
- host-based intrusion software [3-2](#)
- incorrect interface appearance [A-5](#)
- installation does not run [A-15](#)
- installation hangs [A-5, A-11](#)
- invalid SSL certificate [3-4](#)
- java.security.cert errors [3-4](#)
- LiaisonServlet error [A-6](#)
- mapped drives [A-7](#)
- missing product features [A-5](#)
- overview [A-1](#)
- restarting server processes [A-18](#)
- reviewing installation log files [A-19](#)
- security settings that prevent installation [5-7](#)
- security software conflicts [3-2](#)
- server installation [A-4](#)
- server problems after installation [A-5](#)
- server processes [A-18](#)
- server self-test [A-17](#)
- server uninstall [A-8](#)
- unable to upgrade client [5-8](#)
- uninstallation does not run [A-15](#)
- uninstallation hangs [A-9](#)

typographical conventions in this document [i-x](#)

---

## U

### UDP

- comprehensive list of required ports [A-2](#)

- list of typically required ports [2-1](#)
- uninstallation
  - recommendation to restart servers [4-19](#)
  - Security Manager client [5-11](#)
  - server applications [4-18](#)
  - troubleshooting server [A-8](#)
- upgrade, verifying [6-3](#)
- user accounts
  - admin [4-1](#)
  - casuser [4-1](#)
  - creating [4-1](#)
  - managing [7-1](#)
  - System Identity [4-2](#)
- user permissions
  - assigning roles in CiscoWorks [7-5](#)
  - associating with user roles [7-7](#)
  - categories [7-2](#)
  - customizing for ACS [7-6](#)
  - impact of NDGs [7-14](#)
  - understanding [7-1](#)
- user roles
  - associating with user permissions [7-7](#)
  - available CiscoWorks user roles [7-4](#)
  - Cisco Secure ACS [7-5](#)
  - CiscoWorks [7-4](#)
  - default ACS roles [7-6](#)
- configuring required settings [5-1](#)
- logging into applications [5-10](#)
- supported [2-6, 2-8](#)
- Windows services, required [3-3](#)

---

## V

- version mismatch, resolving [A-14](#)
- view permissions [7-2](#)
- VMware [4-5](#)
- VMWare supported versions [2-6](#)
- VNC, using for installation [4-2](#)

---

## W

- web browsers

