



---

## A

### ACS

integrating with Security Manager [4-5](#)

---

## B

### boot disk

mirroring [3-3](#)

---

## C

### cautions

significance of [ii-ix](#)

conventions [ii-viii](#)

---

## D

### documentation

audience [ii-vii](#)

conventions [ii-viii](#)

ordering [ii-x](#)

related [ii-ix](#)

---

## E

### Ethernet connections

making [3-1](#)

### external storage

connecting to servers [3-2](#)

---

## M

### Microsoft Windows

installing [3-2](#)

---

## O

overview [1-1](#)

---

## P

### permissions

updating on the working volume [3-14](#)

---

## S

### security guidelines

obtaining [ii-x](#)

### Security Manager

backing up [4-6](#)

installation overview [3-6](#)

installing on secondary servers [3-9](#)

installing on the primary server [3-7](#)

manually starting, stopping, failing over [4-3](#)

uninstalling [4-6](#)

upgrading [4-6](#)

### support

obtaining [ii-x](#)

### Symantec Veritas

see Veritas [3-2](#)

### system requirements

hardware, dual-node site [2-2](#)

hardware, single-node site [2-1](#)

---

software, geographic redundancy [2-4](#)  
software, local redundancy [2-3](#)  
software, replication without clustering [2-4](#)  
understanding [2-1](#)

---

## T

### test plans

application failures [B-16](#)  
Ethernet/network failures [B-3](#)  
manual switches [B-1](#)  
server failures [B-10](#)

---

## V

### Veritas Cluster Server

configuring, dual geographic cluster [3-24](#)  
configuring, single local cluster (dual-node) [3-16](#)  
customizing behavior [4-1](#)  
resource views [A-1](#)

### Veritas Products

installing [3-2](#)  
overview [1-5](#)

### Veritas Volume Manager

configuring primary server (without replication) [3-4](#)  
configuring primary servers (with replication) [3-5](#)  
configuring secondary servers [3-6](#)

### Veritas Volume Replicator

configuring [3-12](#)

---

## W

### warnings

significance of [ii-ix](#)

### worksheets

geographic redundancy [2-6](#)  
local redundancy [2-5](#)