

## Wipe Appliance

This chapter describes how to use the Wipe Appliance boot option. It includes the following topics:

- About Wipe Appliance Option, on page 1
- Wipe Appliance Procedure, on page 1
- Wipe and Clusters, on page 3

## **About Wipe Appliance Option**

The Wipe Appliance boot option enables you to wipe the disks on a Threat Grid Appliance to remove all data prior to decommissioning or returning it to the Cisco Demo Loan Program.



**Important** 

After performing the wipe appliance procedure, the Threat Grid Appliance will no longer operate without being returned to Cisco for reimaging.

## **Wipe Appliance Procedure**

Perform the following steps to wipe the appliance:

**Step 1** Reboot your appliance and immediately select **Wipe Appliance** during the 4-second bootup window.

Figure 1: Wipe Appliance Option



- **Step 2** Enter the following information:
  - Username wipe
  - Password I ACCEPT ALL RESPONSIBILITY FOR THIS ACTION
- **Step 3** Select a Wipe option:

Figure 2: Wipe Options




• Wipe (Fast: Zero Disks) - 2.5 hours approximate run time.

- Wipe (3-pass DOD method) 16 hours approximate run time.
- Wipe (Random Overwrite) 12 hours approximate run time.

The **Wipe Finished** window is displayed when the wipe operation is complete.

Figure 3: Wipe Finished

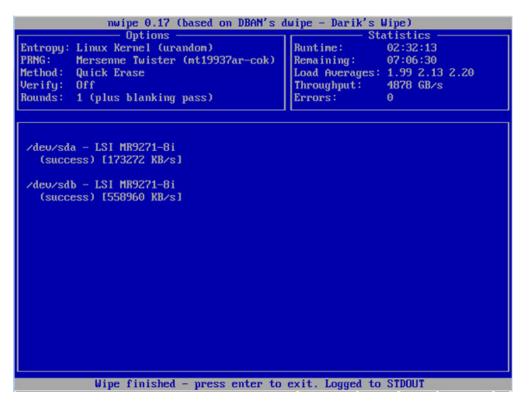

**Step 4** Press **Enter** to exit.

## **Wipe and Clusters**

After performing a wipe operation, the Threat Grid Appliance will no longer operate unless it is returned to Cisco for reimaging. Wipe should only be used on a cluster node after that node has been flagged in OpAdmin as permanently removed. Do not remove a node from a cluster; instead, wipe it and then re-add it. Otherwise, if that node ever becomes master after being re-added, undesirable outcomes may result.

Click the **Remove** button in OpAdmin to inform the system that the node is removed, not just inactive.

Wipe and Clusters