



## About this Guide

---

This guide describes how to install the Cisco AnyConnect Secure Mobility client image onto the central-site ASA, configure AnyConnect for deployment to remote user computers, configure connection profiles and group policies on ASDM for AnyConnect, install AnyConnect onto mobile devices, and monitor and troubleshoot AnyConnect connections.

Throughout this guide, the term “ASA” applies to all models in the Cisco ASA 5500 series (ASA 5505 and higher).

## Audience

This guide is for administrators who perform any of the following tasks:

- Manage network security
- Install and configure ASAs
- Configure VPNs

## Conventions

This document uses the following conventions:

Convention	Indication
<b>bold font</b>	Commands and keywords and user-entered text appear in <b>bold font</b> .
<i>italic font</i>	Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic font</i> .
[ ]	Elements in square brackets are optional.
{ x   y   z }	Required alternative keywords are grouped in braces and separated by vertical bars.
[ x   y   z ]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
<code>courier font</code>	Terminal sessions and information the system displays appear in <code>courier font</code> .
< >	Nonprinting characters such as passwords are in angle brackets.

[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

**Note**

Means *reader take note*.

**Tip**

Means *the following information will help you solve a problem*.

**Caution**

Means *reader be careful*. In this situation, you might perform an action that could result in equipment damage or loss of data.

**Timesaver**

Means *the described action saves time*. You can save time by performing the action described in the paragraph.

## Related Documents

- [AnyConnect Secure Mobility Client 3.0 Release Notes](#)
- [AnyConnect Secure Mobility Client Features, Licenses, and OSs, Release 2.5](#)
- [Cisco ASA 5500 Series Adaptive Security Appliances Release Notes](#)
- [Cisco ASA 5500 Series Adaptive Security Appliances Install and Upgrade Guides](#)
- [Cisco ASA 5500 Series Adaptive Security Appliances Configuration Guides](#)
- [Cisco ASA 5500 Series Adaptive Security Appliances Command References](#)
- [Cisco ASA 5500 Series Adaptive Security Appliances Error and System Messages](#)
- [Cisco Adaptive Security Device Manager Release Notes](#)
- [Cisco Adaptive Security Device Manager Configuration Guides](#)
- [Online help for ASDM](#)
- [Cisco Secure Desktop Release Notes](#)
- [Cisco Secure Desktop Configuration Guides](#)
- For Open Source License information for this product, go to [http://www.cisco.com/en/US/products/ps6120/products\\_licensing\\_information\\_listing.html](http://www.cisco.com/en/US/products/ps6120/products_licensing_information_listing.html).

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.

