

Overview of AsyncOS API for Cisco Web Security Appliances

The AsyncOS API for Cisco Web Security appliances (or AsyncOS API) is a representational state transfer (REST) based set of operations that provide secure and authenticated access to the Web Security appliance reports, report counters, and tracking. You can retrieve the Web Security appliance reporting and tracking data using the API. In this release you can query for configuration information.

Note You can configure the Web Security appliance by using Cisco Content Security Management appliance and REST API. If you use both the methods to configure the Web Security appliance, the configurations done by the previous method will be overwritten.

This chapter contains the following sections:

- Prerequisites for Using AsyncOS API, on page 1
- Enabling AsyncOS API, on page 2
- Securely Communicating with AsyncOS API, on page 2
- AsyncOS API Authentication and Authorization, on page 3
- AsyncOS API Requests and Responses, on page 5
- AsyncOS API Capabilities, on page 8

Prerequisites for Using AsyncOS API

To use AsyncOS API, you must have the knowledge of:

- HTTP, which is the protocol used for API transactions. Secure communication over TLS.
- JavaScript Object Notation (JSON), which the API uses to construct resource representations.
- JSON Web Token (JWT).
- A client or programming library that initiates requests and receives responses from the AsyncOS API using HTTP or HTTPS, for example, cURL. The client or programming library must support JSON to interpret the response from the API.
- Authorization to access the AsyncOS API. See Authorization, on page 4.

• AsyncOS API enabled using web interface or CLI. See Enabling AsyncOS API, on page 2.

Enabling AsyncOS API

Before You Begin

Make sure you have access to the interfaceconfig command in CLI. Access to CLI is restricted only to the authorized personnels who are administrators, email administrators, cloud administrators, and operators.

You can enable AsyncOS API using the interfaceconfig command in CLI.

- **Step 1** Log in to CLI and run the interfaceconfig command.
- **Step 2** Choose the interface that you want to edit.
- **Step 3** Answer the following questions to enable AsyncOS API (Monitoring) HTTP:
 - Do you want to enable AsyncOS API (Monitoring) HTTP on this interface? [Y]> Enter Y.
 - Which port do you want to use for AsyncOS API (Monitoring) HTTP?[6080]> Enter the default port 6080 or the port you want to define.
- **Step 4** Answer the following questions to enable AsyncOS API (Monitoring) HTTPS:
 - Do you want to enable AsyncOS API (Monitoring) HTTPS on this interface? [Y] > Enter Y.
 - Which port do you want to use for AsyncOS API (Monitoring) HTTPS?[6443]> Enter the default port 6443 or the port you want to define.
 - **Note** AsyncOS API communicates using HTTP / 1.1.

If you have selected HTTPS and want to use your own certificate for secure communication, see Securely Communicating with AsyncOS API, on page 2.

- **Note** Cisco recommends that you always use HTTPS in the production environment. Use HTTP only for troubleshooting and testing the API.
- **Step 5** Commit the changes.

Securely Communicating with AsyncOS API

You can communicate with AsyncOS API over secure HTTP using your own certificate.



Note Do not perform this procedure if you are already running the web interface over HTTPS and using your own certificate for secure communication. AsyncOS API uses the same certificate as web interface, for communicating over HTTPS.

Step 1 Set up a certificate using the certconfig command in the CLI. For instructions, refer the User Guide or Online Help.

- Step 2Change the HTTPS certificate used by the IP interface to your certificate using the interfaceconfig command in CLI.
For instructions, refer the User Guide or Online Help.
- **Step 3** Submit and commit your changes.

AsyncOS API Authentication and Authorization

This section explains about the authentication methods, the user roles which can access APIs, and how to query for APIs accessible to a user.

- Authentication, on page 3
- Authorization, on page 4

Authentication

You can authenticate queries to the API using either of the following two methods:

- Submit the Web Security appliance's username and password with all the requests to the API, in the Base64-encoded format. OR
- Use JWT token in API request with the token key in the header.

The user inactivity timeout settings in the appliance apply to the validity of a JWT. If a request does not include a valid credentials in the Authorization header, the API sends a 401 error message. You can use any base64 library to convert your credentials into base64-encoded format.

Authenticating API Queries with JSON Web Token

You can generate a JSON Web Token (JWT) and use it with your API queries.



Note

The user inactivity timeout settings in the appliance applies to the validity of a JWT. The Web Security appliance checks every API query with a JWT, for its time validity. If a JWT is found to be within 5 minutes of time validity, after which it will time out, a new refresh JWT is sent with the response header. You must use this new refresh JWT with API queries, or generate a new one.

Synopsis	POST /wsa/api/v2.0/login			
	Use the syntax below for two factor authentications:			
	POST /wsa/api/v2.0/login/two_factor			
Body	Use Base64 encoded credentials.			
Parameters	<pre>{ "data": { "userName":"YWRtaW4=", "passphrase":"aXJvbnBvcnQ=" } }</pre>			

Request Headers	Host, Accept, Authorization
Response Headers	Content-Type, Content-Length, Connection

This example shows a query to log in with Base64 encoded credentials, and generate a JWT.

Sample Request

```
POST /wsa/api/v2.0/login
HTTP/1.1
Content-Type: application/json
cache-control: no-cache
User-Agent: curl/7.54.0
Accept: */*
Host: wsa.cisco.com:6080
accept-encoding: gzip, deflate
content-length: 95
Connection: keep-alive
    "data":
    {
        "userName":"YWRtaW4=",
        "passphrase":"aXJvbnBvcnQ="
    }
}
```

Sample Response

```
HTTP/1.1 200 OK
Server: API/2.0
Date: Mon, 26 Nov 2018 07:22:47 GMT
Content-type: application/json
Content-Length: 618
Connection: close
Access-Control-Allow-Origin: *
Access-Control-Allow-Headers: content-type, jwttoken, mid, h, email
Access-Control-Allow-Credentials: true
Access-Control-Allow-Methods: GET, POST, DELETE, OPTIONS
Access-Control-Expose-Headers: Content-Disposition, jwtToken
    "data": {
        "userName": "admin",
        "is2FactorRedirectRequired": "false",
        "role": "Administrator",
        "email": [],
        "jwtToken": "eyJhbGciOiJIUzI1NiISInR5cCI6IkpXVCJ9.eyJ1c2VyTmFtZSI6ImFkbWluIiwiaXM
         yRmFjdG9yQ2hlY2tSZXF1aXJ1ZCI6ZmFsc2UsImNvb2tpZSI6IlRucEZOVTFFWTNwT1ZFMD1DanRMYVR
         oeENqdFpiV1J6VFVSQk5VMURNWGRpTWxGMVdUSnNlbGt5T0hWWk1qbDBUMnBaZDA5RVFUMEtcbk8xVkh
         PWHBrUnpGbllteEtNV0plVW5CaVYxVjJUbmswTUV4cVFUMEtPMVJVUlhkTlJsazNUVlJKZFUxRE5IZE1
         WRWw1VFdwek1FMXFcblNUVlNhazVDVDBWRk1rOUVaM2xTUlVreVRYcGtSazFwTVVSTlZFMHpUbFZXUjA1
    }
}
```

Authorization

The AsyncOS API is a role based system, the scope of API queries is defined by the role of the user. Cisco Web Security appliance users with the following roles can access the AsyncOS API:

- Administrator
- Operator
- Technician
- · Read-Only Operator
- Guest
- · Web Administrator
- Web Policy Administrator
- URL Filtering Administrator
- · Email Administrator
- Help Desk User



Note

• Externally authenticated users can access the API.

• Custom roles, delegated by the administrator can also access the APIs.

AsyncOS API Requests and Responses

Note

For complete list of APIs, see AsyncOS 12.5 API - Addendum to the Getting Started Guide for Cisco Web Security Appliances.

AsyncOS API Requests

Requests made to the API have the following characteristics:

- Requests are sent over HTTP or HTTPS.
- Each request must contain a valid URI in the following format:

```
http://{appliance}:{port}/wsa/api/v2.0/{resource}/{resource attributes}
```

https://{appliance}:{port}/wsa/api/v2.0/{resource}/{resource attributes}

where:

• {appliance}: {port}

is the FQDN or the IP address of the appliance and the TCP port number on which the appliance is listening.

• {resource}

is the resource you are attempting to access, for example, reports, tracking, quarantine, configuration, or other counters.

• {resource_attributes}

are the supported attributes for a resource, for example, duration, and so on.

- Each request must contain user credentials, or a valid authorization header.
- Each request must be set to accept:

application/json

• Requests sent over HTTPS (using your own certificate) must contain your CA certificate. For example, in case of cURL, you can specify the CA certificate in the API request as follows:

```
curl --cacert <ca_cert.crt> -u"username:password"
https://<fqdn>:<port>/wsa/api/v2.0/{resource}/{resource_attributes}
```



API requests are case sensitive and should be entered as shown in this guide.

AsyncOS API Responses

This section explains the key components of the responses, and various HTTP error codes.

- Key Components of Responses, on page 6
- HTTP Response Codes, on page 7

Key Components of Responses

Components		Values	Description
Status Code and Reason		See HTTP Response Codes, on page 7.	HTTP response code and the reason.
Message Header	Content-Type	application/json	Indicates the format of the message body.
	Content-Length	n/a	The length of the response body in octets.
	Connection	close	Options that are desired for the connection.

Components	Values		Description	
Message Body	n/a	The message body is in the format defined by the Content-Type header. The following are the components of the message body:		
		1.	URI. The URI you specified in the request to the API.	
			Example	
			:"/api/v2.0/config/"	
		2.	Counter group and/or counter name	
			Example	
			reporting/mail_security_summary	
		3.	Query parameters	
			Example	
			startDate=2017-01-30T00:00:00.000Z&endDate=2018-01- 30T14:00:00.000Z	
		4.	Error (Only for Error Events). This component includes three subcomponents—message, code, and explanation.	
			Example	
			"error": {"message": "Unexpected attribute	
			- starts_with.","code": "404", "explanation": "404 = Nothing matches the given URI."}	
			If the message body contains empty braces ({}), it means that the API could not find any records matching the query.	
		Not	totalCount is the number of data objects that are returned in a dataset (for results that are displayed as table format in the UI). For other queries, it returns -1 by default.	

HTTP Response Codes

The following is a list of HTTP response codes returned by AsyncOS API:

- 200
- 202
- 300
- 301
- 307

- 400
- 401
- 403
- 404
- 406
- 413
- 414
- 500
- 501
- 503
- 505

For descriptions of these HTTP response codes, refer the following RFCs:

- RFC1945
- RFC7231

AsyncOS API Capabilities

You can use the AsyncOS API to retrieve information in the following categories:

- APIs for Web
- General Purpose APIs