



Preface

This preface describes the purpose, audience, organization, and conventions used in the *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Installation and Configuration Guide*. It also provides information on the related documentation.

- [Audience, page iv](#)
- [Organization, page iv](#)
- [Document Conventions, page v](#)
- [Related Documentation, page vi](#)

Audience

This guide is for experienced system administrators who install and configure the Cisco Connected Grid Design Suite (CGDS) application in an Electrical Substation. This document contains instructions for installing and configuring the Cisco Connected Grid Design Suite - Substation Workbench product on servers and client computers.

The skill set and information required for the installation of the CGDS Designer and CGDS Monitor are specified as prerequisites in the respective chapters.

Organization

Chapter Number	Chapter Title	Description
Chapter 1	Getting Started	Provides an overview of the Cisco Connected Grid Design Suite (CGDS) application.
Chapter 2	Installing and Configuring the CGDS Monitor	Provides information on how to install and configure the CGDS Monitor.
Chapter 3	Installing and Configuring the CGDS Designer	Provides information on how to install and configure the CGDS Designer.

Document Conventions

Convention	Indication
bold font	Commands and keywords and user-entered text appear in bold font .
<i>italic font</i>	Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic font</i> .
[]	Elements in square brackets are optional.
{x y z }	Required alternative keywords are grouped in braces and separated by vertical bars.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
<code>courier font</code>	Terminal sessions and information the system displays appear in <code>courier font</code> .
bold courier font	Information you enter appears in bold courier font .
<i>italic courier font</i>	Variables for which you must supply a value are shown in <i>italic courier font</i> .
Option > Option	Used to describe a series of menu options.
< >	Nonprinting characters such as passwords are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.



Note

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.



Caution

Means *reader be careful*. In this situation, you might perform an action that could result in equipment damage or loss of data.

Send documentation feedback to cgds-docfeedback@cisco.com

Related Documentation

- *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Release 1.5 Release Notes*
- *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Quick Start Guide*
- *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Designer User Guide*
- *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Monitor User Guide*
- *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Troubleshooting Guide*

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation* at: <http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>.

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation, as an RSS feed and deliver content directly to your desktop using a reader application. The RSS feeds are a free service.