



## Preface

---

This preface describes the purpose, audience, organization, and conventions that are used in the *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Monitor User Guide*, and provides information on the related documentation.

- [Purpose, page v](#)
- [Audience, page v](#)
- [Organization, page vi](#)
- [Document Conventions, page vi](#)
- [Related Documentation, page vii](#)
- [Obtaining Documentation and Submitting a Service Request, page vii](#)

## Purpose

This guide describes how to use and configure the Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Monitor (CGDS Monitor).

## Audience

This guide is intended for the users who use and configure the CGDS Monitor.

## Organization

Chapter Number	Chapter Title	Description
<a href="#">Chapter 1</a>	<a href="#">Getting Started</a>	Provides an overview of the CGDS Monitor. It also describes how to log in, manage your password, and log out of the CGDS Monitor.
<a href="#">Chapter 2</a>	<a href="#">Managing Users</a>	Provides information on the user management tasks that administrators can perform in the CGDS Monitor, such as creating users and assigning the administrative privileges to them, changing the user password, modifying the user details, and deleting users from the application.
<a href="#">Chapter 3</a>	<a href="#">Monitoring the Substation Network</a>	Provides information on monitoring the integrated substation LAN.
<a href="#">Chapter 4</a>	<a href="#">Configuring the CGDS Monitor Settings</a>	Provides information on the configuration tasks that administrators can perform in the CGDS Monitor, such as defining a time-period for the value analysis, managing the packet captures, and configuring the alarm counts.

## Document Conventions

Convention	Indication
<b>bold font</b>	Commands and keywords and user-entered text appear in <b>bold font</b> .
<i>italic font</i>	Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic font</i> .
[ ]	Elements in square brackets are optional.
{ x   y   z }	Required alternative keywords are grouped in braces and separated by vertical bars.
[ x   y   z ]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
courier font	Terminal sessions and information the system displays appear in <i>courier font</i> .
<b>courier bold font</b>	Command names and samples appear in <b>Courier Bold font</b> .

**Send documentation feedback to [cgds-docfeedback@cisco.com](mailto:cgds-docfeedback@cisco.com)**

< >	Nonprinting characters such as passwords are in angle brackets.
Option > Option	Used to describe a series of menu options.



**Note**

Means *reader take note*. Notes contain helpful suggestions or references to materials not covered in the manual.

## Related Documentation

- *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Release 1.5 Release Notes*
- *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Quick Start Guide*
- *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Installation and Configuration Guide*
- *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Designer User Guide*
- *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Troubleshooting Guide*

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation* at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>.

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation, as an RSS feed and deliver content directly to your desktop using a reader application. The RSS feeds are a free service.

---

***Send documentation feedback to [cgds-docfeedback@cisco.com](mailto:cgds-docfeedback@cisco.com)***