



Preface

This preface describes the audience, organization, and conventions that are used in the *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Troubleshooting Guide*, and provides information about the related documentation.

- [Audience, page v](#)
- [Organization, page v](#)
- [Document Conventions, page vi](#)
- [Related Documentation, page vi](#)

Audience

This guide is meant for users who use and configure the CGDS Designer and Monitor, and system administrators who install and configure the Cisco Connected Grid Design Suite (CGDS) application in an Electrical Substation.

Organization

Chapter Number	Chapter Title	Description
Chapter 1	Troubleshooting	Provides the solutions to the problems that you could encounter when running the Cisco Connected Grid Design Suite - Substation Workbench (CGDS Substation Workbench).

Document Conventions

Convention	Indication
bold font	Commands and keywords and user-entered text appear in bold font .
<i>italic font</i>	Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic font</i> .
[]	Elements in square brackets are optional.
{ x y z }	Required alternative keywords are grouped in braces and separated by vertical bars.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
<code>courier font</code>	Terminal sessions and information the system displays appear in <code>courier font</code> .
< >	Nonprinting characters such as passwords are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.
Option > Option	Used to describe a series of menu options.



Note

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.

Related Documentation

- *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Release 1.5 Release Notes*
- *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Quick Start Guide*
- *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Designer User Guide*
- *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Monitor User Guide*
- *Cisco Connected Grid Design Suite (CGDS) - Substation Workbench Installation and Configuration Guide*

Send documentation feedback to cgds-docfeedback@cisco.com

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation* at:
<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>.

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation, as an RSS feed and deliver content directly to your desktop using a reader application. The RSS feeds are a free service.

Send documentation feedback to cgds-docfeedback@cisco.com