



## INDEX

---

### A

aaa accounting dot1x command [2-1](#)  
aaa authentication dot1x command [2-3](#)  
aaa authorization network command [2-5](#)  
AAA methods [2-3](#)  
abort command [2-560](#)  
access control entries  
    See ACEs  
access control lists  
    See ACLs  
access groups  
    IP [2-104](#)  
    MAC, displaying [2-356](#)  
access map configuration mode [2-180](#)  
access mode [2-512](#)  
access ports [2-512](#)  
ACEs [2-56](#), [2-242](#)  
ACLs  
    deny [2-54](#)  
    displaying [2-274](#)  
    for non-IP protocols [2-160](#)  
    IP [2-104](#)  
    matching [2-180](#)  
    on Layer 2 interfaces [2-104](#)  
    permit [2-240](#)  
action command [2-6](#)  
address aliasing [2-231](#)  
aggregate-port learner [2-236](#)  
allowed VLANs [2-526](#)  
apply command [2-560](#)  
archive download-sw command [2-8](#)  
archive tar command [2-11](#)

archive upload-sw command [2-14](#)  
audience [xv](#)  
authentication failed VLAN  
    See dot1x auth-fail vlan  
auth-fail max-attempts  
    See dot1x auth-fail max-attempts  
auth-fail vlan  
    See dot1x auth-fail vlan  
authorization state of controlled port [2-80](#)  
autonegotiation of duplex mode [2-87](#)  
auto qos voip command [2-16](#)

---

### B

BackboneFast, for STP [2-450](#)  
backup interfaces  
    configuring [2-507](#)  
    displaying [2-323](#)  
boot (boot loader) command [A-2](#)  
boot bootlpr command [2-20](#)  
boot config-file command [2-21](#)  
boot enable-break command [2-22](#)  
boot helper command [2-23](#)  
boot helper-config file command [2-24](#)  
booting  
    Cisco IOS image [2-27](#)  
    displaying environment variables [2-281](#)  
    interrupting [2-22](#)  
    manually [2-25](#)  
boot loader  
    accessing [A-1](#)

**boot loader (continued)**

## booting

Cisco IOS image [A-2](#)helper image [2-23](#)

## directories

creating [A-15](#)displaying a list of [A-7](#)removing [A-19](#)

## displaying

available commands [A-12](#)memory heap utilization [A-14](#)version [A-26](#)

## environment variables

described [A-20](#)displaying settings [A-20](#)location of [A-21](#)setting [A-20](#)unsetting [A-24](#)

## files

copying [A-5](#)deleting [A-6](#)displaying a list of [A-7](#)displaying the contents of [A-4, A-16, A-23](#)renaming [A-17](#)

## file system

formatting [A-10](#)initializing flash [A-9](#)running a consistency check [A-11](#)loading helper images [A-13](#)resetting the system [A-18](#)boot manual command [2-25](#)boot private-config-file command [2-26](#)boot system command [2-27](#)BPDU filtering, for spanning tree [2-451, 2-484](#)BPDU guard, for spanning tree [2-453, 2-484](#)broadcast storm control [2-502](#)**C**cat (boot loader) command [A-4](#)caution, description [xvi](#)channel-group command [2-28](#)channel-protocol command [2-31](#)

## Cisco SoftPhone

auto-QoS configuration [2-16](#)trusting packets sent from [2-222](#)class command [2-32](#)class-map command [2-34](#)

## class maps

creating [2-34](#)defining the match criteria [2-182](#)displaying [2-285](#)

## class of service

See CoS

clear dot1x command [2-36](#)clear eap sessions command [2-37](#)clear errdisable interface [2-38](#)clear ip dhcp snooping database command [2-39](#)clear lacp command [2-41](#)clear mac address-table command [2-42, 2-43](#)clear pagp command [2-44](#)clear port-security command [2-45](#)clear spanning-tree counters command [2-47](#)clear spanning-tree detected-protocols command [2-48](#)clear vmps statistics command [2-49](#)clear vtp counters command [2-50](#)

## clusters

SNMP trap [2-441](#)command modes defined [1-1](#)

## configuration, initial

See getting started guide and hardware installation guide

## configuration files

password recovery disable considerations [A-1](#)specifying the name [2-21, 2-26](#)configuring multiple interfaces [2-101](#)

- config-vlan mode
    - commands [2-547](#)
    - description [1-4](#)
    - entering [2-546](#)
    - summary [1-2](#)
  - conventions
    - command [xv](#)
    - for examples [xvi](#)
    - publication [xv](#)
    - text [xv](#)
  - copy (boot loader) command [A-5](#)
  - CoS
    - assigning default value to incoming packets [2-192](#)
    - overriding the incoming value [2-192](#)
  - CoS-to-DSCP map [2-196](#)
  - CPU ASIC statistics, displaying [2-286](#)
  - crashinfo files [2-94](#)
- 
- D**
- debug auto qos command [28](#)
  - debug backup command [30](#)
  - debug dot1x command [31](#)
  - debug dtp command [32](#)
  - debug eap command [33](#)
  - debug etherchannel command [34](#)
  - debug interface command [35](#)
  - debug ip igmp filter command [36](#)
  - debug ip igmp max-groups command [37](#)
  - debug ip igmp snooping command [38](#)
  - debug lacp command [39](#)
  - debug mac-notification command [40](#)
  - debug matm command [41](#)
  - debug matm move update command [42](#)
  - debug monitor command [43](#)
  - debug mvrdbg command [44](#)
  - debug nvram command [45](#)
  - debug pagp command [46](#)
  - debug platform acl command [47](#)
  - debug platform backup interface command [48](#)
  - debug platform cpu-queues command [49](#)
  - debug platform dot1x command [51](#)
  - debug platform etherchannel command [52](#)
  - debug platform forw-tcam command [53](#)
  - debug platform ip dhcp command [54](#)
  - debug platform ip igmp snooping command [55](#)
  - debug platform led command [57](#)
  - debug platform matm command [58](#)
  - debug platform messaging application command [59](#)
  - debug platform phy command [60](#)
  - debug platform pm command [62](#)
  - debug platform port-asic command [64](#)
  - debug platform port-security command [65](#)
  - debug platform qos-acl-tcam command [66](#)
  - debug platform remote-commands command [67](#)
  - debug platform resource-manager command [68](#)
  - debug platform snmp command [69](#)
  - debug platform span command [70](#)
  - debug platform supervisor-asic command [71](#)
  - debug platform sw-bridge command [72](#)
  - debug platform tcam command [73](#)
  - debug platform udd command [75](#)
  - debug platform vlan command [76](#)
  - debug pm command [77](#)
  - debug port-security command [79](#)
  - debug qos-manager command [80](#)
  - debug spanning-tree backbonefast command [83](#)
  - debug spanning-tree bpdu command [84](#)
  - debug spanning-tree bpdu-opt command [85](#)
  - debug spanning-tree command [81](#)
  - debug spanning-tree mstp command [86](#)
  - debug spanning-tree switch command [88](#)
  - debug spanning-tree uplinkfast command [90](#)
  - debug sw-vlan command [91](#)
  - debug sw-vlan ifs command [93](#)
  - debug sw-vlan notification command [94](#)
  - debug sw-vlan vtp command [95](#)
  - debug udd command [97](#)

- debug vqpc command 99
  - define interface-range command 2-51
  - delete (boot loader) command A-6
  - delete command 2-53
  - deny command 2-54
  - detect mechanism, causes 2-89
  - device manager requirements xvi
  - DHCP snooping
    - accepting untrusted packets from edge switch 2-114
    - enabling
      - on a VLAN 2-121
      - option 82 2-112, 2-114
      - trust on an interface 2-119
    - error recovery timer 2-91
    - rate limiting 2-118
  - DHCP snooping binding database
    - bindings
      - displaying 2-336
    - clearing database agent statistics 2-39
    - displaying
      - binding entries 2-336
      - database agent status 2-338
  - dir (boot loader) command A-7
  - directories, deleting 2-53
  - documentation, related xvi
  - document conventions xv
  - domain name, VTP 2-569, 2-573
  - dot1x auth-fail max-attempts 2-59
  - dot1x auth-fail vlan 2-61
  - dot1x command 2-57
  - dot1x control-direction command 2-63
  - dot1x critical global configuration command 2-65
  - dot1x critical interface configuration command 2-67
  - dot1x default command 2-69
  - dot1x fallback command 2-70
  - dot1x guest-vlan command 2-71
  - dot1x host-mode command 2-73
  - dot1x initialize command 2-74
  - dot1x mac-auth-bypass command 2-75
  - dot1x max-reauth-req command 2-77
  - dot1x max-req command 2-78
  - dot1x pae command 2-79
  - dot1x port-control command 2-80
  - dot1x re-authenticate command 2-82
  - dot1x reauthentication command 2-83
  - dot1x timeout command 2-84
  - dropping packets, with ACL matches 2-6
  - DSCP-to-CoS map 2-196
  - DSCP-to-DSCP-mutation map 2-196
  - DTP 2-513
  - DTP flap
    - error detection for 2-89
    - error recovery timer 2-91
  - DTP negotiation 2-514
  - dual-purpose uplink ports
    - selecting the type 2-186
  - duplex command 2-87
  - dynamic-access ports
    - configuring 2-505
    - restrictions 2-505
  - dynamic auto VLAN membership mode 2-512
  - dynamic desirable VLAN membership mode 2-512
  - Dynamic Host Configuration Protocol (DHCP)
    - See DHCP snooping
  - Dynamic Trunking Protocol
    - See DTP
- 
- E**
  - EAP-request/identity frame
    - maximum number to send 2-78
    - response time before retransmitting 2-84
  - encapsulation methods 2-526
  - environment variables, displaying 2-281
  - errdisable detect cause command 2-89
  - errdisable recovery command 2-91
  - error conditions, displaying 2-312
  - error disable detection 2-89

error-disabled interfaces, displaying [2-323](#)

EtherChannel

- assigning Ethernet interface to channel group [2-28](#)
- creating port-channel logical interface [2-99](#)
- debug EtherChannel/PAGP, display [34](#)
- debug platform-specific events, display [52](#)
- displaying [2-316](#)
- interface information, displaying [2-323](#)

LACP

- clearing channel-group information [2-41](#)
- debug messages, display [39](#)
- displaying [2-350](#)
- modes [2-28](#)
- port priority for hot-standby ports [2-148](#)
- restricting a protocol [2-31](#)
- system priority [2-150](#)

load-distribution methods [2-250](#)

PAGP

- aggregate-port learner [2-236](#)
- clearing channel-group information [2-44](#)
- debug messages, display [46](#)
- displaying [2-400](#)
- error detection for [2-89](#)
- error recovery timer [2-91](#)
- learn method [2-236](#)
- modes [2-28](#)
- physical-port learner [2-236](#)
- priority of interface for transmitted traffic [2-238](#)

Ethernet controller, internal register display [2-288](#)

Ethernet statistics, collecting [2-261](#)

examples, conventions for [xvi](#)

exception crashinfo command [2-94](#)

exit command [2-560](#)

extended-range VLANs

- and allowed VLAN list [2-526](#)
- and pruning-eligible list [2-526](#)
- configuring [2-546](#)

extended system ID for STP [2-459](#)

---

## F

fallback profile command [2-95](#)

fallback profiles

- displaying [2-319](#)

file name, VTP [2-569](#)

files, deleting [2-53](#)

flash\_init (boot loader) command [A-9](#)

Flex Links

- configuring [2-507](#)
- displaying [2-323](#)

flowcontrol command [2-97](#)

format (boot loader) command [A-10](#)

forwarding packets, with ACL matches [2-6](#)

forwarding results, display [C-6](#)

frame forwarding information, displaying [C-6](#)

fsck (boot loader) command [A-11](#)

---

## G

global configuration mode [1-2, 1-3](#)

---

## H

hardware ACL statistics [2-274](#)

help (boot loader) command [A-12](#)

hierarchical policy maps [2-248](#)

host connection, port configuration [2-511](#)

---

## I

IEEE 802.1x

- and switchport modes [2-513](#)
- violation error recovery [2-91](#)
- See also port-based authentication

IEEE 802.1X Port Based Authentication

- enabling guest VLAN supplicant [2-60, 2-70, 2-96](#)

## IGMP filters

- applying [2-124](#)
- debug messages, display [36](#)

IGMP groups, setting maximum [2-126](#)IGMP maximum groups, debugging [37](#)

## IGMP profiles

- creating [2-128](#)
- displaying [2-341](#)

## IGMP snooping

- adding ports as a static member of a group [2-144](#)
- displaying [2-342, 2-346, 2-348](#)
- enabling [2-130](#)
- enabling the configurable-leave timer [2-132](#)
- enabling the Immediate-Leave feature [2-141](#)
- flooding query count [2-138](#)
- interface topology change notification behavior [2-140](#)
- multicast table [2-344](#)
- querier [2-134](#)
- query solicitation [2-138](#)
- report suppression [2-136](#)
- switch topology change notification behavior [2-138](#)

## images

See software images

Immediate-Leave feature, MVR [2-233](#)immediate-leave processing [2-141](#)

## initial configuration

See getting started guide and hardware installation guide

interface configuration mode [1-2, 1-4](#)interface port-channel command [2-99](#)interface range command [2-101](#)interface-range macros [2-51](#)

## interfaces

- assigning Ethernet interface to channel group [2-28](#)
- configuring [2-87](#)
- configuring multiple [2-101](#)
- creating port-channel logical [2-99](#)
- debug messages, display [35](#)
- disabling [2-439](#)

**interfaces (continued)**

- displaying the MAC address table [2-368](#)
- restarting [2-439](#)

interface speed, configuring [2-494](#)interface vlan command [2-103](#)internal registers, displaying [2-288, 2-296](#)

## Internet Group Management Protocol

See IGMP

## invalid GBIC

- error detection for [2-89](#)
- error recovery timer [2-91](#)

ip access-group command [2-104](#)ip address command [2-106](#)IP addresses, setting [2-106](#)IP address matching [2-180](#)ip admission command [2-108](#)ip admission name proxy http command [2-109](#)

## IP DHCP snooping

See DHCP snooping

ip dhcp snooping command [2-111](#)ip dhcp snooping information option allow-untrusted command [2-114](#)ip dhcp snooping information option command [2-112](#)ip dhcp snooping information option format remote-id command [2-116](#)ip dhcp snooping limit rate command [2-118](#)ip dhcp snooping trust command [2-119](#)ip dhcp snooping verify command [2-120](#)ip dhcp snooping vlan command [2-121](#)ip dhcp snooping vlan information option format-type circuit-id string command [2-122](#)ip igmp filter command [2-124](#)ip igmp max-groups command [2-126](#)ip igmp profile command [2-128](#)ip igmp snooping command [2-130](#)ip igmp snooping last-member-query-interval command [2-132](#)ip igmp snooping querier command [2-134](#)ip igmp snooping report-suppression command [2-136](#)ip igmp snooping tcn command [2-138](#)

ip igmp snooping tcn flood command [2-140](#)  
 ip igmp snooping vlan immediate-leave command [2-141](#)  
 ip igmp snooping vlan mrouter command [2-142](#)  
 ip igmp snooping vlan static command [2-144](#)  
 IP multicast addresses [2-230](#)  
 IP phones  
     auto-QoS configuration [2-16](#)  
     trusting packets sent from [2-222](#)  
 IP-precedence-to-DSCP map [2-196](#)  
 IP source guard  
     displaying  
         dynamic binding entries only [2-336](#)  
 ip ssh command [2-146](#)

---

## J

jumbo frames  
     See MTU

---

## L

LACP  
     See EtherChannel  
 lacp port-priority command [2-148](#)  
 lacp system-priority command [2-150](#)  
 Layer 2 traceroute  
     IP addresses [2-537](#)  
     MAC addresses [2-534](#)  
 line configuration mode [1-2, 1-5](#)  
 Link Aggregation Control Protocol  
     See EtherChannel  
 link flap  
     error detection for [2-89](#)  
     error recovery timer [2-91](#)  
 link state group command [2-152](#)  
 link state track command [2-154](#)  
 load\_helper (boot loader) command [A-13](#)  
 load-distribution methods for EtherChannel [2-250](#)

logging event command [2-155](#)  
 logging file command [2-156](#)  
 logical interface [2-99](#)  
 loopback error  
     detection for [2-89](#)  
     recovery timer [2-91](#)  
 loop guard, for spanning tree [2-460, 2-464](#)

---

## M

mac access-group command [2-158](#)  
 MAC access-groups, displaying [2-356](#)  
 MAC access list configuration mode [2-160](#)  
 mac access-list extended command [2-160](#)  
 MAC access lists [2-54](#)  
 MAC addresses  
     displaying  
         aging time [2-362](#)  
         all [2-360](#)  
         dynamic [2-366](#)  
         MAC address-table move updates [2-370](#)  
         notification settings [2-372](#)  
         number of addresses in a VLAN [2-364](#)  
         per interface [2-368](#)  
         per VLAN [2-376](#)  
         static [2-374](#)  
         static and dynamic entries [2-358](#)  
     dynamic  
         aging time [2-162](#)  
         deleting [2-42](#)  
         displaying [2-366](#)  
         enabling MAC address notification [2-165](#)  
         enabling MAC address-table move update [2-163](#)  
         matching [2-180](#)  
     static  
         adding and removing [2-167](#)  
         displaying [2-374](#)  
         dropping on an interface [2-168](#)  
     tables [2-360](#)

- mac address notification, debugging [40](#)
- mac address-table aging-time [2-158, 2-180](#)
- mac address-table aging-time command [2-162](#)
- mac address-table move update command [2-163](#)
- mac address-table notification command [2-165](#)
- mac address-table static command [2-167](#)
- mac address-table static drop command [2-168](#)
- macro apply command [2-170](#)
- macro description command [2-173](#)
- macro global command [2-174](#)
- macro global description command [2-177](#)
- macro name command [2-178](#)
- macros
  - adding a description [2-173](#)
  - adding a global description [2-177](#)
  - applying [2-174](#)
  - creating [2-178](#)
  - displaying [2-402](#)
  - interface range [2-51, 2-101](#)
  - specifying parameter values [2-174](#)
  - tracing [2-174](#)
- manual
  - audience [xv](#)
  - purpose of [xv](#)
- maps
  - QoS
    - defining [2-196](#)
    - displaying [2-386](#)
  - VLAN
    - creating [2-557](#)
    - defining [2-180](#)
    - displaying [2-429](#)
- match (access-map configuration) command [2-180](#)
- match (class-map configuration) command [2-182](#)
- maximum transmission unit
  - See MTU
- mdix auto command [2-184](#)
- media-type command [2-186](#)
- memory (boot loader) command [A-14](#)
- mkdir (boot loader) command [A-15](#)
- mls qos aggregate-policer command [2-190](#)
- mls qos command [2-188](#)
- mls qos cos command [2-192](#)
- mls qos dscp-mutation command [2-194](#)
- mls qos map command [2-196](#)
- mls qos queue-set output buffers command [2-200](#)
- mls qos queue-set output threshold command [2-202](#)
- mls qos rewrite ip dscp command [2-204](#)
- mls qos srr-queue input bandwidth command [2-206](#)
- mls qos srr-queue input buffers command [2-208](#)
- mls qos-srr-queue input cos-map command [2-210](#)
- mls qos srr-queue input dscp-map command [2-212](#)
- mls qos srr-queue input priority-queue command [2-214](#)
- mls qos srr-queue input threshold command [2-216](#)
- mls qos-srr-queue output cos-map command [2-218](#)
- mls qos srr-queue output dscp-map command [2-220](#)
- mls qos trust command [2-222](#)
- mls qos vlan-based command [2-224](#)
- mode, MVR [2-230](#)
- Mode button, and password recovery [2-262](#)
- modes, commands [1-1](#)
- monitor session command [2-225](#)
- more (boot loader) command [A-16](#)
- MSTP
  - displaying [2-412](#)
  - interoperability [2-48](#)
  - link type [2-462](#)
  - MST region
    - aborting changes [2-468](#)
    - applying changes [2-468](#)
    - configuration name [2-468](#)
    - configuration revision number [2-468](#)
    - current or pending display [2-468](#)
    - displaying [2-412](#)
    - MST configuration mode [2-468](#)
    - VLANs-to-instance mapping [2-468](#)
  - path cost [2-470](#)
  - protocol mode [2-466](#)



**MSTP (continued)**

- restart protocol migration process [2-48](#)
  - root port
    - loop guard [2-460](#)
    - preventing from becoming designated [2-460](#)
    - restricting which can be root [2-460](#)
    - root guard [2-460](#)
  - root switch
    - affects of extended system ID [2-459](#)
    - hello-time [2-473, 2-480](#)
    - interval between BPDU messages [2-474](#)
    - interval between hello BPDU messages [2-473, 2-480](#)
    - max-age [2-474](#)
    - maximum hop count before discarding BPDU [2-475](#)
    - port priority for selection of [2-476](#)
    - primary or secondary [2-480](#)
    - switch priority [2-479](#)
  - state changes
    - blocking to forwarding state [2-486](#)
    - enabling BPDU filtering [2-451, 2-484](#)
    - enabling BPDU guard [2-453, 2-484](#)
    - enabling Port Fast [2-484, 2-486](#)
    - forward-delay time [2-472](#)
    - length of listening and learning states [2-472](#)
    - rapid transition to forwarding [2-462](#)
    - shutting down Port Fast-enabled ports [2-484](#)
  - state information display [2-411](#)
- MTU**
- configuring size [2-531](#)
  - displaying global setting [2-419](#)
- multicast group address, MVR [2-233](#)
- multicast groups, MVR [2-231](#)
- multicast router learning method [2-142](#)
- multicast router ports, configuring [2-142](#)
- multicast storm control [2-502](#)
- multicast VLAN, MVR [2-230](#)

- multicast VLAN registration
- See MVR
- multiple hosts on authorized port [2-73](#)
- Multiple Spanning Tree Protocol
- See MSTP
- MVR**
- and address aliasing [2-231](#)
  - configuring [2-230](#)
  - configuring interfaces [2-233](#)
  - debug messages, display [44](#)
  - displaying [2-394](#)
  - displaying interface information [2-396](#)
  - members, displaying [2-398](#)
- mvr (global configuration) command [2-230](#)
- mvr (interface configuration) command [2-233](#)
- mvr vlan group command [2-234](#)

---

**N**

- native VLANs [2-526](#)
- nonnegotiate
- DTP messaging [2-514](#)
- nonnegotiate, speed [2-494](#)
- non-IP protocols
- denying [2-54](#)
  - forwarding [2-240](#)
- non-IP traffic access lists [2-160](#)
- non-IP traffic forwarding
- denying [2-54](#)
  - permitting [2-240](#)
- normal-range VLANs [2-546, 2-551](#)
- note, description [xvi](#)
- no vlan command [2-546, 2-555](#)

---

**P**

- PAGP**
- See EtherChannel

- pagp learn-method command [2-236](#)
- pagp port-priority command [2-238](#)
- password, VTP [2-569, 2-573](#)
- password-recovery mechanism, enabling and disabling [2-262](#)
- permit (MAC access-list configuration) command [2-240](#)
- per-VLAN spanning-tree plus
  - See STP
- physical-port learner [2-236](#)
- PID, displaying [2-333](#)
- PIM-DVMRP, as multicast router learning method [2-142](#)
- police aggregate command [2-245](#)
- police command [2-243](#)
- policed-DSCP map [2-196](#)
- policy-map command [2-247](#)
- policy maps
  - applying to an interface [2-264, 2-269](#)
  - creating [2-247](#)
  - displaying [2-405](#)
  - hierarchical [2-248](#)
  - policers
    - displaying [2-379](#)
    - for a single class [2-243](#)
    - for multiple classes [2-190, 2-245](#)
    - policed-DSCP map [2-196](#)
  - traffic classification
    - defining the class [2-32](#)
    - defining trust states [2-539](#)
    - setting DSCP or IP precedence values [2-267](#)
- Port Aggregation Protocol
  - See EtherChannel
- port-based authentication
  - AAA method list [2-3](#)
  - debug messages, display [31](#)
  - enabling IEEE 802.1x
    - globally [2-57](#)
    - per interface [2-80](#)
  - guest VLAN [2-71](#)
  - host modes [2-73](#)
  - port-based authentication (continued)**
    - IEEE 802.1x AAA accounting methods [2-1](#)
    - initialize an interface [2-74](#)
    - MAC authentication bypass [2-75](#)
    - manual control of authorization state [2-80](#)
    - multiple hosts on authorized port [2-73](#)
    - PAE as authenticator [2-79](#)
    - periodic re-authentication
      - enabling [2-83](#)
      - time between attempts [2-84](#)
    - quiet period between failed authentication exchanges [2-84](#)
    - re-authenticating IEEE 802.1x-enabled ports [2-82](#)
    - resetting configurable IEEE 802.1x parameters [2-69](#)
    - switch-to-authentication server retransmission time [2-84](#)
    - switch-to-client frame-retransmission number [2-77 to 2-78](#)
    - switch-to-client retransmission time [2-84](#)
  - port-channel load-balance command [2-250](#)
  - Port Fast, for spanning tree [2-486](#)
  - port ranges, defining [2-51](#)
  - ports, debugging [77](#)
  - ports, protected [2-525](#)
  - port security
    - aging [2-521](#)
    - debug messages, display [79](#)
    - enabling [2-516](#)
    - violation error recovery [2-91](#)
  - port trust states for QoS [2-222](#)
  - port types, MVR [2-233](#)
  - priority-queue command [2-252](#)
  - privileged EXEC mode [1-2, 1-3](#)
  - product identification information, displaying [2-333](#)
  - protected ports, displaying [2-329](#)
  - pruning
    - VLANs [2-526](#)
    - VTP
      - displaying interface information [2-323](#)
      - enabling [2-569, 2-573](#)

pruning-eligible VLAN list [2-528](#)

PVST+

See STP

## Q

QoS

auto-QoS

configuring [2-16](#)

debug messages, display [28](#)

displaying [2-278](#)

class maps

creating [2-34](#)

defining the match criteria [2-182](#)

displaying [2-285](#)

defining the CoS value for an incoming packet [2-192](#)

displaying configuration information [2-278, 2-378](#)

DSCP transparency [2-204](#)

DSCP trusted ports

applying DSCP-to-DSCP-mutation map to [2-194](#)

defining DSCP-to-DSCP-mutation map [2-196](#)

egress queues

allocating buffers [2-200](#)

defining the CoS output queue threshold map [2-218](#)

defining the DSCP output queue threshold map [2-220](#)

displaying buffer allocations [2-382](#)

displaying CoS output queue threshold map [2-386](#)

displaying DSCP output queue threshold map [2-386](#)

displaying queueing strategy [2-382](#)

displaying queue-set settings [2-389](#)

enabling bandwidth shaping and scheduling [2-498](#)

enabling bandwidth sharing and scheduling [2-500](#)

limiting the maximum output on a port [2-496](#)

mapping a port to a queue-set [2-254](#)

## QoS (continued)

mapping CoS values to a queue and threshold [2-218](#)

mapping DSCP values to a queue and threshold [2-220](#)

setting maximum and reserved memory allocations [2-202](#)

setting WTD thresholds [2-202](#)

enabling [2-188](#)

ingress queues

allocating buffers [2-208](#)

assigning SRR scheduling weights [2-206](#)

defining the CoS input queue threshold map [2-210](#)

defining the DSCP input queue threshold map [2-212](#)

displaying buffer allocations [2-382](#)

displaying CoS input queue threshold map [2-386](#)

displaying DSCP input queue threshold map [2-386](#)

displaying queueing strategy [2-382](#)

displaying settings for [2-380](#)

enabling the priority queue [2-214](#)

mapping CoS values to a queue and threshold [2-210](#)

mapping DSCP values to a queue and threshold [2-212](#)

setting WTD thresholds [2-216](#)

maps

defining [2-196, 2-210, 2-212, 2-218, 2-220](#)

displaying [2-386](#)

policy maps

applying an aggregate policer [2-245](#)

applying to an interface [2-264, 2-269](#)

creating [2-247](#)

defining policers [2-190, 2-243](#)

displaying policers [2-379](#)

displaying policy maps [2-405](#)

hierarchical [2-248](#)

policed-DSCP map [2-196](#)

setting DSCP or IP precedence values [2-267](#)

**QoS (continued)**

- traffic classifications [2-32](#)
- trust states [2-539](#)
- port trust states [2-222](#)
- queues, enabling the expedite [2-252](#)
- statistics
  - in-profile and out-of-profile packets [2-382](#)
  - packets enqueued or dropped [2-382](#)
  - sent and received CoS values [2-382](#)
  - sent and received DSCP values [2-382](#)
- trusted boundary for IP phones [2-222](#)
- VLAN-based [2-224](#)
- quality of service
  - See QoS
- querytime, MVR [2-230](#)
- queue-set command [2-254](#)

**R**

- radius-server dead-criteria command [2-255](#)
- radius-server host command [2-257](#)
- rapid per-VLAN spanning-tree plus
  - See STP
- rapid PVST+
  - See STP
- re-authenticating IEEE 802.1x-enabled ports [2-82](#)
- re-authentication
  - periodic [2-83](#)
  - time between attempts [2-84](#)
- receiver ports, MVR [2-233](#)
- receiving flow-control packets [2-97](#)
- recovery mechanism
  - causes [2-91](#)
  - display [2-38, 2-283, 2-310, 2-314](#)
  - timer interval [2-91](#)
- remote-span command [2-259](#)
- Remote Switched Port Analyzer
  - See RSPAN
- rename (boot loader) command [A-17](#)

- requirements
  - device manager [xvi](#)
- reset (boot loader) command [A-18](#)
- reset command [2-560](#)
- restricted VLAN
  - See dot1x auth-fail vlan
- rmdir (boot loader) command [A-19](#)
- rmon collection stats command [2-261](#)
- root guard, for spanning tree [2-460](#)
- RSPAN
  - configuring [2-225](#)
  - displaying [2-392](#)
  - filter RSPAN traffic [2-225](#)
  - remote-span command [2-259](#)
  - sessions
    - add interfaces to [2-225](#)
    - displaying [2-392](#)
    - start new [2-225](#)

**S**

- secure ports, limitations [2-518](#)
- sending flow-control packets [2-97](#)
- service password-recovery command [2-262](#)
- service-policy command [2-264](#)
- set (boot loader) command [A-20](#)
- set command [2-267](#)
- setup command [2-269](#)
- setup express command [2-272](#)
- show access-lists command [2-274](#)
- show archive status command [2-277](#)
- show auto qos command [2-278](#)
- show boot command [2-281](#)
- show cable-diagnostics tdr command [2-283](#)
- show changes command [2-560](#)
- show class-map command [2-285](#)
- show controllers cpu-interface command [2-286](#)
- show controllers ethernet-controller command [2-288](#)
- show controllers tcam command [2-296](#)

- show controller utilization command [2-298](#)
- show current command [2-560](#)
- show dot1x command [2-300](#)
- show dtp [2-304](#)
- show eap command [2-306](#)
- show env command [2-309](#)
- show errdisable detect command [2-310](#)
- show errdisable flap-values command [2-312](#)
- show errdisable recovery command [2-314](#)
- show etherchannel command [2-316](#)
- show fallback profile command [2-319](#)
- show flowcontrol command [2-321](#)
- show interfaces command [2-323](#)
- show interfaces counters command [2-331](#)
- show inventory command [2-333](#)
- show ip dhcp snooping binding command [2-336](#)
- show ip dhcp snooping command [2-335](#)
- show ip dhcp snooping database command [2-338](#)
- show ip igmp profile command [2-341](#)
- show ip igmp snooping command [2-342](#)
- show ip igmp snooping groups command [2-344](#)
- show ip igmp snooping mrouter command [2-346](#)
- show ip igmp snooping querier command [2-348](#)
- show lacp command [2-350](#)
- show link state group command [2-354](#)
- show mac access-group command [2-356](#)
- show mac address-table address command [2-360](#)
- show mac address-table aging time command [2-362](#)
- show mac address-table command [2-358](#)
- show mac address-table count command [2-364](#)
- show mac address-table dynamic command [2-366](#)
- show mac address-table interface command [2-368](#)
- show mac address-table move update command [2-370](#)
- show mac address-table notification command [2-43, 2-372, 42](#)
- show mac address-table static command [2-374](#)
- show mac address-table vlan command [2-376](#)
- show mls qos aggregate-policer command [2-379](#)
- show mls qos command [2-378](#)
- show mls qos input-queue command [2-380](#)
- show mls qos interface command [2-382](#)
- show mls qos maps command [2-386](#)
- show mls qos queue-set command [2-389](#)
- show mls qos vlan command [2-391](#)
- show monitor command [2-392](#)
- show mvr command [2-394](#)
- show mvr interface command [2-396](#)
- show mvr members command [2-398](#)
- show pagp command [2-400](#)
- show parser macro command [2-402](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform etherchannel command [C-5](#)
- show platform forward command [C-6](#)
- show platform igmp snooping command [C-8](#)
- show platform layer4op command [C-10](#)
- show platform mac-address-table command [C-11](#)
- show platform messaging command [C-12](#)
- show platform monitor command [C-13](#)
- show platform mvr table command [C-14](#)
- show platform pm command [C-15](#)
- show platform port-asic command [C-16](#)
- show platform port-security command [C-21](#)
- show platform qos command [C-22](#)
- show platform resource-manager command [C-23](#)
- show platform snmp counters command [C-25](#)
- show platform spanning-tree command [C-26](#)
- show platform stp-instance command [C-27](#)
- show platform team command [C-28](#)
- show platform vlan command [C-30](#)
- show policy-map command [2-405](#)
- show port security command [2-407](#)
- show proposed command [2-560](#)
- show setup express command [2-410](#)
- show spanning-tree command [2-411](#)
- show storm-control command [2-417](#)
- show system mtu command [2-419](#)

- show trust command [2-539](#)
- show udd command [2-420](#)
- show version command [2-423](#)
- show vlan access-map command [2-429](#)
- show vlan command [2-425](#)
- show vlan command, fields [2-427](#)
- show vlan filter command [2-430](#)
- show vmps command [2-431](#)
- show vtp command [2-434](#)
- shutdown command [2-439](#)
- shutdown vlan command [2-440](#)
- Smartports macros
  - See macros
- SNMP host, specifying [2-444](#)
- SNMP informs, enabling the sending of [2-441](#)
- snmp-server enable traps command [2-441](#)
- snmp-server host command [2-444](#)
- snmp trap mac-notification command [2-448](#)
- SNMP traps
  - enabling MAC address notification trap [2-448](#)
  - enabling the MAC address notification feature [2-165](#)
  - enabling the sending of [2-441](#)
- SoftPhone
  - See Cisco SoftPhone
- software images
  - deleting [2-53](#)
  - downloading [2-8](#)
  - upgrading [2-8](#)
  - uploading [2-14](#)
- software version, displaying [2-423](#)
- source ports, MVR [2-233](#)
- SPAN
  - configuring [2-225](#)
  - debug messages, display [43](#)
  - displaying [2-392](#)
  - filter SPAN traffic [2-225](#)
- SPAN (continued)
  - sessions
    - add interfaces to [2-225](#)
    - displaying [2-392](#)
    - start new [2-225](#)
  - spanning [2-488](#)
  - spanning-tree backbonefast command [2-450](#)
  - spanning-tree bpdupfilter command [2-451](#)
  - spanning-tree bpduguard command [2-453](#)
  - spanning-tree cost command [2-455](#)
  - spanning-tree etherchannel command [2-457](#)
  - spanning-tree extend system-id command [2-459](#)
  - spanning-tree guard command [2-460](#)
  - spanning-tree link-type command [2-462](#)
  - spanning-tree loopguard default command [2-464](#)
  - spanning-tree mode command [2-466](#)
  - spanning-tree mst configuration command [2-468](#)
  - spanning-tree mst cost command [2-470](#)
  - spanning-tree mst forward-time command [2-472](#)
  - spanning-tree mst hello-time command [2-473](#)
  - spanning-tree mst max-age command [2-474](#)
  - spanning-tree mst max-hops command [2-475](#)
  - spanning-tree mst port-priority command [2-476](#)
  - spanning-tree mst pre-standard command [2-478](#)
  - spanning-tree mst priority command [2-479](#)
  - spanning-tree mst root command [2-480](#)
  - spanning-tree portfast (global configuration) command [2-484](#)
  - spanning-tree portfast (interface configuration) command [2-486](#)
  - spanning-tree port-priority command [2-482](#)
  - Spanning Tree Protocol
    - See STP
  - spanning-tree transmit hold-count command [2-488](#)
  - spanning-tree uplinkfast command [2-489](#)
  - spanning-tree vlan command [2-491](#)
  - speed command [2-494](#)
  - srr-queue bandwidth limit command [2-496](#)
  - srr-queue bandwidth shape command [2-498](#)

srr-queue bandwidth share command [2-500](#)

SSH, configuring version [2-146](#)

static-access ports, configuring [2-505](#)

statistics, Ethernet group [2-261](#)

sticky learning, enabling [2-516](#)

storm-control command [2-502](#)

STP

- BackboneFast [2-450](#)
- counters, clearing [2-47](#)
- debug messages, display
  - BackboneFast events [83](#)
  - MSTP [86](#)
  - optimized BPDUs handling [85](#)
  - spanning-tree activity [81](#)
  - switch shim [88](#)
  - transmitted and received BPDUs [84](#)
  - UplinkFast [90](#)
- detection of indirect link failures [2-450](#)
- EtherChannel misconfiguration [2-457](#)
- extended system ID [2-459](#)
- path cost [2-455](#)
- protocol modes [2-466](#)
- root port
  - accelerating choice of new [2-489](#)
  - loop guard [2-460](#)
  - preventing from becoming designated [2-460](#)
  - restricting which can be root [2-460](#)
  - root guard [2-460](#)
  - UplinkFast [2-489](#)
- root switch
  - affects of extended system ID [2-459, 2-492](#)
  - hello-time [2-491](#)
  - interval between BPDU messages [2-491](#)
  - interval between hello BPDU messages [2-491](#)
  - max-age [2-491](#)
  - port priority for selection of [2-482](#)
  - primary or secondary [2-491](#)
  - switch priority [2-491](#)
- state changes

## STP (continued)i

- blocking to forwarding state [2-486](#)
- enabling BPDU filtering [2-451, 2-484](#)
- enabling BPDU guard [2-453, 2-484](#)
- enabling Port Fast [2-484, 2-486](#)
- enabling timer to recover from error state [2-91](#)
- forward-delay time [2-491](#)
- length of listening and learning states [2-491](#)
- shutting down Port Fast-enabled ports [2-484](#)
- state information display [2-411](#)
- VLAN options [2-479, 2-491](#)

Switched Port Analyzer

- See SPAN
- switchport access command [2-505](#)
- switchport backup interface command [2-507](#)
- switchport block command [2-510](#)
- switchport host command [2-511](#)
- switchport mode command [2-512](#)
- switchport nonegotiate command [2-514](#)
- switchport port-security aging command [2-521](#)
- switchport port-security command [2-516](#)
- switchport priority extend command [2-523](#)
- switchport protected command [2-525](#)
- switchports, displaying [2-323](#)
- switchport trunk command [2-526](#)
- switchport voice vlan command [2-529](#)
- system message logging, save message to flash [2-156](#)
- system mtu command [2-531](#)

---

## T

- tar files, creating, listing, and extracting [2-11](#)
- TDR, running [2-533](#)
- test cable-diagnostics tdr command [2-533](#)
- traceroute mac command [2-534](#)
- traceroute mac ip command [2-537](#)
- trunking, VLAN mode [2-512](#)
- trunk mode [2-512](#)
- trunk ports [2-512](#)

trunks, to non-DTP device [2-513](#)  
 trusted boundary for QoS [2-222](#)  
 trusted port states for QoS [2-222](#)  
 type (boot loader) command [A-23](#)

## U

### UDLD

aggressive mode [2-541, 2-543](#)  
 debug messages, display [97](#)  
 enable globally [2-541](#)  
 enable per interface [2-543](#)  
 error recovery timer [2-91](#)  
 message timer [2-541](#)  
 normal mode [2-541, 2-543](#)  
 reset a shutdown interface [2-545](#)  
 status [2-420](#)

udld command [2-541](#)

udld port command [2-543](#)

udld reset command [2-545](#)

unicast storm control [2-502](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-510](#)

unknown unicast traffic, preventing [2-510](#)

unset (boot loader) command [A-24](#)

upgrading

software images [2-8](#)

monitoring status of [2-277](#)

upgrading information

See release notes

UplinkFast, for STP [2-489](#)

user EXEC mode [1-2, 1-3](#)

## V

version (boot loader) command [A-26](#)

VLAN

enabling guest VLAN supplicant [2-60, 2-70](#)

vlan (global configuration) command [2-546](#)

vlan (VLAN configuration) command [2-551](#)

vlan access-map command [2-557](#)

VLAN access map configuration mode [2-557](#)

VLAN access maps

actions [2-6](#)

displaying [2-429](#)

VLAN-based QoS [2-224](#)

VLAN configuration

rules [2-549, 2-553](#)

saving [2-546, 2-555](#)

VLAN configuration mode

commands

VLAN [2-551](#)

VTP [2-573](#)

description [1-5](#)

entering [2-559](#)

summary [1-2](#)

vlan database command [2-559](#)

vlan filter command [2-562](#)

VLAN filters, displaying [2-430](#)

VLAN ID range [2-546, 2-551](#)

VLAN maps

applying [2-562](#)

creating [2-557](#)

defining [2-180](#)

displaying [2-429](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-546](#)

configuring [2-546, 2-551](#)

debug messages, display

ISL [94](#)



**VLANs (continued)**

VLAN IOS file system error tests [93](#)

VLAN manager activity [91](#)

VTP [95](#)

displaying configurations [2-425](#)

enabling guest VLAN supplicant [2-96](#)

extended-range [2-546](#)

MAC addresses

displaying [2-376](#)

number of [2-364](#)

media types [2-548, 2-553](#)

normal-range [2-546, 2-551](#)

restarting [2-440](#)

saving the configuration [2-546](#)

shutting down [2-440](#)

SNMP traps for VTP [2-442, 2-445](#)

suspending [2-440](#)

variables [2-551](#)

**VLAN Trunking Protocol**

See VTP

**VMPS**

configuring servers [2-567](#)

displaying [2-431](#)

error recovery timer [2-91](#)

reconfirming dynamic VLAN assignments [2-564](#)

vmmps reconfirm (global configuration) command [2-565](#)

vmmps reconfirm (privileged EXEC) command [2-564](#)

vmmps retry command [2-566](#)

vmmps server command [2-567](#)

**voice VLAN**

configuring [2-529](#)

setting port priority [2-523](#)

**VQP**

and dynamic-access ports [2-505](#)

clearing client statistics [2-49](#)

displaying information [2-431](#)

per-server retry count [2-566](#)

reconfirmation interval [2-565](#)

reconfirming dynamic VLAN assignments [2-564](#)

**VTP**

changing characteristics [2-569](#)

clearing pruning counters [2-50](#)

configuring

domain name [2-569, 2-573](#)

file name [2-569](#)

mode [2-569, 2-573](#)

password [2-569, 2-573](#)

counters display fields [2-435](#)

displaying information [2-434](#)

enabling

pruning [2-569, 2-573](#)

Version 2 [2-569, 2-573](#)

mode [2-569, 2-573](#)

pruning [2-569, 2-573](#)

saving the configuration [2-546, 2-555](#)

statistics [2-434](#)

status [2-434](#)

status display fields [2-436](#)

vtp (global configuration) command [2-569](#)

vtp (VLAN configuration) command [2-573](#)

