

APPENDIX C

Unsupported Commands in Cisco IOS Release 12.2(50)SE

This appendix lists some of the command-line interface (CLI) commands that appear when you enter the question mark (?) at the switch prompt but are not supported in this release, either because they are not tested or because of switch hardware limitations. This is not a complete list. The unsupported commands are listed by software feature and command mode.

Access Control Lists

Unsupported Privileged EXEC Commands

access-enable [host] [timeout minutes]

 ${\bf access-template} \ [access-list-number \mid name] \ [dynamic-name] \ [source] \ [destination] \ [{\bf timeout} \ minutes]$

clear access-template [access-list-number | name] [dynamic-name] [source] [destination].

show access-lists rate-limit [destination]

show accounting

show ip accounting [checkpoint] [output-packets | access violations]

show ip cache [prefix-mask] [type number]

Unsupported Global Configuration Commands

access-list rate-limit acl-index {precedence | mask prec-mask}
access-list dynamic extended

Unsupported Route-Map Configuration Command

match ip address prefix-list prefix-list-name [prefix-list-name...]

Archive Commands

Unsupported Privileged EXEC Commands

archive config logging persistent show archive config show archive log

ARP Commands

Unsupported Global Configuration Commands

arp ip-address hardware-address smds arp ip-address hardware-address srp-a arp ip-address hardware-address srp-b

Unsupported Interface Configuration Commands

arp probe ip probe proxy

Bootloader Commands

Unsupported user EXEC Command

verify

Unsupported Global Configuration Command

boot buffersize

Debug Commands

Unsupported Privileged EXEC Commands

debug platform cli-redirection main debug platform configuration

HSRP

Unsupported Global Configuration Commands

interface Async

interface BVI

interface Dialer

interface Group-Async

interface Lex

interface Multilink

interface Virtual-Template

interface Virtual-Tokenring

Unsupported Interface Configuration Commands

mtu

standby mac-refresh seconds standby use-bia

IGMP Snooping Commands

Unsupported Global Configuration Command

ip igmp snooping ten

Interface Commands

Unsupported Privileged EXEC Command

show interfaces [interface-id | vlan vlan-id] [crb | fair-queue | irb | mac-accounting | precedence | irb | random-detect | rate-limit | shape]

Unsupported Global Configuration Command

interface tunnel

Unsupported Interface Configuration Command

transmit-interface type number

IP Unicast Routing

Unsupported Privileged EXEC or User EXEC Commands

clear ip accounting [checkpoint]
debug ip cef stats
show cef [drop | not-cef-switched]
show ip accounting [checkpoint] [output-packets | access-violations]
show ip prefix-list regular expression

Unsupported Global Configuration Commands

ip accounting precedence {input | output}

ip accounting-list ip-address wildcard

ip as-path access-list

ip accounting-transits count

ip cef accounting [per-prefix] [non-recursive]

ip cef traffic-statistics [load-interval seconds] [update-rate seconds]]

ip flow-aggregation

ip flow-cache

ip flow-export

ip gratuitous-arps

ip local

```
ip prefix-list
ip reflexive-list
router mobile
router odr
router static
```

Unsupported Interface Configuration Commands

```
ip accounting
ip load-sharing [per-packet]
ip mtu bytes
ip verify
ip unnumbered type number
All ip security commands
```

Unsupported Route Map Commands

```
match route-type
set as-path {tag | prepend as-path-string}
set automatic-tag
set dampening half-life reuse suppress max-suppress-time
set default interface interface-id [interface-id.....]
set interface interface-id [interface-id.....]
set ip default next-hop ip-address [ip-address.....]
set ip destination ip-address mask
set ip next-hop verify-availability
set ip precedence value
set ip qos-group
set metric-type internal
set origin
set metric-type internal
set tag tag-value
```

MAC Address Commands

Unsupported Privileged EXEC Commands

show mac-address-table

show mac-address-table address
show mac-address-table aging-time
show mac-address-table count
show mac-address-table dynamic
show mac-address-table interface
show mac-address-table multicast
show mac-address-table notification
show mac-address-table static
show mac-address-table vlan
show mac address-table multicast



Use the **show ip igmp snooping groups** privileged EXEC command to display Layer 2 multicast address-table entries for a VLAN.

Unsupported Global Configuration Commands

mac-address-table aging-time mac-address-table notification mac-address-table static

Miscellaneous

Unsupported User EXEC Commands

verify

Unsupported Privileged EXEC Commands

file verify auto show cable-diagnostics prbs test cable-diagnostics prbs

Unsupported Global Configuration Commands

errdisable recovery cause unicast flood l2protocol-tunnel global drop-threshold memory reserve critical service compress-config stack-mac persistent timer

NetFlow Commands

Unsupported Global Configuration Commands

ip flow-aggregation cache

ip flow-cache entries

ip flow-export

Network Address Translation (NAT) Commands

Unsupported Privileged EXEC Commands

show ip nat statistics show ip nat translations

QoS

Unsupported Global Configuration Command

priority-list

Unsupported Interface Configuration Commands

priority-group rate-limit

Unsupported Policy-Map Configuration Command

class class-default where **class-default** is the *class-map-name*.

RADIUS

Unsupported Global Configuration Commands

aaa nas port extended
aaa authentication feature default enable
aaa authentication feature default line
radius-server attribute nas-port
radius-server configure
radius-server extended-portnames

SNMP

Unsupported Global Configuration Commands

snmp-server enable informs snmp-server ifindex persist

Spanning Tree

Unsupported Global Configuration Command

spanning-tree pathcost method {long | short}

Unsupported Interface Configuration Command

spanning-tree stack-port

VLAN

Unsupported Global Configuration Command

vlan internal allocation policy {ascending | descending}

Unsupported User EXEC Commands

show running-config vlan show vlan ifindex

VTP

Unsupported Privileged EXEC Command

vtp {password password | pruning | version number}



This command has been replaced by the **vtp** global configuration command.

VTP