



INDEX

A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-752](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-141](#)
 MAC, displaying [2-519](#)
access list, IPv6 [2-206](#)
access map configuration mode [2-264](#)
access mode [2-695](#)
access ports [2-695](#)
ACEs [2-82](#), [2-335](#)
ACLs
 deny [2-80](#)
 displaying [2-382](#)
 for non-IP protocols [2-243](#)
 IP [2-141](#)
 matching [2-264](#)
 on Layer 2 interfaces [2-141](#)
 permit [2-333](#)
action command [2-6](#)
aggregate-port learner [2-321](#)
allowed VLANs [2-715](#)
apply command [2-752](#)
archive copy-sw command [2-8](#)
archive download-sw command [2-11](#)

archive tar command [2-15](#)
archive upload-sw command [2-18](#)
arp access-list command [2-20](#)
audience [xix](#)
authentication failed VLAN
 See dot1x auth-fail vlan
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port [2-113](#)
autonegotiation of duplex mode [2-121](#)
auto qos voip command [2-22](#)

B

BackboneFast, for STP [2-621](#)
backup interfaces
 configuring [2-690](#)
 displaying [2-446](#)
boot (boot loader) command [A-2](#)
boot auto-copy-sw command [2-26](#)
boot auto-download-sw command [2-27](#)
boot boothlpr command [2-29](#)
boot config-file command [2-30](#)
boot enable-break command [2-31](#)
boot helper command [2-32](#)
boot helper-config file command [2-33](#)
booting
 Cisco IOS image [2-36](#)
 displaying environment variables [2-392](#)
 interrupting [2-31](#)
 manually [2-34](#)

boot loader

- accessing [A-1](#)

- booting

- Cisco IOS image [A-2](#)

- helper image [2-32](#)

- directories

- creating [A-15](#)

- displaying a list of [A-7](#)

- removing [A-19](#)

- displaying

- available commands [A-12](#)

- memory heap utilization [A-13](#)

- version [A-26](#)

- environment variables

- described [A-20](#)

- displaying settings [A-20](#)

- location of [A-21](#)

- setting [A-20](#)

- unsetting [A-24](#)

- files

- copying [A-5](#)

- deleting [A-6](#)

- displaying a list of [A-7](#)

- displaying the contents of [A-4](#), [A-16](#), [A-23](#)

- renaming [A-17](#)

- file system

- formatting [A-10](#)

- initializing flash [A-9](#)

- running a consistency check [A-11](#)

- prompt [A-1](#)

- resetting the system [A-18](#)

- boot manual command [2-34](#)

- boot private-config-file command [2-35](#)

- boot system command [2-36](#)

- BPDU filtering, for spanning tree [2-622](#), [2-657](#)

- BPDU guard, for spanning tree [2-624](#), [2-657](#)

- broadcast storm control [2-678](#)

C

- cat (boot loader) command [A-4](#)

- caution, description **xx**

- CDP, enabling protocol tunneling for [2-224](#)

- channel-group command [2-38](#)

- channel-protocol command [2-42](#)

- Cisco Network Assistant

- See Network Assistant

- Cisco SoftPhone

- auto-QoS configuration [2-22](#)

- trusting packets sent from [2-305](#)

- class command [2-44](#)

- class-map command [2-46](#)

- class maps

- creating [2-46](#)

- defining the match criteria [2-266](#)

- displaying [2-397](#)

- class of service

- See CoS

- clear dot1x command [2-48](#)

- clear eap command [2-49](#)

- clear errdisable interface [2-50](#)

- clear ip arp inspection log command [2-51](#)

- clear ip arp inspection statistics command [2-52](#)

- clear ipc command [2-55](#)

- clear ip dhcp snooping database command [2-53](#)

- clear l2protocol-tunnel counters command [2-56](#)

- clear lacp command [2-57](#)

- clear logging command [2-58](#)

- clear mac address-table command [2-59](#), [2-60](#)

- clear pagp command [2-61](#)

- clear port-security command [2-62](#)

- clear spanning-tree counters command [2-64](#)

- clear spanning-tree detected-protocols command [2-65](#)

- clear vmps statistics command [2-66](#)

- clear vtp counters command [2-67](#)

- command modes defined [1-2](#)

configuration, initial
 See getting started guide and hardware installation guide

configuration files
 password recovery disable considerations [A-1](#)
 specifying the name [2-30, 2-35](#)

configuring multiple interfaces [2-136](#)

config-vlan mode
 commands [2-738](#)
 description [1-4](#)
 entering [2-737](#)
 summary [1-3](#)

conventions
 command [xix](#)
 for examples [xx](#)
 publication [xix](#)
 text [xix](#)

copy (boot loader) command [A-5](#)

copy logging onboard command [2-68](#)

CoS
 assigning default value to incoming packets [2-275](#)
 assigning to Layer 2 protocol packets [2-227](#)
 overriding the incoming value [2-275](#)

CoS-to-DSCP map [2-279](#)

CPU ASIC statistics, displaying [2-398](#)

crashinfo files [2-127](#)

D

debug auto qos command [B-2](#)

debug backup command [B-4](#)

debug dot1x command [B-5](#)

debug dtp command [B-6](#)

debug eap command [B-7](#)

debug etherchannel command [B-8](#)

debug fastethernet command [B-9](#)

debug interface command [B-12](#)

debug ip dhcp snooping command [B-10](#)

debug ip igmp filter command [B-13](#)

debug ip igmp max-groups command [B-14](#)

debug ip igmp snooping command [B-15](#)

debug ip verify source packet command [B-11](#)

debug lacp command [B-16](#)

debug mac-notification command [B-17](#)

debug matm command [B-18](#)

debug matm move update command [B-19](#)

debug monitor command [B-20](#)

debug mvrdbg command [B-21](#)

debug nvram command [B-22](#)

debug pagp command [B-23](#)

debug platform acl command [B-24](#)

debug platform backup interface command [B-25](#)

debug platform cli-redirectation main command [B-26](#)

debug platform configuration command [B-27](#)

debug platform cpu-queues command [B-28](#)

debug platform device-manager command [B-30](#)

debug platform dot1x command [B-31](#)

debug platform etherchannel command [B-32](#)

debug platform fallback-bridging command [B-33](#)

debug platform ip arp inspection command [B-34](#)

debug platform ipc command [B-43](#)

debug platform ip dhcp command [B-35](#)

debug platform ip igmp snooping command [B-36](#)

debug platform ip multicast command [B-38](#)

debug platform ip unicast command [B-40](#)

debug platform ip wccp command [B-42](#)

debug platform led command [B-44](#)

debug platform matm command [B-45](#)

debug platform messaging application command [B-46](#)

debug platform phy command [B-47](#)

debug platform pm command [B-49](#)

debug platform port-asic command [B-51](#)

debug platform port-security command [B-52](#)

debug platform qos-acl-team command [B-53](#)

debug platform remote-commands command [B-54](#)

debug platform resource-manager command [B-55](#)

debug platform snmp command [B-56](#)

debug platform span command [B-57](#)

- debug platform stack-manager command [B-58](#)
- debug platform supervisor-asic command [B-59](#)
- debug platform sw-bridge command [B-60](#)
- debug platform team command [B-61](#)
- debug platform udd command [B-64](#)
- debug platform vlan command [B-65](#)
- debug pm command [B-66](#)
- debug port-security command [B-68](#)
- debug qos-manager command [B-69](#)
- debug spanning-tree backbonefast command [B-72](#)
- debug spanning-tree bpdu command [B-73](#)
- debug spanning-tree bpdu-opt command [B-74](#)
- debug spanning-tree command [B-70](#)
- debug spanning-tree mstp command [B-75](#)
- debug spanning-tree switch command [B-77](#)
- debug spanning-tree uplinkfast command [B-79](#)
- debug sw-vlan command [B-80](#)
- debug sw-vlan ifs command [B-82](#)
- debug sw-vlan notification command [B-83](#)
- debug sw-vlan vtp command [B-85](#)
- debug udd command [B-87](#)
- debug vqpc command [B-89](#)
- define interface-range command [2-70](#)
- delete (boot loader) command [A-6](#)
- delete command [2-72](#)
- deny (ARP access-list configuration) command [2-73](#)
- deny (IPv6) command [2-75](#)
- deny command [2-80](#)
- detect mechanism, causes [2-122](#)
- device manager requirements [xx](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-169](#)
 - enabling
 - on a VLAN [2-175](#)
 - option 82 [2-167, 2-169](#)
 - trust on an interface [2-173](#)
 - error recovery timer [2-124](#)
 - rate limiting [2-172](#)
- DHCP snooping binding database
 - binding file, configuring [2-165](#)
 - bindings
 - adding [2-163](#)
 - deleting [2-163](#)
 - displaying [2-466](#)
 - clearing database agent statistics [2-53](#)
 - database agent, configuring [2-165](#)
 - displaying
 - binding entries [2-466](#)
 - database agent status [2-468, 2-470](#)
 - renewing [2-363](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-72](#)
- documentation, related [xx](#)
- document conventions [xix](#)
- domain name, VTP [2-763, 2-767](#)
- dot1x auth-fail max-attempts [2-92](#)
- dot1x auth-fail vlan [2-94](#)
- dot1x command [2-90](#)
- dot1x control-direction command [2-96](#)
- dot1x critical global configuration command [2-98](#)
- dot1x critical interface configuration command [2-100](#)
- dot1x default command [2-102](#)
- dot1x fallback command [2-103](#)
- dot1x guest-vlan command [2-104](#)
- dot1x host-mode command [2-106](#)
- dot1x initialize command [2-107](#)
- dot1x mac-auth-bypass command [2-108](#)
- dot1x max-reauth-req command [2-110](#)
- dot1x max-req command [2-111](#)
- dot1x pae command [2-112](#)
- dot1x port-control command [2-113](#)
- dot1x re-authenticate command [2-115](#)
- dot1x reauthentication command [2-116](#)
- dot1x timeout command [2-117](#)
- dropping packets, with ACL matches [2-6](#)
- drop threshold, Layer 2 protocol tunneling [2-224](#)
- DSCP-to-CoS map [2-279](#)

DSCP-to-DSCP-mutation map [2-279](#)

DTP [2-696](#)

DTP flap

- error detection for [2-122](#)
- error recovery timer [2-124](#)

DTP negotiation [2-700](#)

dual IPv4 and IPv6 templates [2-327](#)

duplex command [2-120](#)

dynamic-access ports

- configuring [2-688](#)
- restrictions [2-689](#)

dynamic ARP inspection

- ARP ACLs
 - apply to a VLAN [2-149](#)
 - define [2-20](#)
 - deny packets [2-73](#)
 - display [2-387](#)
 - permit packets [2-325](#)
- clear
 - log buffer [2-51](#)
 - statistics [2-52](#)
- display
 - ARP ACLs [2-387](#)
 - configuration and operating state [2-461](#)
 - log buffer [2-461](#)
 - statistics [2-461](#)
 - trust state and rate limit [2-461](#)
- enable per VLAN [2-159](#)
- error detection for [2-122](#)
- error recovery timer [2-124](#)
- log buffer
 - clear [2-51](#)
 - configure [2-153](#)
 - display [2-461](#)
- rate-limit incoming ARP packets [2-151](#)
- statistics
 - clear [2-52](#)
 - display [2-461](#)
- trusted interface state [2-155](#)

dynamic ARP inspection (continued)

- type of packet logged [2-160](#)
- validation checks [2-157](#)

dynamic auto VLAN membership mode [2-695](#)

dynamic desirable VLAN membership mode [2-695](#)

Dynamic Host Configuration Protocol (DHCP)

- See DHCP snooping

Dynamic Trunking Protocol

- See DTP

E

EAP-request/identity frame

- maximum number to send [2-111](#)
- response time before retransmitting [2-117](#)

encapsulation methods [2-715](#)

environment variables, displaying [2-392](#)

errdisable detect cause command [2-122](#)

errdisable recovery command [2-124](#)

error conditions, displaying [2-434](#)

error disable detection [2-122](#)

error-disabled interfaces, displaying [2-446](#)

EtherChannel

- assigning Ethernet interface to channel group [2-38](#)
- creating port-channel logical interface [2-134](#)
- debug EtherChannel/PAGP, display [B-8](#)
- debug platform-specific events, display [B-32](#)
- displaying [2-437](#)
- enabling Layer 2 protocol tunneling for
 - LACP [2-225](#)
 - PAGP [2-225](#)
 - UDLD [2-225](#)
- interface information, displaying [2-446](#)
- LACP
 - clearing channel-group information [2-57, 2-58](#)
 - debug messages, display [B-16](#)
 - displaying [2-506](#)
 - modes [2-38](#)
 - port priority for hot-standby ports [2-228](#)

EtherChannel (continued)

LACP (continued)

restricting a protocol [2-42](#)system priority [2-230](#)load-distribution methods [2-343](#)

PAgP

aggregate-port learner [2-321](#)clearing channel-group information [2-61](#)debug messages, display [B-23](#)displaying [2-564](#)error detection for [2-122](#)error recovery timer [2-124](#)learn method [2-321](#)modes [2-38](#)physical-port learner [2-321](#)priority of interface for transmitted traffic [2-323](#)Ethernet controller, internal register display [2-400, 2-408](#)Ethernet Management port, debugging [B-9](#)Ethernet statistics, collecting [2-365](#)examples, conventions for [xx](#)exception crashinfo command [2-127, 2-132](#)exit command [2-752](#)

extended-range VLANs

and allowed VLAN list [2-715](#)and pruning-eligible list [2-715](#)configuring [2-737](#)extended system ID for STP [2-630](#)**F**fallback profile command [2-128](#)fallback profiles, displaying [2-440](#)fan information, displaying [2-430](#)file name, VTP [2-763](#)files, deleting [2-72](#)flash_init (boot loader) command [A-9](#)

Flex Links

configuring [2-690](#)displaying [2-446](#)flowcontrol command [2-130](#)format (boot loader) command [A-10](#)forwarding packets, with ACL matches [2-6](#)forwarding results, display [C-7](#)frame forwarding information, displaying [C-7](#)front-end controller counter and status information [C-9](#)fsck (boot loader) command [A-11](#)**G**global configuration mode [1-2, 1-4](#)**H**hardware ACL statistics [2-382](#)health monitoring diagnostic tests [2-83](#)help (boot loader) command [A-12](#)hierarchical policy maps [2-341](#)host connection, port configuration [2-694](#)host ports, private VLANs [2-698](#)**I**IEEE 802.1Q trunk ports and native VLANs [2-754](#)

IEEE 802.1Q tunnel ports

configuring [2-695](#)displaying [2-420](#)limitations [2-696](#)

IEEE 802.1x

and switchport modes [2-696](#)violation error recovery [2-124](#)

See also port-based authentication

IGMP filters

applying [2-178](#)debug messages, display [B-13](#)IGMP groups, setting maximum [2-180](#)IGMP maximum groups, debugging [B-14](#)

- IGMP profiles
 - creating [2-182](#)
 - displaying [2-473](#)
- IGMP snooping
 - adding ports as a static member of a group [2-198](#)
 - displaying [2-474, 2-479, 2-481](#)
 - enabling [2-184](#)
 - enabling the configurable-leave timer [2-186](#)
 - enabling the Immediate-Leave feature [2-195](#)
 - flooding query count [2-192](#)
 - interface topology change notification behavior [2-194](#)
 - multicast table [2-477](#)
 - querier [2-188](#)
 - query solicitation [2-192](#)
 - report suppression [2-190](#)
 - switch topology change notification behavior [2-192](#)
- images
 - See software images
- Immediate-Leave processing
 - IGMP [2-195](#)
 - IPv6 [2-220](#)
 - MVR [2-316](#)
- initial configuration
 - See getting started guide and hardware installation guide
- interface configuration mode [1-2, 1-4](#)
- interface port-channel command [2-134](#)
- interface range command [2-136](#)
- interface-range macros [2-70](#)
- interfaces
 - assigning Ethernet interface to channel group [2-38](#)
 - configuring [2-120](#)
 - configuring multiple [2-136](#)
 - creating port-channel logical [2-134](#)
 - debug messages, display [B-12](#)
 - disabling [2-609](#)
 - displaying the MAC address table [2-531](#)
 - restarting [2-609](#)
- interface speed, configuring [2-668](#)
- interface vlan command [2-139](#)
- internal registers, displaying [2-400, 2-408, 2-411](#)
- Internet Group Management Protocol
 - See IGMP
- invalid GBIC
 - error detection for [2-122](#)
 - error recovery timer [2-124](#)
- ip access-group command [2-141](#)
- ip address command [2-144](#)
- IP addresses, setting [2-144](#)
- IP address matching [2-264](#)
- ip admission command [2-146](#)
- ip admission name proxy http command [2-147](#)
- ip arp inspection filter vlan command [2-149](#)
- ip arp inspection limit command [2-151](#)
- ip arp inspection log-buffer command [2-153](#)
- ip arp inspection trust command [2-155](#)
- ip arp inspection validate command [2-157](#)
- ip arp inspection vlan command [2-159](#)
- ip arp inspection vlan logging command [2-160](#)
- IP DHCP snooping
 - See DHCP snooping
- ip dhcp snooping binding command [2-163](#)
- ip dhcp snooping command [2-162](#)
- ip dhcp snooping database command [2-165](#)
- ip dhcp snooping information option allow-untrusted command [2-169](#)
- ip dhcp snooping information option command [2-167](#)
- ip dhcp snooping information option format remote-id command [2-171](#)
- ip dhcp snooping limit rate command [2-172](#)
- ip dhcp snooping trust command [2-173](#)
- ip dhcp snooping verify command [2-174](#)
- ip dhcp snooping vlan command [2-175](#)
- ip dhcp snooping vlan information option format-type circuit-id string command [2-176](#)
- ip igmp filter command [2-178](#)
- ip igmp max-groups command [2-180](#)
- ip igmp profile command [2-182](#)
- ip igmp snooping command [2-184](#)

ip igmp snooping last-member-query-interval command [2-186](#)
 ip igmp snooping querier command [2-188](#)
 ip igmp snooping report-suppression command [2-190](#)
 ip igmp snooping tcn command [2-192](#)
 ip igmp snooping tcn flood command [2-194](#)
 ip igmp snooping vlan immediate-leave command [2-195](#)
 ip igmp snooping vlan mrouter command [2-196](#)
 ip igmp snooping vlan static command [2-198](#)
 IP multicast addresses [2-313](#)
 IP phones
 auto-QoS configuration [2-22](#)
 trusting packets sent from [2-305](#)
 IP-precedence-to-DSCP map [2-279](#)
 ip snap forwarding command [2-200](#)
 ip source binding command [2-201](#)
 IP source guard
 disabling [2-205](#)
 displaying
 binding entries [2-483](#)
 configuration [2-485](#)
 dynamic binding entries only [2-466](#)
 enabling [2-205](#)
 static IP source bindings [2-201](#)
 ip ssh command [2-203](#)
 IPv6 access list, deny conditions [2-75](#)
 ipv6 access-list command [2-206](#)
 ipv6 mld snooping command [2-208](#)
 ipv6 mld snooping last-listener-query count command [2-210](#)
 ipv6 mld snooping last-listener-query-interval command [2-212](#)
 ipv6 mld snooping listener-message-suppression command [2-214](#)
 ipv6 mld snooping robustness-variable command [2-216](#)
 ipv6 mld snooping tcn command [2-218](#)
 ipv6 mld snooping vlan command [2-220](#)
 IPv6 SDM template [2-366](#)
 ipv6 traffic-filter command [2-222](#)
 ip verify source command [2-205](#)

J

jumbo frames
 See MTU

L

l2protocol-tunnel command [2-224](#)
 l2protocol-tunnel cos command [2-227](#)
 LACP
 See EtherChannel
 lacp port-priority command [2-228](#)
 lacp system-priority command [2-230](#)
 Layer 2 mode, enabling [2-686](#)
 Layer 2 protocol ports, displaying [2-503](#)
 Layer 2 protocol-tunnel
 error detection for [2-122](#)
 error recovery timer [2-124](#)
 Layer 2 protocol tunnel counters [2-56](#)
 Layer 2 protocol tunneling error recovery [2-225](#)
 Layer 2 traceroute
 IP addresses [2-728](#)
 MAC addresses [2-725](#)
 Layer 3 mode, enabling [2-686](#)
 line configuration mode [1-3, 1-5](#)
 Link Aggregation Control Protocol
 See EtherChannel
 link flap
 error detection for [2-122](#)
 error recovery timer [2-124](#)
 link state group command [2-232](#)
 link state track command [2-234](#)
 load-distribution methods for EtherChannel [2-343](#)
 location (global configuration) command [2-235](#)
 location (interface configuration) command [2-237](#)
 logging file command [2-239](#)
 logical interface [2-134](#)

loopback error

- detection for [2-122](#)
- recovery timer [2-124](#)

loop guard, for spanning tree [2-632, 2-636](#)**M**mac access-group command [2-241](#)MAC access-groups, displaying [2-519](#)MAC access list configuration mode [2-243](#)mac access-list extended command [2-243](#)MAC access lists [2-80](#)

MAC addresses

displaying

- aging time [2-525](#)
- all [2-523](#)
- dynamic [2-529](#)
- MAC address-table move updates [2-533](#)
- notification settings [2-535](#)
- number of addresses in a VLAN [2-527](#)
- per interface [2-531](#)
- per VLAN [2-539](#)
- static [2-537](#)
- static and dynamic entries [2-521](#)

dynamic

- aging time [2-245](#)
- deleting [2-59](#)
- displaying [2-529](#)

enabling MAC address notification [2-248](#)enabling MAC address-table move update [2-246](#)matching [2-264](#)persistent stack [2-676](#)

static

- adding and removing [2-250](#)
- displaying [2-537](#)
- dropping on an interface [2-251](#)

tables [2-523](#)MAC address notification, debugging [B-17](#)mac address-table aging-time [2-241, 2-246](#)mac address-table aging-time command [2-245](#)mac address-table move update command [2-246](#)mac address-table notification command [2-248](#)mac address-table static command [2-250](#)mac address-table static drop command [2-251](#)

MAC frames

See MTU

macro apply command [2-253](#)macro description command [2-256](#)macro global command [2-257](#)macro global description command [2-260](#)macro name command [2-261](#)

macros

- adding a description [2-256](#)
- adding a global description [2-260](#)
- applying [2-257](#)
- creating [2-261](#)
- displaying [2-566](#)
- interface range [2-70, 2-136](#)
- specifying parameter values [2-257](#)
- tracing [2-257](#)

manual

- audience [xix](#)
- purpose of [xix](#)

maps

QoS

- defining [2-279](#)
- displaying [2-549](#)

VLAN

- creating [2-749](#)
- defining [2-264](#)
- displaying [2-600](#)

match (access-map configuration) command [2-264](#)match (class-map configuration) command [2-266](#)

maximum transmission unit

See MTU

mdix auto command [2-269](#)memory (boot loader) command [A-13](#)mkdir (boot loader) command [A-15](#)

MLD snooping

- configuring [2-214, 2-216](#)
- configuring queries [2-210, 2-212](#)
- configuring topology change notification [2-218](#)
- displaying [2-493, 2-495, 2-497, 2-499](#)
- enabling [2-208](#)
- enabling on a VLAN [2-220](#)

mls qos aggregate-policer command [2-273](#)

mls qos command [2-271](#)

mls qos cos command [2-275](#)

mls qos dscp-mutation command [2-277](#)

mls qos map command [2-279](#)

mls qos queue-set output buffers command [2-283](#)

mls qos queue-set output threshold command [2-285](#)

mls qos rewrite ip dscp command [2-287](#)

mls qos srr-queue input bandwidth command [2-289](#)

mls qos srr-queue input buffers command [2-291](#)

mls qos-srr-queue input cos-map command [2-293](#)

mls qos srr-queue input dscp-map command [2-295](#)

mls qos srr-queue input priority-queue command [2-297](#)

mls qos srr-queue input threshold command [2-299](#)

mls qos-srr-queue output cos-map command [2-301](#)

mls qos srr-queue output dscp-map command [2-303](#)

mls qos trust command [2-305](#)

mls qos vlan-based command [2-307](#)

mode, MVR [2-313](#)

Mode button, and password recovery [2-369](#)

modes, commands [1-2](#)

monitor session command [2-308](#)

more (boot loader) command [A-16](#)

MSTP

- displaying [2-579](#)
- interoperability [2-65](#)
- link type [2-634](#)

MSTP (continued)

MST region

- aborting changes [2-640](#)
- applying changes [2-640](#)
- configuration name [2-640](#)
- configuration revision number [2-640](#)
- current or pending display [2-640](#)
- displaying [2-579](#)
- MST configuration mode [2-640](#)
- VLANs-to-instance mapping [2-640](#)

path cost [2-642](#)

protocol mode [2-638](#)

restart protocol migration process [2-65](#)

root port

- loop guard [2-632](#)
- preventing from becoming designated [2-632](#)
- restricting which can be root [2-632](#)
- root guard [2-632](#)

root switch

- affects of extended system ID [2-630](#)
- hello-time [2-645, 2-653](#)
- interval between BDPU messages [2-646](#)
- interval between hello BPDU messages [2-645, 2-653](#)
- max-age [2-646](#)
- maximum hop count before discarding BPDU [2-647](#)
- port priority for selection of [2-649](#)
- primary or secondary [2-653](#)
- switch priority [2-652](#)

state changes

- blocking to forwarding state [2-660](#)
- enabling BPDU filtering [2-622, 2-657](#)
- enabling BPDU guard [2-624, 2-657](#)
- enabling Port Fast [2-657, 2-660](#)
- forward-delay time [2-644](#)

MSTP (continued)

- state changes (continued)
 - length of listening and learning states [2-644](#)
 - rapid transition to forwarding [2-634](#)
 - shutting down Port Fast-enabled ports [2-657](#)
- state information display [2-578](#)

MTU

- configuring size [2-722](#)
- displaying global setting [2-588](#)

Multicast Listener Discovery

- See MLD

multicast group address, MVR [2-316](#)

multicast groups, MVR [2-314](#)

Multicast Listener Discovery

- See MLD

multicast router learning method [2-196](#)

multicast router ports, configuring [2-196](#)

multicast router ports, IPv6 [2-220](#)

multicast storm control [2-678](#)

multicast VLAN, MVR [2-313](#)

multicast VLAN registration

- See MVR

multiple hosts on authorized port [2-106](#)

Multiple Spanning Tree Protocol

- See MSTP

MVR

- configuring [2-313](#)
- configuring interfaces [2-316](#)
- debug messages, display [B-21](#)
- displaying [2-558](#)
- displaying interface information [2-560](#)
- members, displaying [2-562](#)

mvr (global configuration) command [2-313](#)

mvr (interface configuration) command [2-316](#)

mvr vlan group command [2-317](#)

N

native VLANs [2-715](#)

native VLAN tagging [2-754](#)

Network Assistant requirements [xx](#)

nonegotiate

- DTP messaging [2-700](#)
- speed [2-668](#)

non-IP protocols

- denying [2-80](#)
- forwarding [2-333](#)

non-IP traffic access lists [2-243](#)

non-IP traffic forwarding

- denying [2-80](#)
- permitting [2-333](#)

non-stop forwarding [2-319](#)

normal-range VLANs [2-737, 2-743](#)

note, description [xx](#)

no vlan command [2-737, 2-747](#)

nsf command [2-319](#)

O

online diagnostics

- configuring health monitoring diagnostic tests [2-83](#)
- displaying
 - configured boot-up coverage level [2-415](#)
 - current scheduled tasks [2-415](#)
 - event logs [2-415](#)
 - supported test suites [2-415](#)
 - test ID [2-415](#)
 - test results [2-415](#)
 - test statistics [2-415](#)
- enabling
 - scheduling [2-85](#)
 - syslog messages [2-83](#)

online diagnostics (continued)

global configuration mode

clearing health monitoring diagnostic test schedule [2-83](#)

clearing test-based testing schedule [2-85](#)

setting health monitoring diagnostic testing [2-83](#)

setting test-based testing [2-85](#)

setting up health monitoring diagnostic test schedule [2-83](#)

setting up test-based testing [2-85](#)

removing scheduling [2-85](#)

scheduled switchover

disabling [2-85](#)

enabling [2-85](#)

setting test interval [2-85](#)

specifying health monitoring diagnostic tests [2-83](#)

starting testing [2-87](#)

P

PAGP

See EtherChannel

pagp learn-method command [2-321](#)

pagp port-priority command [2-323](#)

password, VTP [2-763, 2-767](#)

password-recovery mechanism, enabling and disabling [2-369](#)

permit (ARP access-list configuration) command [2-325](#)

permit (IPv6) command [2-327](#)

permit (MAC access-list configuration) command [2-333](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-321](#)

PID, displaying [2-459](#)

PIM-DVMRP, as multicast router learning method [2-196](#)

police aggregate command [2-338](#)

police command [2-336](#)

policed-DSCP map [2-279](#)

policy-map command [2-340](#)

policy maps

applying to an interface [2-371, 2-377](#)

creating [2-340](#)

displaying [2-569](#)

hierarchical [2-341](#)

policers

displaying [2-542](#)

for a single class [2-336](#)

for multiple classes [2-273, 2-338](#)

policed-DSCP map [2-279](#)

traffic classification

defining the class [2-44](#)

defining trust states [2-730](#)

setting DSCP or IP precedence values [2-375](#)

Port Aggregation Protocol

See EtherChannel

port-based authentication

AAA method list [2-3](#)

debug messages, display [B-5](#)

enabling guest VLAN supplicant [2-93, 2-103](#)

enabling IEEE 802.1x

globally [2-90](#)

per interface [2-113](#)

guest VLAN [2-104](#)

host modes [2-106](#)

IEEE 802.1x AAA accounting methods [2-1](#)

initialize an interface [2-107](#)

MAC authentication bypass [2-108](#)

manual control of authorization state [2-113](#)

multiple hosts on authorized port [2-106](#)

PAE as authenticator [2-112](#)

periodic re-authentication

enabling [2-116](#)

time between attempts [2-117](#)

quiet period between failed authentication exchanges [2-117](#)

re-authenticating IEEE 802.1x-enabled ports [2-115](#)

resetting configurable IEEE 802.1x parameters [2-102](#)

- port-based authentication (continued)
 - switch-to-authentication server retransmission time [2-117](#)
 - switch-to-client frame-retransmission number [2-110 to 2-111](#)
 - switch-to-client retransmission time [2-117](#)
- port-channel load-balance command [2-343](#)
- Port Fast, for spanning tree [2-660](#)
- port ranges, defining [2-68, 2-70](#)
- ports, debugging [B-66](#)
- ports, protected [2-713](#)
- port security
 - aging [2-707](#)
 - debug messages, display [B-68](#)
 - enabling [2-702](#)
 - violation error recovery [2-124](#)
- port trust states for QoS [2-305](#)
- port types, MVR [2-316](#)
- power information, displaying [2-430](#)
- priority-queue command [2-345](#)
- priority value, stack member [2-586, 2-681](#)
- private-vlan command [2-347](#)
- private-vlan mapping command [2-350](#)
- private VLANs
 - association [2-711](#)
 - configuring [2-347](#)
 - configuring ports [2-698](#)
 - displaying [2-595](#)
 - host ports [2-698](#)
 - mapping
 - configuring [2-711](#)
 - displaying [2-446](#)
 - promiscuous ports [2-698](#)
- privileged EXEC mode [1-2, 1-3](#)
- product identification information, displaying [2-459](#)
- promiscuous ports, private VLANs [2-698](#)
- protected ports, displaying [2-452](#)

- pruning
 - VLANs [2-715](#)
- VTP
 - displaying interface information [2-446](#)
 - enabling [2-763, 2-767](#)
- pruning-eligible VLAN list [2-717](#)
- PVST+
 - See STP

Q

- QoS
 - auto-QoS
 - configuring [2-22](#)
 - debug messages, display [B-2](#)
 - displaying [2-388](#)
 - class maps
 - creating [2-46](#)
 - defining the match criteria [2-266](#)
 - displaying [2-397](#)
 - defining the CoS value for an incoming packet [2-275](#)
 - displaying configuration information [2-388, 2-541](#)
 - DSCP transparency [2-287](#)
 - DSCP trusted ports
 - applying DSCP-to-DSCP-mutation map to [2-277](#)
 - defining DSCP-to-DSCP-mutation map [2-279](#)
 - egress queues
 - allocating buffers [2-283](#)
 - defining the CoS output queue threshold map [2-301](#)
 - defining the DSCP output queue threshold map [2-303](#)
 - displaying buffer allocations [2-545](#)
 - displaying CoS output queue threshold map [2-549](#)
 - displaying DSCP output queue threshold map [2-549](#)
 - displaying queuing strategy [2-545](#)
 - displaying queue-set settings [2-552](#)

QoS (continued)

egress queues (continued)

- enabling bandwidth shaping and scheduling [2-672](#)
- enabling bandwidth sharing and scheduling [2-674](#)
- limiting the maximum output on a port [2-670](#)
- mapping a port to a queue-set [2-352](#)
- mapping CoS values to a queue and threshold [2-301](#)
- mapping DSCP values to a queue and threshold [2-303](#)
- setting maximum and reserved memory allocations [2-285](#)
- setting WTD thresholds [2-285](#)

enabling [2-271](#)

ingress queues

- allocating buffers [2-291](#)
- assigning SRR scheduling weights [2-289](#)
- defining the CoS input queue threshold map [2-293](#)
- defining the DSCP input queue threshold map [2-295](#)
- displaying buffer allocations [2-545](#)
- displaying CoS input queue threshold map [2-549](#)
- displaying DSCP input queue threshold map [2-549](#)
- displaying queueing strategy [2-545](#)
- displaying settings for [2-543](#)
- enabling the priority queue [2-297](#)
- mapping CoS values to a queue and threshold [2-293](#)
- mapping DSCP values to a queue and threshold [2-295](#)
- setting WTD thresholds [2-299](#)

maps

- defining [2-279](#), [2-293](#), [2-295](#), [2-301](#), [2-303](#)
- displaying [2-549](#)

QoS (continued)

policy maps

- applying an aggregate policer [2-338](#)
- applying to an interface [2-371](#), [2-377](#)
- creating [2-340](#)
- defining policers [2-273](#), [2-336](#)
- displaying policers [2-542](#)
- displaying policy maps [2-569](#)
- hierarchical [2-341](#)
- policed-DSCP map [2-279](#)
- setting DSCP or IP precedence values [2-375](#)
- traffic classifications [2-44](#)

trust states [2-730](#)port trust states [2-305](#)queues, enabling the expedite [2-345](#)

statistics

- in-profile and out-of-profile packets [2-545](#)
- packets enqueued or dropped [2-545](#)
- sent and received CoS values [2-545](#)
- sent and received DSCP values [2-545](#)

trusted boundary for IP phones [2-305](#)VLAN-based [2-307](#)

quality of service

See QoS

querytime, MVR [2-313](#)queue-set command [2-352](#)

Rradius-server dead-criteria command [2-353](#)radius-server host command [2-355](#)

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

re-authenticating IEEE 802.1x-enabled ports [2-115](#)

re-authentication

- periodic [2-116](#)
- time between attempts [2-117](#)

receiver ports, MVR [2-316](#)

receiving flow-control packets [2-130](#)

recovery mechanism

- causes [2-124](#)
- display [2-50, 2-395, 2-432, 2-435](#)
- timer interval [2-125](#)

reload command [2-357](#)

remote command [2-359](#)

remote-span command [2-361](#)

Remote Switched Port Analyzer

- See RSPAN

rename (boot loader) command [A-17](#)

renew ip dhcp snooping database command [2-363](#)

requirements

- Network Assistant [xx](#)

reset (boot loader) command [A-18](#)

reset command [2-752](#)

resource templates, displaying [2-574](#)

restricted VLAN

- See dot1x auth-fail vlan

rmdir (boot loader) command [A-19](#)

rmon collection stats command [2-365](#)

root guard, for spanning tree [2-632](#)

routed ports

- IP addresses on [2-145](#)
- number supported [2-145](#)

routing frames

- See MTU

RSPAN

- configuring [2-308](#)
- displaying [2-555](#)
- filter RSPAN traffic [2-308](#)
- remote-span command [2-361](#)

RSPAN (continued)

- sessions
 - add interfaces to [2-308](#)
 - displaying [2-555](#)
 - start new [2-308](#)

S

scheduled switchover

- disabling [2-85](#)
- enabling [2-85](#)

SDM mismatch mode [2-367, 2-587](#)

sdm prefer command [2-366](#)

SDM templates

- allowed resources [2-367](#)
- and stacking [2-367](#)
- displaying [2-574](#)
- dual IPv4 and IPv6 [2-366](#)

secure ports, limitations [2-704](#)

sending flow-control packets [2-130](#)

service password-recovery command [2-369](#)

service-policy command [2-371](#)

session command [2-374](#)

set (boot loader) command [A-20](#)

set command [2-375](#)

setup command [2-377](#)

setup express command [2-380](#)

show access-lists command [2-382](#)

show archive status command [2-385](#)

show arp access-list command [2-387](#)

show auto qos command [2-388](#)

show boot command [2-392](#)

show cable-diagnostics tdr command [2-395](#)

show changes command [2-752](#)

show class-map command [2-397](#)

show controllers cpu-interface command [2-398](#)

show controllers ethernet-controller command [2-400](#)

show controllers ethernet-controller fastethernet command [2-408](#)

- show controllers tcam command [2-411](#)
- show controller utilization command [2-413](#)
- show current command [2-752](#)
- show dot1q-tunnel command [2-420](#)
- show dot1x command [2-421](#)
- show dtp [2-425](#)
- show eap command [2-427](#)
- show env command [2-430](#)
- show errdisable detect command [2-432](#)
- show errdisable flap-values command [2-434](#)
- show errdisable recovery command [2-435](#)
- show etherchannel command [2-437](#)
- show fallback profile command [2-440](#)
- show flowcontrol command [2-442](#)
- show idprom command [2-444](#)
- show interfaces command [2-446](#)
- show interfaces counters command [2-456](#)
- show inventory command [2-459](#)
- show ip arp inspection command [2-461](#)
- show ipc command [2-487](#)
- show ip dhcp snooping binding command [2-466](#)
- show ip dhcp snooping command [2-465](#)
- show ip dhcp snooping database command [2-468, 2-470](#)
- show ip igmp profile command [2-473](#)
- show ip igmp snooping address command [2-495](#)
- show ip igmp snooping command [2-474, 2-493](#)
- show ip igmp snooping groups command [2-477](#)
- show ip igmp snooping mrouter command [2-479, 2-497](#)
- show ip igmp snooping querier command [2-481, 2-499](#)
- show ip source binding command [2-483](#)
- show ipv6 access-list command [2-491](#)
- show ipv6 route updated [2-501](#)
- show ip verify source command [2-485](#)
- show l2protocol-tunnel command [2-503](#)
- show lacp command [2-506](#)
- show link state group command [2-510](#)
- show location [2-512](#)
- show location command [2-512](#)
- show logging command [2-514](#)
- show mac access-group command [2-519](#)
- show mac address-table address command [2-523](#)
- show mac address-table aging time command [2-525](#)
- show mac address-table command [2-521](#)
- show mac address-table count command [2-527](#)
- show mac address-table dynamic command [2-529](#)
- show mac address-table interface command [2-531](#)
- show mac address-table move update command [2-533](#)
- show mac address-table notification command [2-60, 2-535, B-19](#)
- show mac address-table static command [2-537](#)
- show mac address-table vlan command [2-539](#)
- show mls qos aggregate-policer command [2-542](#)
- show mls qos command [2-541](#)
- show mls qos input-queue command [2-543](#)
- show mls qos interface command [2-545](#)
- show mls qos maps command [2-549](#)
- show mls qos queue-set command [2-552](#)
- show mls qos vlan command [2-554](#)
- show monitor command [2-555](#)
- show mvr command [2-558](#)
- show mvr interface command [2-560](#)
- show mvr members command [2-562](#)
- show pagp command [2-564](#)
- show parser macro command [2-566](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform dl command [C-5](#)
- show platform etherchannel command [C-6](#)
- show platform forward command [C-7](#)
- show platform frontend-controller command [C-9](#)
- show platform igmp snooping command [C-10](#)
- show platform ipc trace command [C-18](#)
- show platform ip multicast command [C-12](#)
- show platform ip unicast command [C-13](#)
- show platform ipv6 unicast command [C-19](#)
- show platform ip wccp command [C-17](#)
- show platform layer4op command [C-21](#)

- show platform mac-address-table command [C-22](#)
- show platform messaging command [C-23](#)
- show platform monitor command [C-24](#)
- show platform mvr table command [C-25](#)
- show platform pm command [C-26](#)
- show platform port-asic command [C-27](#)
- show platform port-security command [C-32](#)
- show platform qos command [C-33](#)
- show platform resource-manager command [C-34](#)
- show platform snmp counters command [C-36](#)
- show platform spanning-tree command [C-37](#)
- show platform stack-manager command [C-39](#)
- show platform stp-instance command [C-38](#)
- show platform tb command [C-41](#)
- show platform team command [C-43](#)
- show platform vlan command [C-46](#)
- show policy-map command [2-569](#)
- show port security command [2-571](#)
- show proposed command [2-752](#)
- show sdm prefer command [2-574](#)
- show setup express command [2-577](#)
- show spanning-tree command [2-578](#)
- show storm-control command [2-584](#)
- show switch command [2-586](#)
- show system mtu command [2-588](#)
- show trust command [2-730](#)
- show udd command [2-590](#)
- show version command [2-593](#)
- show vlan access-map command [2-600](#)
- show vlan command [2-595](#)
- show vlan command, fields [2-597](#)
- show vlan filter command [2-601](#)
- show vmpls command [2-602](#)
- show vtp command [2-605](#)
- shutdown command [2-609](#)
- shutdown threshold, Layer 2 protocol tunneling [2-224](#)
- shutdown vlan command [2-610](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-615](#)
- SNMP informs, enabling the sending of [2-611](#)
- snmp-server enable traps command [2-611](#)
- snmp-server host command [2-615](#)
- snmp trap mac-notification command [2-619](#)
- SNMP traps
 - enabling MAC address notification trap [2-619](#)
 - enabling the MAC address notification feature [2-248](#)
 - enabling the sending of [2-611](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - copying [2-8](#)
 - deleting [2-72](#)
 - downloading [2-11](#)
 - upgrading [2-8, 2-11](#)
 - uploading [2-18](#)
- software version, displaying [2-593](#)
- source ports, MVR [2-316](#)
- SPAN
 - configuring [2-308](#)
 - debug messages, display [B-20](#)
 - displaying [2-555](#)
 - filter SPAN traffic [2-308](#)
 - sessions
 - add interfaces to [2-308](#)
 - displaying [2-555](#)
 - start new [2-308](#)
- spanning-tree backbonefast command [2-621](#)
- spanning-tree bpduguard command [2-622](#)
- spanning-tree bpduguard command [2-624](#)
- spanning-tree cost command [2-626](#)
- spanning-tree etherchannel command [2-628](#)
- spanning-tree extend system-id command [2-630](#)
- spanning-tree guard command [2-632](#)
- spanning-tree link-type command [2-634](#)
- spanning-tree loopguard default command [2-636](#)
- spanning-tree mode command [2-638](#)
- spanning-tree mst configuration command [2-640](#)

- spanning-tree mst cost command [2-642](#)
- spanning-tree mst forward-time command [2-644](#)
- spanning-tree mst hello-time command [2-645](#)
- spanning-tree mst max-age command [2-646](#)
- spanning-tree mst max-hops command [2-647](#)
- spanning-tree mst port-priority command [2-649](#)
- spanning-tree mst pre-standard command [2-651](#)
- spanning-tree mst priority command [2-652](#)
- spanning-tree mst root command [2-653](#)
- spanning-tree portfast (global configuration) command [2-657](#)
- spanning-tree portfast (interface configuration) command [2-660](#)
- spanning-tree port-priority command [2-655](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [2-662](#)
- spanning-tree uplinkfast command [2-663](#)
- spanning-tree vlan command [2-665](#)
- speed command [2-668](#)
- srr-queue bandwidth limit command [2-670](#)
- srr-queue bandwidth shape command [2-672](#)
- srr-queue bandwidth share command [2-674](#)
- SSH, configuring version [2-203](#)
- stack-mac persistent timer command [2-676](#)
- stack member
 - access [2-374](#)
 - number [2-586, 2-684](#)
 - priority value [2-681](#)
 - provisioning [2-682](#)
 - reloading [2-357](#)
- stacks, switch
 - MAC address [2-676](#)
 - provisioning a new member [2-682](#)
 - reloading [2-357](#)
 - stack member access [2-374](#)
 - stack member number [2-586, 2-684](#)
 - stack member priority value [2-586, 2-681](#)
- static-access ports, configuring [2-688](#)
- statistics, Ethernet group [2-365](#)
- sticky learning, enabling [2-702](#)
- storm-control command [2-678](#)
- STP
 - BackboneFast [2-621](#)
 - counters, clearing [2-64](#)
 - debug messages, display
 - BackboneFast events [B-72](#)
 - MSTP [B-75](#)
 - optimized BPDUs handling [B-74](#)
 - spanning-tree activity [B-70](#)
 - switch shim [B-77](#)
 - transmitted and received BPDUs [B-73](#)
 - UplinkFast [B-79](#)
 - detection of indirect link failures [2-621](#)
 - enabling protocol tunneling for [2-224](#)
 - EtherChannel misconfiguration [2-628](#)
 - extended system ID [2-630](#)
 - path cost [2-626](#)
 - protocol modes [2-638](#)
 - root port
 - accelerating choice of new [2-663](#)
 - loop guard [2-632](#)
 - preventing from becoming designated [2-632](#)
 - restricting which can be root [2-632](#)
 - root guard [2-632](#)
 - UplinkFast [2-663](#)
 - root switch
 - affects of extended system ID [2-630, 2-666](#)
 - hello-time [2-665](#)
 - interval between BDPU messages [2-665](#)
 - interval between hello BPDU messages [2-665](#)
 - max-age [2-665](#)
 - port priority for selection of [2-655](#)
 - primary or secondary [2-665](#)
 - switch priority [2-665](#)

- STP (continued)
 - state changes
 - blocking to forwarding state [2-660](#)
 - enabling BPDU filtering [2-622, 2-657](#)
 - enabling BPDU guard [2-624, 2-657](#)
 - enabling Port Fast [2-657, 2-660](#)
 - enabling timer to recover from error state [2-124](#)
 - forward-delay time [2-665](#)
 - length of listening and learning states [2-665](#)
 - shutting down Port Fast-enabled ports [2-657](#)
 - state information display [2-578](#)
 - VLAN options [2-652, 2-665](#)
 - SVIs, creating [2-139](#)
 - Switched Port Analyzer
 - See SPAN
 - switching characteristics
 - modifying [2-686](#)
 - returning to interfaces [2-686](#)
 - switchport access command [2-688](#)
 - switchport backup interface command [2-690](#)
 - switchport block command [2-693](#)
 - switchport command [2-686](#)
 - switchport host command [2-694](#)
 - switchport mode command [2-695](#)
 - switchport mode private-vlan command [2-698](#)
 - switchport nonegotiate command [2-700](#)
 - switchport port-security aging command [2-707](#)
 - switchport port-security command [2-702](#)
 - switchport priority extend command [2-709](#)
 - switchport private-vlan command [2-711](#)
 - switchport protected command [2-713](#)
 - switchports, displaying [2-446](#)
 - switchport trunk command [2-715](#)
 - switchport voice detect [2-718](#)
 - switchport voice vlan command [2-719](#)
 - switch priority command [2-681](#)
 - switch provision command [2-682](#)
 - switch renumber command [2-684](#)
 - system env temperature threshold yellow command [2-721](#)
 - system message logging, save message to flash [2-239](#)
 - system mtu command [2-722](#)
 - system resource templates [2-366](#)
-
- ## T
- tar files, creating, listing, and extracting [2-15](#)
 - TDR, running [2-724](#)
 - temperature information, displaying [2-430](#)
 - templates, system resources [2-366](#)
 - test cable-diagnostics tdr command [2-724](#)
 - traceroute mac command [2-725](#)
 - traceroute mac ip command [2-728](#)
 - trunking, VLAN mode [2-695](#)
 - trunk mode [2-695](#)
 - trunk ports [2-695](#)
 - trunks, to non-DTP device [2-696](#)
 - trusted boundary for QoS [2-305](#)
 - trusted port states for QoS [2-305](#)
 - tunnel ports, Layer 2 protocol, displaying [2-503](#)
 - type (boot loader) command [A-23](#)
-
- ## U
- UDLD
 - aggressive mode [2-732, 2-734](#)
 - debug messages, display [B-87](#)
 - enable globally [2-732](#)
 - enable per interface [2-734](#)
 - error recovery timer [2-124](#)
 - message timer [2-732](#)
 - normal mode [2-732, 2-734](#)
 - reset a shutdown interface [2-736](#)
 - status [2-590](#)
 - udld command [2-732](#)
 - udld port command [2-734](#)
 - udld reset command [2-736](#)
 - unicast storm control [2-678](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-693](#)

unknown unicast traffic, preventing [2-693](#)

unset (boot loader) command [A-24](#)

upgrading

copying software images [2-8](#)

downloading software images [2-11](#)

software images, monitoring status of [2-385](#)

upgrading information

See release notes

UplinkFast, for STP [2-663](#)

user EXEC mode [1-2, 1-3](#)

V

version (boot loader) command [A-26](#)

version mismatch mode [2-587](#)

vlan (global configuration) command [2-737](#)

vlan (VLAN configuration) command [2-743](#)

vlan access-map command [2-749](#)

VLAN access map configuration mode [2-749](#)

VLAN access maps

actions [2-6](#)

displaying [2-600](#)

VLAN-based QoS [2-307](#)

VLAN configuration

rules [2-740, 2-745](#)

saving [2-737, 2-747](#)

VLAN configuration mode

commands

VLAN [2-743](#)

VTP [2-767](#)

description [1-5](#)

entering [2-751](#)

summary [1-3](#)

vlan database command [2-751](#)

vlan dot1q tag native command [2-754](#)

vlan filter command [2-756](#)

VLAN filters, displaying [2-601](#)

VLAN ID range [2-737, 2-743](#)

VLAN maps

applying [2-756](#)

creating [2-749](#)

defining [2-264](#)

displaying [2-600](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-737](#)

configuring [2-737, 2-743](#)

debug messages, display

ISL [B-83](#)

VLAN IOS file system error tests [B-82](#)

VLAN manager activity [B-80](#)

VTP [B-85](#)

displaying configurations [2-595](#)

extended-range [2-737](#)

MAC addresses

displaying [2-539](#)

number of [2-527](#)

media types [2-740, 2-745](#)

normal-range [2-737, 2-743](#)

private [2-698](#)

configuring [2-347](#)

displaying [2-595](#)

See also private VLANs

restarting [2-610](#)

saving the configuration [2-737](#)

shutting down [2-610](#)

SNMP traps for VTP [2-613, 2-616](#)

suspending [2-610](#)

variables [2-743](#)

VLAN Trunking Protocol

See VTP

VM mode [2-587](#)

VMPS

- configuring servers [2-761](#)
- displaying [2-602](#)
- error recovery timer [2-125](#)
- reconfirming dynamic VLAN assignments [2-758](#)

vmmps reconfirm (global configuration) command [2-759](#)

vmmps reconfirm (privileged EXEC) command [2-758](#)

vmmps retry command [2-760](#)

vmmps server command [2-761](#)

voice VLAN

- configuring [2-718, 2-719](#)
- setting port priority [2-709](#)

VQP

- and dynamic-access ports [2-689](#)
- clearing client statistics [2-66](#)
- displaying information [2-602](#)
- per-server retry count [2-760](#)
- reconfirmation interval [2-759](#)
- reconfirming dynamic VLAN assignments [2-758](#)

VTP

changing characteristics [2-763](#)

clearing pruning counters [2-67](#)

configuring

domain name [2-763, 2-767](#)

file name [2-763](#)

mode [2-763, 2-767](#)

password [2-763, 2-767](#)

counters display fields [2-606](#)

displaying information [2-605](#)

enabling

pruning [2-763, 2-767](#)

tunneling for [2-224](#)

Version 2 [2-763, 2-767](#)

mode [2-763, 2-767](#)

pruning [2-763, 2-767](#)

saving the configuration [2-737, 2-747](#)

statistics [2-605](#)

status [2-605](#)

status display fields [2-607](#)

vtp (global configuration) command [2-763](#)

vtp (VLAN configuration) command [2-767](#)

