



Unsupported Commands in Cisco IOS Release 12.2(40)EX

This appendix lists some of the command-line interface (CLI) commands that appear when you enter the question mark (?) at the switch prompt but are not supported in this release, either because they are not tested or because of switch hardware limitations. This is not a complete list. The unsupported commands are listed by software feature and command mode.

Access Control Lists

Unsupported Privileged EXEC Commands

access-enable [host] [timeout *minutes*]

access-template [*access-list-number* | *name*] [*dynamic-name*] [*source*] [*destination*] [timeout *minutes*]

clear access-template [*access-list-number* | *name*] [*dynamic-name*] [*source*] [*destination*].

show access-lists rate-limit [*destination*]

show accounting

show ip accounting [checkpoint] [output-packets | access violations]

show ip cache [*prefix-mask*] [*type number*]

Unsupported Global Configuration Commands

access-list rate-limit *acl-index* {*precedence* | **mask** *prec-mask*}

access-list dynamic extended

Unsupported Route-Map Configuration Commands

match ip address prefix-list *prefix-list-name* [*prefix-list-name...*]

Archive Commands

Unsupported Privileged EXEC Commands

`archive config`
`show archive config`
`show archive log`

ARP Commands

Unsupported Global Configuration Commands

`arp ip-address hardware-address smds`
`arp ip-address hardware-address srp-a`
`arp ip-address hardware-address srp-b`

Unsupported Interface Configuration Commands

`arp probe`
`ip probe proxy`

Boot Loader Commands

Unsupported User EXEC Commands

`verify`

Unsupported Global Configuration Commands

`boot buffersize`
`boot enable-break`

Debug Commands

Unsupported Privileged EXEC Commands

```
debug platform cli-redirect main
debug platform configuration
```

Embedded Event Manager

Unsupported Privileged EXEC Commands

```
event manager update user policy [policy-filename | group [group name expression] ] | repository [url
location]
```

Parameters are not supported for this command:

```
event manager run [policy name] |<paramater1>|... <paramater15>|
```

Unsupported Global Configuration Commands

```
no event manager directory user repository [url location ]
event manager applet [applet-name] maxrun
```

Unsupported Commands in Applet Configuration Mode

```
no event interface name [interface-name ] parameter [counter-name] entry-val [entry counter value]
entry-op {gt|ge|eq|ne|lt|le} [entry-type {increment | rate | value} [exit-val [exit value] exit-op
{gt|ge|eq|ne|lt|le} exit-type { increment | rate | value}] [average-factor <average-factor-value>]
no trigger
tag
```

Fallback Bridging

Unsupported Privileged EXEC Commands

```
clear bridge [bridge-group] multicast [router-ports | groups | counts] [group-address] [interface-unit]
[counts]
clear vlan statistics
show bridge [bridge-group] circuit-group [circuit-group] [src-mac-address] [dst-mac-address]
show bridge [bridge-group] multicast [router-ports | groups] [group-address]
```

show bridge vlan
show interfaces crb
show interfaces { ethernet | fastethernet } [interface | slot/port] irb
show subscriber-policy range

Unsupported Global Configuration Commands

bridge bridge-group acquire
bridge bridge-group address mac-address {forward | discard} [interface-id]
bridge bridge-group aging-time seconds
bridge bridge-group bitswap_l3_addresses
bridge bridge-group bridge ip
bridge bridge-group circuit-group circuit-group pause milliseconds
bridge bridge-group circuit-group circuit-group source-based
bridge cmf
bridge crb
bridge bridge-group domain domain-name
bridge irb
bridge bridge-group mac-address-table limit number
bridge bridge-group multicast-source
bridge bridge-group protocol dec
bridge bridge-group route protocol
bridge bridge-group subscriber policy policy
subscriber-policy policy [[no | default] packet [permit | deny]]

Unsupported Interface Configuration Commands

bridge-group bridge-group cbus-bridging
bridge-group bridge-group circuit-group circuit-number
bridge-group bridge-group input-address-list access-list-number
bridge-group bridge-group input-lat-service-deny group-list
bridge-group bridge-group input-lat-service-permit group-list
bridge-group bridge-group input-lsap-list access-list-number
bridge-group bridge-group input-pattern-list access-list-number
bridge-group bridge-group input-type-list access-list-number
bridge-group bridge-group lat-compression
bridge-group bridge-group output-address-list access-list-number
bridge-group bridge-group output-lat-service-deny group-list

bridge-group *bridge-group* **output-lat-service-permit** *group-list*
bridge-group *bridge-group* **output-lsap-list** *access-list-number*
bridge-group *bridge-group* **output-pattern-list** *access-list-number*
bridge-group *bridge-group* **output-type-list** *access-list-number*
bridge-group *bridge-group* **sse**
bridge-group *bridge-group* **subscriber-loop-control**
bridge-group *bridge-group* **subscriber-trunk**
bridge *bridge-group* **lat-service-filtering**
frame-relay map bridge *dlci* **broadcast**
interface bvi *bridge-group*
x25 map bridge *x.121-address* **broadcast** [*options-keywords*]

HSRP

Unsupported Global Configuration Commands

interface Async
interface BVI
interface Dialer
interface Group-Async
interface Lex
interface Multilink
interface Virtual-Template
interface Virtual-Tokenring

Unsupported Interface Configuration Commands

mtu
standby mac-refresh *seconds*
standby use-bia

IGMP Snooping Commands

Unsupported Global Configuration Commands

ip igmp snooping tcn

Interface Commands

Unsupported Privileged EXEC Commands

show interfaces [*interface-id* | **vlan** *vlan-id*] [**crb** | **fair-queue** | **irb** | **mac-accounting** | **precedence** | **irb** | **random-detect** | **rate-limit** | **shape**]

Unsupported Global Configuration Commands

interface tunnel

Unsupported Interface Configuration Commands

transmit-interface *type number*

IP Multicast Routing

Unsupported Privileged EXEC Commands

clear ip rtp header-compression [*type number*]

The **debug ip packet** command displays packets received by the switch CPU. It does not display packets that are hardware-switched.

The **debug ip mcache** command affects packets received by the switch CPU. It does not display packets that are hardware-switched.

The **debug ip mpacket** [**detail**] [*access-list-number* [*group-name-or-address*]] command affects only packets received by the switch CPU. Because most multicast packets are hardware-switched, use this command only when you know that the route will forward the packet to the CPU.

debug ip pim atm

show frame-relay ip rtp header-compression [**interface** *type number*]

The **show ip mcache** command displays entries in the cache for those packets that are sent to the switch CPU. Because most multicast packets are switched in hardware without CPU involvement, you can use this command, but multicast packet information is not displayed.

The **show ip mpacket** commands are supported but are only useful for packets received at the switch CPU. If the route is hardware-switched, the command has no effect because the CPU does not receive the packet and cannot display it.

show ip pim vc [*group-address* | *name*] [*type number*]

show ip rtp header-compression [*type number*] [**detail**]

Unsupported Global Configuration Commands

```
ip multicast-routing vrf vrf-name  
ip pim accept-rp {address | auto-rp} [group-access-list-number]  
ip pim message-interval seconds
```

Unsupported Interface Configuration Commands

```
frame-relay ip rtp header-compression [active | passive]  
frame-relay map ip ip-address dlc [broadcast] compress  
frame-relay map ip ip-address dlc rtp header-compression [active | passive]  
ip igmp helper-address ip-address  
ip multicast helper-map {group-address | broadcast} {broadcast-address | multicast-address}  
extended-access-list-number  
ip multicast rate-limit {in | out} [video | whiteboard] [group-list access-list] [source-list access-list]  
kbps  
ip multicast ttl-threshold ttl-value (instead, use the ip multicast boundary access-list-number  
interface configuration command)  
ip multicast use-functional  
ip pim minimum-vc-rate pps  
ip pim multipoint-signalling  
ip pim nbma-mode  
ip pim vc-count number  
ip rtp compression-connections number  
ip rtp header-compression [passive]
```

IP Unicast Routing

Unsupported Privileged EXEC or User EXEC Commands

```
clear ip accounting [checkpoint]  
clear ip bgp address flap-statistics  
clear ip bgp prefix-list  
debug ip cef stats  
show cef [drop | not-cef-switched]  
show ip accounting [checkpoint] [output-packets | access-violations]  
show ip bgp dampened-paths  
show ip bgp inconsistent-as
```

show ip bgp regexp *regular expression*
show ip prefix-list *regular expression*

Unsupported Global Configuration Commands

ip accounting precedence {input | output}
ip accounting-list *ip-address wildcard*
ip as-path access-list
ip accounting-transits *count*
ip cef accounting [per-prefix] [non-recursive]
ip cef traffic-statistics [load-interval *seconds*] [update-rate *seconds*]
ip flow-aggregation
ip flow-cache
ip flow-export
ip gratuitous-arps
ip local
ip prefix-list
ip reflexive-list
router egp
router isis
router iso-igrp
router mobile
router odr
router static

Unsupported Interface Configuration Commands

ip accounting
ip load-sharing [per-packet]
ip mtu *bytes*
ip verify
ip unnumbered *type number*
All **ip security** commands

Unsupported BGP Router Configuration Commands

address-family *vpn4*
default-information *originate*

neighbor advertise-map
neighbor allowas-in
neighbor default-originate
neighbor description
network backdoor
table-map

Unsupported VPN Configuration Commands

All

Unsupported Route Map Commands

match route-type for policy-based routing (PBR)
set as-path { tag | prepend *as-path-string* }
set automatic-tag
set dampening *half-life reuse suppress max-suppress-time*
set default interface *interface-id* [*interface-id*.....]
set interface *interface-id* [*interface-id*.....]
set ip default next-hop *ip-address* [*ip-address*.....]
set ip destination *ip-address mask*
set ip next-hop verify-availability
set ip precedence *value*
set ip qos-group
set metric-type internal
set origin
set metric-type internal
set tag *tag-value*

MAC Address Commands

Unsupported Privileged EXEC Commands

show mac-address-table
show mac-address-table address
show mac-address-table aging-time
show mac-address-table count
show mac-address-table dynamic

show mac-address-table interface
show mac-address-table multicast
show mac-address-table notification
show mac-address-table static
show mac-address-table vlan
show mac address-table multicast



Note Use the **show ip igmp snooping groups** privileged EXEC command to display Layer 2 multicast address-table entries for a VLAN.

Unsupported Global Configuration Commands

mac-address-table aging-time
mac-address-table notification
mac-address-table static

Miscellaneous

Unsupported Privileged EXEC Commands

file verify auto
remote command
show cable-diagnostics prbs
test cable-diagnostics prbs

Unsupported Global Configuration Commands

errdisable recovery cause unicast flood
l2protocol-tunnel global drop-threshold
service compress-config
stack-mac persistent timer
track *object-number* rtr

MSDP

Unsupported Privileged EXEC Commands

```
show access-expression
show exception
show location
show pm LINE
show smf [interface-id]
show subscriber-policy [policy-number]
show template [template-name]
```

Unsupported Global Configuration Commands

ip msdp default-peer *ip-address* | *name* [**prefix-list** *list*] (Because BGP/MBGP is not supported, use the **ip msdp peer** command instead of this command.)

NetFlow Commands

Unsupported Global Configuration Commands

```
ip flow-aggregation cache
ip flow-cache entries
ip flow-export
```

Network Address Translation (NAT) Commands

Unsupported Privileged EXEC Commands

```
show ip nat statistics
show ip nat translations
```

QoS

Unsupported Global Configuration Command

priority-list

Unsupported Interface Configuration Commands

priority-group

rate-limit

Unsupported Policy-Map Configuration Command

class class-default where **class-default** is the *class-map-name*.

RADIUS

Unsupported Global Configuration Commands

aaa nas port extended

aaa authentication *feature* default enable

aaa authentication *feature* default line

radius-server attribute nas-port

radius-server configure

radius-server extended-portnames

SNMP

Unsupported Global Configuration Commands

snmp-server enable informs

snmp-server ifindex persist

Spanning Tree

Unsupported Global Configuration Command

`spanning-tree pathcost method {long | short}`

Unsupported Interface Configuration Command

`spanning-tree stack-port`

VLAN

Unsupported Global Configuration Command

`vlan internal allocation policy {ascending | descending}`

Unsupported User EXEC Commands

`show running-config vlan`

`show vlan ifindex`

VTP

Unsupported Privileged EXEC Command

`vtp {password password | pruning | version number}`



Note

This command has been replaced by the **vtp** global configuration command.
