



INDEX

A

- aaa accounting dot1x command [2-1](#)
- aaa authentication dot1x command [2-3](#)
- aaa authorization network command [2-5, 2-24, 2-30, 2-32, 2-34, 2-36, 2-38, 2-130, 2-292, 2-458, B-7, B-31](#)
- AAA methods [2-3](#)
- access control entries
 - See ACEs
- access control lists
 - See ACLs
- access groups
 - IP [2-178](#)
 - MAC, displaying [2-584](#)
- access list, IPv6 [2-249](#)
- access map configuration mode [2-318](#)
- access mode [2-775](#)
- access ports [2-775](#)
- ACEs [2-114, 2-392](#)
- ACLs
 - deny [2-112](#)
 - displaying [2-440](#)
 - for non-IP protocols [2-296](#)
 - IP [2-178](#)
 - matching [2-318](#)
 - on Layer 2 interfaces [2-178](#)
 - permit [2-390](#)
- action command [2-6](#)
- aggregate-port learner [2-379](#)
- allowed VLANs [2-795](#)
- archive copy-sw command [2-8](#)
- archive download-sw command [2-11](#)
- archive tar command [2-15](#)
- archive upload-sw command [2-18](#)
- arp (boot loader) command [A-2](#)
- arp access-list command [2-20](#)
- authentication command disable-port ignore [2-23](#)
- authentication control-direction command [2-24](#)
- authentication event command [2-26](#)
- authentication failed VLAN
 - See dot1x auth-fail vlan
- authentication fallback command [2-30](#)
- authentication host-mode command [2-32](#)
- authentication mac-move permit command [2-34](#)
- authentication open command [2-36](#)
- authentication order command [2-38](#)
- authentication periodic command [2-40](#)
- authentication port-control command [2-42](#)
- authentication priority command [2-44](#)
- authentication timer command [2-46](#)
- authentication violation command [2-48](#)
- auth-fail max-attempts
 - See dot1x auth-fail max-attempts
- auth-fail vlan
 - See dot1x auth-fail vlan
- auth open command [2-36](#)
- auth order command [2-38](#)
- authorization state of controlled port [2-146](#)
- auth timer command [2-46](#)
- autonegotiation of duplex mode [2-156](#)
- auto qos voip command [2-50](#)

B

BackboneFast, for STP [2-697](#)

backup interfaces

configuring [2-769](#)

displaying [2-507](#)

boot (boot loader) command [A-3](#)

boot auto-copy-sw command [2-54](#)

boot auto-download-sw command [2-56](#)

boot config-file command [2-58](#)

boot enable-break command [2-59](#)

boot helper command [2-60](#)

boot helper-config file command [2-61](#)

booting

Cisco IOS image [2-64](#)

displaying environment variables [2-453](#)

interrupting [2-59](#)

manually [2-62](#)

boot loader

accessing [A-1](#)

booting

Cisco IOS image [A-3](#)

helper image [2-60](#)

directories

creating [A-19](#)

displaying a list of [A-8](#)

removing [A-23](#)

displaying

available commands [A-13](#)

memory heap utilization [A-14](#)

version [A-30](#)

environment variables

described [A-24](#)

displaying settings [A-24](#)

location of [A-25](#)

setting [A-24](#)

unsetting [A-28](#)

files

copying [A-6](#)

deleting [A-7](#)

displaying a list of [A-8](#)

displaying the contents of [A-5, A-20, A-27](#)

renaming [A-21](#)

file system

formatting [A-11](#)

initializing flash [A-10](#)

running a consistency check [A-12](#)

prompt [A-1](#)

resetting the system [A-22](#)

boot manual command [2-62](#)

boot private-config-file command [2-63](#)

boot system command [2-64](#)

BPDU filtering, for spanning tree [2-698, 2-732](#)

BPDU guard, for spanning tree [2-700, 2-732](#)

broadcast storm control [2-753](#)

C

cat (boot loader) command [A-5](#)

CDP, enabling protocol tunneling for [2-275](#)

channel-group command [2-66](#)

channel-protocol command [2-70](#)

Cisco SoftPhone

auto-QoS configuration [2-50](#)

trusting packets sent from [2-359](#)

CISP

See Client Information Signalling Protocol

cisp

debug platform cisp command [B-31](#)

cisp enable command [2-71](#)

class command [2-72](#)

class-map command [2-74](#)

class maps

creating [2-74](#)

defining the match criteria [2-320](#)

displaying [2-459](#)

class of service
 See CoS

clear dot1x command [2-76](#)

clear eap command [2-77](#)

clear errdisable interface [2-78](#)

clear ip arp inspection log command [2-79](#)

clear ip arp inspection statistics command [2-80](#)

clear ipc command [2-85](#)

clear ip dhcp snooping database command [2-81, 2-83](#)

clear ipv6 dhcp conflict command [2-86](#)

clear l2protocol-tunnel counters command [2-87](#)

clear lacp command [2-88](#)

clear logging command [2-89](#)

clear mac address-table command [2-90, 2-91](#)

clear nmsp statistics command [2-92](#)

clear pagp command [2-93](#)

clear port-security command [2-94](#)

clear spanning-tree counters command [2-96](#)

clear spanning-tree detected-protocols command [2-97](#)

clear vmps statistics command [2-98](#)

clear vtp counters command [2-99](#)

Client Information Signalling Protocol [2-71, 2-130, 2-458, B-7, B-31](#)

command modes defined [1-2](#)

configuration files
 password recovery disable considerations [A-1](#)
 specifying the name [2-58, 2-63](#)

configuring multiple interfaces [2-174](#)

config-vlan mode
 commands [2-819](#)
 entering [2-818](#)

copy (boot loader) command [A-6](#)

copy logging onboard command [2-100](#)

CoS
 assigning default value to incoming packets [2-329](#)
 assigning to Layer 2 protocol packets [2-278](#)
 overriding the incoming value [2-329](#)

CoS-to-DSCP map [2-333](#)

CPU ASIC statistics, displaying [2-460](#)

crashinfo files [2-165](#)

critical VLAN [2-27](#)

D

debug authentication [B-2](#)

debug auto qos command [B-4](#)

debug backup command [B-6](#)

debug cisp command [B-7](#)

debug dot1x command [B-8](#)

debug dtp command [B-9](#)

debug eap command [B-10](#)

debug etherchannel command [B-11](#)

debug fastethernet command [B-12](#)

debug interface command [B-15](#)

debug ip dhcp snooping command [B-13](#)

debug ip igmp filter command [B-16](#)

debug ip igmp max-groups command [B-17](#)

debug ip igmp snooping command [B-18](#)

debug ip verify source packet command [B-14](#)

debug lacp command [B-19](#)

debug lldp packets command [B-20](#)

debug mac-notification command [B-21](#)

debug matm command [B-22](#)

debug matm move update command [B-23](#)

debug monitor command [B-24](#)

debug mvrdbg command [B-25](#)

debug nmsp command [B-26](#)

debug nvram command [B-27](#)

debug pagp command [B-28](#)

debug platform acl command [B-29](#)

debug platform backup interface command [B-30](#)

debug platform cisp command [B-31](#)

debug platform cli-redirect main command [B-32](#)

debug platform configuration command [B-33](#)

debug platform cpu-queues command [B-34](#)

debug platform device-manager command [B-36](#)

debug platform dot1x command [B-37](#)

debug platform etherchannel command [B-38](#)

- debug platform fallback-bridging command [B-39](#)
- debug platform ip arp inspection command [B-40](#)
- debug platform ipc command [B-49](#)
- debug platform ip dhcp command [B-41](#)
- debug platform ip igmp snooping command [B-42](#)
- debug platform ip multicast command [B-44](#)
- debug platform ip unicast command [B-46](#)
- debug platform ip wccp command [B-48](#)
- debug platform led command [B-50](#)
- debug platform matm command [B-51](#)
- debug platform messaging application command [B-52](#)
- debug platform phy command [B-53](#)
- debug platform pm command [B-55](#)
- debug platform port-asic command [B-57](#)
- debug platform port-security command [B-58](#)
- debug platform qos-acl-tcam command [B-59](#)
- debug platform remote-commands command [B-60](#)
- debug platform resource-manager command [B-61](#)
- debug platform snmp command [B-62](#)
- debug platform span command [B-63](#)
- debug platform stack-manager command [B-64](#)
- debug platform supervisor-asic command [B-65](#)
- debug platform sw-bridge command [B-66](#)
- debug platform tcam command [B-67](#)
- debug platform udd command [B-70](#)
- debug platform vlan command [B-71](#)
- debug pm command [B-72](#)
- debug port-security command [B-74](#)
- debug qos-manager command [B-75](#)
- debug spanning-tree backbonefast command [B-78](#)
- debug spanning-tree bpdu command [B-79](#)
- debug spanning-tree bpdu-opt command [B-80](#)
- debug spanning-tree command [B-76](#)
- debug spanning-tree mstp command [B-81](#)
- debug spanning-tree switch command [B-83](#)
- debug spanning-tree uplinkfast command [B-85](#)
- debug sw-vlan command [B-86](#)
- debug sw-vlan ifs command [B-88](#)
- debug sw-vlan notification command [B-89](#)
- debug sw-vlan vtp command [B-91](#)
- debug udd command [B-93](#)
- debug vqpc command [B-95](#)
- define interface-range command [2-102](#)
- delete (boot loader) command [A-7](#)
- delete command [2-104](#)
- deny (ARP access-list configuration) command [2-105](#)
- deny (IPv6) command [2-107](#)
- deny command [2-112](#)
- detect mechanism, causes [2-157](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-207](#)
 - enabling
 - on a VLAN [2-213](#)
 - option 82 [2-205, 2-207](#)
 - trust on an interface [2-211](#)
 - error recovery timer [2-161](#)
 - rate limiting [2-210](#)
- DHCP snooping binding database
 - binding file, configuring [2-203](#)
 - bindings
 - adding [2-201](#)
 - deleting [2-201](#)
 - displaying [2-529](#)
 - clearing database agent statistics [2-81, 2-83](#)
 - database agent, configuring [2-203](#)
 - displaying
 - binding entries [2-529](#)
 - database agent status [2-531, 2-533](#)
 - renewing [2-420](#)
- dir (boot loader) command [A-8](#)
- directories, deleting [2-104](#)
- domain name, VTP [2-837](#)
- dot1x auth-fail max-attempts [2-124](#)
- dot1x auth-fail vlan [2-126](#)
- dot1x command [2-122](#)
- dot1x control-direction command [2-128](#)
- dot1x credentials (global configuration) command [2-130](#)
- dot1x critical global configuration command [2-131](#)

- dot1x critical interface configuration command [2-133](#)
- dot1x default command [2-135](#)
- dot1x fallback command [2-136](#)
- dot1x guest-vlan command [2-137](#)
- dot1x host-mode command [2-139](#)
- dot1x initialize command [2-140](#)
- dot1x mac-auth-bypass command [2-141](#)
- dot1x max-reauth-req command [2-143](#)
- dot1x max-req command [2-144](#)
- dot1x pae command [2-145](#)
- dot1x port-control command [2-146](#)
- dot1x re-authenticate command [2-148](#)
- dot1x reauthentication command [2-149](#)
- dot1x supplicant force-multicast command [2-150](#)
- dot1x timeout command [2-151](#)
- dot1x violation-mode command [2-153](#)
- dropping packets, with ACL matches [2-6](#)
- drop threshold, Layer 2 protocol tunneling [2-275](#)
- DSCP-to-CoS map [2-333](#)
- DSCP-to-DSCP-mutation map [2-333](#)
- DTP [2-776](#)
- DTP flap
 - error detection for [2-157](#)
 - error recovery timer [2-161](#)
- DTP negotiation [2-780](#)
- dual IPv4 and IPv6 templates [2-385](#)
- duplex command [2-155](#)
- dynamic-access ports
 - configuring [2-765](#)
 - restrictions [2-766](#)
- dynamic ARP inspection
 - ARP ACLs
 - apply to a VLAN [2-186](#)
 - define [2-20](#)
 - deny packets [2-105](#)
 - display [2-444](#)
 - permit packets [2-383](#)
- clear
 - log buffer [2-79](#)
 - statistics [2-80](#)
- display
 - ARP ACLs [2-444](#)
 - configuration and operating state [2-524](#)
 - log buffer [2-524](#)
 - statistics [2-524](#)
 - trust state and rate limit [2-524](#)
- enable per VLAN [2-196](#)
- error detection for [2-157](#)
- error recovery timer [2-161](#)
- log buffer
 - clear [2-79](#)
 - configure [2-190](#)
 - display [2-524](#)
- rate-limit incoming ARP packets [2-188](#)
- statistics
 - clear [2-80](#)
 - display [2-524](#)
- trusted interface state [2-192](#)
- type of packet logged [2-197](#)
- validation checks [2-194](#)
- dynamic auto VLAN membership mode [2-775](#)
- dynamic desirable VLAN membership mode [2-775](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

- EAP-request/identity frame
 - maximum number to send [2-144](#)
 - response time before retransmitting [2-151](#)
- encapsulation methods [2-795](#)
- environment variables, displaying [2-453](#)
- errdisable detect cause command [2-157](#)
- errdisable detect cause small-frame comand [2-159](#)

errdisable recovery cause small-frame [2-164](#)
 errdisable recovery command [2-161](#)
 error conditions, displaying [2-495](#)
 error disable detection [2-157](#)
 error-disabled interfaces, displaying [2-507](#)
 EtherChannel
 assigning Ethernet interface to channel group [2-66](#)
 creating port-channel logical interface [2-172](#)
 debug EtherChannel/PAgP, display [B-11](#)
 debug platform-specific events, display [B-38](#)
 displaying [2-498](#)
 enabling Layer 2 protocol tunneling for
 LACP [2-276](#)
 PAgP [2-276](#)
 UDLD [2-276](#)
 interface information, displaying [2-507](#)
 LACP
 clearing channel-group information [2-88, 2-89](#)
 debug messages, display [B-19](#)
 displaying [2-570](#)
 modes [2-66](#)
 port priority for hot-standby ports [2-279](#)
 restricting a protocol [2-70](#)
 system priority [2-281](#)
 load-distribution methods [2-400](#)
 PAgP
 aggregate-port learner [2-379](#)
 clearing channel-group information [2-93](#)
 debug messages, display [B-28](#)
 displaying [2-635](#)
 error detection for [2-157](#)
 error recovery timer [2-161](#)
 learn method [2-379](#)
 modes [2-66](#)
 physical-port learner [2-379](#)
 priority of interface for transmitted traffic [2-381](#)
 Ethernet controller, internal register display [2-462, 2-469](#)

Ethernet Management port, debugging [B-12](#)
 Ethernet statistics, collecting [2-423](#)
 exception crashinfo command [2-165, 2-170](#)
 extended-range VLANs
 and allowed VLAN list [2-795](#)
 and pruning-eligible list [2-795](#)
 configuring [2-818](#)
 extended system ID for STP [2-706](#)

F

fallback profile command [2-166](#)
 fallback profiles, displaying [2-501](#)
 fan information, displaying [2-491](#)
 file name, VTP [2-837](#)
 files, deleting [2-104](#)
 flash_init (boot loader) command [A-10](#)
 flexible authentication ordering [2-38](#)
 Flex Links
 configuring [2-769](#)
 displaying [2-507](#)
 flowcontrol command [2-168](#)
 format (boot loader) command [A-11](#)
 forwarding packets, with ACL matches [2-6](#)
 forwarding results, display [C-7](#)
 frame forwarding information, displaying [C-7](#)
 front-end controller counter and status information [C-9](#)
 fsck (boot loader) command [A-12](#)

G

global configuration mode [1-2, 1-4](#)

H

hardware ACL statistics [2-440](#)
 health monitoring diagnostic tests [2-115](#)
 help (boot loader) command [A-13](#)

hierarchical policy maps [2-398](#)
 host connection, port configuration [2-774](#)
 host ports, private VLANs [2-778](#)

IEEE 802.1Q trunk ports and native VLANs [2-828](#)

IEEE 802.1Q tunnel ports

- configuring [2-775](#)
- displaying [2-481](#)
- limitations [2-776](#)

IEEE 802.1x

- and switchport modes [2-776](#)
- violation error recovery [2-161](#)
- See also port-based authentication

IGMP filters

- applying [2-216](#)
- debug messages, display [B-16](#)

IGMP groups, setting maximum [2-218](#)

IGMP maximum groups, debugging [B-17](#)

IGMP profiles

- creating [2-220](#)
- displaying [2-536](#)

IGMP snooping

- adding ports as a static member of a group [2-236](#)
- displaying [2-537, 2-542, 2-544](#)
- enabling [2-222](#)
- enabling the configurable-leave timer [2-224](#)
- enabling the Immediate-Leave feature [2-233](#)
- flooding query count [2-230](#)
- interface topology change notification behavior [2-232](#)
- multicast table [2-540](#)
- querier [2-226](#)
- query solicitation [2-230](#)
- report suppression [2-228](#)
- switch topology change notification behavior [2-230](#)

images

- See software images

Immediate-Leave processing

- IGMP [2-233](#)
- IPv6 [2-271](#)
- MVR [2-369](#)

interface configuration mode [1-2, 1-4](#)

interface port-channel command [2-172](#)

interface range command [2-174](#)

interface-range macros [2-102](#)

interfaces

- assigning Ethernet interface to channel group [2-66](#)
- configuring [2-155](#)
- configuring multiple [2-174](#)
- creating port-channel logical [2-172](#)
- debug messages, display [B-15](#)
- disabling [2-683](#)
- displaying the MAC address table [2-596](#)
- restarting [2-683](#)

interface speed, configuring [2-743](#)

interface vlan command [2-176](#)

internal registers, displaying [2-462, 2-469, 2-472](#)

Internet Group Management Protocol

- See IGMP

invalid GBIC

- error detection for [2-157](#)
- error recovery timer [2-161](#)

ip access-group command [2-178](#)

ip address command [2-181](#)

IP addresses, setting [2-181](#)

IP address matching [2-318](#)

ip admission command [2-183](#)

ip admission name proxy http command [2-184](#)

ip arp inspection filter vlan command [2-186](#)

ip arp inspection limit command [2-188](#)

ip arp inspection log-buffer command [2-190](#)

ip arp inspection trust command [2-192](#)

ip arp inspection validate command [2-194](#)

ip arp inspection vlan command [2-196](#)

ip arp inspection vlan logging command [2-197](#)

IP DHCP snooping

See DHCP snooping

- ip dhcp snooping binding command [2-201](#)
- ip dhcp snooping command [2-200](#)
- ip dhcp snooping database command [2-203](#)
- ip dhcp snooping information option allow-untrusted command [2-207](#)
- ip dhcp snooping information option command [2-205](#)
- ip dhcp snooping information option format remote-id command [2-209](#)
- ip dhcp snooping limit rate command [2-210](#)
- ip dhcp snooping trust command [2-211](#)
- ip dhcp snooping verify command [2-212](#)
- ip dhcp snooping vlan command [2-213](#)
- ip dhcp snooping vlan information option format-type circuit-id string command [2-214](#)
- ip igmp filter command [2-216](#)
- ip igmp max-groups command [2-218](#), [2-243](#), [2-245](#)
- ip igmp profile command [2-220](#)
- ip igmp snooping command [2-222](#)
- ip igmp snooping last-member-query-interval command [2-224](#)
- ip igmp snooping querier command [2-226](#)
- ip igmp snooping report-suppression command [2-228](#)
- ip igmp snooping tcn command [2-230](#)
- ip igmp snooping tcn flood command [2-232](#)
- ip igmp snooping vlan immediate-leave command [2-233](#)
- ip igmp snooping vlan mrouter command [2-234](#)
- ip igmp snooping vlan static command [2-236](#)
- IP multicast addresses [2-366](#)
- IP phones
 - auto-QoS configuration [2-50](#)
 - trusting packets sent from [2-359](#)
- IP-precedence-to-DSCP map [2-333](#)
- ip snap forwarding command [2-238](#)
- ip source binding command [2-239](#)

IP source guard

- disabling [2-247](#)
- displaying
 - binding entries [2-546](#)
 - configuration [2-548](#)
 - dynamic binding entries only [2-529](#)
- enabling [2-247](#)
- static IP source bindings [2-239](#)
- ip ssh command [2-241](#)
- IPv6 access list, deny conditions [2-107](#)
- ipv6 access-list command [2-249](#)
- ipv6 address dhcp command [2-251](#)
- ipv6 dhcp client request vendor command [2-252](#)
- ipv6 dhcp ping packets command [2-253](#)
- ipv6 dhcp pool command [2-255](#)
- ipv6 dhcp server command [2-257](#)
- ipv6 mld snooping command [2-259](#)
- ipv6 mld snooping last-listener-query count command [2-261](#)
- ipv6 mld snooping last-listener-query-interval command [2-263](#)
- ipv6 mld snooping listener-message-suppression command [2-265](#)
- ipv6 mld snooping robustness-variable command [2-267](#)
- ipv6 mld snooping tcn command [2-269](#)
- ipv6 mld snooping vlan command [2-271](#)
- IPv6 SDM template [2-424](#)
- ipv6 traffic-filter command [2-273](#)
- ip verify source command [2-247](#)

J

- jumbo frames
 - See MTU

L

l2protocol-tunnel command [2-275](#)
 l2protocol-tunnel cos command [2-278](#)
 LACP
 See EtherChannel
 lacp port-priority command [2-279](#)
 lacp system-priority command [2-281](#)
 Layer 2 mode, enabling [2-763](#)
 Layer 2 protocol ports, displaying [2-567](#)
 Layer 2 protocol-tunnel
 error detection for [2-157](#)
 error recovery timer [2-161](#)
 Layer 2 protocol tunnel counters [2-87](#)
 Layer 2 protocol tunneling error recovery [2-276](#)
 Layer 2 traceroute
 IP addresses [2-809](#)
 MAC addresses [2-806](#)
 Layer 3 mode, enabling [2-763](#)
 line configuration mode [1-3, 1-5](#)
 Link Aggregation Control Protocol
 See EtherChannel
 link flap
 error detection for [2-157](#)
 error recovery timer [2-161](#)
 link state group command [2-283](#)
 link state track command [2-285](#)
 load-distribution methods for EtherChannel [2-400](#)
 location (global configuration) command [2-286](#)
 location (interface configuration) command [2-288](#)
 logging file command [2-290](#)
 logical interface [2-172](#)
 loopback error
 detection for [2-157](#)
 recovery timer [2-161](#)
 loop guard, for spanning tree [2-708, 2-712](#)

M

mab request format attribute 32 command [2-292](#)
 mac access-group command [2-294](#)
 MAC access-groups, displaying [2-584](#)
 MAC access list configuration mode [2-296](#)
 mac access-list extended command [2-296](#)
 MAC access lists [2-112](#)
 MAC addresses
 disabling MAC address learning per VLAN [2-299](#)
 displaying
 aging time [2-590](#)
 all [2-588](#)
 dynamic [2-594](#)
 MAC address-table move updates [2-599](#)
 notification settings [2-598, 2-601](#)
 number of addresses in a VLAN [2-592](#)
 per interface [2-596](#)
 per VLAN [2-605](#)
 static [2-603](#)
 static and dynamic entries [2-586](#)
 dynamic
 aging time [2-298](#)
 deleting [2-90](#)
 displaying [2-594](#)
 enabling MAC address notification [2-303](#)
 enabling MAC address-table move update [2-301](#)
 matching [2-318](#)
 persistent stack [2-751](#)
 static
 adding and removing [2-305](#)
 displaying [2-603](#)
 dropping on an interface [2-306](#)
 tables [2-588](#)
 MAC address notification, debugging [B-21](#)
 mac address-table aging-time [2-294, 2-318](#)
 mac address-table aging-time command [2-298](#)
 mac address-table learning command [2-299](#)
 mac address-table move update command [2-301](#)

- mac address-table notification command [2-303](#)
- mac address-table static command [2-305](#)
- mac address-table static drop command [2-306](#)
- MAC frames
 - See MTU
- macro apply command [2-308](#)
- macro description command [2-311](#)
- macro global command [2-312](#)
- macro global description command [2-315](#)
- macro name command [2-316](#)
- macros
 - adding a description [2-311](#)
 - adding a global description [2-315](#)
 - applying [2-312](#)
 - creating [2-316](#)
 - displaying [2-637](#)
 - interface range [2-102, 2-174](#)
 - specifying parameter values [2-312](#)
 - tracing [2-312](#)
- maps
 - QoS
 - defining [2-333](#)
 - displaying [2-615](#)
 - VLAN
 - creating [2-825](#)
 - defining [2-318](#)
 - displaying [2-674](#)
- match (access-map configuration) command [2-318](#)
- match (class-map configuration) command [2-320](#)
- maximum transmission unit
 - See MTU
- mdix auto command [2-323](#)
- memory (boot loader) command [A-14](#)
- mgmt_clr (boot loader) command [A-16](#)
- mgmt_init (boot loader) command [A-17, A-18](#)
- mkdir (boot loader) command [A-19](#)
- MLD snooping
 - configuring [2-265, 2-267](#)
 - configuring queries [2-261, 2-263](#)
 - configuring topology change notification [2-269](#)
 - displaying [2-557, 2-559, 2-561, 2-563](#)
 - enabling [2-259](#)
 - enabling on a VLAN [2-271](#)
- mls qos aggregate-policer command [2-327](#)
- mls qos command [2-325](#)
- mls qos cos command [2-329](#)
- mls qos dscp-mutation command [2-331](#)
- mls qos map command [2-333](#)
- mls qos queue-set output buffers command [2-337](#)
- mls qos queue-set output threshold command [2-339](#)
- mls qos rewrite ip dscp command [2-341](#)
- mls qos srr-queue input bandwidth command [2-343](#)
- mls qos srr-queue input buffers command [2-345](#)
- mls qos srr-queue input cos-map command [2-347](#)
- mls qos srr-queue input dscp-map command [2-349](#)
- mls qos srr-queue input priority-queue command [2-351](#)
- mls qos srr-queue input threshold command [2-353](#)
- mls qos srr-queue output cos-map command [2-355](#)
- mls qos srr-queue output dscp-map command [2-357](#)
- mls qos trust command [2-359](#)
- mls qos vlan-based command [2-361](#)
- mode, MVR [2-366](#)
- Mode button, and password recovery [2-427](#)
- modes, commands [1-2](#)
- monitor session command [2-362](#)
- more (boot loader) command [A-20](#)
- MSTP
 - displaying [2-651](#)
 - interoperability [2-97](#)
 - link type [2-710](#)

- MSTP (continued)
 - MST region
 - aborting changes [2-716](#)
 - applying changes [2-716](#)
 - configuration name [2-716](#)
 - configuration revision number [2-716](#)
 - current or pending display [2-716](#)
 - displaying [2-651](#)
 - MST configuration mode [2-716](#)
 - VLANs-to-instance mapping [2-716](#)
 - path cost [2-718](#)
 - protocol mode [2-714](#)
 - restart protocol migration process [2-97](#)
 - root port
 - loop guard [2-708](#)
 - preventing from becoming designated [2-708](#)
 - restricting which can be root [2-708](#)
 - root guard [2-708](#)
 - root switch
 - affects of extended system ID [2-706](#)
 - hello-time [2-721, 2-728](#)
 - interval between BPDU messages [2-722](#)
 - interval between hello BPDU messages [2-721, 2-728](#)
 - max-age [2-722](#)
 - maximum hop count before discarding BPDU [2-723](#)
 - port priority for selection of [2-724](#)
 - primary or secondary [2-728](#)
 - switch priority [2-727](#)
 - state changes
 - blocking to forwarding state [2-735](#)
 - enabling BPDU filtering [2-698, 2-732](#)
 - enabling BPDU guard [2-700, 2-732](#)
 - enabling Port Fast [2-732, 2-735](#)
 - forward-delay time [2-720](#)
 - length of listening and learning states [2-720](#)
 - rapid transition to forwarding [2-710](#)
 - shutting down Port Fast-enabled ports [2-732](#)
 - state information display [2-650](#)
- MTU
 - configuring size [2-803](#)
 - displaying global setting [2-663](#)
- Multicast Listener Discovery
 - See MLD
- multicast group address, MVR [2-369](#)
- multicast groups, MVR [2-367](#)
- Multicast Listener Discovery
 - See MLD
- multicast router learning method [2-234](#)
- multicast router ports, configuring [2-234](#)
- multicast router ports, IPv6 [2-271](#)
- multicast storm control [2-753](#)
- multicast VLAN, MVR [2-366](#)
- multicast VLAN registration
 - See MVR
- multiple hosts on authorized port [2-139](#)
- Multiple Spanning Tree Protocol
 - See MSTP
- MVR
 - configuring [2-366](#)
 - configuring interfaces [2-369](#)
 - debug messages, display [B-25](#)
 - displaying [2-624](#)
 - displaying interface information [2-626](#)
 - members, displaying [2-628](#)
 - mvr (global configuration) command [2-366](#)
 - mvr (interface configuration) command [2-369](#)
 - mvr vlan group command [2-370](#)

N

- native VLANs [2-795](#)
- native VLAN tagging [2-828](#)
- network-policy (global configuration) command [2-372](#)

network-policy command [2-371](#)
network-policy profile (network-policy configuration) command [2-373](#)
nmsp attachment suppress command [2-376](#)
nmsp command [2-375](#)
nonegotiate
 DTP messaging [2-780](#)
 speed [2-743](#)
non-IP protocols
 denying [2-112](#)
 forwarding [2-390](#)
non-IP traffic access lists [2-296](#)
non-IP traffic forwarding
 denying [2-112](#)
 permitting [2-390](#)
non-stop forwarding [2-377](#)
normal-range VLANs [2-818, 2-824](#)
no vlan command [2-818](#)
nsf command [2-377](#)

O

online diagnostics
 configuring health monitoring diagnostic tests [2-115](#)
 displaying
 configured boot-up coverage level [2-476](#)
 current scheduled tasks [2-476](#)
 event logs [2-476](#)
 supported test suites [2-476](#)
 test ID [2-476](#)
 test results [2-476](#)
 test statistics [2-476](#)
 enabling
 scheduling [2-117](#)
 syslog messages [2-115](#)
 global configuration mode
 clearing health monitoring diagnostic test schedule [2-115](#)
 clearing test-based testing schedule [2-117](#)

 setting health monitoring diagnostic testing [2-115](#)
 setting test-based testing [2-117](#)
 setting up health monitoring diagnostic test schedule [2-115](#)
 setting up test-based testing [2-117](#)
removing scheduling [2-117](#)
scheduled switchover
 disabling [2-117](#)
 enabling [2-117](#)
setting test interval [2-117](#)
specifying health monitoring diagnostic tests [2-115](#)
starting testing [2-119](#)

P

PAgP
 See EtherChannel
pagp learn-method command [2-379](#)
pagp port-priority command [2-381](#)
password, VTP [2-838](#)
password-recovery mechanism, enabling and disabling [2-427](#)
permit (ARP access-list configuration) command [2-383](#)
permit (IPv6) command [2-385](#)
permit (MAC access-list configuration) command [2-390](#)
per-VLAN spanning-tree plus
 See STP
physical-port learner [2-379](#)
PID, displaying [2-523](#)
PIM-DVMRP, as multicast router learning method [2-234](#)
police aggregate command [2-395](#)
police command [2-393](#)
policed-DSCP map [2-333](#)
policy-map command [2-397](#)
policy maps
 applying to an interface [2-429, 2-435](#)
 creating [2-397](#)
 displaying [2-640](#)

- policy maps (continued)
 - hierarchical [2-398](#)
 - policers
 - displaying [2-608](#)
 - for a single class [2-393](#)
 - for multiple classes [2-327, 2-395](#)
 - policed-DSCP map [2-333](#)
 - traffic classification
 - defining the class [2-72](#)
 - defining trust states [2-811](#)
 - setting DSCP or IP precedence values [2-433](#)
- Port Aggregation Protocol
 - See EtherChannel
- port-based authentication
 - AAA method list [2-3](#)
 - configuring violation modes [2-153](#)
 - debug messages, display [B-8](#)
 - enabling guest VLAN supplicant [2-125, 2-136](#)
 - enabling IEEE 802.1x
 - globally [2-122](#)
 - per interface [2-146](#)
 - guest VLAN [2-137](#)
 - host modes [2-139](#)
 - IEEE 802.1x AAA accounting methods [2-1](#)
 - initialize an interface [2-140](#)
 - MAC authentication bypass [2-141](#)
 - manual control of authorization state [2-146](#)
 - multiple hosts on authorized port [2-139](#)
 - PAE as authenticator [2-145](#)
 - periodic re-authentication
 - enabling [2-149](#)
 - time between attempts [2-151](#)
 - quiet period between failed authentication exchanges [2-151](#)
 - re-authenticating IEEE 802.1x-enabled ports [2-148](#)
 - resetting configurable IEEE 802.1x parameters [2-135](#)
 - switch-to-authentication server retransmission time [2-151](#)
 - switch-to-client frame-retransmission number [2-143 to 2-144](#)
 - switch-to-client retransmission time [2-151](#)
 - port-channel load-balance command [2-400](#)
 - Port Fast, for spanning tree [2-735](#)
 - port ranges, defining [2-100, 2-102](#)
 - ports, debugging [B-72](#)
 - ports, protected [2-793](#)
 - port security
 - aging [2-787](#)
 - debug messages, display [B-74](#)
 - enabling [2-782](#)
 - violation error recovery [2-161](#)
 - port trust states for QoS [2-359](#)
 - port types, MVR [2-369](#)
 - power information, displaying [2-491](#)
 - priority-queue command [2-402](#)
 - priority value, stack member [2-658, 2-758](#)
 - private-vlan command [2-404](#)
 - private-vlan mapping command [2-407](#)
 - private VLANs
 - association [2-791](#)
 - configuring [2-404](#)
 - configuring ports [2-778](#)
 - displaying [2-669](#)
 - host ports [2-778](#)
 - mapping
 - configuring [2-791](#)
 - displaying [2-507](#)
 - promiscuous ports [2-778](#)
 - privileged EXEC mode [1-2, 1-3](#)
 - product identification information, displaying [2-523](#)
 - promiscuous ports, private VLANs [2-778](#)
 - protected ports, displaying [2-514](#)
 - pruning
 - VLANs [2-795](#)
 - VTP
 - displaying interface information [2-507](#)
 - enabling [2-838](#)
 - pruning-eligible VLAN list [2-797](#)

PVST+

See STP

Q

QoS

auto-QoS

- configuring [2-50](#)
- debug messages, display [B-4](#)
- displaying [2-449](#)

class maps

- creating [2-74](#)
- defining the match criteria [2-320](#)
- displaying [2-459](#)

defining the CoS value for an incoming packet [2-329](#)

displaying configuration information [2-449](#), [2-607](#)

DSCP transparency [2-341](#)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [2-331](#)
- defining DSCP-to-DSCP-mutation map [2-333](#)

egress queues

- allocating buffers [2-337](#)
- defining the CoS output queue threshold map [2-355](#)
- defining the DSCP output queue threshold map [2-357](#)
- displaying buffer allocations [2-611](#)
- displaying CoS output queue threshold map [2-615](#)
- displaying DSCP output queue threshold map [2-615](#)
- displaying queueing strategy [2-611](#)
- displaying queue-set settings [2-618](#)
- enabling bandwidth shaping and scheduling [2-747](#)
- enabling bandwidth sharing and scheduling [2-749](#)
- limiting the maximum output on a port [2-745](#)
- mapping a port to a queue-set [2-409](#)
- mapping CoS values to a queue and threshold [2-355](#)

mapping DSCP values to a queue and threshold [2-357](#)

setting maximum and reserved memory allocations [2-339](#)

setting WTD thresholds [2-339](#)

enabling [2-325](#)

ingress queues

- allocating buffers [2-345](#)
- assigning SRR scheduling weights [2-343](#)
- defining the CoS input queue threshold map [2-347](#)
- defining the DSCP input queue threshold map [2-349](#)
- displaying buffer allocations [2-611](#)
- displaying CoS input queue threshold map [2-615](#)
- displaying DSCP input queue threshold map [2-615](#)
- displaying queueing strategy [2-611](#)
- displaying settings for [2-609](#)
- enabling the priority queue [2-351](#)
- mapping CoS values to a queue and threshold [2-347](#)
- mapping DSCP values to a queue and threshold [2-349](#)
- setting WTD thresholds [2-353](#)

maps

- defining [2-333](#), [2-347](#), [2-349](#), [2-355](#), [2-357](#)
- displaying [2-615](#)

policy maps

- applying an aggregate policer [2-395](#)
- applying to an interface [2-429](#), [2-435](#)
- creating [2-397](#)
- defining policers [2-327](#), [2-393](#)
- displaying policers [2-608](#)
- displaying policy maps [2-640](#)
- hierarchical [2-398](#)
- policed-DSCP map [2-333](#)
- setting DSCP or IP precedence values [2-433](#)
- traffic classifications [2-72](#)
- trust states [2-811](#)

port trust states [2-359](#)

QoS (continued)

- queues, enabling the expedite [2-402](#)
- statistics
 - in-profile and out-of-profile packets [2-611](#)
 - packets enqueued or dropped [2-611](#)
 - sent and received CoS values [2-611](#)
 - sent and received DSCP values [2-611](#)
- trusted boundary for IP phones [2-359](#)
- VLAN-based [2-361](#)

quality of service

See QoS

querytime, MVR [2-366](#)

queue-set command [2-409](#)

R

radius-server dead-criteria command [2-410](#)

radius-server host command [2-412](#)

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

re-authenticating IEEE 802.1x-enabled ports [2-148](#)

re-authentication

- periodic [2-149](#)
- time between attempts [2-151](#)

receiver ports, MVR [2-369](#)

receiving flow-control packets [2-168](#)

recovery mechanism

- causes [2-161](#)
- display [2-78, 2-456, 2-493, 2-496](#)
- timer interval [2-162](#)

reload command [2-414](#)

remote command [2-416](#)

remote-span command [2-418](#)

Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command [A-21](#)

renew ip dhcp snooping database command [2-420](#)

reset (boot loader) command [A-22](#)

resource templates, displaying [2-645](#)

restricted VLAN

See dot1x auth-fail vlan

rmdir (boot loader) command [A-23](#)

rmon collection stats command [2-423](#)

root guard, for spanning tree [2-708](#)

routed ports

IP addresses on [2-182](#)

number supported [2-182](#)

routing frames

See MTU

RSPAN

configuring [2-362](#)

displaying [2-621](#)

filter RSPAN traffic [2-362](#)

remote-span command [2-418](#)

sessions

add interfaces to [2-362](#)

displaying [2-621](#)

start new [2-362](#)

S

scheduled switchover

disabling [2-117](#)

enabling [2-117](#)

SDM mismatch mode [2-425, 2-659](#)

sdm prefer command [2-424](#)

SDM templates

allowed resources [2-425](#)

and stacking [2-425](#)

displaying [2-645](#)

dual IPv4 and IPv6 [2-424](#)

secure ports, limitations [2-784](#)

sending flow-control packets [2-168](#)

service password-recovery command [2-427](#)

service-policy command [2-429](#)

session command [2-432](#)

- set (boot loader) command [A-24](#)
- set command [2-433](#)
- setup command [2-435](#)
- setup express command [2-438](#)
- show access-lists command [2-440](#)
- show archive status command [2-443](#)
- show arp access-list command [2-444](#)
- show authentication command [2-445](#)
- show auto qos command [2-449](#)
- show boot command [2-453](#)
- show cable-diagnostics tdr command [2-456](#)
- show cisp command [2-458](#)
- show class-map command [2-459](#)
- show controllers cpu-interface command [2-460](#)
- show controllers ethernet-controller command [2-462](#)
- show controllers ethernet-controller fastethernet command [2-469](#)
- show controllers tcam command [2-472](#)
- show controller utilization command [2-474](#)
- show dot1q-tunnel command [2-481](#)
- show dot1x command [2-482](#)
- show dtp [2-486](#)
- show eap command [2-488](#)
- show env command [2-491](#)
- show errdisable detect command [2-493](#)
- show errdisable flap-values command [2-495](#)
- show errdisable recovery command [2-496](#)
- show etherchannel command [2-498](#)
- show fallback profile command [2-501](#)
- show flowcontrol command [2-503](#)
- show idprom command [2-505](#)
- show interfaces command [2-507](#)
- show interfaces counters command [2-520](#)
- show inventory command [2-523](#)
- show ip arp inspection command [2-524](#)
- show ipc command [2-550](#)
- show ip dhcp snooping binding command [2-529](#)
- show ip dhcp snooping command [2-528](#)
- show ip dhcp snooping database command [2-531, 2-533](#)
- show ip igmp profile command [2-536](#)
- show ip igmp snooping address command [2-559](#)
- show ip igmp snooping command [2-537, 2-557](#)
- show ip igmp snooping groups command [2-540](#)
- show ip igmp snooping mrouter command [2-542, 2-561](#)
- show ip igmp snooping querier command [2-544, 2-563](#)
- show ip source binding command [2-546](#)
- show ipv6 access-list command [2-554](#)
- show ipv6 dhcp conflict command [2-556](#)
- show ipv6 route updated [2-565](#)
- show ip verify source command [2-548](#)
- show l2protocol-tunnel command [2-567](#)
- show lacp command [2-570](#)
- show link state group command [2-574](#)
- show location [2-576](#)
- show location command [2-576](#)
- show logging command [2-579](#)
- show mac access-group command [2-584](#)
- show mac address-table address command [2-588](#)
- show mac address-table aging time command [2-590](#)
- show mac address-table command [2-586](#)
- show mac address-table count command [2-592](#)
- show mac address-table dynamic command [2-594](#)
- show mac address-table interface command [2-596](#)
- show mac address-table learning command [2-598](#)
- show mac address-table move update command [2-599](#)
- show mac address-table notification command [2-91, 2-601, B-23](#)
- show mac address-table static command [2-603](#)
- show mac address-table vlan command [2-605](#)
- show mls qos aggregate-policer command [2-608](#)
- show mls qos command [2-607](#)
- show mls qos input-queue command [2-609](#)
- show mls qos interface command [2-611](#)
- show mls qos maps command [2-615](#)
- show mls qos queue-set command [2-618](#)
- show mls qos vlan command [2-620](#)
- show monitor command [2-621](#)
- show mvr command [2-624](#)

- show mvr interface command [2-626](#)
- show mvr members command [2-628](#)
- show network-policy profile command [2-630](#)
- show nmsp command [2-632](#)
- show pagp command [2-635](#)
- show parser macro command [2-637](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform dl command [C-5](#)
- show platform etherchannel command [C-6](#)
- show platform forward command [C-7](#)
- show platform frontend-controller command [C-9](#)
- show platform igmp snooping command [C-10](#)
- show platform ipc trace command [C-18](#)
- show platform ip multicast command [C-12](#)
- show platform ip unicast command [C-13](#)
- show platform ipv6 unicast command [C-19](#)
- show platform ip wecp command [C-17](#)
- show platform layer4op command [C-21](#)
- show platform mac-address-table command [C-22](#)
- show platform messaging command [C-23](#)
- show platform monitor command [C-24](#)
- show platform mvr table command [C-25](#)
- show platform pm command [C-26](#)
- show platform port-asic command [C-27](#)
- show platform port-security command [C-32](#)
- show platform qos command [C-33](#)
- show platform resource-manager command [C-34](#)
- show platform snmp counters command [C-36](#)
- show platform spanning-tree command [C-37](#)
- show platform stack-manager command [C-39](#)
- show platform stp-instance command [C-38](#)
- show platform tb command [C-43](#)
- show platform team command [C-45](#)
- show platform vlan command [C-48](#)
- show policy-map command [2-640](#)
- show port security command [2-642](#)
- show sdm prefer command [2-645](#)
- show setup express command [2-649](#)
- show spanning-tree command [2-650](#)
- show storm-control command [2-656](#)
- show switch command [2-658](#)
- show system mtu command [2-663](#)
- show trust command [2-811](#)
- show uddl command [2-664](#)
- show version command [2-667](#)
- show vlan access-map command [2-674](#)
- show vlan command [2-669](#)
- show vlan command, fields [2-671](#)
- show vlan filter command [2-675](#)
- show vmpls command [2-676](#)
- show vtp command [2-678](#)
- shutdown command [2-683](#)
- shutdown threshold, Layer 2 protocol tunneling [2-275](#)
- shutdown vlan command [2-684](#)
- small violation-rate command [2-685](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-691](#)
- SNMP informs, enabling the sending of [2-687](#)
- snmp-server enable traps command [2-687](#)
- snmp-server host command [2-691](#)
- snmp trap mac-notification command [2-695](#)
- SNMP traps
 - enabling MAC address notification trap [2-695](#)
 - enabling the MAC address notification feature [2-303](#)
 - enabling the sending of [2-687](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - copying [2-8](#)
 - deleting [2-104](#)
 - downloading [2-11](#)
 - upgrading [2-8, 2-11](#)
 - uploading [2-18](#)
- software version, displaying [2-667](#)
- source ports, MVR [2-369](#)

SPAN

- configuring [2-362](#)
- debug messages, display [B-24](#)
- displaying [2-621](#)
- filter SPAN traffic [2-362](#)
- sessions
 - add interfaces to [2-362](#)
 - displaying [2-621](#)
 - start new [2-362](#)
- spanning-tree backbonefast command [2-697](#)
- spanning-tree bpdudfilter command [2-698](#)
- spanning-tree bpduguard command [2-700](#)
- spanning-tree cost command [2-702](#)
- spanning-tree etherchannel command [2-704](#)
- spanning-tree extend system-id command [2-706](#)
- spanning-tree guard command [2-708](#)
- spanning-tree link-type command [2-710](#)
- spanning-tree loopguard default command [2-712](#)
- spanning-tree mode command [2-714](#)
- spanning-tree mst configuration command [2-716](#)
- spanning-tree mst cost command [2-718](#)
- spanning-tree mst forward-time command [2-720](#)
- spanning-tree mst hello-time command [2-721](#)
- spanning-tree mst max-age command [2-722](#)
- spanning-tree mst max-hops command [2-723](#)
- spanning-tree mst port-priority command [2-724](#)
- spanning-tree mst pre-standard command [2-726](#)
- spanning-tree mst priority command [2-727](#)
- spanning-tree mst root command [2-728](#)
- spanning-tree portfast (global configuration) command [2-732](#)
- spanning-tree portfast (interface configuration) command [2-735](#)
- spanning-tree port-priority command [2-730](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [2-737](#)
- spanning-tree uplinkfast command [2-738](#)
- spanning-tree vlan command [2-740](#)

- speed command [2-743](#)
- srr-queue bandwidth limit command [2-745](#)
- srr-queue bandwidth shape command [2-747](#)
- srr-queue bandwidth share command [2-749](#)
- SSH, configuring version [2-241](#)
- stack-mac persistent timer command [2-751](#)
- stack member
 - access [2-432](#)
 - number [2-658, 2-761](#)
 - priority value [2-758](#)
 - provisioning [2-759](#)
 - reloading [2-414](#)
- stacks, switch
 - disabling a member [2-756](#)
 - enabling a member [2-756](#)
 - MAC address [2-751](#)
 - provisioning a new member [2-759](#)
 - reloading [2-414](#)
 - stack member access [2-432](#)
 - stack member number [2-658, 2-761](#)
 - stack member priority value [2-658, 2-758](#)
- static-access ports, configuring [2-765](#)
- statistics, Ethernet group [2-423](#)
- sticky learning, enabling [2-782](#)
- storm-control command [2-753](#)
- STP
 - BackboneFast [2-697](#)
 - counters, clearing [2-96](#)
 - debug messages, display
 - BackboneFast events [B-78](#)
 - MSTP [B-81](#)
 - optimized BPDUs handling [B-80](#)
 - spanning-tree activity [B-76](#)
 - switch shim [B-83](#)
 - transmitted and received BPDUs [B-79](#)
 - UplinkFast [B-85](#)
 - detection of indirect link failures [2-697](#)
 - enabling protocol tunneling for [2-275](#)
 - EtherChannel misconfiguration [2-704](#)

- STP (continued)
 - extended system ID [2-706](#)
 - path cost [2-702](#)
 - protocol modes [2-714](#)
 - root port
 - accelerating choice of new [2-738](#)
 - loop guard [2-708](#)
 - preventing from becoming designated [2-708](#)
 - restricting which can be root [2-708](#)
 - root guard [2-708](#)
 - UplinkFast [2-738](#)
 - root switch
 - affects of extended system ID [2-706, 2-741](#)
 - hello-time [2-740](#)
 - interval between BPDU messages [2-740](#)
 - interval between hello BPDU messages [2-740](#)
 - max-age [2-740](#)
 - port priority for selection of [2-730](#)
 - primary or secondary [2-740](#)
 - switch priority [2-740](#)
 - state changes
 - blocking to forwarding state [2-735](#)
 - enabling BPDU filtering [2-698, 2-732](#)
 - enabling BPDU guard [2-700, 2-732](#)
 - enabling Port Fast [2-732, 2-735](#)
 - enabling timer to recover from error state [2-161](#)
 - forward-delay time [2-740](#)
 - length of listening and learning states [2-740](#)
 - shutting down Port Fast-enabled ports [2-732](#)
 - state information display [2-650](#)
 - VLAN options [2-727, 2-740](#)
 - SVIs, creating [2-176](#)
 - SVI status calculation [2-767](#)
 - Switched Port Analyzer
 - See SPAN
 - switching characteristics
 - modifying [2-763](#)
 - returning to interfaces [2-763](#)
 - switchport access command [2-765](#)
 - switchport autostate exclude command [2-767](#)
 - switchport backup interface command [2-769](#)
 - switchport block command [2-772](#)
 - switchport command [2-763](#)
 - switchport host command [2-774](#)
 - switchport mode command [2-775](#)
 - switchport mode private-vlan command [2-778](#)
 - switchport nonegotiate command [2-780](#)
 - switchport port-security aging command [2-787](#)
 - switchport port-security command [2-782](#)
 - switchport priority extend command [2-789](#)
 - switchport private-vlan command [2-791](#)
 - switchport protected command [2-793](#)
 - switchports, displaying [2-507](#)
 - switchport trunk command [2-795](#)
 - switchport voice detect [2-798](#)
 - switchport voice vlan command [2-799](#)
 - switch priority command [2-756, 2-758](#)
 - switch provision command [2-759](#)
 - switch renumber command [2-761](#)
 - system env temperature threshold yellow command [2-801](#)
 - system message logging, save message to flash [2-290](#)
 - system mtu command [2-803](#)
 - system resource templates [2-424](#)
-
- ## T
- tar files, creating, listing, and extracting [2-15](#)
 - TDR, running [2-805](#)
 - temperature information, displaying [2-491](#)
 - templates, system resources [2-424](#)
 - test cable-diagnostics tdr command [2-805](#)
 - traceroute mac command [2-806](#)
 - traceroute mac ip command [2-809](#)
 - trunking, VLAN mode [2-775](#)
 - trunk mode [2-775](#)
 - trunk ports [2-775](#)
 - trunks, to non-DTP device [2-776](#)
 - trusted boundary for QoS [2-359](#)

trusted port states for QoS [2-359](#)
 tunnel ports, Layer 2 protocol, displaying [2-567](#)
 type (boot loader) command [A-27](#)

U

UDLD

aggressive mode [2-813, 2-815](#)
 debug messages, display [B-93](#)
 enable globally [2-813](#)
 enable per interface [2-815](#)
 error recovery timer [2-161](#)
 message timer [2-813](#)
 normal mode [2-813, 2-815](#)
 reset a shutdown interface [2-817](#)
 status [2-664](#)

udld command [2-813](#)

udld port command [2-815](#)

udld reset command [2-817](#)

unicast storm control [2-753](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-772](#)

unknown unicast traffic, preventing [2-772](#)

unset (boot loader) command [A-28](#)

upgrading

copying software images [2-8](#)

downloading software images [2-11](#)

software images, monitoring status of [2-443](#)

UplinkFast, for STP [2-738](#)

user EXEC mode [1-2, 1-3](#)

V

version (boot loader) command [A-30](#)

version mismatch mode [2-659, C-40](#)

vlan (global configuration) command [2-818](#)

vlan (VLAN configuration) command [2-824](#)

vlan access-map command [2-825](#)

VLAN access map configuration mode [2-825](#)

VLAN access maps

actions [2-6](#)

displaying [2-674](#)

VLAN-based QoS [2-361](#)

VLAN configuration

rules [2-821](#)

saving [2-818](#)

VLAN configuration mode

commands

VLAN [2-824](#)

VTP [2-843](#)

description [1-4](#)

entering [2-827](#)

summary [1-3](#)

vlan database command [2-827](#)

vlan dot1q tag native command [2-828](#)

vlan filter command [2-830](#)

VLAN filters, displaying [2-675](#)

VLAN ID range [2-818](#)

VLAN maps

applying [2-830](#)

creating [2-825](#)

defining [2-318](#)

displaying [2-674](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-818](#)

configuring [2-818, 2-824](#)

debug messages, display

ISL [B-89](#)

VLAN IOS file system error tests [B-88](#)

VLAN manager activity [B-86](#)

VTP [B-91](#)

displaying configurations [2-669](#)

extended-range [2-818](#)

VLANs (continued)

MAC addresses

displaying [2-605](#)number of [2-592](#)media types [2-821](#)normal-range [2-818, 2-824](#)private [2-778](#)configuring [2-404](#)displaying [2-669](#)

See also private VLANs

restarting [2-684](#)saving the configuration [2-818](#)shutting down [2-684](#)SNMP traps for VTP [2-689, 2-692](#)suspending [2-684](#)

VLAN Trunking Protocol

See VTP

VM mode [2-659, C-40](#)

VMPS

configuring servers [2-835](#)displaying [2-676](#)error recovery timer [2-162](#)reconfirming dynamic VLAN assignments [2-832](#)vmmps reconfirm (global configuration) command [2-833](#)vmmps reconfirm (privileged EXEC) command [2-832](#)vmmps retry command [2-834](#)vmmps server command [2-835](#)

voice VLAN

configuring [2-798, 2-799](#)setting port priority [2-789](#)

VQP

and dynamic-access ports [2-766](#)clearing client statistics [2-98](#)displaying information [2-676](#)per-server retry count [2-834](#)reconfirmation interval [2-833](#)reconfirming dynamic VLAN assignments [2-832](#)

VTP

changing characteristics [2-837](#)clearing pruning counters [2-99](#)

configuring

domain name [2-837](#)file name [2-837](#)mode [2-837](#)password [2-838](#)counters display fields [2-679](#)displaying information [2-678](#)

enabling

pruning [2-838](#)tunneling for [2-275](#)Version 2 [2-838](#)enabling per port [2-842](#)mode [2-837](#)pruning [2-838](#)saving the configuration [2-818](#)statistics [2-678](#)status [2-678](#)status display fields [2-681](#)vtp (global configuration) command [2-837](#)vtp (VLAN configuration) command [2-843](#)vtp interface configuration) command [2-842](#)vtp primary command [2-844](#)

