



Single Node Overview

This chapter contains the following sections:

- [Overview, on page 1](#)

Overview

The following sections describe installation and upgrade procedures for single node installations. Single node is supported for lab and testing purposes only. Production deployments require 3-node high availability (HA) Orchestrator clusters and are described in other chapters in this book.

The basic requirements and workflows for single node installations and upgrades are similar to production deployments, so we encourage you to read through the [Deployment Overview](#) and the basic requirements of the *Cluster Deployments* section. However, certain steps may be skipped when installing a single node Orchestrator, so when you are ready, proceed with the installation or upgrade described in one of the following sections.

