



## Dynamic Breakout Ports

---

This chapter contains the following sections:

- [Configuration of Dynamic Breakout Ports, on page 1](#)
- [Configuring Dynamic Breakout Ports Using the APIC GUI, on page 3](#)
- [Configuring Dynamic Breakout Ports Using the NX-OS Style CLI, on page 5](#)
- [Configuring Dynamic Breakout Ports Using the REST API, on page 9](#)

## Configuration of Dynamic Breakout Ports

Breakout cables are suitable for very short links and offer a cost effective way to connect within racks and across adjacent racks.

Breakout enables a 40 Gigabit (Gb) port to be split into four independent and logical 10Gb ports or a 100Gb port to be split into four independent and logical 25Gb ports.

Before you configure breakout ports, connect a 40Gb port to four 10Gb ports or a 100Gb port to four 25Gb ports with one of the following cables:

- Cisco QSFP-4SFP10G
- Cisco QSFP-4SFP25G
- Cisco QSFP-4X10G-AOC
- MPO to breakout splitter cable with QSFP-40G-SR4 and 4 x SFP-10G-SR on the ends
- MPO to breakout splitter cable with QSFP-100G-SR4-S and 4 x SFP-25G-SR-S on the ends



---

**Note** For the supported optics and cables, see the *Cisco Optics-to-Device Compatibility Matrix*:  
<https://tmgmatrix.cisco.com/>

---

The 40Gb to 10Gb dynamic breakout feature is supported on the access facing ports of the following switches:

- N9K-C9332PQ
- N9K-C93180LC-EX
- N9K-C9336C-FX2

- N9K-C93360YC-FX2
- N9K-C93216TC-FX2

The 100Gb to 25Gb breakout feature is supported on the access facing ports of the following switches:

- N9K-C93180LC-EX
- N9K-C9336C-FX2
- N9K-C93180YC-FX
- N9K-C93360YC-FX2
- N9K-C93216TC-FX2

Observe the following guidelines and limitations:

- For the Cisco N9K-C9332PQ switch, you can configure ports 1 to 26 as downlink ports. Of those ports, breakout ports can be configured on port 1 to 12 and 15 to 26. Ports 13 and 14 do not support breakout.
- Breakout ports are supported only on downlinks and converted downlinks.
  - Starting in Cisco Application Policy Infrastructure Controller (APIC) release 3.2(1), dynamic breakouts (both 100Gb and 40Gb) are supported on profiled QSFP ports on the Cisco N9K-C93180YC-FX switch.
  - Starting in Cisco APIC release 4.1(2), dynamic breakouts (both 100Gb and 40Gb) are supported on profiled QSFP ports on the Cisco N9K-C93216TC-FX2 switch.
  - Starting in Cisco APIC release 4.1(2), dynamic breakouts (both 100Gb and 40Gb) are supported on profiled QSFP ports on the Cisco N9K-C93360YC-FX2 switch.
- Breakout ports cannot be used for Cisco APIC connectivity.
- Fast Link Failover policies are not supported on the same port with the dynamic breakout feature.
- Breakout subports can be used in the same way other port types in the policy model are used.
- When a port is enabled for dynamic breakout, other policies (except monitoring policies) on the parent port are no longer valid.
- When a port is enabled for dynamic breakout, other EPG deployments on the parent port are no longer valid.
- A breakout sub-port can not be further broken out using a breakout policy group.
- If the LACP transmit rate on port channels that have breakout sub-ports need to be changed, then all the port channels that include breakout sub-ports need to use the same LACP transmit rate configuration. You can configure an override policy to set the transmit rate as follows:
  1. Configure/change the default port channel member policy to include Fast Transmit Rate (**Fabric > Access Policies > Policies > Interface > Port Channel Member**).
  2. Configure all the PC/vPC interface policy groups to include the above default port channel member policy under the override policy groups (**Fabric > Access Policies > Interfaces > Leaf Interfaces > Policy Groups > PC/vPC Interface**).

# Configuring Dynamic Breakout Ports Using the APIC GUI

Configure a Breakout Leaf Port with an Leaf Interface Profile, associate the profile with a switch, and configure the sub ports with the following steps.



**Note** You can also configure ports for breakout in the APIC GUI by navigating to **Fabric > Inventory**, and clicking **Topology** or **Pod**, or expanding **Pod** and clicking **Leaf**. Then, enable configuration and click the **Interface** tab.

## Procedure

### Before you begin

- The ACI fabric is installed, APIC controllers are online, and the APIC cluster is formed and healthy.
- An APIC fabric administrator account is available that will enable creating the necessary fabric infrastructure configurations.
- The target leaf switches are registered in the ACI fabric and available.
- The 40GE or 100GE leaf switch ports are connected with Cisco breakout cables to the downlink ports.

## Procedure

- Step 1** On the menu bar, choose **Fabric > External Access Policies**.
- Step 2** In the Navigation pane, expand **Interfaces** and **Leaf Interfaces** and **Profiles**.
- Step 3** Right-click **Profiles** and choose **Create Leaf Interface Profile**.
- Step 4** Type the name and optional description, click the + symbol on **Interface Selectors**
- Step 5** Perform the following:
  - a) Type a name (and optional description) for the **Access Port Selector**.
  - b) In the **Interface IDs** field, type the slot and port for the breakout port.
  - c) In the **Interface Policy Group** field, click the down arrow and choose **Create Leaf Breakout Port Group**.
  - d) Type the name (and optional description) for the **Leaf Breakout Port Group**.
  - e) In the **Breakout Map** field, choose **10g-4x** or **25g-4x**.  
For switches supporting breakout, see [Configuration of Dynamic Breakout Ports, on page 1](#).
  - f) Click **Submit**.
- Step 6** To assign a Breakout Port to an EPG, perform the following steps:  
On the menu bar, choose **Tenant > Application Profiles > Application EPG**. Right-click on **Application EPG** to open **Create Application EPG** dialog box, and perform the following steps:
  - a) Select the **Statically Link with Leaves/Paths** check box to gain access to the **Leaves/Paths** tab in the dialog box.
  - b) Complete one of the following sets of steps:

Option	Description
If you want to deploy the EPG on...	Then
A node	<ol style="list-style-type: none"> <li>Expand the <b>Leaves</b> area.</li> <li>From the <b>Node</b> drop-down list, choose a node.</li> <li>In the <b>Encap</b> field, enter the appropriate VLAN.</li> <li>(Optional) From the <b>Deployment Immediacy</b> drop-down list, accept the default <b>On Demand</b> or choose <b>Immediate</b>.</li> <li>(Optional) From the Mode drop-down list, accept the default <b>Trunk</b> or choose another mode.</li> </ol>
A port on the node	<ol style="list-style-type: none"> <li>Expand the <b>Paths</b> area.</li> <li>From the <b>Path</b> drop-down list, choose the appropriate node and port.</li> <li>(Optional) In the <b>Deployment Immediacy</b> field drop-down list, accept the default <b>On Demand</b> or choose <b>Immediate</b>.</li> <li>(Optional) From the Mode drop-down list, accept the default <b>Trunk</b> or choose another mode.</li> <li>In the <b>Port Encap</b> field, enter the secondary VLAN to be deployed.</li> <li>(Optional) In the <b>Primary Encap</b> field, enter the primary VLAN to be deployed.</li> </ol>

**Step 7**

To associate the Leaf Interface Profile to a the leaf switch, perform the following steps:

- Expand **Switches** and **Leaf Switches**, and **Profiles**.
- Right-click **Profiles** and select **Create Leaf Profiles**.
- Type the name and optional description of the Leaf Profile.
- Click the + symbol on the **Leaf Selectors** area.
- Type the leaf selector name and an optional description.
- Click the down arrow on the **Blocks** field and choose the switch to be associated with the breakout leaf interface profile.
- Click the down arrow on the **Policy Group** field and choose **Create Access Switch Policy Group**.
- Type a name and optional description for the Access Switch Policy Group.
- Optional. Enable other policies.
- Click **Submit**.
- Click **Update**.
- Click **Next**.
- In the **Associations Interface Selector Profiles** area, choose the Interface Selector Profile you previously created for the breakout port.
- Click **Finish**.

**Step 8**

To verify the breakout port has been split into four sub ports, perform the following steps:

- On the Menu bar, click **Fabric > Inventory**.
- On the Navigation bar, click the Pod and Leaf where the breakout port is located.

- c) Expand **Interfaces** and **Physical Interfaces**.  
You should see four ports at the position where the breakout port was configured. For example, if you configured 1/10 as a breakout port, you should see the following:

- **eth1/10/1**
- **eth1/10/2**
- **eth1/10/3**
- **eth1/10/4**

**Step 9**

To configure the sub ports, perform the following steps:

- a) On the Menu bar, click **Fabric > External Access Policies**.
- b) On the Navigation bar, expand **Interfaces**, **Leaf Interfaces**, **Profiles**, and the breakout leaf interface profile you previously created.
- c) Click the Breakout Port Access Port Selector profile you previously created.
- d) On the **Sub Port Blocks** area, click the + symbol.
- e) In the **Interface IDs** field, enter the IDs for the four sub ports in a format such as 1/10/1-4.
- f) Click **Submit**.

**Step 10**

To apply the Policy Group to an individual interface which links the AAEP to the port, perform the following steps:

- a) Navigate to **Interfaces > Leaf Interfaces > Profiles** and right-click to open **Create Access Port Selector**.
- b) In the **Name** field, select a name for the break out Access Port Selector policy.
- c) In the **Interface Policy Group** field, select **Create Leaf Access Port Policy Group**.
- d) In the **Name** field, select a name for the break out Leaf Access Port Group Policy.
- e) In the **Attached Entity Profile** field, select the AAEP profile to attach to the policy group.
- f) Click **Submit**.

---

## Configuring Dynamic Breakout Ports Using the NX-OS Style CLI

Use the following steps to configure a breakout port, verify the configuration, and configure an EPG on a sub port, using the NX-OS style CLI.

**Before you begin**

- The ACI fabric is installed, APIC controllers are online, and the APIC cluster is formed and healthy.
- An APIC fabric administrator account is available that will enable creating the necessary fabric infrastructure configurations.
- The target leaf switches are registered in the ACI fabric and available.
- The 40GE or 100GE leaf switch ports are connected with Cisco breakout cables to the downlink ports.

**Procedure**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure</b> <b>Example:</b> apicl# <b>configure</b>	Enters configuration mode.
<b>Step 2</b>	<b>leaf ID</b> <b>Example:</b> apicl(config)# leaf 101	Selects the leaf switch where the breakout port will be located and enters leaf configuration mode.
<b>Step 3</b>	<b>interface ethernet slot/port</b> <b>Example:</b> apicl(config-leaf)# interface ethernet 1/16	Identifies the interface to be enabled as a 40 Gigabit Ethernet (GE) breakout port.
<b>Step 4</b>	<b>breakout 10g-4x   25g-4x</b> <b>Example:</b> apicl(config-leaf-if)# breakout 10g-4x	Enables the selected interface for breakout.  <b>Note</b> For switch support for the Dynamic Breakout Port feature, see <a href="#">Configuration of Dynamic Breakout Ports, on page 1</a> .
<b>Step 5</b>	<b>show run</b> <b>Example:</b> apicl(config-leaf-if)# show run # Command: show running-config leaf 101 interface ethernet 1 / 16 # Time: Fri Dec 2 18:13:39 2016 leaf 101 interface ethernet 1/16 breakout 10g-4x apicl(config-leaf-if)# exit apicl(config-leaf)# exit	Verifies the configuration by showing the running configuration of the interface and returns to global configuration mode.
<b>Step 6</b>	<b>tenant tenant-name</b> <b>Example:</b> apicl(config)# tenant tenant64	Selects or creates the tenant that will consume the breakout ports and enters tenant configuration mode.
<b>Step 7</b>	<b>vrf context vrf-name</b> <b>Example:</b> apicl(config-tenant)# vrf context vrf64 apicl(config-tenant-vrf)# exit	Creates or identifies the Virtual Routing and Forwarding (VRF) instance associated with the tenant and exits the configuration mode.
<b>Step 8</b>	<b>bridge-domain bridge-domain-name</b> <b>Example:</b> apicl(config-tenant)# bridge-domain bd64	Creates or identifies the bridge-domain associated with the tenant and enters BD configuration mode.

	Command or Action	Purpose
<b>Step 9</b>	<b>vrf member</b> <i>vrf-name</i> <b>Example:</b> <pre>apic1(config-tenant-bd)# vrf member vrf64 apic1(config-tenant-bd)# exit</pre>	Associates the VRF with the bridge-domain and exits the configuration mode.
<b>Step 10</b>	<b>application</b> <i>application-profile-name</i> <b>Example:</b> <pre>apic1(config-tenant)# application app64</pre>	Creates or identifies the application profile associated with the tenant and the EPG.
<b>Step 11</b>	<b>epg</b> <i>epg-name</i> <b>Example:</b> <pre>apic1(config-tenant)# epg epg64</pre>	Creates or identifies the EPG and enters into EPG configuration mode.
<b>Step 12</b>	<b>bridge-domain member</b> <i>bridge-domain-name</i> <b>Example:</b> <pre>apic1(config-tenant-app-epg)# bridge-domain member bd64 apic1(config-tenant-app-epg)# exit apic1(config-tenant-app)# exit apic1(config-tenant)# exit</pre>	<p>Associates the EPG with the bridge domain and returns to global configuration mode.</p> <p>Configure the sub ports as desired, for example, use the speed command in leaf interface mode to configure a sub port.</p>
<b>Step 13</b>	<b>leaf</b> <i>leaf-name</i> <b>Example:</b> <pre>apic1(config)# leaf 1017 apic1(config-leaf)# interface ethernet 1/13 apic1(config-leaf-if)# vlan-domain member dom1 apic1(config-leaf-if)# switchport trunk allowed vlan 20 tenant t1 application AP1 epg EPG1</pre> <p><b>Note</b>      The vlan-domain and vlan-domain member commands mentioned in the above example are a pre-requisite for deploying an EPG on a port.</p>	Associates the EPG with a break-out port.
<b>Step 14</b>	<b>speed</b> <i>interface-speed</i> <b>Example:</b> <pre>apic1(config)# leaf 101 apic1(config-leaf)# interface ethernet 1/16/1 apic1(config-leaf-if)# speed 10G apic1(config-leaf-if)# exit</pre>	Enters leaf interface mode, sets the speed of an interface, and exits the configuration mode.

	Command or Action	Purpose
<b>Step 15</b>	<b>show run</b>  <b>Example:</b> apic1(config-leaf)# show run	After you have configured the sub ports, entering this command in leaf configuration mode displays the sub port details.

The port on leaf 101 at interface 1/16 is confirmed enabled for breakout with sub ports 1/16/1, 1/16/2, 1/16/3, and 1/16/4.

### Example

This example configures the port for breakout:

```
apic1# configure
apic1(config)# leaf 101
apic1(config-leaf)# interface ethernet 1/16
apic1(config-leaf-if)# breakout 10g-4x
```

This example configures the EPG for the sub ports.

```
apic1(config)# tenant tenant64
apic1(config-tenant)# vrf context vrf64
apic1(config-tenant-vrf)# exit
apic1(config-tenant)# bridge-domain bd64
apic1(config-tenant-bd)# vrf member vrf64
apic1(config-tenant-bd)# exit
apic1(config-tenant)# application app64
apic1(config-tenant-app)# epg epg64
apic1(config-tenant-app-epg)# bridge-domain member bd64
apic1(config-tenant-app-epg)# end
```

This example sets the speed for the breakout sub ports to 10G.

```
apic1(config)# leaf 101
apic1(config-leaf)# interface ethernet 1/16/1
apic1(config-leaf-if)# speed 10G
apic1(config-leaf-if)# exit

apic1(config-leaf)# interface ethernet 1/16/2
apic1(config-leaf-if)# speed 10G
apic1(config-leaf-if)# exit
apic1(config-leaf)# interface ethernet 1/16/3
apic1(config-leaf-if)# speed 10G
apic1(config-leaf-if)# exit
apic1(config-leaf)# interface ethernet 1/16/4
apic1(config-leaf-if)# speed 10G
apic1(config-leaf-if)# exit
```

This example shows the four sub ports connected to leaf 101, interface 1/16.

```
apic1#(config-leaf)# show run
# Command: show running-config leaf 101
# Time: Fri Dec 2 00:51:08 2016
leaf 101
  interface ethernet 1/16/1
    speed 10G
    negotiate auto
    link debounce time 100
  exit
  interface ethernet 1/16/2
    speed 10G
    negotiate auto
```

```

    link debounce time 100
    exit
interface ethernet 1/16/3
    speed 10G
    negotiate auto
    link debounce time 100
    exit
interface ethernet 1/16/4
    speed 10G
    negotiate auto
    link debounce time 100
    exit
interface ethernet 1/16
    breakout 10g-4x
    exit
interface vfc 1/16

```

## Configuring Dynamic Breakout Ports Using the REST API

Configure a Breakout Leaf Port with an Leaf Interface Profile, associate the profile with a switch, and configure the sub ports with the following steps.

For switch support for the breakout feature, see [Configuration of Dynamic Breakout Ports, on page 1](#).

### Procedure

#### Before you begin

- The ACI fabric is installed, APIC controllers are online, and the APIC cluster is formed and healthy.
- An APIC fabric administrator account is available that will enable creating the necessary fabric infrastructure configurations.
- The target leaf switches are registered in the ACI fabric and available.
- The 40GE or 100GE leaf switch ports are connected with Cisco breakout cables to the downlink ports.

### Procedure

**Step 1** Configure a breakout policy group for the breakout port with JSON, such as the following example:

#### Example:

In this example, we create an interface profile 'brkout44' with the only port 44 underneath its port selector. The port selector is pointed to a breakout policy group 'new-brkoutPol'.

```

{
    "infraAccPortP": {
        "attributes": {
            "dn": "uni/infra/accportprof-brkout44",
            "name": "brkout44",
            "rn": "accportprof-brkout44",
            "status": "created,modified"
        },
        "children": [ {
            "infraHPortS": {
                "attributes": {

```

**Step 2** Create a new switch profile and associate it with the port profile, previously created, with JSON such as the following example:

In this example, we create a new switch profile 'leaf1017' with switch 1017 as the only node. We associate this new switch profile with the port profile 'brkout44' created above. After this, the port 44 on switch 1017 will have 4 sub ports.

```
{
  "infraNodeP": {
    "attributes": {
      "dn": "uni/infra/nprof-leaf1017",
      "name": "leaf1017", "rn": "nprof-leaf1017",
      "status": "created,modified"
    },
    "children": [ {
      "infraLeafS": {
        "attributes": {
          "dn": "uni/infra/nprof-leaf1017/leaves-1017-typ-range",
          "type": "range",
          "name": "1017",
          "rn": "leaves-1017-typ-range",
          "status": "created"
        }
      },
      "infraNodeBlk": {
        "attributes": {
          "dn": "uni/infra/nprof-leaf1017/leaves-1017-typ-range/nodeblk-102bf7dc60e63f7e",
```

```

        "from_": "1017", "to_": "1017",
        "name": "102bf7dc60e63f7e",
        "rn": "nodeblk-102bf7dc60e63f7e",
        "status": "created"
    },
    "children": [] }
}
}
}, {
    "infraRsAccPortP": {
        "attributes": {
            "tDn": "uni/infra/accportprof-brkout44",
            "status": "created,modified"
        },
        "children": [] }
    }
}
}
}

```

### Step 3 Configure the subports.

#### Example:

This example configures subports 1/44/1, 1/44/2, 1/44/3, 1/44/4 on switch 1017, for instance, in the example below, we configure interface 1/44/3. It also creates the `infraSubPortBlk` object instead of the `infraPortBlk` object.

```

{
    "infraAccPortP": {
        "attributes": {
            "dn": "uni/infra/accportprof-brkout44",
            "name": "brkouttest1",
            "rn": "accportprof-brkout44",
            "status": "created,modified"
        },
        "children": [{
            "infraHPortS": {
                "attributes": {
                    "dn": "uni/infra/accportprof-brkout44/hports-sell-typ-range",
                    "name": "sell",
                    "rn": "hports-sell-typ-range",
                    "status": "created,modified"
                },
                "children": [{
                    "infraSubPortBlk": {
                        "attributes": {
                            "dn": "uni/infra/accportprof-brkout44/hports-sell-typ-range/subportblk-block2",

                            "fromPort": "44",
                            "toPort": "44",
                            "fromSubPort": "3",
                            "toSubPort": "3",
                            "name": "block2",
                            "rn": "subportblk-block2",
                            "status": "created"
                        },
                        "children": [] }
                    }
                ],
            },
            {
                "infraRsAccBaseGrp": {
                    "attributes": {

```

```
        "tDn": "uni/infra/funcprof/accportgrp-p1",  
        "status": "created,modified"  
    },  
    "children": []  
}  
]  
}  
]  
}  
}
```

#### Step 4 Deploy an EPG on a specific port.

**Example:**

```
<fvTenant name="<tenant_name>" dn="uni/tn-test1" >
  <fvCtx name="<network_name>" pcEnfPref="enforced" knwMcastAct="permit"/>
  <fvBD name="<bridge_domain_name>" unkMcastAct="flood" >
    <fvRsCtx tnFvCtxName="<network_name>"/>
  </fvBD>
  <fvAp name="<application_profile>" >
    <fvAEPg name="<epg_name>" >
      <fvRsPathAtt tDn="topology/pod-1/paths-1017/pathep-[eth1/13]" mode="regular"
instrImedcy="immediate" encap="vlan-20"/>
    </fvAEPg>
  </fvAp>
</fvTenant>
```