



# Troubleshooting Multipod and Multi-Site Issues

This chapter contains the following sections:

- [Troubleshooting Multi-Site and Multi-Pod, on page 1](#)

## Troubleshooting Multi-Site and Multi-Pod

This section describes how to troubleshoot Multi-Site and Multi-Pod.

### Error:400

If you receive the following error:

Error:400 - Invalid Configuration Following Intersite Spines are not configured as Mpod  
Spines: 1202

You must enable the fabric external connectivity for all the existing spines and if you are trying to add new spines use the **Setup Multipod** GUI wizard.

There are two ways to resolve this issue.

- Enable all the spines under the external routed network:
  - In the APIC GUI, on the menu bar, click **Tenant > infra**.
  - In the **Navigation** pane, expand **Networking > External Routed Networks**, right-click on the external routed network and choose **Enable Fabric External Connectivity**.
- Add new spines under the external routed network:
  - In the APIC GUI, on the menu bar, click **Fabric**.
  - In the **Navigation** pane, expand **Quick Start > Node or Pod Setup > Setup Multipod** and complete the Multipod setup.

